 




REPLACEMENT BLADE INSTRUCTIONS

 
To remove the existing fan blade

1. Loosen the fan hub set screw with the hex wrench provided.
2. Remove the fan by gently pulling it straight off of the motor shaft. Do not strike the motor shaft to loosen the fan blade.

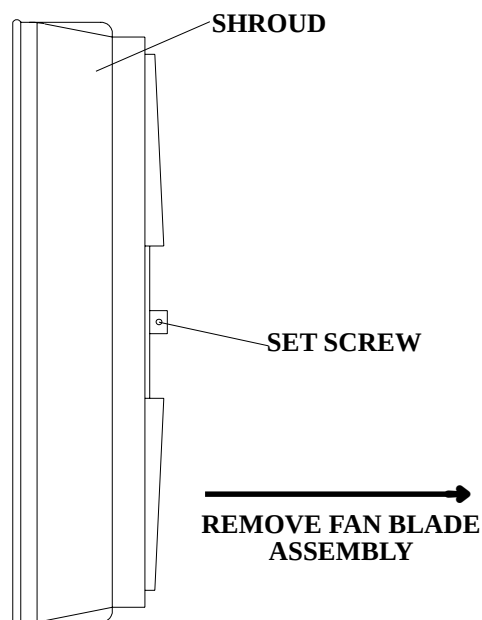

To install the new fan blade

1. Insert the hex wrench into the set screw before sliding the fan onto the motor shaft. Fan hub and set screw should be facing outside (away from the motor).
2. Position the set screw on the flat of the motor shaft.
3. Position the fan so the motor shaft is even with the fan hub surface, tighten set screw.

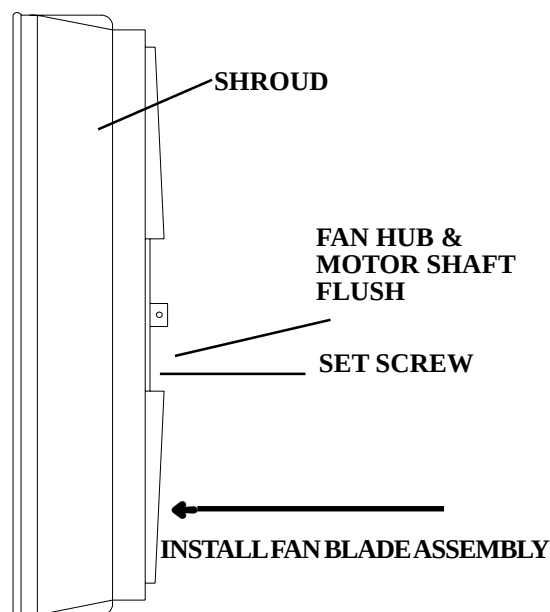

The Flex-a-lite Limited Warranty

 
Flex-a-lite Consolidated, 7213-45th St. Ct. E. Fife, WA 98424, Telephone No. 253-922-2700, warrants to the original purchasing user, that all Flex-a-lite products to be free of defects in material and workmanship for a period of 365 days (**1 year**) from date of purchase. Flex-a-lite products failing within 365 days (**1 year**) from date of purchase may be returned to the factory through the point of purchase, transportation charges prepaid. If, on inspection, cause of failure is determined to be defective material or workmanship and not by misuse, accidental or improper installation, Flex-a-lite will replace the fan free of charge, transportation prepaid. **Flex-a-lite will not be liable for incidental, progressive or consequential damages.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights and you may have other rights, which vary from state to state.

The Flex-a-lite warranty is in compliance with the Magnuson-Moss Warranty Act of 1975.

Remplacement de l'ailette


Démontage de l'ailette existante

1. Desserrez la vis de fixation du moyeu du ventilateur au moyen de la clé à vis hexagonale fournie.
2. Enlevez le ventilateur en le retirant lentement de l'arbre du moteur. Evitez de taper sur l'arbre pour débloquer l'ailette du ventilateur.

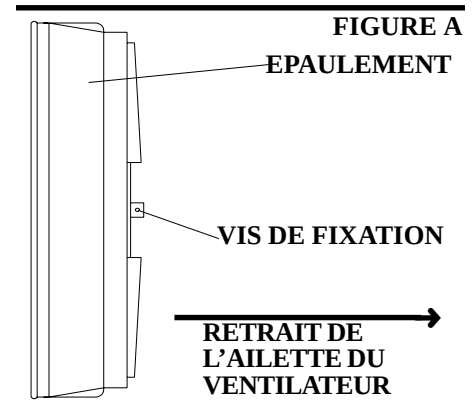

Montage de la nouvelle ailette

 
1. Placez la clé à vis hexagonale sur la vis de fixation avant de glisser le ventilateur sur l'arbre du moteur. Le moyeu du ventilateur et la vis de fixation doivent faire face à l'extérieur, vers le moteur.
2. Placez la vis de fixation sur la partie plate de l'arbre.
3. Positionnez le ventilateur de manière à ce que l'arbre du moteur soit à niveau avec la surface du moyeu du ventilateur, puis serrez la vis.

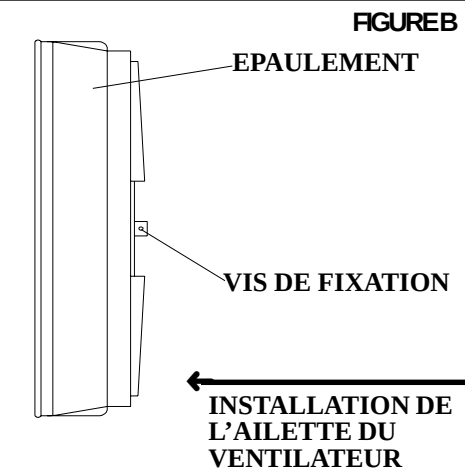

Reemplazo de aleta

Para retirar la aleta existente del ventilador

 1. Afloje el tornillo prisionero del cubo del ventilador con la llave hexagonal que se proporciona.
2. Retire el ventilador, tirando de él para sacarlo del eje del motor. No golpee el eje del motor para aflojar la aleta del ventilador.

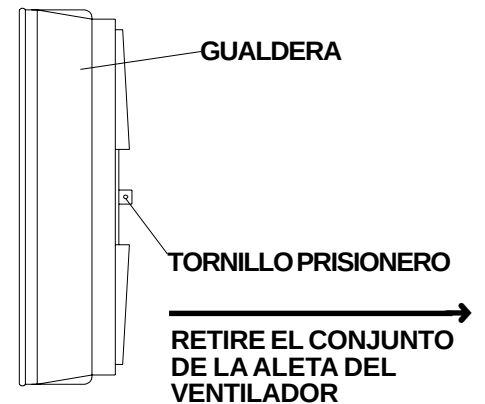

Para instalar la nueva aleta del ventilador

1. Inserte la llave hexagonal en el tornillo prisionero antes de deslizar el ventilador sobre el eje del motor. El cubo del ventilador y el tornillo prisionero deberán estar de cara hacia adentro, o sea, hacia el motor.
2. Coloque el tornillo prisionero sobre la parte plana del eje.
3. Sitúe el ventilador de modo que el eje del motor esté al ras de la superficie del cubo del ventilador y apriete el tornillo prisionero.

