

# INSTRUCTION SHEET

FORD *XSTORQUE* STARTERS (9503, 9504, 9505, 9506)

## FORD APPLICATIONS

- 9503 - 289-302-351 A/T and 5-speed M/T  
'75 and later in auto applications  
'81 and later in truck applications
- 9504 - 289-302-351 3 and 4-speed M/T only  
Up to '74 in auto applications  
Up to '80 in truck applications
- 9505 - 351M, 400, 429, 460
- 9506 - 390-427-428 "FE" only



## ELECTRICAL WIRING INSTRUCTIONS

1. Install a jumper wire from the "Bat" terminal connection on the starter solenoid to the "IGN" terminal.  
[OPTIONAL: Run the "switch" wire from the starter relay to the "IGN" terminal on the starter solenoid.]
2. Connect the positive battery wire to the "BAT" terminal on the starter solenoid.



2401 Dutch Valley Dr. ~ Knoxville, TN 37918

(865)688-5953

fax (865)281-9844



# INSTRUCTION SHEET

FORD *XSTORQUE* STARTERS (9503, 9504, 9505, 9506)

## FORD APPLICATIONS

- 9503 - 289-302-351 A/T and 5-speed M/T  
'75 and later in auto applications  
'81 and later in truck applications
- 9504 - 289-302-351 3 and 4-speed M/T only  
Up to '74 in auto applications  
Up to '80 in truck applications
- 9505 - 351M, 400, 429, 460
- 9506 - 390-427-428 "FE" only



## ELECTRICAL WIRING INSTRUCTIONS

1. Install a jumper wire from the "Bat" terminal connection on the starter solenoid to the "IGN" terminal.  
[OPTIONAL: Run the "switch" wire from the starter relay to the "IGN" terminal on the starter solenoid.]
2. Connect the positive battery wire to the "BAT" terminal on the starter solenoid.



2401 Dutch Valley Dr. ~ Knoxville, TN 37918

(865)688-5953

fax (865)281-9844

