

# LIFETIME WARRANTY

Shur-Co. warrants that all new, unused products are free from defects in material and workmanship. This Warranty is effective if the product is properly installed and used for the purpose intended for the life of the product. It applies to the original buyer only. Shur-Co.'s obligation under this Warranty is limited to repairing, or at its option, replacing any part that is returned, transportation prepaid, to Shur-Co., Yankton, South Dakota, if the product is, in our judgment, defective. All materials must be accompanied by an RMA (Returned Material Authorization) number requested by and authorized in advance of returning the materials. Shur-Co. shall not be liable or responsible to supply or pay labor to replace any part found defective, nor shall it be liable for any damages of any kind or nature to person, product, or property.

There are no Warranties for used products or products that have been repaired, altered, modified, subjected to misuse, negligence, accident or ordinary wear and tear.

Shur-Co. products are sold without any express warranty except as set forth above. Shur-Co. is not obligated to honor warranty claims if Genuine Shur-CO parts are not utilized.

DIRECT ALL WARRANTY CLAIMS TO SHUR-CO. AT 1-877-878-9336

## **SAFETY INSTRUCTIONS**

- 1. Do not place objects on or against cover or framework.
- 2. Do not tie cargo to TruXedo framework.
- Never allow children or pets to occupy pickup box while cover is closed.
- 4. Cover is not airtight. Special care is required to keep cargo clean and dry.
- Fabric cover won't prevent theft of contents inside truck box.
- 6. Cover must be rolled fully open and secured with safety straps when towing vehicle backwards.

# OWNER/USER RESPONSIBILITIES

It is the responsibility of the owner/user to read this manual & comply with the operating procedures. The owner/user is also responsible for inspecting the TruXedo® cover, and for having parts repaired or replaced when worn or damaged.

Failure to follow safety instructions and warning labels could result in failure of your cover system and/or personal injury.

## **MESSAGES TO INSTALLER**

- Always wear safety glasses and/or other necessary protective equipment when installing your TruXedo®.
- These instructions are complete for most pickup models. Additional instructions are included, if required for your truck. Please read entire manual before installing your TruXedo®.


## **COVER MAINTENANCE**

Vinyl cover can be hand washed with mild soap and water or cleaned in a car wash. Thoroughly rinse cover to remove any soap residue. Cover can be treated with any vinyl protectant made for tonneau covers.

Never use silicon, petroleum, or citrus based products on your tonneau cover.

#### **TOOLS REQUIRED:**

- 1. 9/16" Ratchet or Wrench
- 2. Large Flat Screwdriver

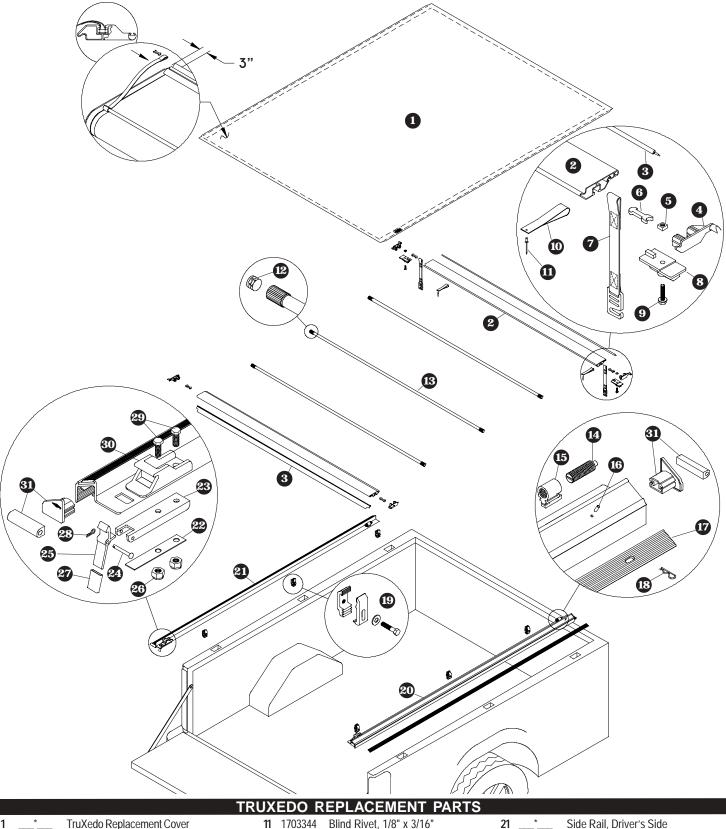


TRUXEDO REPLACEMENT PARTS								
1	*	TruXedo Replacement Cover	11	1703344	Blind Rivet, 1/8" x 3/16"	21	*	Side Rail, Driver's Side
2	*	Black Header	12	1701595	End Plug, 1" OD	22	1114773	Flat Spring, 5/8" x 3 7/8"
3	*	Header Seal, Notched	13	*	Black Bow	23	1115658	Latch Main Frame
4	1115372	Header End Plugs (Set of Two)	14	1702992	Spring Plunger, 5/8" x 1.94"			Clevis Pin, 3/16" x 1 1/4"
5	1702602	Square Nut, 3/8"	15	1703260	Tension Control Bracket		1114888	Nylon Lock Nut, 5/16"
6	1115354	Header Insert Safety Clip	16	1703345	Spring Pin, 1/8" x 5/16"		1700419	
7	*	Safety Strap	17	*	Shur-Bond™ VELCRO® Fasteners		1703265	Toggle Cap
8	1114872	Header Guide	18	1703332	Hitch Pin, 1/16" x 1 5/16"	28		Con Scrow, 5/14" x 7/9"
9	1703000	Cap Screw, 3/8" x 1 1/2"	19	*	Aluminum Clamp Assy	30	1702926 1702801	Cap Screw, 5/16" x 7/8" Header Stop
10	1115353	Header Safety Strap	20	*	Side Rail, Passenger's Side		1115373	Side Rail End Plugs w/Seal (Set of Two)
						٠.		

<sup>\*</sup> Please specify length or make and model of vehicle.

# SIDE RAIL & COVER INSTALLATION BRACKET SPRING PLUNGER CAP SCREW, SAFFTY STRAPS CI AMPS TENSION HEADER GUIDE COVER BOTTOM CLAMP SQUARE NUT, 3/8" SIDE RAIL PASSENGER'S SIDE RAII

**STEP 1:** Place side rails against front of truck box, flush with box rail and level with each other. Starting at tailgate, evenly space 3 clamps along each side rail, leaving approx. 8" on each end.

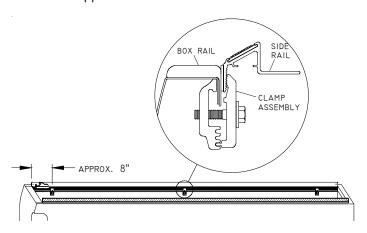


**WARNING** 


Tighten clamps securely on side rails before driving vehicle.

STEP 2: For optimum latching performance and cover fit, side rails must be level. To adjust rails, loosen screws and reposition male clamps higher or lower. Tighten all clamps.



  LOWER CLAMP







**CORRECT POSITION** 

**NOTE**: Clamp configurations shown are for reference only and are not intended to be


**STEP 3:** Install header guides into front header with 3/8" x 1 1/2" cap screws and 3/8" square nuts as shown. Nuts have been pre-installed into slot in header guide. Finger tighten.

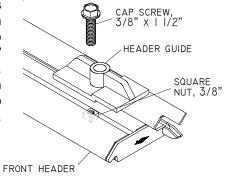

STEP 4: Set cover assembly behind cab with header seal on top of rail.

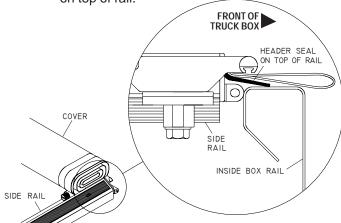


STEP 5: Slide header guides into side rail flanges on each side of header. Tighten bolts securely.

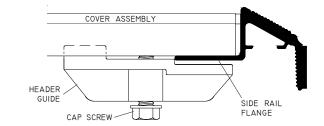


#### LATCHING & UNLATCHING COVER

STEP 6: Unroll cover toward tailgate and rest bows on side rails. Rotate header into header stops and press down to lock toggle into header.

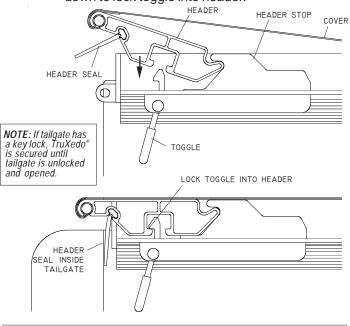


NOTE: In cold weather conditions or with some accessories, it may be preferable to close the cover before closing the tailgate. Header seal may be placed across top of tailgate if preferred


STEP 7: Secure Shur-Bond™ fasteners on one side rail, by pressing along full length of rail. Pull cover tight across pickup bed, and secure Shur-Bond™ fasteners on opposite side rail.

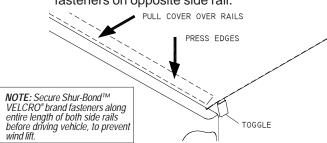

STEP 8: To release cover, pull back on toggle. Roll cover toward cab to open. For best results, leave cover fastened to side rails while opening.

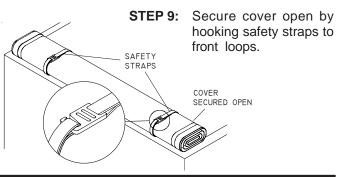


# **COVER TENSION ADJUSTMENT**

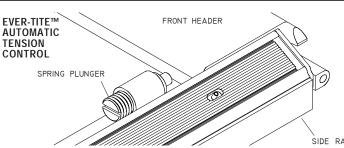

- Spring plunger compensates for material expansion & contraction caused by temperature changes.
- Check cover tension after installation, seasonally, & after extreme temperature changes.
- For best performance, adjust tension regularly to protect your cover against wind wear.

STEP 10: Set tension during warmest part of day. With cover closed, release VELCRO® brand loop from both side rails near cab. Check compression of both spring plungers against the front header per diagram. Roll cover open and make adjustments. Close cover and recheck adjustment. Repeat until satisfactory tension has been achieved.

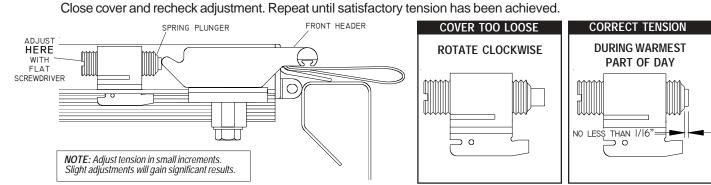

# TROUBLE SHOOTING

# **Questions?**

Call our friendly customer service staff at Shur-Co. Toll Free:

1-877-878-9336

Mon - Fri 8 am - 5 pm CT

### **HEADER WILL NOT LATCH:**

Check side rails to make sure they are level. See Step 2.

Make sure the header seal is not caught between side rail & header.

Check position of side rails on pickup box, they may be positioned too low. See Step 1

FABRIC COVER IS TOO TIGHT OR TOO LOOSE: See Step 10 to adjust tension.

\* VELCRO® is a registered trademark of the Velcro companies.