

TL3700 Series Tubular Lock


1

Tools Required

- #2 Phillips screwdriver
- 1/8" drill bit
- 1" drill bit
- 3/32" Hex Wrench
- 2-1/8" drill bit
- Right angle square (square roses)

2

Product Components

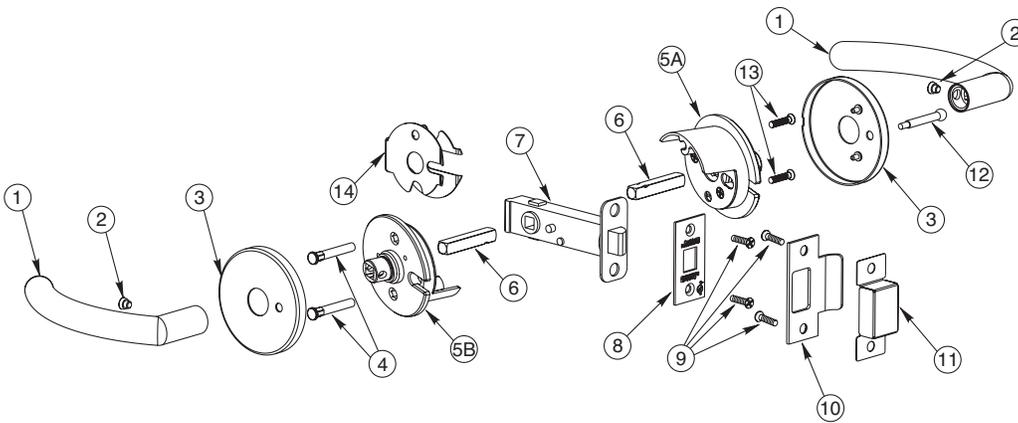


Item	Description	Qty
1	Lever	2
2	Set Screw	2
3	Rose Assembly	2
4	Mounting Post	2
5A	Inside Spring Housing	1
5B	Outside Spring Housing	1
6	Spindles	2
7	Latch	1
8	Faceplate	1
9	Screws - Latch & Strike #8-32 x 3/4"	4
10	Strike	1
11	Strike Box	1
12	Push Button (TL3720 Only)	1
13	Mounting Post Screw	2
14	Fire Guard Clip (Fire Rated option only)	1

3


Door and Frame Preparation

- Hollow Metal Doors should be properly reinforced for lock support. If support is not provided, contact door manufacturer.
- Refer to Template T31048 for door preparation. Use Door Marker FM272 supplied and information below for reference.


1. Mark and Drill Holes

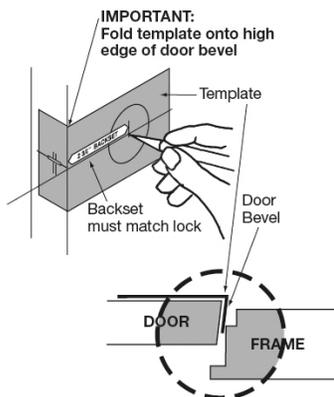

2. Final Door Prep

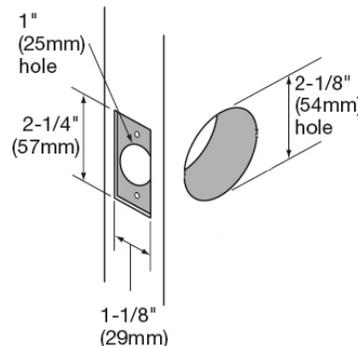

3. Frame Preparation

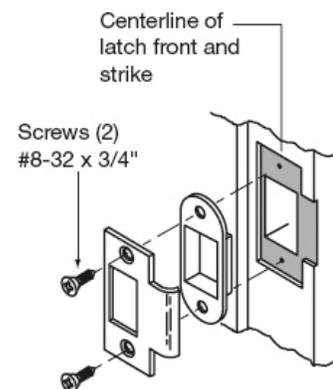

TL3700 Series

Tubular Lock

Installation Instructions



ASSA ABLOY

4

Installation

a

Passage (TL3710) and Privacy (TL3720) Functions

IMPORTANT

For proper installation, the spring housing assembly with sticker should have arrow pointing towards latchbolt and be legible during installation. See Figure 1.

1. Install latch using (2) #8-32 x 3/4" screws. Install loosely; tighten after step #5.
 - a. For TL3720 privacy function, the threaded hole on locking piece must be toward the inside of the door. See Figure 2.
2. Slide outside assembly into bore.
3. Install inside spring housing assembly using (2) #8-32 x 3/4" screws. Note location for set screw, see Figure 3.
4. Install rose onto spring housing assembly. See page 4 if Square Roses.
5. Install lever onto spindle. Insert set screw into hole in lever and tighten.
 - a. If lever set screw does not align with the threaded hole in the spring housing assembly, remove spindle and rotate the hub 180 degrees. Ensure the set screw orientation in the hub is opposite the privacy slot in the housing, see Figure 4.
6. For TL3720 privacy function, install push button. See Figure 5.



Figure 1

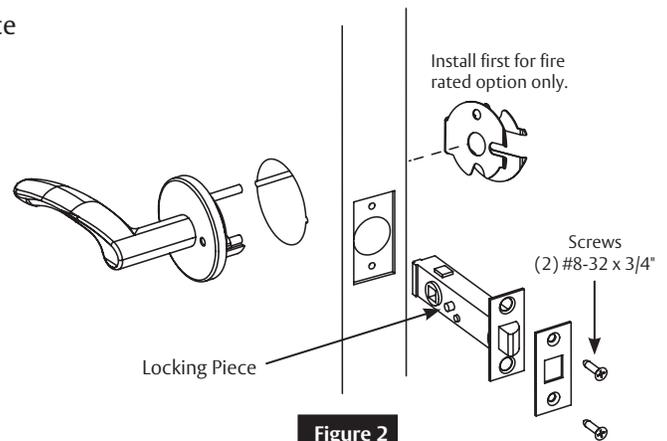


Figure 2

b

Communicating (TL3780) Function

1. Install latch using (2) #8-32 x 3/4" screws. Install loosely; tighten after step #5.
2. Slide blank outside rose assembly into bore, see Figure 6.
3. Install inside spring housing assembly, rose and lever same as #3, 4 & 5 above.

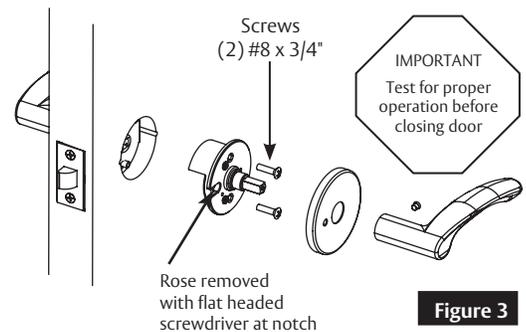


Figure 3

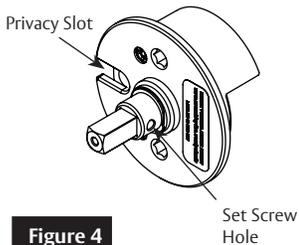


Figure 4

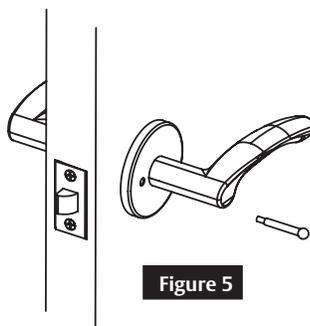


Figure 5

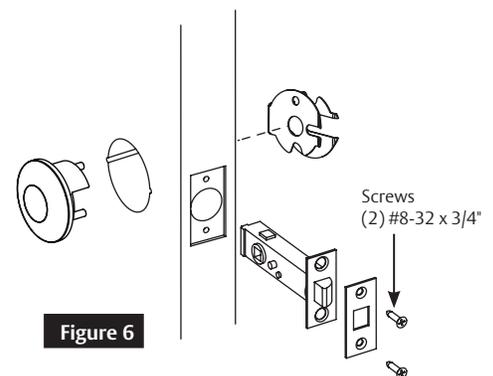


Figure 6

4

Installation, Continued.

c

Single Lever Pull (TL3750S) Function

1. Install inside mounting plate assembly using (2) #8-32 x 3/4" screws. Note location for set screw.
2. Install rose onto spring housing assembly. See page 4 if Square Roses.
3. Install lever onto spindle. Insert set screw into hole in lever and tighten. See Figure 7.

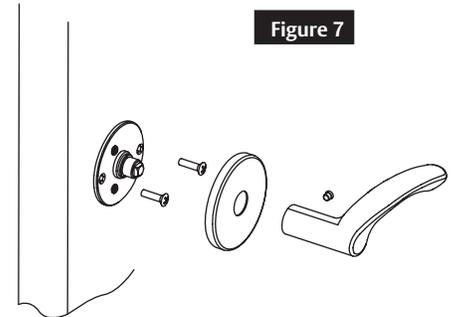


Figure 7

d

Through-bolted Single Lever Pull (TL3750) and Double Lever Pull (TL3770) Functions

1. Install through-bolt assembly from outside.
2. Install inside mounting plate assembly using (2) #8-32 x 3/4" screws. Note location for set screw.
3. Install rose onto spring housing assembly. See page 4 if Square Roses.
4. Install lever onto spindle. Insert set screw into hole in lever and tighten. Repeat process for outside lever (TL3770 Function only). See Figure 8.

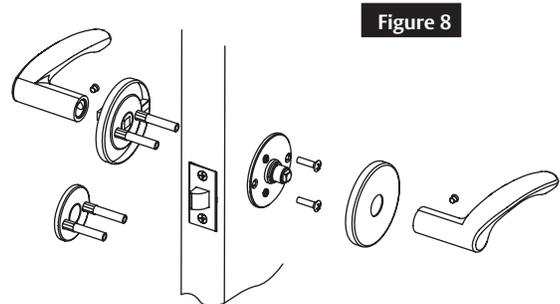



Figure 8

5

Square Rose Installation (Figure 9)


1. Install latch, outside assembly and inside spring housing assembly per function.
2. Position square mounting plate over spring housing, See Figure 10.
3. Drill two centered pilot holes for the #6-32 mounting screws in the upper right and lower left portions of the square mounting plate.
4. Loosely attach mounting plate to both sides of the door with screws.
5. Square top surface of mounting plate to edge of door.
 - a. The right angled square MUST be on the flat surface of the square mounting plate for proper leveling.
6. Tighten mounting screws
7. Press rose onto mounting plate.
8. Install lever onto spindle. Insert set screw into hole in lever and tighten.

Figure 9

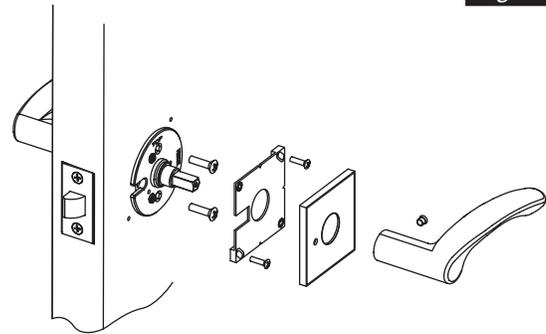


Note: To level plate, place a right angle square on the flat portion of the mounting plate.

Figure 10

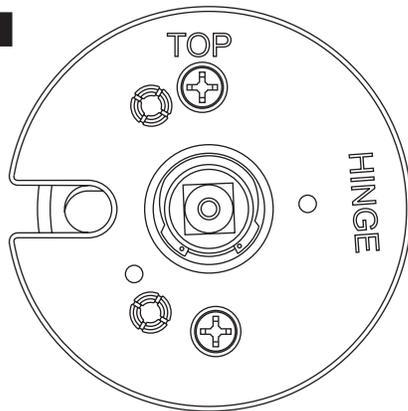

Spring Housing

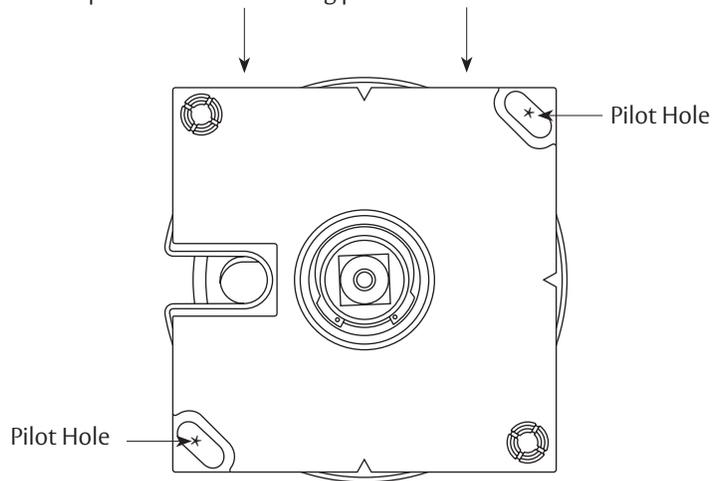

Square Mounting Plate



Corbin Russwin, Inc.
225 Episcopal Road
Berlin, CT 06037 USA
Phone: 800-543-3658
Fax: 800-447-6714
www.corbinrusswin.com

⚠ WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

FM271 01/23

Experience a safer
and more open world