

DL Series Tubular Lock


1

Tools Required

- #2 Phillips screwdriver
- 1/8" drill bit
- 1" drill bit
- T20 sized security bit
- 2-1/8" drill bit
- Right angle square (square roses)

2

Product Components

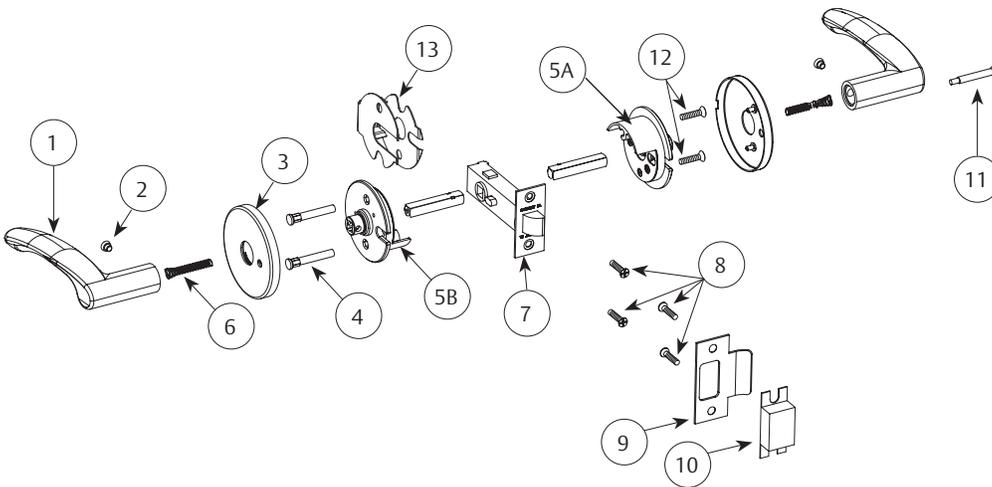

Item	Description	Qty
1	Lever	2
2	Set Screw	2
3	Rose Assembly	2
4	Mounting Post	2
5A	Inside Spring Housing	1
5B	Outside Spring Housing	1
6	Lever Springs	2
7	Latch	1
8	T-Strike Screw Pack	1
9	Standard T-Strike	1
10	Wrought Box Strike	1
11	Push Button (Privacy Function Only)	1
12	Mounting Post Screw Pack	1
13	Fire Clip (Required for fire-rated doors)	1


Note: Refer to DL Series Parts Manual for Part Number Information.

3


Door and Frame Preparation

- Hollow Metal Doors should be properly reinforced for lock support. If support is not provided, contact door manufacturer.
- For door preparations, use template A6305 (Except for single and double lever pull functions (DLU93 / DLU94) which use template A7931).


1. Mark and Drill Holes

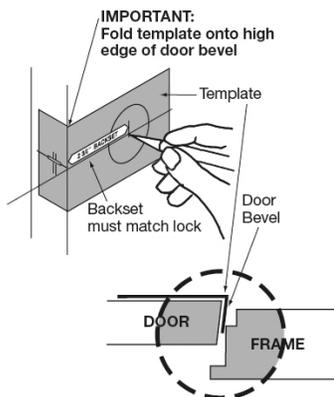

2. Final Door Prep

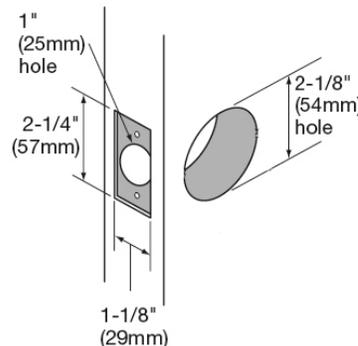

3. Frame Preparation

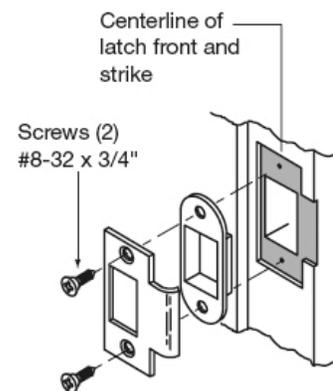

4

Installation

a

Passage (DLU15) and Privacy (DLU65) Functions

IMPORTANT

For proper installation, the spring housing assembly with sticker should have arrow pointing towards latchbolt and be legible during installation. See Figure 1.

1. Install latch using (2) #8-32 x 3/4" screws. Install loosely; tighten after step #5.
 - a. For DLU65 privacy function, the threaded hole on locking piece must be toward the inside of the door. See Figure 2.
2. Slide outside assembly into bore.
3. Install inside mounting plate assembly using (2) #8-32 x 3/4" screws. Note location for set screw, see Figure 3.
4. Install rose onto spring housing assembly. See page 4 if Square Roses.
5. Install lever onto spindle. Insert set screw into hole in lever and tighten.
 - a. If lever set screw does not align with the threaded hole in the spring housing assembly, remove spindle and rotate the hub 180 degrees. Ensure the set screw orientation in the hub is opposite the privacy slot in the housing, see Figure 4.
6. For DLU65 privacy function, install push button. See Figure 5.



Figure 1

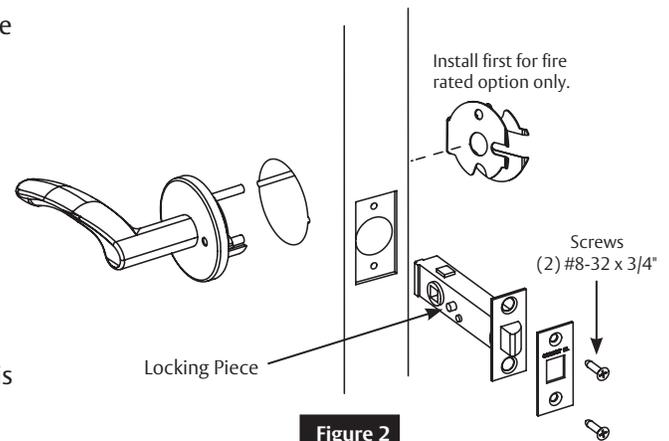


Figure 2

b

Communicating (DLU15-3) Function

1. Install latch using (2) #8-32 x 3/4" screws. Install loosely; tighten after step #5.
2. Slide blank outside rose assembly into bore, see Figure 6.
3. Install inside spring housing assembly, rose and lever same as #3, 4 & 5 above.

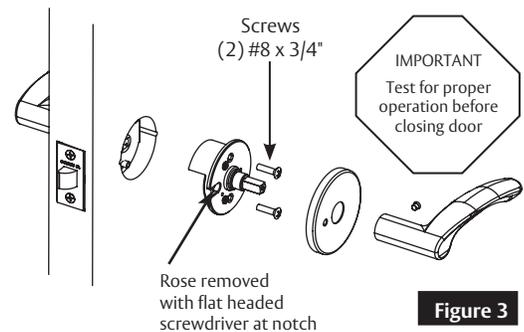


Figure 3

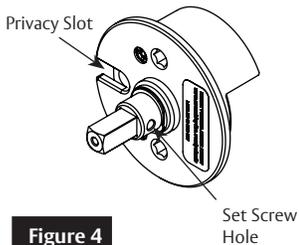


Figure 4

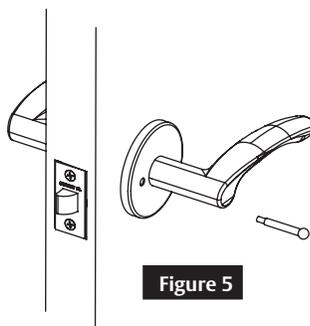


Figure 5

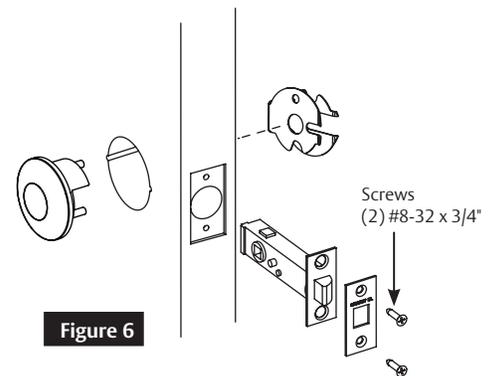


Figure 6


4

Installation, Continued.

c

Single Lever Pull (DLU93) Function


1. Install inside mounting plate assembly using (2) #8-32 x 3/4" screws. Note location for set screw.
2. Install rose onto spring housing assembly. See page 4 if Square Roses.
3. Install lever onto spindle. Insert set screw into hole in lever and tighten. See Figure 7.

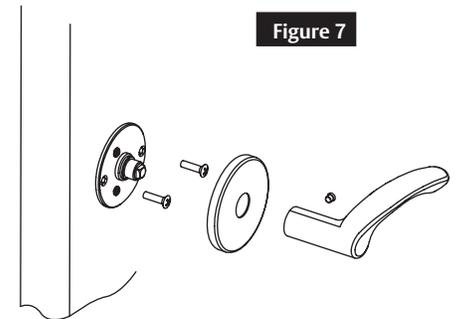

d

Through-bolted Single Lever Pull (TB-DLU93) and Double Lever Pull (DLU94) Functions

1. Install through-bolt assembly from outside.
2. Install inside mounting plate assembly using (2) #8-32 x 3/4" screws. Note location for set screw.
3. Install rose onto spring housing assembly. See page 4 if Square Roses.
4. Install lever onto spindle. Insert set screw into hole in lever and tighten. Repeat process for outside lever (94 Function only). See Figure 8.

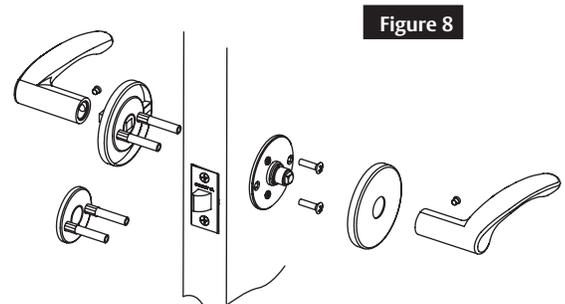


5

Square Rose Installation (Figure 9)


1. Install latch, outside assembly and inside spring housing assembly per function.
2. Position square mounting plate over spring housing, See Figure 10.
3. Drill two centered pilot holes for the #6-32 mounting screws in the upper right and lower left portions of the square mounting plate.
4. Loosely attach mounting plate to both sides of the door with screws.
5. Square top surface of mounting plate to edge of door.
 - a. The right angled square MUST be on the flat surface of the square mounting plate for proper leveling.
6. Tighten mounting screws
7. Press rose onto mounting plate.
8. Install lever onto spindle. Insert set screw into hole in lever and tighten.

Figure 9

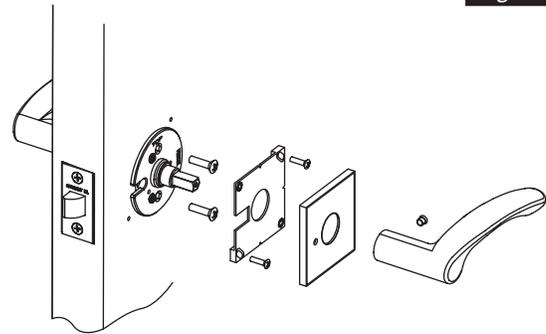


Note: To level plate, place a right angle square on the flat portion of the mounting plate.

Figure 10

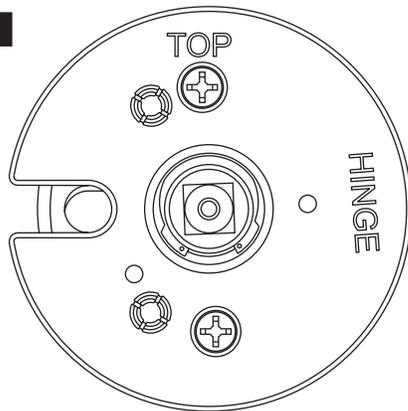

Spring Housing

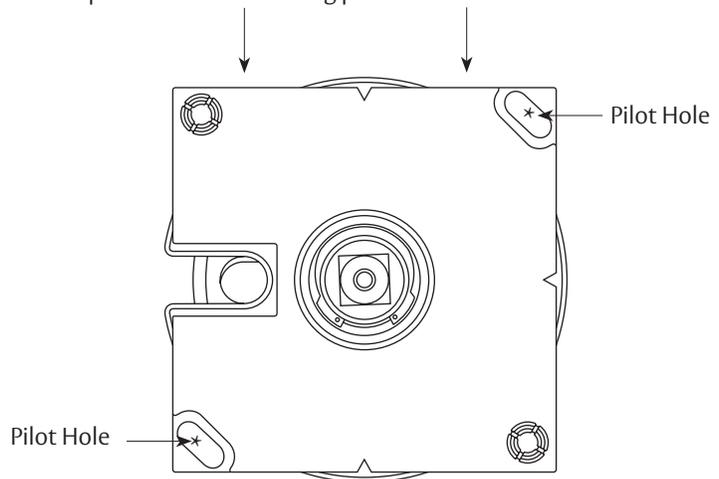

Square Mounting Plate



SARGENT Manufacturing Company
100 Sargent Drive
New Haven, CT 06511 USA
800-727-5477
www.sargentlock.com

⚠ WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.