


# StormPro® Tornado Resistant Systems Replaceable Glass Module Installation Instructions


## Strong in the Storm®

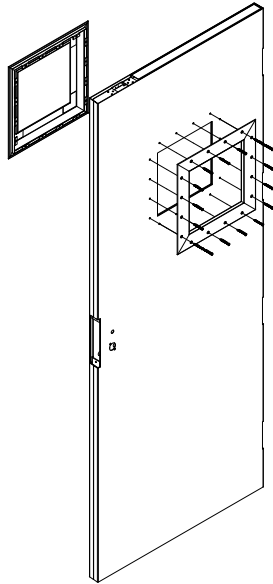

### 1 Remove all trim screws and trim.

Set interior trim and spacer plate aside for use with new glazing module.



Discard screws and exterior trim piece.

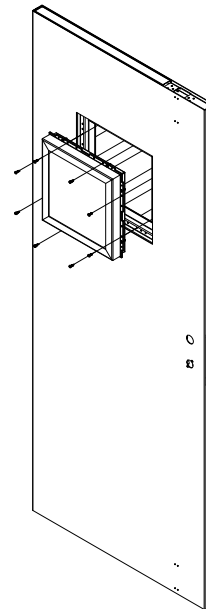

### 2 Remove glazing module screws and glazing module and discard.


### 3 Install replacement glazing module using #8 x 5/8" pan head screws included in kit.

- 8 screws required for 10" x 10" vision lite
- 10 screws required for 4" x 25" narrow lite

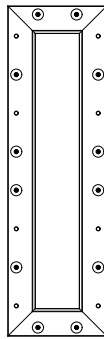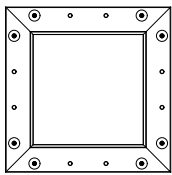

### 4 Re-install interior trim and spacer plate using #10 x 1-3/4" oval head screws included in kit at the marked locations.

- 8 screws required for 10" x 10" vision lite
- 12 screws required for 4" x 25" narrow lite

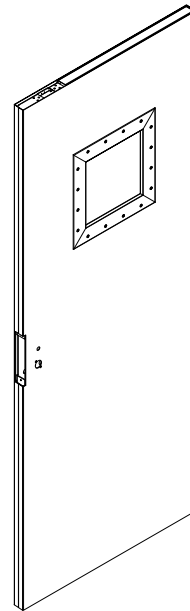

### 5 Install replacement exterior trim using #10 x 1-3/4" oval head screws included in kit at the remaining locations.

- 8 screws required for 10" x 10" vision lite
- 8 screws required for 4" x 25" narrow lite

For routine cleaning, use a soft, clean, grit-free cloth and a mild soap, detergent, or non-stringent window cleaning solution (safe for polycarbonate glass).

Care must be taken not to scratch the interior protective surfaces. Do not use bristle brushes or abrasive cleaning materials. A soft cloth or clean synthetic sponge is recommended for washing and do not use the same cloth or sponge for wiping sills or frames. It is recommended to use a different sponge, cleaning cloth and water for cleaning the outside and the inside of the windows.