

**Don't
Panic!**

 
X1

Manual

[Packing List]




Main unit X1



Earbuds (L\R)



 Type-C data cable



Ear tips - 3 Sets

 


Ear hooks - 1 Set



manual

[Know Our Product]

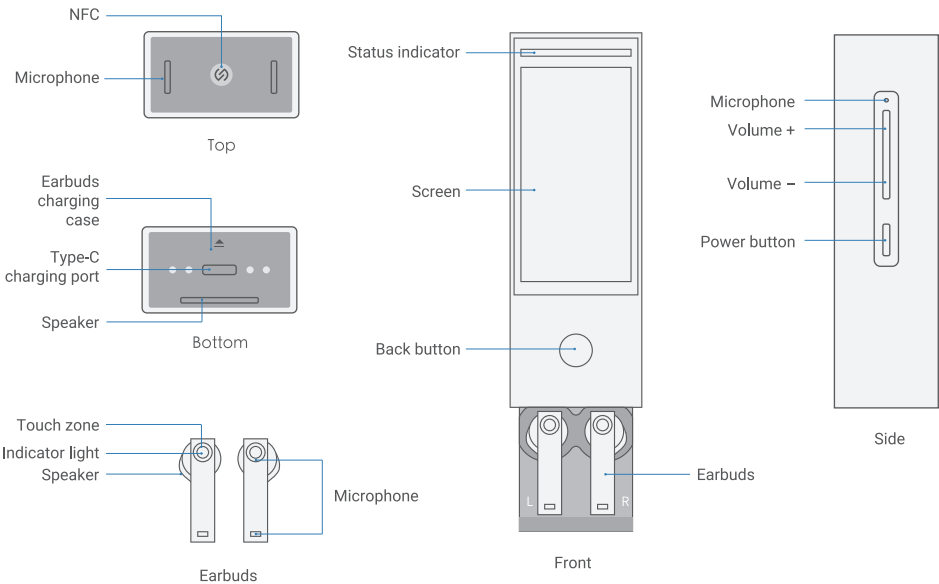

[Quick Start]

1.Startup/Shutdown/Restart

When the device is off, press and hold the Power button for 3s to turn on; When the device is on, a single click of the Power button can wake up or turn off the screen.
Press and hold the Power button for 3s to shut down or restart the device.

2.Charging

Charging the main unit: Connect the type-C data cable to a standard power adapter. The X1 model supports a 5V-1A and 5V-2A charger.

*Note: The earbud charging case may eject when the data cable is inserted. Push the earbuds back into place while inserting the data cable. Avoid using excessive force when removing the cable after charging.

3.Charging the earbuds

Tap the bottom of the main unit for the earbud charging case to eject. Once taken out, the earbuds will connect to the main unit automatically.

4.Wi-Fi Connection

The Online Translation function requires a WiFi Connection: A more stable WiFi connection will result in a more accurate translation.

5.Removing the Earbuds

Tap the bottom of the main unit for the earbud charging case to eject. Once taken out, the earbuds will connect to the main unit automatically.

6.Return to the previous menu

 
Click the Back button on the front of the main unit for the system to return to the previous menu; Adjust the main interface menu sequence.

* Description of the earbud microphone (L\R) recording channel

A single earbud can be worn to access functions like Listen & Play, Voice Call, and Multi-Person. When taking out both earbuds, the one removed first will become the recording channel by default, and it alone will be able to record, though the recording channel can be switched by tapping the touch zone on the other earbud.


7.Setting the Volume

Click the Volume button for the system to adjust the translation volume on the main unit. Set the earbud volume or the prompt tone on the main unit touch screen.

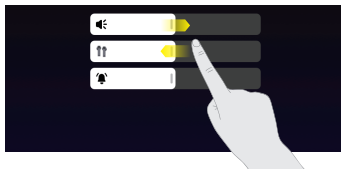

8.Adjust the main interface menu sequence

 Press and hold a function menu icon in the homepage interface to drag it and rearrange the layout.

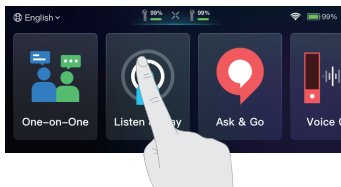

9.Simultaneous use of multiple devices

 
Multiple X1 devices are needed for Voice Call, Multi-Person, and similar functions. View more detailed instructions in [Functions] below.

[Functions]

1. One-on-One

Share one of the earbuds for a simple face-to-face conversation. Remove two earbuds, tap the [One-on-One] function icon, and set languages for the earbuds (L/R) to hold a dialogue with each of the speakers wearing one of the earbuds.


Note: Make sure the language for the earbud (L/R) has been correctly matched to the corresponding speaker.

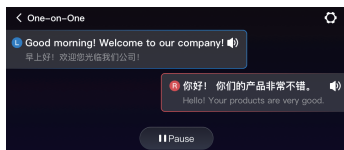

2. Listen & Play

This is a simultaneous recording and translation function for brief dialogues.

 Record with the main unit and play the translation in the earbuds. Place the main unit near the other speaker and listen to the translation from the simultaneously recorded content with the earbuds. To make a brief dialogue, hold the Back button to speak and release to play the audio for an automatic translation.

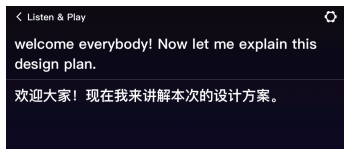


3. Ask & Go

This function serves for small chats with the device held in hand. Hold the button to speak and release to play the audio for a translation.

Select the languages spoken from the language list. The system is also capable of detecting the language when you hold the Back button to speak. The main unit will play the translation automatically when you release the button.

Quick Start

 Press and hold the Back button for 2s to start the Ask & Go function quickly. The recording and translation function will be activated simultaneously.




4. Voice Call

Hold a remote conversation with others in real time by dialing a number on the main unit.

Enter the voice call number for the other party's X1 device to call the other person and start a bilingual conversation in real time.

 Note: This function applies only to voice communication between two X1 devices.

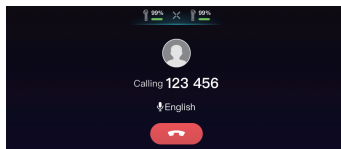


5. Multi-Person


1) Create Meeting

You can start a multi-person meeting with or without a password.

 After starting the multi-person meeting, the creator becomes the administrator by default, and you can select your language from the interface.

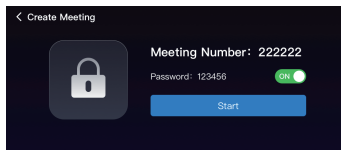

 The default setting is Speech mode; click "Unmute" to switch to Discussion mode. Only the administrator can speak in Speech mode, with attendees listening to the translated content of the speech. Everyone can speak in Discussion mode, though the order of speech should be strictly controlled to avoid having multiple people speak at the same time.

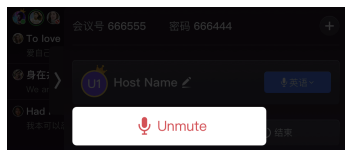

6. Translation Settings

Font size: Select the font size for translated content according to your reading habits;

Original text on/off: When the original text display has been turned off, only the translation will be displayed on the interface;

Translation audio speed: Select the right audio speed for the translation according to your listening habits;

 
Pause duration: Be mindful in choosing an appropriate pause duration according to the speed of your speech to improve the accuracy of punctuation and translation.

2) Join Meeting

Remove the earbuds and enter the number and password (if any) for a created meeting on the screen. Select the language you speak after entering the meeting. In Speech mode, only the administrator can speak. In Discussion mode, you can talk freely. Be careful to avoid speaking at the same time as others.

3) Quick Meeting

- ① Press the Power button twice to show an animated guide of "Tap to Pair", which helps you pair your X1 device with another user's.
- ② To invite a new attendee, summon the "Tap to Pair" feature again and pair with someone else's X1 device.
- ③ All meeting members are free to invite new members to join with "Tap to Pair".

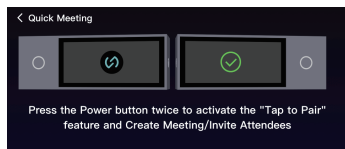

Note: Summoning the "Tap to Pair" feature on two devices simultaneously can lead to information error during the creation of a multi-person meeting. If your device has already been paired for a meeting, exit before joining a new one.

[FAQs]

1. Why isn't the translation accurate?

- Check that the correct language settings have been selected, try to employ a standard accent when speaking, and check that the language for your partner has also been chosen correctly.
- Next, check that you are wearing the earbuds correctly, and the microphone (on the stem) is positioned toward the mouth. If the main unit is being used for recording, keep it as close to the sound source as possible and avoid excess noise interference.
- Speaking too low or too fast or slow may affect the quality of the translation. The corresponding parameters can be adjusted in Translation Settings;

2. Why is the translation function not working at all (or working very badly)?

- Check your WiFi connection. An unstable network will directly affect the translation speed and Accuracy. Try changing the WiFi network, connecting to the phone hotspot, or enabling the Offline Translation.
- The earbuds might not be connected properly and could be hindering the activation of the translation function. Try placing the earbuds back into their charging case and then taking them out to re-establish the connection.
- The earbud battery might be running low or may not have charged properly. Try putting them back in the charging case.

3. Why is the earbud volume too high or too low?

- The earbud volume setting might be abnormal. Try activating the pop-up window to adjust the earbud volume settings via the touch screen by clicking the Volume button on the main unit.

4. Why can't I connect my earbuds?

- It is possible for an earbud connection to fail. Put the earbuds back into the charging case and take them out again to reconnect.

5. Why is the main unit system stuck or abnormal?

- Press and hold the Power button for 3s to restart the X1 system;
- Press and hold the Power button for 20s to force the system to restart.

[Product Specification]

Name: Interpreter Hub
Model: Timekettle X1
Dimension: 128*45*30mm
Processor: 4-core ARM 12nm
Memory space: Ram (3G)/Rom (32G)
Operating system: XOS (Android-based)
Communication mode: WiFi 2.4G/5G
Charging (main unit): type-C; supporting a 5V-1A and 5V-2A power supply.
Battery capacity: 3,200mAh
Charging (earbuds): 5V-2A

[Safety Information]

Please read the following safety information before using this product.

1. Please avoid methods that have not been officially recommended for charging in order to prevent risks like fire, explosion, or other hazards;
2. Be careful not to drop, burn, subject the product to excessive force, or immerse it in liquid to avoid damaging the device;
3. Avoid exposing the product to high temperatures or keeping it around heating devices such as ovens, microwaves, etc.;
4. Be sure to use the product within the temperature range of 0-35°C and store it within the range of -20-45°C. Temperatures that are too high or too low could result in device malfunctions;
5. Timekettle shall not be responsible for quality problems, equipment failures, and safety accidents caused by the use of accessories that have not been officially approved.

[Contact Us]

Official Website: www.timekettle.co;
Customer Services: support@timekettle.co;
Contact Information: (+86) 0755-86725036 (Chinese),
+1(833) 491-1328 (English/Español)
Manufacturer: Shenzhen Timekettle Technology Co., Ltd.
Address: Room 612, Building 4, Minqi Science Park,
Pingshan 1st Road, Nanshan District, Shenzhen City,
Guangdong Province

[Warranty Regulations]

1. Please keep the purchase receipt and warranty card as warranty certificates after your purchase.
 2. Any problems with the quality of the product occurring within one year during normal use of the product or half a year for its accessories, from the date of purchase, are subject to free maintenance service with your purchase receipt and warranty card.
 3. Items not covered by the warranty:
 - A. Normal wear;
 - B. Damage caused by not using the device in accordance with the instructions in the manual;
 - C. Damage caused by human factors.
 4. An appropriate repair fee will be charged for malfunction caused by human actions, expiration of the warranty period, or force majeure. Please contact us for more details.
- * In case of any variations to the aforementioned information, please refer to announcements on the official website for the most up-to-date information.



🌐 www.timekettle.co

✉ support@timekettle.co

☎ (+86) 0755-86725036 (简体中文) +1(833) 491-1328 (English/Español)