



AV-3
Whip Cutting Chart
Frequency range: 108-512 MHz

RAMI, Inc.
Grand Haven, MI 49417
(616) 842-9450
www.rami.com

Loosen set screws in adapter and remove the whip. Cut whip length to desired frequency according to the cutting chart below. Place the whip back into the adapter and secure by tightening the set screws. If lower frequencies are desired, a longer whip will need to be purchased.

WHIP CUTTING CHART

