

# LF-FSD075YB

Linear DALI Dimmable NFC Constant Current LED Driver





## Product family features

- DALI&PUSH dimmable
- Dim to off without afterglow
- Supports 2 sets of light fixtures connected in series
- Standby power consumption≤0.3W
- Suitable for Class I light fixtures
- 5 years guarantee



## **Product family benefits**

- Advanced functions: EL, CorridorDIM, CLO
- DALI-2 part ext. 251, 252 and 253
- Output current adjustable and parameter set via DALI programmer or NFC
- Comply with Zhaga Book13, 24
- Surge level: PUSH: 1kV; L-N: 1kV; L/N-PG: 2kV

## **Typical applications**

- For linear light and tri-proof light
- For office, commercial and decorative lighting

### **Product parameters**

- Output current 125-900mA
- Output power 30-75W
- Input voltage 198-264Vac

- Output voltage 54-240Vdc
- Efficiency 93%

## **Electrical data**


Input data				
Rated supply voltage	220 240V			
AC voltage range	198 264V			
Mains frequency	0/50/60Hz			
Input voltage DC	180 264V			
Power factor	≥0.97			
Efficiency in max. power	≥93%			
THD	<8%			
Input current	0.45A Max			
Inrush current	30A <sup>1)</sup>			
Loading no. on circuit breaker 10 A (B)	13			
Loading no. on circuit breaker 10 A (C)	21			
Loading no. on circuit breaker 16 A (B)	21			
Loading no. on circuit breaker 16 A (C)	35			
Protective conductor current	≤0.7mA			
Power input on stand-by	≤0.3W			
Output data				
Nominal output voltage	54 240V			
Nominal output current	125 900mA			
Default output current	125mA			
Current set	NFC/programmer			
Maximum output power	75W			
Nominal output power	30 75W			
Output ripple current (100 Hz)	±3.3 %			
Flicker	Comply with IEEE Std 1789-2015			
CIE SVM	≤0.4			
IEC-Pst	≤1			
Output current tolerance	±5%			
Temperature tolerance	±10%			
Starting time	<1.5S			
Safety				
Withstanding voltage	I/P-PG: 1.5kV&5mA&60S; I/P-DA1/DA2, DA1/DA2-PG: 1.5kV&5mA&60S			
Surge capability (L-N)	1kV			
Surge capability (L/N-E)	2kV			
PUSH <sup>2)</sup>	1kV			
Insulation resistance	I/P-PG, I/P-DA1/DA2, DA1/DA2-PG: >100MΩ@500VDC			
Guarantee	5 years <sup>3)</sup>			
1) t =320µs				

1) t =320µs

2) The surge test wiring at the PUSH terminal is connected in parallel with L-N


3) **5 years @Tc≤90**°C

## Characteristic diagram

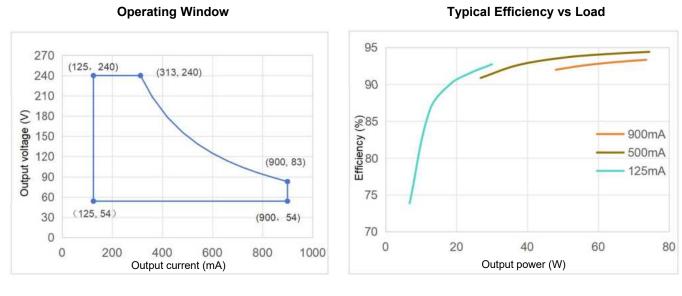


**Typical Power Factor vs Load** 



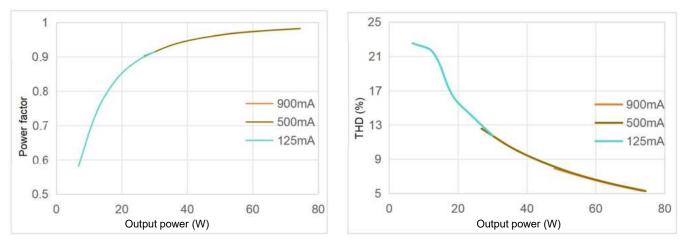

## Lifespan

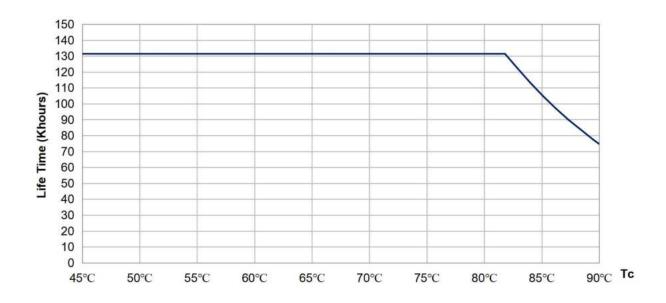

June 27, 2024 Version 1.2 LF-FSD075YB

## Dimensions



 


Mounting hole spacing, length	270mm
Product weight	200g
Cable cross-section, input side	0.5 1.5 mm²
Cable cross-section, output side	0.5 1.5 mm²
Wire preparation length, input side	7 8mm
Wire preparation length, output side	7 8mm
Length	280mm
Width	30.0mm
Height	21.0mm
Colors & materials	
Casing material	Color coated sheet
Casing color	White

## **Temperature & operating conditions**

Ambient temperature range	<b>-30</b> ℃ <b>- +60</b> ℃
Maximum temperature at tc test point	<b>90</b> °C
Temperature range at storage	-30 $^\circ \rm C$ - +80 $^\circ \rm C$ (6 months in Class I environment)
Humidity range at storage	20-75%RH (no condensation)
Humidity during operation	20-95%RH (no condensation)
Atmospheric Pressure	86-106KPa
RoHS	RoHS 2.0 (EU) 2015/863

## Tc test point




## Tc point is at the bottom of LED driver

## **Product Terminal**

	Input		Output		
AC-L (Gray)	AC live wire input	LED+ (Red)	Positive electrode output of LED driver		
AC-N (Gray)	AC neutral wire input	- (Black)	Negative electrode output of LED series connection		
I	/	+ (Red)	Positive electrode output of LED series connection		
🕒 (Gray)	Earth wire input	LED- (Black)	Negative electrode output of LED driver		
DA1 PUSH (Green)	DALI1/PUSH dimming input	1	/		
DA2 PUSH (Green)	DALI2/PUSH dimming input	1	/		

## Wiring Diagram of Output Terminal

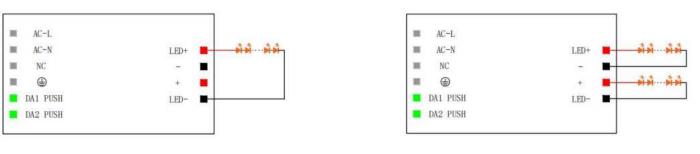

### Wiring diagram of single light fixture


#### Wiring diagram of double light fixture

## **Protective Characteristics**


Protective Type		Min.	Тур.	Max.	Introduction
Input Undervoltage	Protective voltage	145Vac	150Vac	155Vac	When the input voltage is lower than the protection voltage, turn off the light.
Protection	Restore voltage	156Vac	160Vac	165Vac	When the input voltage is higher than the recovery voltage, the light can be automatically turned on.
Input Overvoltage	Protective voltage	310Vac	320Vac	330Vac	When the input voltage is higher than the protection voltage, turn off the light.
Protection	Restore voltage	261Vac	270Vac	278Vac	When the input voltage is lower than the recovery v oltage, the light can be automatically turned on.

## **Protective Characteristics Schematic**

Schematic diagram of input undervoltage protection

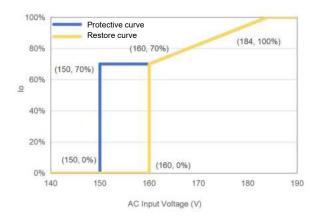

#### Schematic diagram of input overvoltage protection

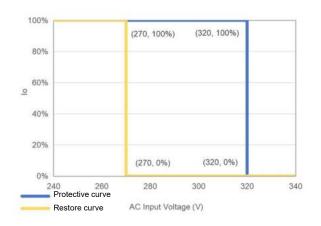


## Capabilities

Dimmable	DALI/PUSH dimmable
Dimming range	1 100%
Overload protection	Yes
Short-circuit protection	Hiccup mode (Automatic reversible)
No-load protection	<250V
Suitable for fixtures with prot. class	1
Programming interface	DALI/NFC
Control interface	DALI
Number of channels	1 channel
CorridorDIM	Yes
EL	Yes
CLO	Yes
DALI Part 251 252 253	Yes


## **Dimming Function Instruction**

DALI dimming function

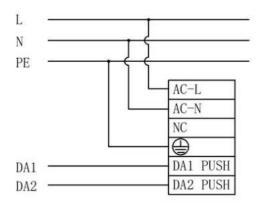


#### Wiring diagram of DALI dimming

- ① Default setting brightness is 100%.
- 2 Connect DALI signal to DA1 PUSH and DA2 PUSH.
- ③ DALI protocol includes Max.16 scene groups.
- ④ Maximum number of LED drivers connected in parallel in DALI dimming mode: 64 pcs.
- (5) Minimum dimming depth of DALI dimming: 1%.

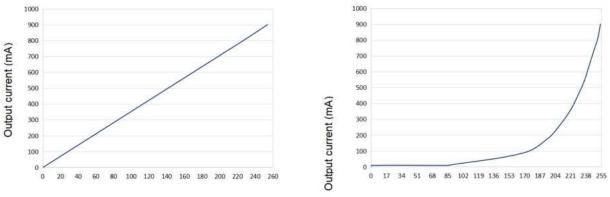


Linear dimming

 

Note: Choose only ONE as opposed to use DALI or PUSH at the same time in case of the damage of DALI dimmer.

#### PUSH dimming function

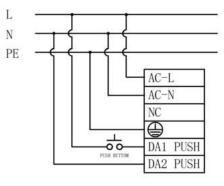

Wiring diagram of PUSH dimming

Switch from DALI mode to PUSH mode: short press PUSH switch to enable PUSH dimming function

① Connect PUSH switch between AC-L and DA1 PUSH in series and connect DA2 PUSH to AC-N.

2 Make sure that AC-L and AC-N are NOT directly connected to DA1 PUSH and DA2 PUSH terminals.

③ Make sure that PUSH switch is off before the AC is powered on; operate PUSH after the AC is powered on.

④ Make sure the PUSH switch is off before disconnecting the AC.

(5) If you have any questions about the wiring and operation, please confirm with Lifud FAE.

6 Wrong wiring or operation may cause damage to the driver.

Operation	Duration	Function	
Instant Push	0.1-0.5S	LED light on/off	
Long Push	0.6-9S	LED light dim up/down	
Reset Push	>9S	Reset the brightness of luminaire to 50%	

① The PUSH operation won't cause any variations on LED driver if it's less than 0.1S.


2 Minimum dimming depth of PUSH dimming: 1%

③ The PUSH dimming mode has the memory function in case of any power failure. When the LED driver is powered on again, the light will return to the previous state before power failure.

4 The present dimming direction of PUSH dimming is opposite to the former one.

⑤ In automatic mode, long press for more than 3 minutes to enter the corridor dimming function.

Corridor dimming function

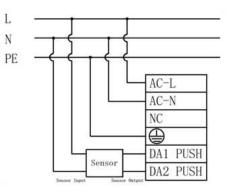

#### Wiring diagram of corridor dimming

#### **Operations for Entering Corridor Lighting Mode**

Approach 1: use Lifud programmer to enable the driver's corridor lighting mode and set parameters.

Approach 2: keep pressing PUSH for 3+ mins so as to switch to the corridor lighting mode.

Approach 3: keep moving in the effective sensing area for 3+ mins (set the sensor's hold time for 3+ mins to enable the corridor lighting mode.

Remarks:

1. In the automatic detection mode, the driver can be switched from PUSH mode to corridor lighting mode by approach 2 and 3, its brightness will dim up to 50%; long press for 3 mins and then it dims down and then dims up, which means the driver has entered the corridor lighting mode.

2. After activating the corridor dimming mode, PUSH DIM is turned off.

3. In the case of AC input and any level of brightness in the corridor lighting mode, switching DC and then return AC will restart the corridor lighting mode.

### **Operations for Exiting Corridor Lighting Mode**

Approach 1: use Lifud programmer to choose other modes and exit corridor lighting mode.

Approach 2: connect to DALI master and send DALI command, the driver will return to the DALI dimming mode.


Approach 3: connect to the PUSH switch and continuously press it 10 times within 10 secs, the driver will return to the PUSH dimming mode.

Remark:

1. The 3-sec or above single press or release will cause the press number to be counted as 0.

2. The approach 2 and 3 CANNOT be used if the corridor lighting mode of driver is set via Lifud programmer.

### Working Process of Corridor Dimming Mode

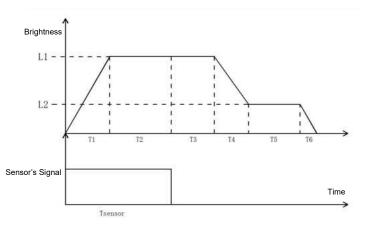

Symbol	Name	Default value	Available scope setting
T1	Fade-in time of sensing	1s	0-100s
T2	Holding time of sensing	Depends on sensor	Depends on sensor
Т3	Waiting time of sensing	180s	0-59999s, 60000s (infinite)
T4	Fade-out time of sensing	5s	0-100s
Т5	Unattended time	60000s (infinite)	0-59999s, 60000s (infinite)
Т6	Fade-out off time	0s	0-100s
L1	Sensing brightness	100%	0-100%
L2	Unattended brightness	10%	0-100%

## **Emergency function instruction**

The default output current is 15% Io max in the case of DC emergency input.

Emergency input voltage: 180-264Vdc

Note:

1. Emergency function can be set by Lifud programmer and programming software(or FEIG NFC reader)

2. It can be set from 0 to 100%.

3. If the emergency mode is off, input current is DC and the working mode is the same as the AC input.

4. In the case of mains input, the brightness is random when using PUSH dimming. When the driver enters the emergency escape lighting system and then reconnects AC, the light brightness will remain the one set via PUSH switch.

5. In the case of mains input, the brightness is random when using DALI dimming. When the driver enters the emergency escape lighting system and then reconnects AC, the light brightness will return to the brightness when DALI is powered on.


## Programmer tools and software

Product	Name	Brand	Model	Software
•	NFC programmer	FEIG	ID CPR30+	LF-NFCReader
2	NFC handy programmer	FEIG	ID ISC.PRH101-USB	LF-NFCReader
	NFC group control programmer	FEIG	ID ISC.LRM1002-E ID ISC.ANT300/300-A	LF-NFCToMP
	Lifud programmer	LIFUD	LF-SCS080C	LF-PRG
6 2007 - 19 2016 -	NFC APP	LIFUD	-	Lifud NFC

### Read/write and parameter configuration


Programming project	Default settings	Parameters settings	Read/Write
Production information	-	No	Read
Output current	125mA (default)	Yes	Read/Write
Operating mode	Automatic detection (DALI/PUSH)	Yes	Read/Write
EL	15% (default)	Yes	Read/Write
CorridorDIM	Inactivated	Yes	Read/Write
CLO	Inactivated	Yes	Read/Write
DALI Part 251	Activated	Yes	Read/Write
DALI Part 252	Activated	Can be reset only	Read/Write
DALI Part 253	Activated	Can be reset only	Read/Write

## **NFC** function instructions

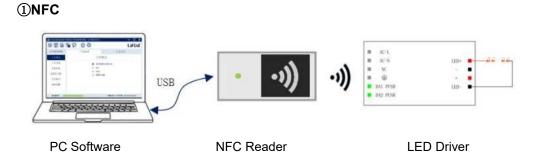

**Note:** When using the NFC reader, the driver is not allowed to operate while powered on. The driver must be powered off and completely discharged before it can read and write normally.

## ②Programmer setting box

 

PC Software

Lifud Programmer

LED Driver

Note: When using the programmer, the driver must be powered on with AC for normal reading and

writing.

## **③NFC APP**



QR Code for NFC APP Download

**Note:** When using the NFC APP for parameter setting, the driver is not allowed to operate while powered on. The driver must be powered off and completely discharged before it can read and write

normally.

## **Certificates & standards**

Approval marks	ENEC, UKCA, CE, CB, EL, RCM, DALI-2		
Standards	EN 61347-2-13; EN 61347-1; EN 62384; EN 62493;		
	EN 55015; EN 61547; EN 61000-3-2; EN 61000-3-3;		
	IEC61347-1; IEC61347-2-13;		
	EN IEC 61347-2-13 Annex J;		
	AS 61347.2.13 & AS/NZS 61347.1NZS 61347.1		
	DALI-2 certified (Part 101, 102, 207, 251, 252, 253)		
Type of protection	IP20		

## Logistical Data

Product	Packaging unit (Pieces/Unit)	Dimensions (L*W*H)	Volume	Gross weight
LF-FSD075YB	40	385mm*285mm*210mm	23.04 dm³	8.8kg±5%

## Test equipment & condition

Test Equipment	AC power source: CHROMA6530, digital power meter: CHROMA66202, oscilloscope: Tektronix DPO3014, DC electronic load: M9712B, LED board, constant temperature and humidity chamber, lightning surge generator: Everfine EMS61000-5B, rapid group pulse generator: Everfine EMS61000-4A, spectroanalyzer: KH3935, hi-pot tester: EEC SE7440, flicker tester (flicker-free coefficient test): Everfine LFA-3000, etc.
Compatibility of	Yuanhao Master, Simon Master, Philips Master DDBC120-DALI, OSRAM Master, Helvar Master 905
DALI Dimming	Router, Tridonic Master and HDL MC64-DALI431 Master

If there are no special remarks, the above parameters are tested at the ambient temperature of  $25^{\circ}$ C, humidity of 50%, maximum output power and input voltage of 230Vac/50Hz.

## Additional information

1. It is recommended that user install the over voltage protection, under voltage protection and surge protection devices in the power supply circuits of light fixtures to ensure electricity safety.

2. The LED driver used in combination with the end device is one of the accessories of the whole light fixture, and the EMC of the whole light fixture is not only susceptible to the driver itself, but to the LED light fixture and the whole light fixture's wiring. Thus, the manufacturer of LED light fixture should re-confirm the EMC of the whole light fixture before the whole light fixture is finished.

3. Configure the quantity of circuit breakers based on inrush current and time.

4. The PC cover, casing and end cap for assembling the LED driver in the light fixture must meet the fire rating of UL94-V0 or above.

5. DC input is only for emergency.

6. In no-load condition, it is recommended that user not directly connect the LED driver to the light fixture in case that the light fixture is damaged.

7. It is well-advised that the withstanding voltage of LEDs and aluminum substrates >3kVac.

8. When the load power of the product is <75W, it will output at the set constant current; when the load power is >75W, it will output at a constant power of  $75W \pm 2W$ .

9. The default current of LED driver is 125mA and it can be set by FEIG NFC reader or Lifud programmer.

10. When using other DALI masters, please test their compatibilities with Lifud LED driver in advance.

11. If the parasitic capacitance between LEDs and the PCBA is too large, and the light fixture is grounding, there will be a slight flicker at the moment of power on.

12. Lifud Technology Co., Ltd. reserves the right to interpret any contents of this specification.

### **Transportation & storage**

Suitable transportation means: vehicles, boats and aeroplanes.

In transit, it is necessary to prepare awnings for rain or sun protection. Moreover, please keep civilized loading and unloading to prevent the vibration or impact of LED driver as much as possible.

The storage of LED driver shall conform to the standard of Class I environment. When using LED drivers which have been stored for more than 6 months, please re-test them firstly. Do not use them unless they are tested to be qualified.

### Cautions

Please use Lifud LED driver according to its parameters in the specification, otherwise the LED driver may malfunction. Using any incompatible light fixtures or those that have not been certified may cause fire, explosion or other risks. Man-made damage is beyond the scope of Lifud warranty service.

### Disclaimer

Subject to change without notice. Errors and omission excepted. Always make sure to use the most recent release.