# 4 Push Button DALI Dimmer

# Model No.: DA-4S

1-4 Push button input / Encoding switch select addresses

### Features

- Standard DALI Master, control 4 DALI Addresses.
- Comply to latest DALI standard protocol IEC62386 and in compliance with DALI products from other international incorporation.
- Power is provided by DALI bus.
- 1-4 push button control.
- Enable to select 4 different addresses for controlling by encoding switch.
- Support scene, group, unicast and broadcast mode.
- $\bullet$  Easy to be placed in standard wall junction box behind a push switch.

### **Technical Parameters**



### € C€ RoHS emc LVD RED

Input and Output		Environment		Package	
Input signal	4xpush switch signal	Operation temperature	Ta: -20 °C ~ +50 °C	Size	L60x W60 x H40mm
Output signal	DALI signal	Case temperature (Max.)	Ta: +55 °C	Gross weight	0.046kg
Power supply	DALI bus	IP rating	IP20	Warranty	
Static current	4mA@16V			Warranty	5 years

# Mechanical Structures and Installations







## Wiring Diagram



# DALI address setting

Address value =  $X \times 10 + Y$ . For example: X = 5, Y = 4, Address value =  $5 \times 10 + 4 = 54$ .

#### Unicast mode

# X is 0-6, Y is 0-9.

890 4F072 0 N ç, Ç A 681

### Group mode



Scene mode



#### Broadcast mode



Y Х

Address value 0-63 correspond to DALI unicast address 00-63. For example: Address value = 40, the unicast values of K1,K2,K3,K4 push button are 40, 41, 42, 43. Address value = 62, the unicast values of K1,K2,K3,K4 push button are 62, 63, 0, 1. Short press K1, K2, K3, K4 to turn on/off light. Long press K1,K2,K3,K4 to increase or decrease brightness.

### X is 7, Y is O-F.

Address value 70-7F correspond to DALI group address 0-15. For example: Address value = 5, the group address value of K1,K2,K3,K4 push button are 5, 6, 7, 8. Address value = E, the group address value of K1, K2, K3, K4 push button are 14, 15, 0, 1. Short press K1,K2,K3,K4 to turn on/off light. Long press K1, K2, K3, K4 to increase or decrease brightness.

X is 8, Y is O-F. Address value 80-8F correspond to DALI scene 0-15. For example:

Address value = 5, the scene value of K1,K2,K3,K4 push button are 5, 6, 7, 8. Address value = E, the scene value of K1,K2,K3,K4 push button are 14, 15, 0, 1. Short press K1,K2,K3,K4 to recall the scene. Long press K1,K2,K3,K4(2s) to turn off the scene light.

### X is 9, Y is O-F.

Address value 90 - 9F correspond to broadcast address. Short press K1,K2,K3,K4 to turn on/off light, long press K1,K2,K3,K4 to increase or decrease brightness.