



Charging Your Devices

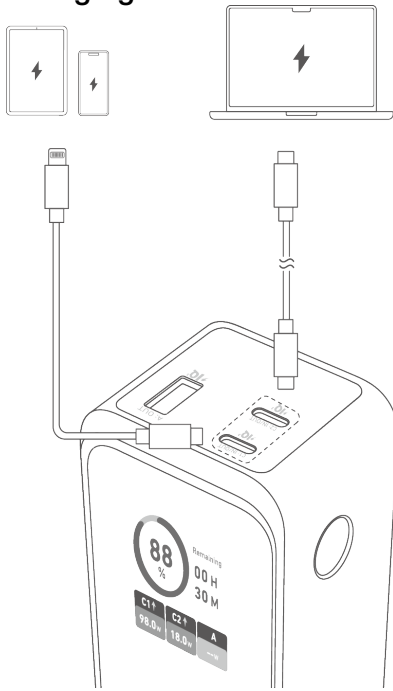

Recharging Your Power Bank

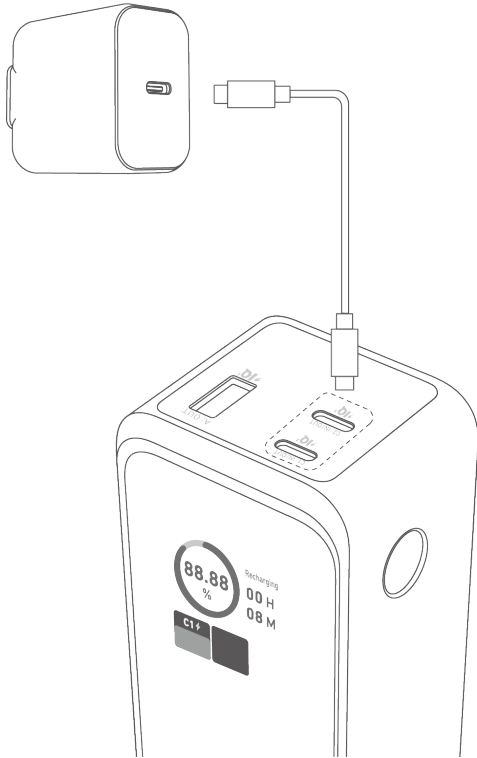




Note: If you have purchased Anker 100W Charging Base, you can use it to recharge the power bank.

Recharging Your Power Bank


Activate trickle-charging mode.

1

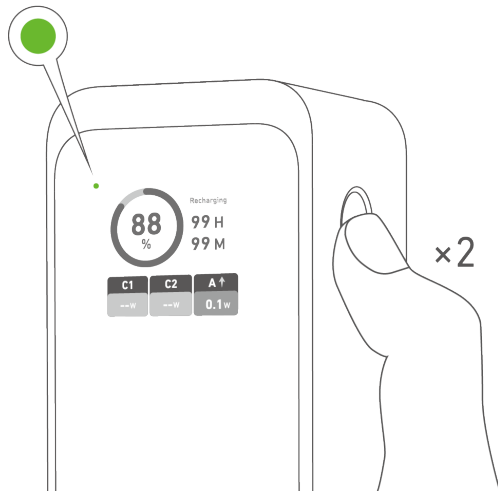


Charge your accessories in trickle-charging mode.

2

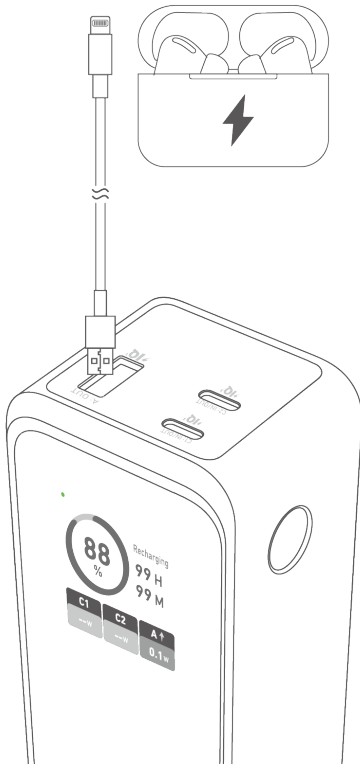


Exit trickle-charging mode.


3

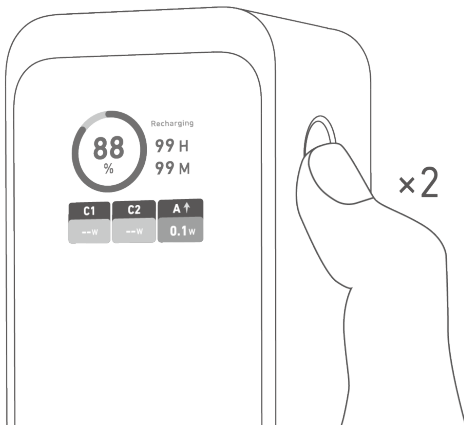


LCD Screen Guide

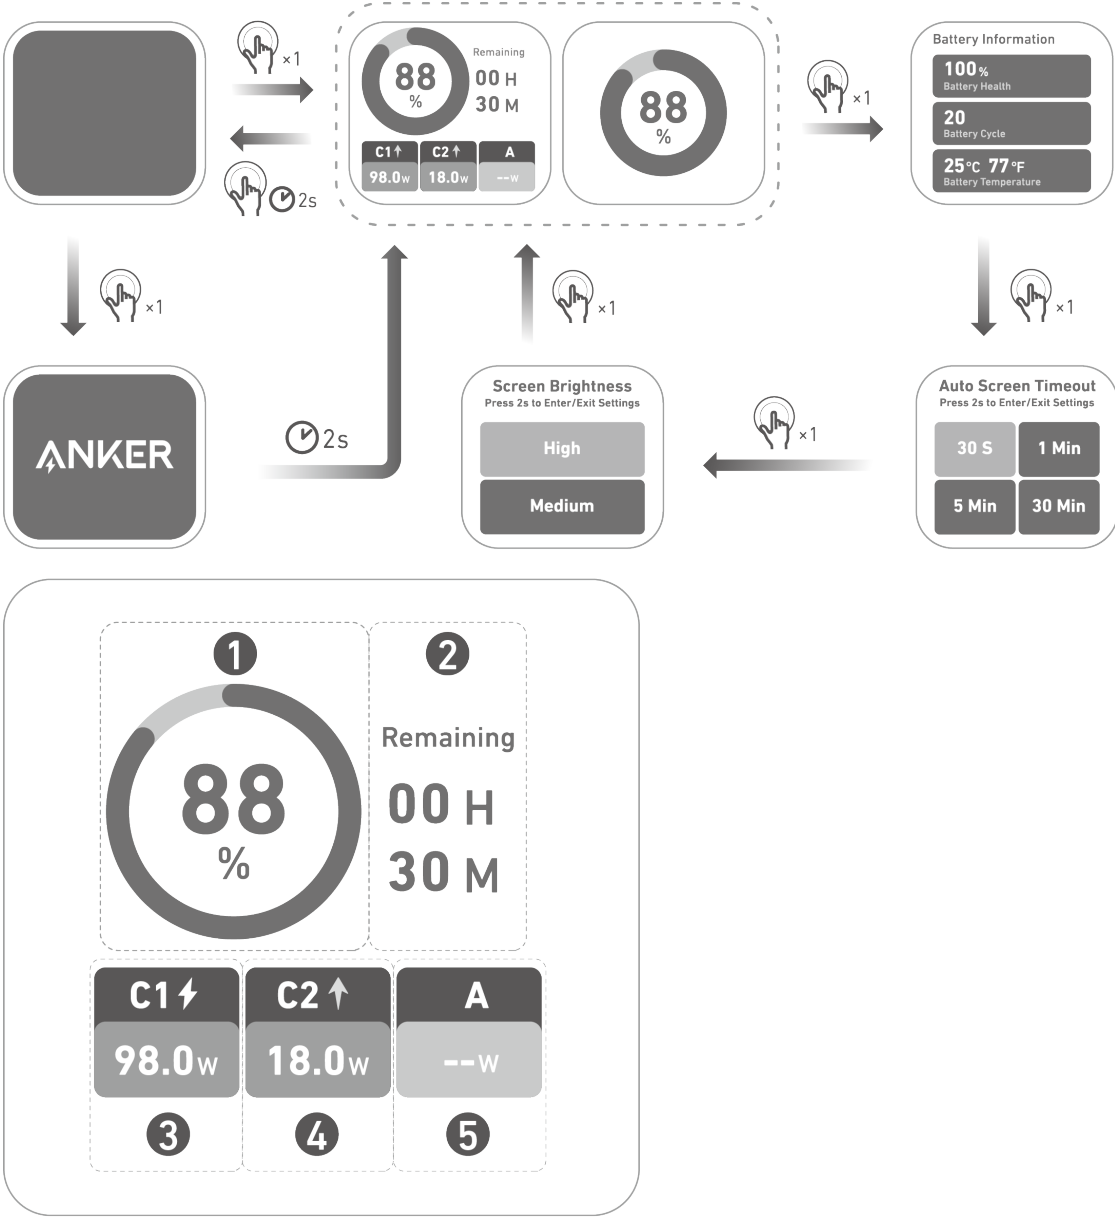

- 1. Remaining Battery
 - 2. Recharging Time / Remaining Battery in Hours and Minutes
 - 3. USB-C 1 Input
 - 4. USB-C 2 Output
 - 5. USB-A Output
- Auto Screen Timeout Setting**

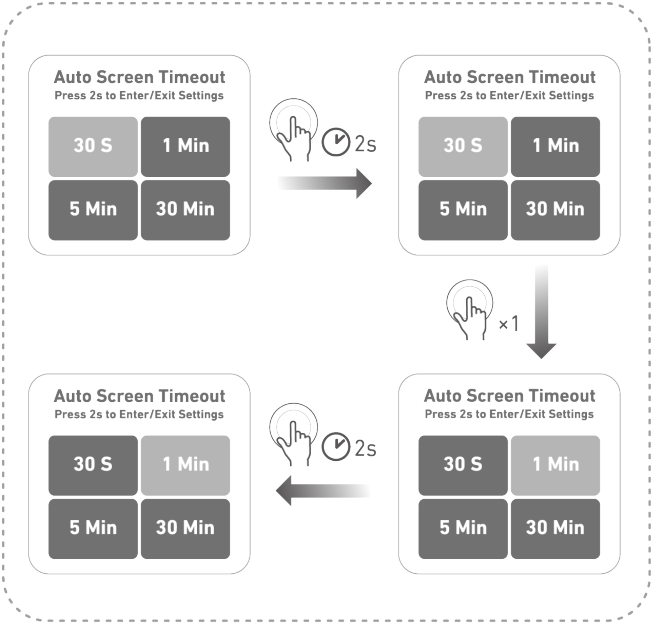

Screen Brightness Setting

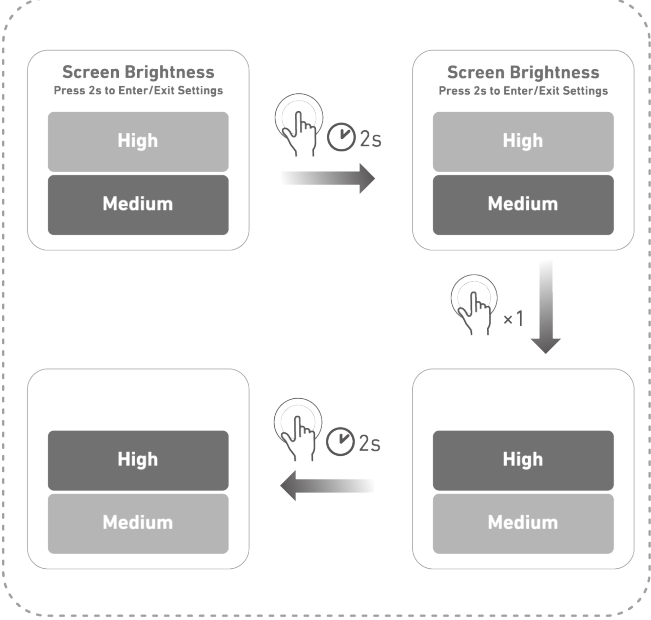

Specifications

Cell Capacity	20,000mAh (5,000mAhx4)
Input	USB-C: 100W Max (5V ≡ 3A / 9V ≡ 3A / 10V ≡ 2.25A / 12V ≡ 1.5A / 15V ≡ 3A / 20V ≡ 5A)
Output	USB-C: 100W Max (5V ≡ 3A / 9V ≡ 3A / 10V ≡ 2.25A / 12V ≡1.5A / 15V ≡ 3A / 20V ≡ 5A USB-A: 65W Max (5V ≡ 3A / 9V ≡ 2A / 10V ≡ 6.5A / 12V ≡ 1.5A)
Total Output	200W Max

Note: Figures shown on the screen are for illustration purposes and subject to change. Please refer to the actual product.