

Instrukcja obsługi


Elektryczne żelazko parowe

PROBAT



Main features and structure:

The product has many functions such as temperature regulating, Spraying, Dry Ironing, Steam, Strong steam, Self-Clearing Function etc. and is with characteristics: luxury shape, high heat efficiency, easy using, good ironing result, work saving and time saving, and so on.

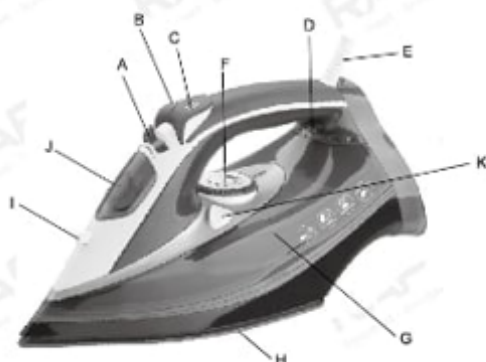

- | | |
|--------------------------------|--------------------------|
| A: Steam regulating Knob | H: Soleplate |
| B: Burst steam button | I: Spraying mouth |
| C: Spraying button | J: Cover of water filler |
| D: Indicator bulb | K: Self-clean button |
| E: 360 degree swivel cord | |
| F: Temperature regulating knob | |

G: Water tank

Read all instructions before using the iron

For house hold use only

1. Use the iron for its intended purpose, for ironing fabrics on board.
2. To protect against burn or injury to persons, do not iron or steam fabrics while being worn on the body.

2

3. The iron should always be turned "OFF" before plugging or unplugging from outlet. Never pull cord to disconnect from outlet, instead, grasp plug and pull to disconnect.
4. Do not allow cord to touch hot surface. Allow the iron to cool completely before storing.
5. Always disconnect iron from electrical outlet for filling or emptying water and when not in use.
6. To avoid risk of electric shock, do not operate iron with a damaged cord or if the iron has been dropped or damaged. For repair, take it to an authorized Service center.
7. Close supervision is necessary for this appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
8. Burns can occur from touching hot metal parts, hot water, or steam. Hot water may leak from the iron. Use caution when filling or turning the steam iron upside down.
9. To protect against burns or injury to persons, do not direct steam toward the body when ironing.
10. The iron must be used and rested on a stable surface. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.

How to fill with water:

Make sure the iron is turned off and the power cord as unplugged from the electrical outlet.

1. Set the "Variable" steam knob to the "0" position before filling the iron with water.
2. Open the "Water Fill" Opening and fill the Tank up to the "MAX" Line on the tank.
3. The water level can be observed through the transparent part of the tank, when iron placed vertically, in case of water level becomes low, refill the tank, following the procedure described in steps 1 to 3 above.
4. Pour out the remaining water after use.

Note:

Most tap water can be used in this iron. Do not use water additives or substitute water such as linden or scented water in the steam iron, they can stain fabrics or damage the iron. Do not fill the water more than

3

the "MAX" position.

How to use as dry iron:

1. Position the iron vertically.
 2. Plug the iron.
 3. Set the Temperature Control Dial to "MIN" position.
 4. Preheat the iron until the indicator light goes out.
- Now dry ironing can begin.

How to use the spray:

Before using the spray feature, check the fabric label for ironing instructions because some fabrics may be spotted or stained with moisture.

The spray feature is particularly helpful for removing stubborn wrinkles and where extra dampening is needed. The spray may be use with steam or dry ironing. Simply pump the Spray Mist knob when spray is desired.

How to use as steam iron:

Fill the iron as described in "How to fill with water".

- 1).Position the iron vertically and turn the Temperature Control Dial to the steam position. 2).Plug the Cord into the electrical outlet.
 - 3).Set the Temperature Control Dial to the steam position. Steam Ironing is only possible when at higher temperature settings indicated with "MAX" mark; otherwise the water will leak from the soleplate.
 - 4).Preheat the iron until the indicator light goes out. The light will turn off when the indicated setting reaches the correct temperature.
 - 5).Turn the Variable Steam Control Knob to the required setting for different types of fabric.
- Now steam ironing can begin.

How to use the burst of steam:

The burst of steam feature provides additional steam for removing stubborn wrinkles. It may be used with steam or dry ironing.

Press the Power Steam button to release the surge of steam. Pressing the button several times may be necessary to prime the surge system. Wait a few seconds for the steam to penetrate the fabric before pressing the button again for more steam.

Note:

For optimum steam quality, do not apply more than three successive shots after the indicator light goes off.

After each use:

- 1).Turn the iron off and unplug.

4

- 2).Empty the iron immediately after using. Do not store the iron with water in it.
- 3).Wait until the iron has cooled before storing it, and always set it on the Heli Rest to protect the soleplate from scratches, corrosion or stains.
- 4).After letting iron cool down completely, store the iron vertically in a safe place.

Outside surface of the iron:

After unplugging and cooling the iron, simply wipe off with a damp cloth and if necessary, use a mild detergent.

NEVER USE ANY HARSH CLEANERS.

Soleplate :

Starch and other residue may be easily removed from the soleplate with a damp cloth.

To avoid scratches the finishing, never use a metallic pad to clean the Soleplate, and never place the iron on a rough surface. If synthetics are ironed at too high temperature not only is the fabric usually ruined, but the iron Soleplate is often covered with the melted remains of the synthetic fabric. The best way to remove synthetic residue from the Soleplate is to heat the iron and to iron over an old cotton rag.

CAUTION :

Never Use steam iron cleaners in the iron, since they may damage the working parts of the iron.

Maintenance: Self Cleaning :


IMPORTANT : Your iron will give the best ironing results and last longest if you apply the Self Cleaning once a month, or more depending upon the usage.

1. Filling the water tank up to half with water.
 2. Position the iron on its rear heel.
 3. Select the temperature control dial to "MAX".
 4. Plug the iron.
 5. Allow the iron to heat up until the indicator light first goes out.
 6. Unplug the iron from the electrical outlet.
 7. Keep the iron horizontally over the sink.
 8. Take out the self-clean button set out as picture shows. Boiling water and steam will now emit from the holes in the soleplate.
 9. Move the iron forwards and backwards while this happens; go on letting steam and water escape until the water tank is virtually empty.
 10. Turn the variable steam knob to "0" position.
 11. Plug in the iron
 12. Set the temperature dial to the "MAX" position, let the iron heat up again, let the remainder of the water inside the steam chamber will now vaporize and leave the iron through the soleplate.
- During this process of dry steaming it is advised to use it over and old piece of cloth.

5

Główne cechy i budowa

Produkt posiada wiele funkcji, takich jak: kontrola temperatury, prasowanie na sucho, prasowanie parą, spryskiwanie wodą, wytwarzanie pary ciągłej, samoczyszczenia etc., a jego cechy to luksusowy kształt, wysoka wydajność cieplna, łatwość użycia, oszczędzanie czasu i pracy oraz idealnie wyprasowane ubrania.

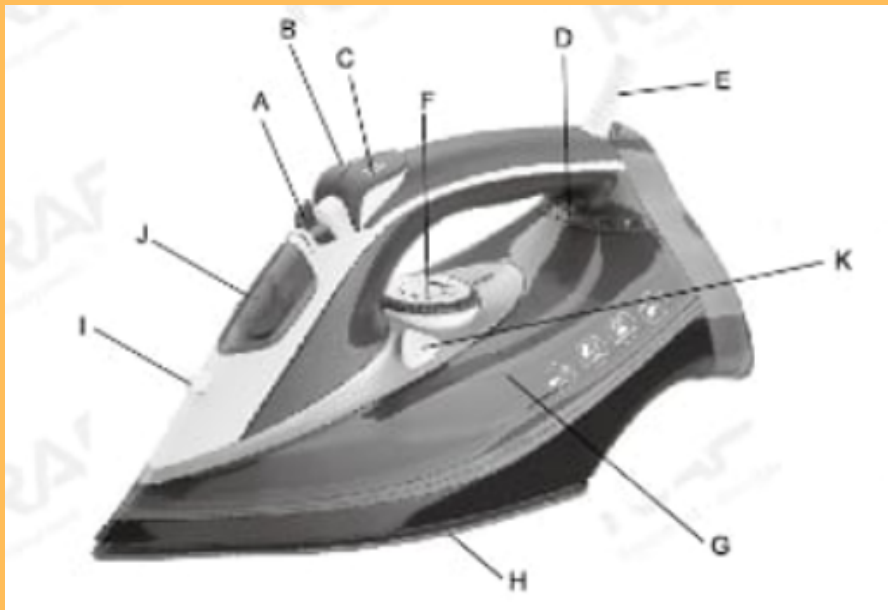

A: Pokrętło do regulowania pary wodnej

B: Przycisk uderzenia pary

C: Przycisk spryskiwania

D: Żarówka

E: Przewód 360 stopni

F: Pokrętło do regulowania temperatury

G: Zbiornik na wodę

H: Płyta grzewcza

I: Otwór rozpylający wodę

J: Klapka na zbiornik wody

K: Przycisk samoczyszczenia

