

TL4-1D, TL4-2D

Wall Mounted Touch Panel DALI Master

1 zone or 4 zone / 1-2 color Glass touch panel / Powered by DALI bus or 24VDC / Encoding switch select addresses



TL4-1D
1/4 Zone DIM



TL4-2D
1/4 Zone CCT



CE RoHS emc RED

- Touch panel 1 zone or 4 zone DIM/CCT DALI master.
- 1/4 DALI address, support DT6 dimming, DT8-TC color temperature.
- In accordance with DALI standard protocol IEC 62386-102, IEC 62386-207, IEC 62386-209 and in compliance with DALI products from other international incorporation.
- Powered by DALI bus or 24VDC.
- Enable to select DALI address by encoding switch, support unicast, group and broadcast mode.
- Match with RF 2.4G single zone or multiple zone remote control optional.
- Smooth and accurate brightness and color temperature adjustment by touching the color slide.
- Touch keys with LED indicator.
- White & Black glass panel available.


Technical Parameters

Input and Output		Dimming data		Safety and EMC	
Power supply	DALI bus/24VDC	Input signal	Touch key + RF 2.4GHz	EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3
Static currnt	17mA@16VDC, 2mA@24VDC	RF Control distance	10m(Barrier-free space)		ETSI EN 301 489-17 V3.2.4
Output signal	DALI	Dimming level	256 levels	Safety standard	EN 62368-1:2020+A11:2020
Environment		Dimming range	0-100%	Radio Equipment(RED)	ETSI EN 300 328 V2.2.2
Operation temperature	Ta: -30°C ~ +55°C	Package		Certification	CE, EMC, RED
Case temperature (Max.)	Tc: +65°C	Size	L112 x W112 x H50mm	Warranty	
IP rating	IP20	Gross weight	0.230kg	Warranty	5 years


Mechanical Structures and Installations

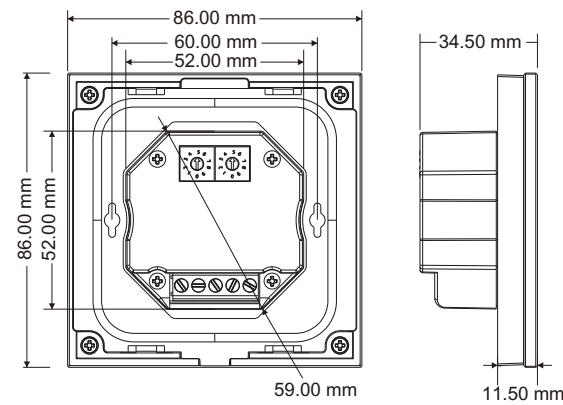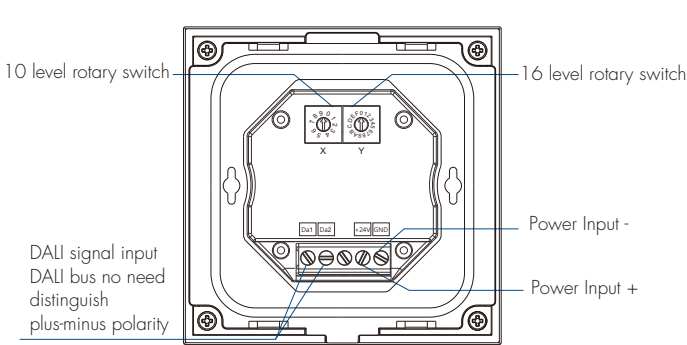

Installation diagram:

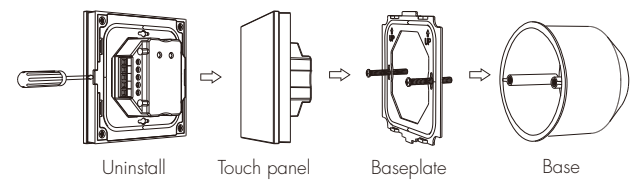


Typical base as below:

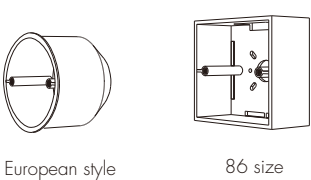


Wiring Diagram

1. Powered by DALI bus

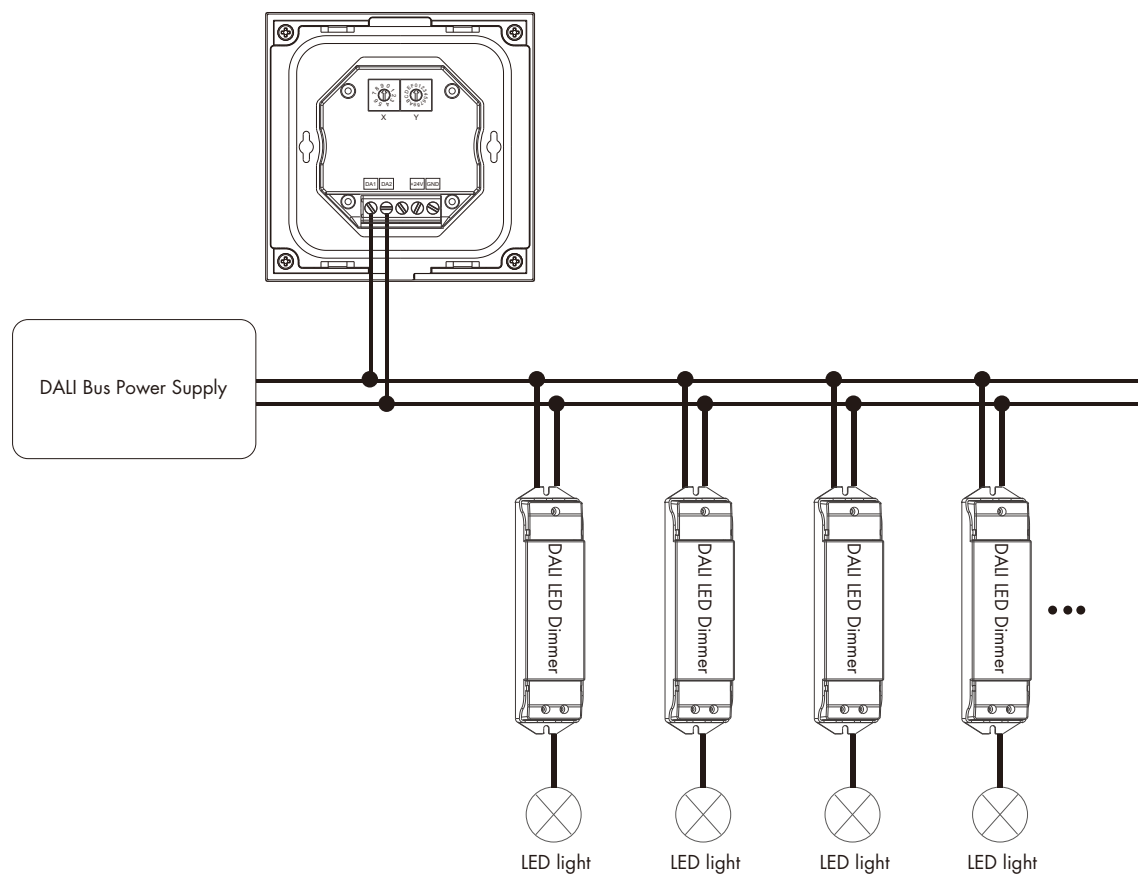


2. Powered by 24VDC

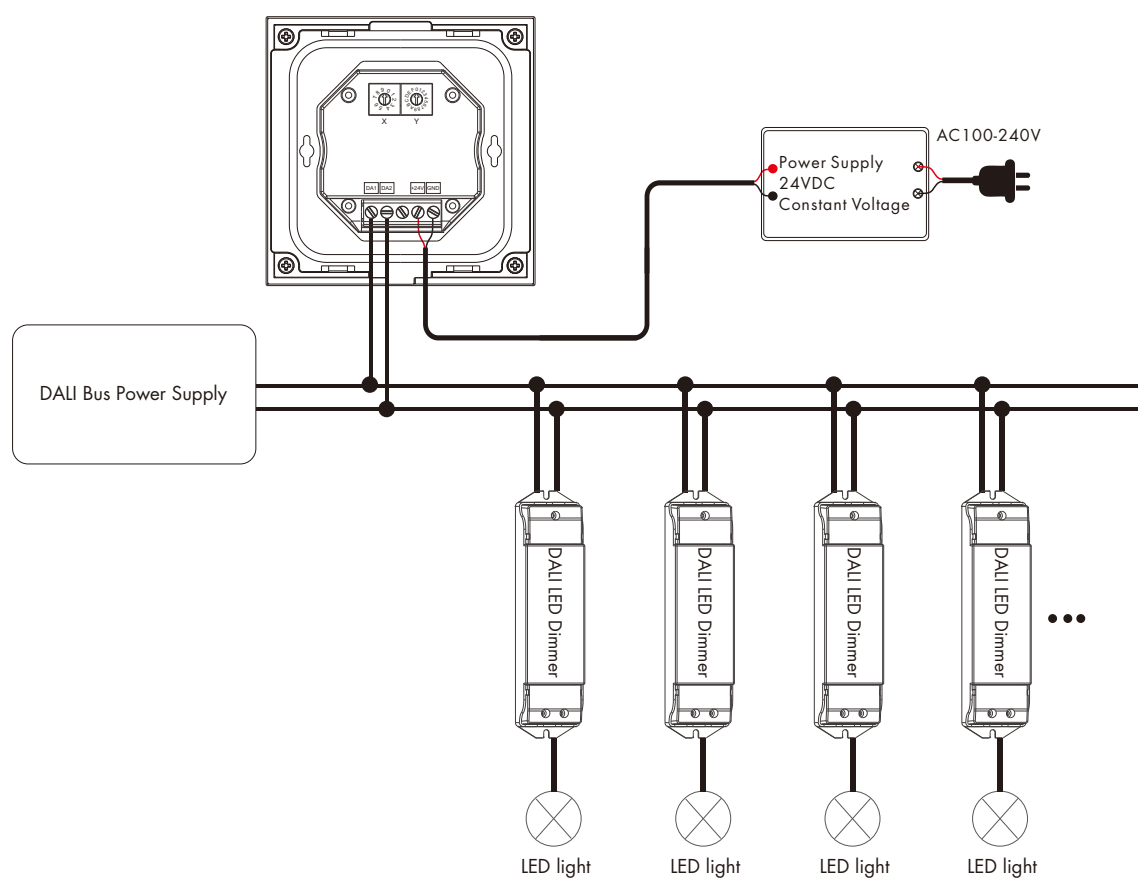


Note: It is recommended to use a 24VDC power supply for the touch panel DALI master to reduce the load on the DALI bus power supply.

Key Function


● TL4-1D 1 zone or 4 zone single color panel

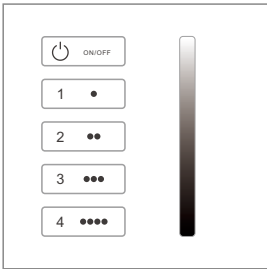



ON/OFF

Turn on/off light.



Brightness slide.

1 •

2 ••


3 •••


4 ••••

Single zone: Short press recall the scene,
long press 5s save current brightness into scene 1/2/3/4.

Four zone: Short press select current zone, long press 2s turn off zone light.
Short press multiple zone key fastly, will select multiple zone synchronously.
4 zone control seperately or synchronously.


● TL4-2D 1 zone or 4 zone dual color panel

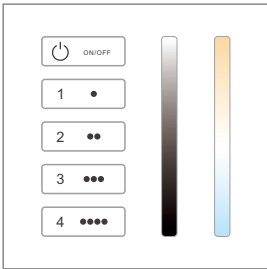




ON/OFF

Turn on/off light.



Color temperature slide.



Brightness slide.

1 •

2 ••

3 •••

4 ••••

Single zone: Short press recall the scene,
long press 5s save current brightness into scene 1/2/3/4.

Four zone: Short press select current zone, long press 2s turn off zone light.
Short press multiple zone key fastly, will select multiple zone synchronously.
4 zone control seperately or synchronously.

Touch Panel DALI master match RF remote

Touch panel DALI master can also match with RF 2.4G remote (Optional).
End user can choose the suitable match/delete ways. Two options are offered for selection:

Use On/Off key

Match:
Turn on light, turn off, immediately press the On/Off key of the panel for 5s, then press on/off key (single zone remote) or zone key (multiple zone remote) of the remote within 5s.
The LED indicator fast flash 3 times means match is successful.

Delete:
Turn on light, turn off, immediately press the On/Off key of the panel for 10s to delete all match,
The LED indicator fast flash 6 times means all matched remotes were deleted.

Use Power Restart


Match:
Switch off the power of the panel, then switch on power, repeat again. Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) of the remote 3 times.
The LED indicator fast flash 3 times means match is successful.

Delete:
Switch off the power of the panel, then switch on power, repeat again. Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) of the remote 5 times.
The LED indicator fast flash 6 times means all matched remotes were deleted.


DALI address setting

Address value = X * 10 + Y.
For example: X = 5, Y = 4, Address value = 5 x 10 + 4 = 54.

Unicast mode



X




Y


Single zone: X is 6, Y is 0-9; address value 00-63 correspond to DALI unicast address 00-63.
For example: address value = 40, the unicast address value is 40.

Four zone: X is 8, Y is 0-F; address value 80-8F correspond to DALI unicast address 00-63.
For example: address value = 80, the unicast values of zone 1,2,3,4 are 0,1,2,3.
address value = 85, the unicast values of zone 1,2,3,4 are 20,21,22,23.

Group mode

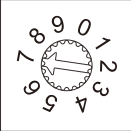

X




Y


Single zone: X is 7, Y is 0-F; address value 70-7F correspond to DALI group address 0-15.
For example: address value = 75, the group address value is 5.

Four zone: X is 9, Y is 0-F; address value 90-9F correspond to DALI group address 0-15.
For example: address value = 95, the group address value of zone 1,2,3,4 are 5,6,7,8.
address value = 9E, the group address value of zone 1,2,3,4 are 14,15,0,1.

Broadcast mode

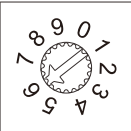

X



Y

X is 6, Y is 4-F.
Address value 64 - 6F correspond to broadcast address.