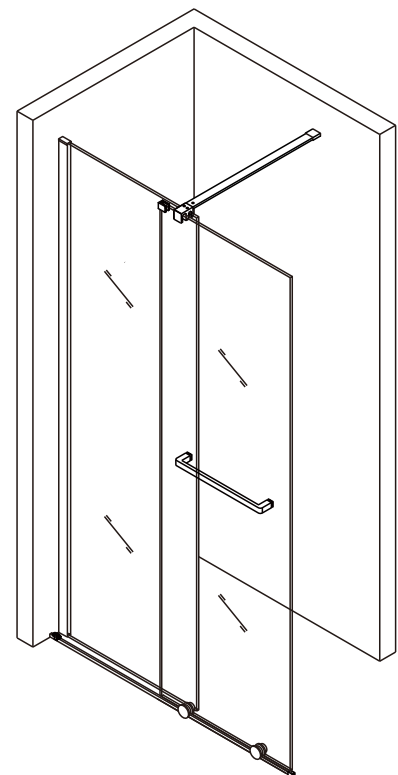



SEVANTE

INSTALLATION MANUAL















SEV-SP-906 series
SEV-SP-907 series

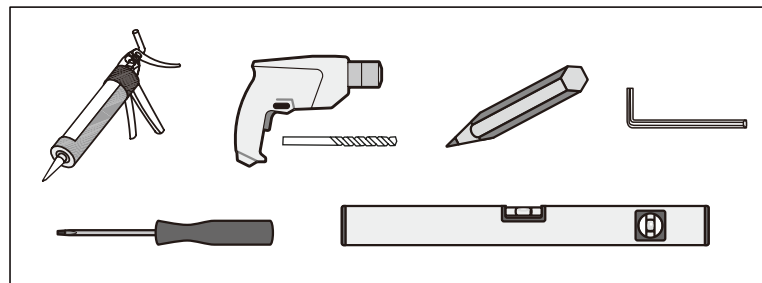
TOOL PICTURE




ACCESSORY LIST

            A	B	C	D	E
 X1	 X1	 X1	 X1	 X1
F	G	H	I	J
 X1	 X1	 X1	 X2	 X1
K	L	M	N	O
 X1	 X1	 X1	 X5	 X5
P	Q	R		
 X1	 X1	 2MM x1 3MM x1 4MM x1 5MM x1		


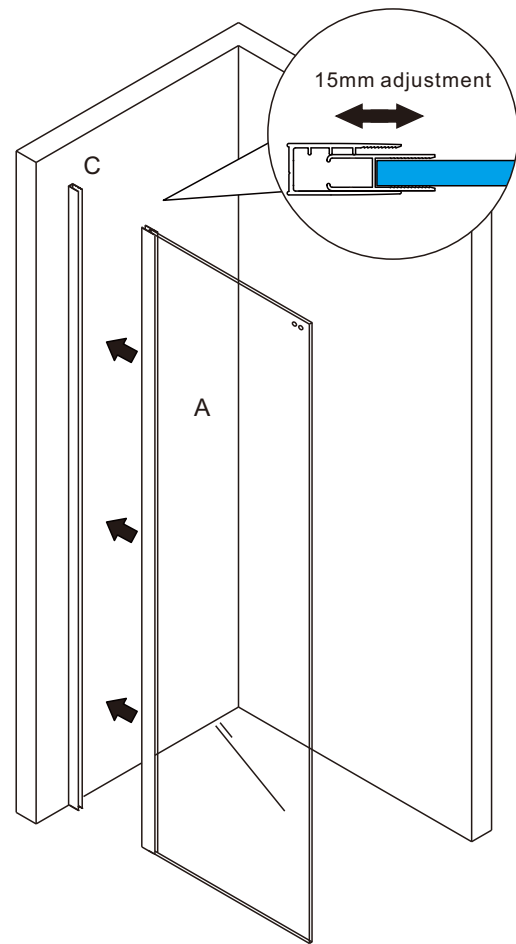
3




4

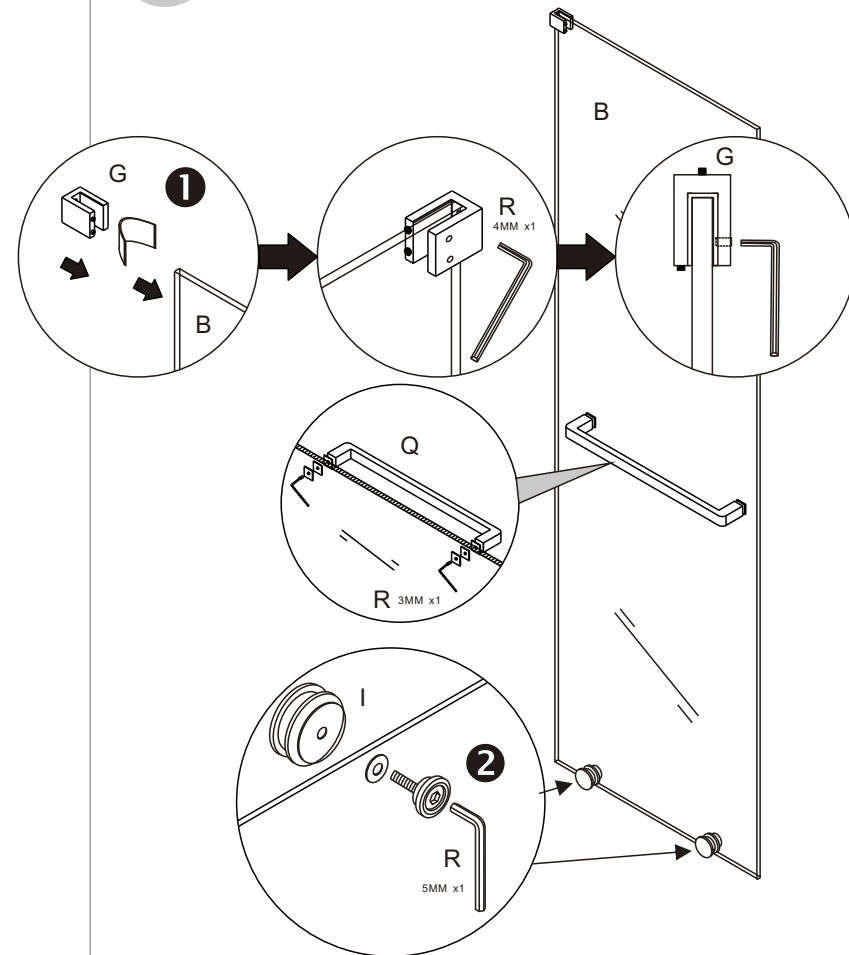


1

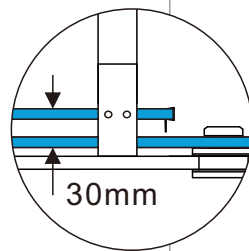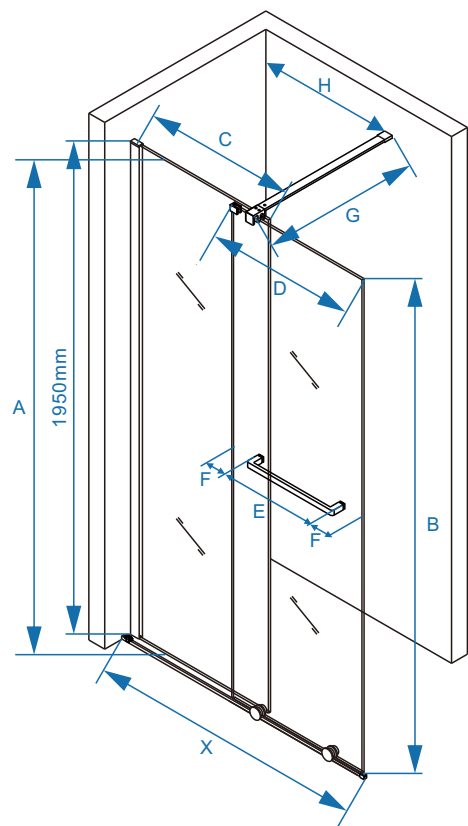


2

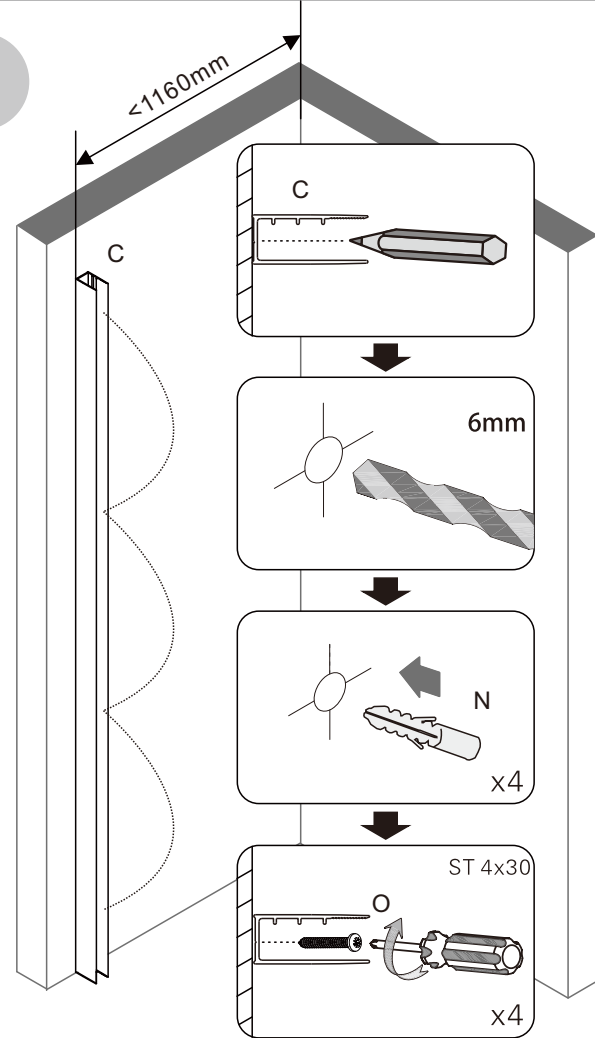

5

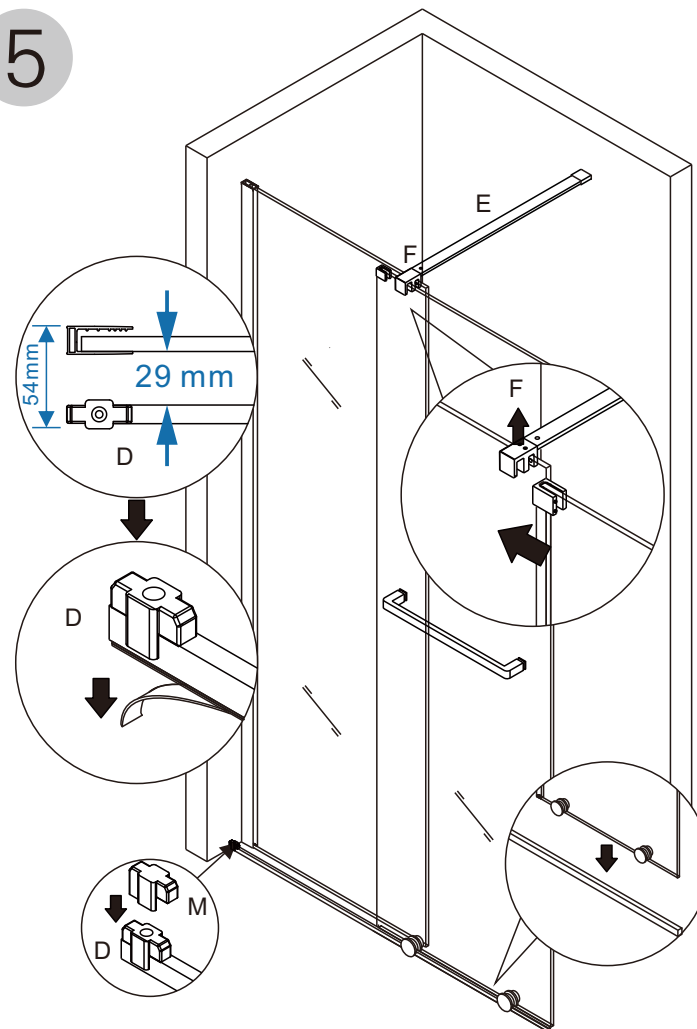


6

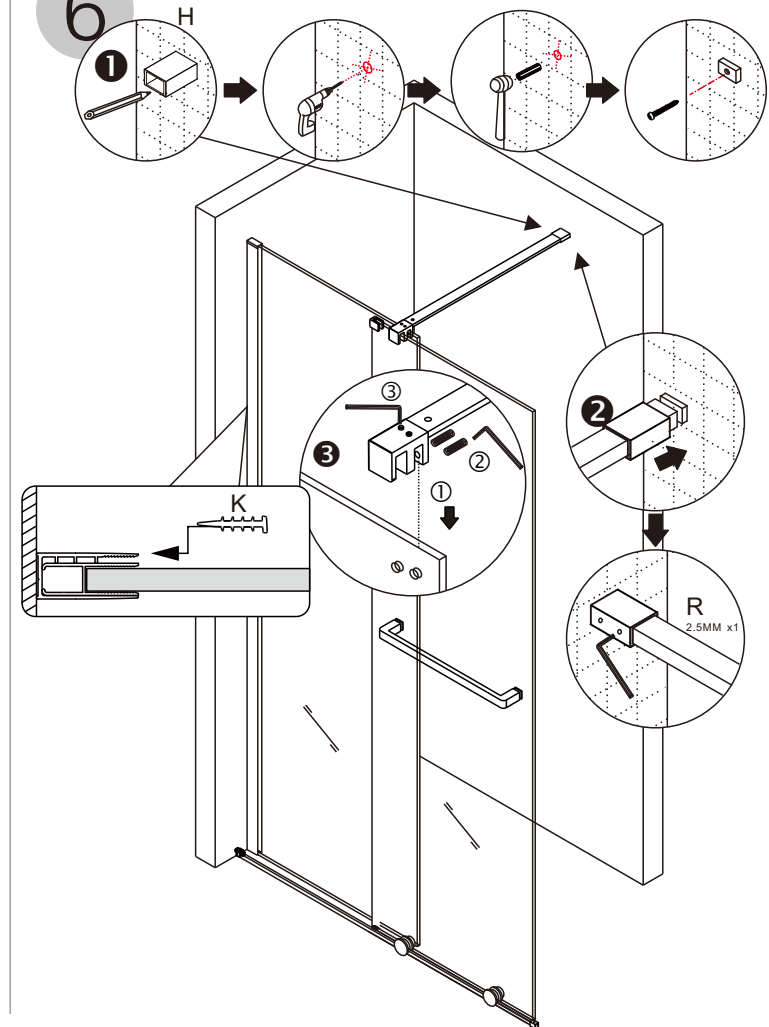

SIZE	X	A	B	C	D	E	F	G	H
1000	985-1000	1950	1942	487	568	415	76.5	1185	440
1200	1185-1200	1950	1942	587	668	415	126.5	1185	540

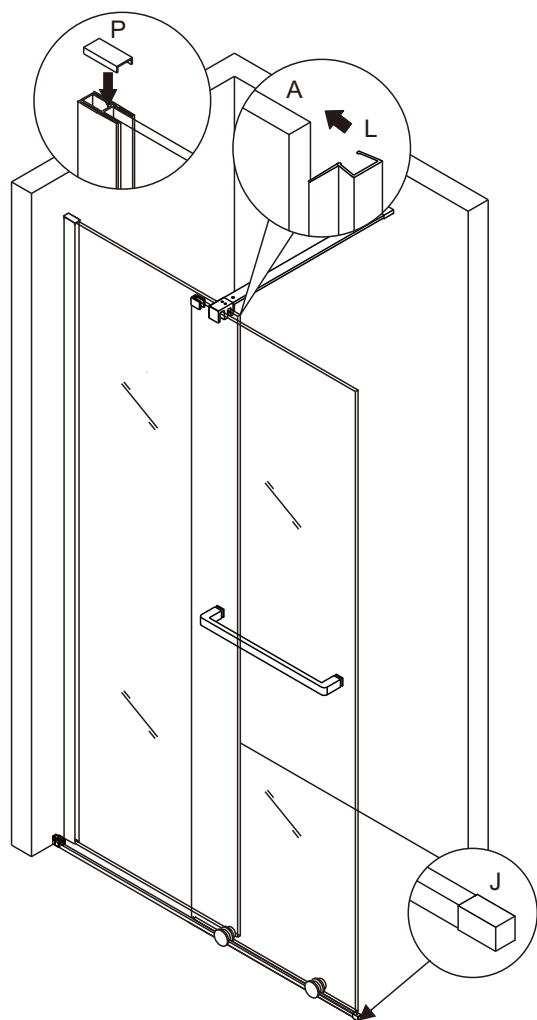7



8

