

# VEVOR<sup>®</sup>

TOUGH TOOLS, HALF PRICE

## Technical Support and E-Warranty Certificate

[www.vevor.com/support](http://www.vevor.com/support)

**Manufacturer:** SHUANG GE TOYS FACTORY

**Address:** CHENGHAI DISTRICT, SHANTOU CITY, GUANGDONG PROVINCE, CHINA

**EC REP:** E-CrossStu GmbH

Mainzer Landstr.69, 60329 Frankfurt am Main.

**UK REP:** YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House, London Road, Staines-upon-Thames, Surrey, TW18 4AX

**Imported to AUS:** SIHAO PTY LTD.

1 ROKEVA STREET EASTWOOD NSW 2122 Australia

**Imported to USA:** Sanven Technology Ltd.

Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

We continue to be committed to provide you tools with competitive price. "Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

**Remote Control Boat Model: 18005-1、18003-1**

**FCC Information (FCC ID:2BD8U-3801-1) :**

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2) This product must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

 
**Note:** This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, it may cause harmful interference to radiocommunications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.


- Reorient or relocate the receiving antenna.
- Increase the distance between the product and the receiver.
- Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

# Remote Control Manta Ray Manual

## Battery Installation:

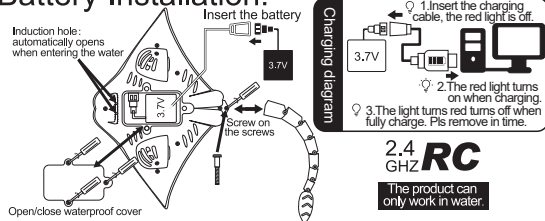

 The product requires one 3.7V/700mAh rechargeable battery.(included) pls install the battery in correct polarity.



Remote control requires 2x1.5V "AA" non-rechargeable batteries .  
(not included) pls install the battery in correct polarity.


- Open the waterproof cover: Loosen the screw counterclockwise with a Phillips screwdriver, and tap the main body in the opposite direction to make the waterproof cover come out naturally.
- Close the waterproof cover: Cover the waterproof cover, and use a Phillips screwdriver to tighten the screws clockwise.
- Tighten the screws to ensure the waterproof function when re-install the cover.
- If the battery compartment is gotten with water due to wrong operation, pls dry and replace new battery.
- When replacing the battery, make sure that the battery compartment is dry.

## CAUTION

 - Children toys. It can swim in the water by 2.4GHz wireless remote control.
- Match automatically. Only control one to one when match successfully.
- When matching, pls make the RC and product as near as possible.
- This product has the function of sensing water, and the motor will stop running after the product is taken out of the water.
- Both this product and the remote control are waterproof.
- Remote control distance: 30 to 40 meters in a clear environment.
- Only operate in tranquil, clean water, a shallow pool is recommended.
- After each use, please wipe with a towel and let it dry completely.
- Do not operate near concrete walls, which may interfere with transmission.
- This product is designed to use in fresh water, avoid operating in salt water too long.
- Up to 10 players can play at the same time.

## Operating Instructions:

The indicator light

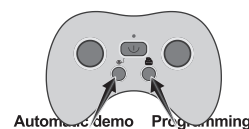

1. Method 1: Put the product into water, the manta ray eye light will turn on, then start the RC until its light turns off after flashing, That means match successfully.
2. Method 2: start the RC, and the red light turns on and keeps flashing, then put the manta ray into water, its eye light turns on, the RC red light turns off. That means match successfully. (Note: if the RC red light keeps flashing which means match fail, Then take the product out of water and turn off the RC, then operate according to the method above until match successfully.)
3. Automatic demonstration: Press the automatic demonstration button the product will automatically cruise for 100 seconds.
4. Program function: Press the programming button, the red light of the RC flashes, and the product gets into the programming state(static) and records the coming operations (12 records each time at most), then it will demonstrate itself when re-press the programming button.

## BATTERY CONSIDERATIONS

- 1) This product uses one 3.7V/700mAh rechargeable lithium battery, and the remote control uses two 1.5V "AA" non-rechargeable batteries.
- 2) The battery should be taken out and installed in correct polarity and voltage to avoid short circuit.
- 3) Non-rechargeable batteries cannot be charged.
- 4) Rechargeable batteries must be charged under adult supervision.
- 5) The rechargeable battery should be removed from the toy before charging.
- 6) Different types of batteries or old and new batteries cannot be mixed.
- 7) Only batteries that are the same as or equivalent to the recommended batteries can be used.
- 8) The exhausted battery should be taken out of the toy. If it is not used for a long time, please take out the battery from the toy.
- 9) The power terminals should not be short-circuited.
- 10) Never connect to the power sources which are more than recommended.
- 11) The wire, plug, shell and other parts of the charger should be checked regularly during use. If damaged, stop using until repaired.
- 12) When the charger is connected to the battery, its light turns red, then turn off when the charger is plugged into a computer or mobile to charge. And it will turn red again while fully charged.

## WARNING

- Children should only use under adult supervision. Never play alone in the water or by the pond.
- Small parts not for children under 3 years old.

# VEVOR®

## TOUGH TOOLS, HALF PRICE

Assistance technique et certificat de garantie électronique

[www.vevor.com/support](http://www.vevor.com/support)

Fabricant : SHUANG GE TOYS FACTORY

Adresse : DISTRICT DE CHENGHAI, VILLE DE SHANTOU, GUANGDONG  
PROVINCE, CHINE

Représentant CE : E-CrossStu GmbH

Mainzer Landstr.69, 60329 Francfort-sur-le-Main

REPRÉSENTANT AU ROYAUME-UNI : YH CONSULTING LIMITED.

C/O YH Consulting Limited Bureau 147, Centurion House, London Road,  
Staines-upon-Thames, Surrey, TW18 4AX

Importé en AUS : SIHAO PTY LTD.

1 ROKEVA STREET EASTWOOD NSW 2122 Australie

Importé aux États-Unis : Sanven Technology Ltd.

Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

Nous continuons à nous engager à vous fournir des outils à des prix compétitifs.  
« Économisez la moitié », « Moitié prix » ou toute autre expression similaire utilisée par nous ne représente qu'une estimation des économies que vous pourriez réaliser en achetant certains outils chez nous par rapport aux grandes marques et ne couvre pas nécessairement toutes les catégories d'outils que nous proposons. Nous vous rappelons de bien vouloir vérifier soigneusement lorsque vous passez une commande chez nous si vous économisez réellement la moitié par rapport aux grandes marques.

Il s'agit de la notice d'utilisation d'origine. Veuillez lire attentivement toutes les instructions du manuel avant de l'utiliser. VEVOR se réserve le droit d'interpréter clairement notre manuel d'utilisation. L'apparence du produit dépend du produit que vous avez reçu. Veuillez nous excuser, nous ne vous informerons plus si des mises à jour technologiques ou logicielles sont disponibles sur notre produit.

Modèle de bateau télécommandé : 18005-1, 18003-1

Informations FCC ( ID(FCC : 2BD8U-3801-1) : )

ATTENTION : Les changements ou modifications non expressément approuvés par la partie responsable de la conformité peuvent annuler le droit de l'utilisateur à utiliser l'équipement !

Cet appareil est conforme à la partie 15 des règles de la FCC. Son fonctionnement est soumis aux deux conditions suivantes :

- 1) Ce produit peut provoquer des interférences nuisibles.
- 2) Ce produit doit accepter toute interférence reçue, y compris celles qui peuvent provoquer un fonctionnement indésirable.

AVERTISSEMENT : Les changements ou modifications apportés à ce produit non expressément approuvés par la partie responsable de la conformité pourraient annuler le droit de l'utilisateur à utiliser le produit.

Remarque : Ce produit a été testé et jugé conforme aux limites d'une classe

Appareil numérique B conformément à la partie 15 des règles de la FCC. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle.

 
Ce produit génère, utilise et peut émettre de l'énergie radiofréquence et, s'il n'est pas installé et utilisé conformément aux instructions, il peut causer des dommages nocifs.

interférences avec les radiocommunications. Cependant, il n'existe aucune garantie que des interférences ne se produiront pas dans une installation particulière. Si ce produit provoque des interférences nuisibles à la réception radio ou télévision, ce qui peut être déterminé en éteignant et en rallumant le produit, l'utilisateur est encouragé à essayer de corriger le problème. interférence par une ou plusieurs des mesures suivantes.


- Réorienter ou déplacer l'antenne de réception.
- Augmenter la distance entre le produit et le récepteur.
- Branchez le produit sur une prise d'un circuit différent de celui auquel le récepteur est connecté.
- Consultez le revendeur ou un technicien radio/TV expérimenté pour obtenir de l'aide.

# Remote Control Manta Ray Manual

## Battery Installation:

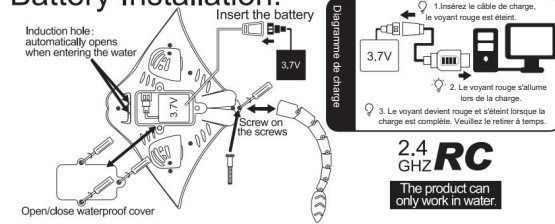

 The product requires one 3.7V/700mAh rechargeable battery.(included) pls install the battery in correct polarity.



Remote control requires 2x1.5V "AA" non-rechargeable batteries .  
(not included) pls install the battery in correct polarity.


- Open the waterproof cover: Loosen the screw counterclockwise with a Phillips screwdriver, and tap the main body in the opposite direction to make the waterproof cover come out naturally.
- Close the waterproof cover: Cover the waterproof cover, and use a Phillips screwdriver to tighten the screws clockwise.
- Tighten the screws to ensure the waterproof function when re-install the cover.
- If the battery compartment is gotten with water due to wrong operation, pls dry and replace new battery.
- When replacing the battery, make sure that the battery compartment is dry.

## CAUTION

 - Children toys. It can swim in the water by 2.4GHz wireless remote control.
- Match automatically. Only control one to one when match successfully.
- When matching, pls make the RC and product as near as possible.
- This product has the function of sensing water, and the motor will stop running after the product is taken out of the water.
- Both this product and the remote control are waterproof.
- Remote control distance: 30 to 40 meters in a clear environment.
- Only operate in tranquil, clean water. a shallow pool is recommended.
- After each use, please wipe with a towel and let it dry completely.
- Do not operate near concrete walls, which may interfere with transmission.
- This product is designed to use in fresh water, avoid operating in salt water too long.
- Up to 10 players can play at the same time.

## Operating Instructions:

The indicator light

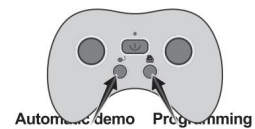

1. Method 1: Put the product into water, the manta ray eye light will turn on, then start the RC until its light turns off after flashing, That means match successfully.
2. Method 2: start the RC, and the red light turns on and keeps flashing, then put the manta ray into water, its eye light turns on, the RC red light turns off. That means match successfully. (Note: if the RC red light keeps flashing which means match fail, Then take the product out of water and turn off the RC, then operate according to the method above until match successfully.)
3. Automatic demonstration: Press the automatic demonstration button the product will automatically cruise for 100 seconds.
4. Program function: Press the programming button, the red light of the RC flashes, and the product gets into the programming state(static) and records the coming operations (12 records each time at most), then it will demonstrate itself when re-press the programming button.

## BATTERY CONSIDERATIONS

- 1) This product uses one 3.7V/700mAh rechargeable lithium battery, and the remote control uses two 1.5V "AA" non-rechargeable batteries.
- 2) The battery should be taken out and installed in correct polarity and voltage to avoid short circuit.
- 3) Non-rechargeable batteries cannot be charged.
- 4) Rechargeable batteries must be charged under adult supervision.
- 5) The rechargeable battery should be removed from the toy before charging.
- 6) Different types of batteries or old and new batteries cannot be mixed.
- 7) Only batteries that are the same as or equivalent to the recommended batteries can be used.
- 8) The exhausted battery should be taken out of the toy. If it is not used for a long time, please take out the battery from the toy.
- 9) The power terminals should not be short-circuited.
- 10) Never connect to the power sources which are more than recommended.
- 11) The wire, plug, shell and other parts of the charger should be checked regularly during use. If damaged, stop using until repaired.
- 12) Lorsque le chargeur est connecté à la batterie, son voyant devient rouge, puis s'éteint lorsque le chargeur est branché sur un ordinateur ou un mobile pour charge. Et il redeviendra rouge lorsqu'il sera complètement chargé.

## WARNING

- Children should only use under adult supervision. Never play alone in the water or by the pond.
- Small parts not for children under 3 years old.

# VEVOR®

## TOUGH TOOLS, HALF PRICE

### Technischer Support und E-Garantie-Zertifikat

[www.vevor.com/support](http://www.vevor.com/support)

**Hersteller:** SHUANG GE TOYS FACTORY

**Adresse:** CHENGHAI DISTRICT, SHANTOU CITY, GUANGDONG  
PROVINZ, CHINA

**EG-Vertreter:** E-CrossStu GmbH

Mainzer Landstr.69, 60329 Frankfurt am Main

**UK-VERTRETER:** YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House, London Road,  
Staines-upon-Thames, Surrey, TW18 4AX

**Nach AUS importiert:** SIHAO PTY LTD.

1 ROKEVA STREETEASTWOOD NSW 2122 Australien

**In die USA importiert:** Sanven Technology Ltd.

Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

**Ferngesteuertes Boot, Modell:** 18005-1 , 18003-1

**FCC-Informationen (FCC -ID: 2BD8U-3801-1):**

**ACHTUNG:** Durch Änderungen oder Modifikationen, die nicht ausdrücklich von der für die Konformität verantwortlichen Partei genehmigt wurden, kann die Berechtigung des Benutzers zum Betrieb des Geräts erlöschen!

Dieses Gerät entspricht Teil 15 der FCC-Bestimmungen. Der Betrieb unterliegt den die folgenden zwei Bedingungen:

- 1) Dieses Produkt kann schädliche Störungen verursachen.
- 2) Dieses Produkt muss alle empfangenen Störungen tolerieren, einschließlich Störungen, die einen unerwünschten Betrieb verursachen können.

**WARNUNG:** Änderungen oder Modifikationen an diesem Produkt, die nicht ausdrücklich von der für die Konformität verantwortlichen Partei genehmigt wurden, können zum Erlöschen der Berechtigung des Benutzers zum Betrieb des Produkts führen.

**Hinweis:** Dieses Produkt wurde getestet und entspricht den Grenzwerten für eine Klasse

B digitales Gerät gemäß Teil 15 der FCC-Regeln. Diese Grenzwerte sind so ausgelegt, bieten einen angemessenen Schutz gegen schädliche Störungen bei einer Installation in Wohngebieten.

Dieses Produkt erzeugt und verwendet Hochfrequenzenergie und kann diese auch ausstrahlen. Wenn es nicht gemäß den Anweisungen installiert und verwendet wird, kann es zu schädlichen Störungen des Funkverkehrs. Es gibt jedoch keine Garantie dafür, dass bei einer bestimmten Installation keine Störungen auftreten. Wenn dieses Produkt schädliche Störungen des Radio- oder Fernsehempfangs verursacht, was durch Aus- und Einschalten des Produkts festgestellt werden kann, wird dem Benutzer empfohlen, zu versuchen, die Störung zu beheben.

Störungen durch eine oder mehrere der folgenden Maßnahmen.

- Empfangsantenne neu ausrichten oder verlegen.
- Vergrößern Sie den Abstand zwischen Produkt und Empfänger.
- Schließen Sie das Produkt an eine Steckdose eines anderen Stromkreises an als den, an den das Empfänger ist angeschlossen.
- Wenden Sie sich an den Händler oder einen erfahrenen Radio-/Fernsehtechniker.

 
Wir sind weiterhin bestrebt, Ihnen Werkzeuge zu wettbewerbsfähigen Preisen anzubieten.

„Sparen Sie die Hälfte“, „Halber Preis“ oder andere ähnliche Ausdrücke, die wir verwenden, stellen nur eine Schätzung der Ersparnis dar, die Sie beim Kauf bestimmter Werkzeuge bei uns im Vergleich zu den großen Topmarken erzielen können, und decken nicht unbedingt alle von uns angebotenen Werkzeugkategorien ab. Wir möchten Sie freundlich daran erinnern, bei Ihrer Bestellung bei uns sorgfältig zu prüfen, ob Sie im Vergleich zu den großen Topmarken tatsächlich die Hälfte sparen.


Dies ist die Originalanleitung. Bitte lesen Sie alle Anweisungen sorgfältig durch, bevor Sie das Gerät in Betrieb nehmen. VEVOR behält sich eine klare Auslegung unserer Bedienungsanleitung vor. Das Erscheinungsbild des Produkts richtet sich nach dem Produkt, das Sie erhalten haben. Bitte verzeihen Sie uns, dass wir Sie nicht erneut informieren, wenn es Technologie- oder Software-Updates für unser Produkt gibt.

# Remote Control Manta Ray Manual

## Battery Installation:

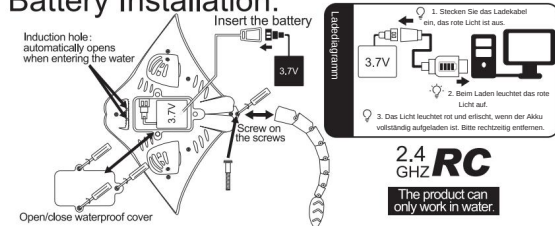

 The product requires one 3.7V/700mAh rechargeable battery.(included) pls install the battery in correct polarity.



Remote control requires 2x1.5V "AA" non-rechargeable batteries .  
(not included) pls install the battery in correct polarity.

- Open the waterproof cover: Loosen the screw counterclockwise with a Phillips screwdriver, and tap the main body in the opposite direction to make the waterproof cover come out naturally.
- Close the waterproof cover: Cover the waterproof cover, and use a Phillips screwdriver to tighten the screws clockwise.
- Tighten the screws to ensure the waterproof function when re-install the cover.
- If the battery compartment is gotten with water due to wrong operation, pls dry and replace new battery.
- When replacing the battery, make sure that the battery compartment is dry.

## CAUTION

- Children toys. It can swim in the water by 2.4GHz wireless remote control.
- Match automatically. Only control one to one when match successfully.
- When matching, pls make the RC and product as near as possible.
- This product has the function of sensing water, and the motor will stop running after the product is taken out of the water.
- Both this product and the remote control are waterproof.
- Remote control distance: 30 to 40 meters in a clear environment.
- Only operate in tranquil, clean water. a shallow pool is recommended.
- After each use, please wipe with a towel and let it dry completely.
- Do not operate near concrete walls, which may interfere with transmission.
- This product is designed to use in fresh water, avoid operating in salt water too long.
- Up to 10 players can play at the same time.

## Operating Instructions:

The indicator light



1. Method 1: Put the product into water, the manta ray eye light will turn on, then start the RC until its light turns off after flashing, That means match successfully.
2. Method 2: start the RC, and the red light turns on and keeps flashing, then put the manta ray into water, its eye light turns on, the RC red light turns off. That means match successfully. (Note: if the RC red light keeps flashing which means match fail, Then take the product out of water and turn off the RC, then operate according to the method above until match successfully.)
3. Automatic demonstration: Press the automatic demonstration button the product will automatically cruise for 100 seconds.
4. Program function: Press the programming button, the red light of the RC flashes, and the product gets into the programming state(static) and records the coming operations (12 records each time at most), then it will demonstrate itself when re-press the programming button.

## BATTERY CONSIDERATIONS

- 1) This product uses one 3.7V/700mAh rechargeable lithium battery, and the remote control uses two 1.5V "AA" non-rechargeable batteries.
- 2) The battery should be taken out and installed in correct polarity and voltage to avoid short circuit.
- 3) Non-rechargeable batteries cannot be charged.
- 4) Rechargeable batteries must be charged under adult supervision.
- 5) The rechargeable battery should be removed from the toy before charging.
- 6) Different types of batteries or old and new batteries cannot be mixed.
- 7) Only batteries that are the same as or equivalent to the recommended batteries can be used.
- 8) The exhausted battery should be taken out of the toy. If it is not used for a long time, please take out the battery from the toy.
- 9) The power terminals should not be short-circuited.
- 10) Never connect to the power sources which are more than recommended.
- 11) The wire, plug, shell and other parts of the charger should be checked regularly during use. If damaged, stop using until repaired.
- 12) Wenn das Ladegerät an die Batterie angeschlossen ist, leuchtet das Licht rot und erlischt, wenn das Ladegerät an einen Computer oder ein Mobiltelefon angeschlossen wird, um Aufladen. Und es wird wieder rot, wenn es vollständig aufgeladen ist.

## WARNING

- Children should only use under adult supervision. Never play alone in the water or by the pond.
- Small parts not for children under 3 years old.

# VEVOR®

## TOUGH TOOLS, HALF PRICE

Supporto tecnico e certificato di garanzia elettronica

[www.vevor.com/support](http://www.vevor.com/support)

**Produttore:** SHUANG GE TOYS FACTORY

**Indirizzo:** DISTRETTO DI CHENGHAI, CITTÀ DI SHANTOU, GUANGDONG  
PROVINCIA, CINA

**RAPPRESENTANTE CE:** E-CrossStu GmbH

Mainzer Landstr.69, 60329 Francoforte sul Meno

**RAPPRESENTANTE DEL REGNO UNITO:** YH CONSULTING LIMITED.

C/O YH Consulting Limited Ufficio 147, Centurion House, London Road,  
Staines-upon-Thames, Surrey, TW18 4AX

**Importato in AUS:** SIHAO PTY LTD.

1 ROKEVA STREET EASTWOOD NSW 2122 Australia

**Importato negli USA:** Sanven Technology Ltd.

Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

**Modello di barca telecomandata:** 18005-1y18003-1,

**Informazioni FCC (ID FCC: 2BD8U-3801-1):** )

**ATTENZIONE:** cambiamenti o modifiche non espressamente approvati dalla parte responsabile della conformità potrebbero invalidare il diritto dell'utente a utilizzare l'apparecchiatura!

Questo dispositivo è conforme alla Parte 15 delle Norme FCC. Il funzionamento è soggetto a seguenti due condizioni: 1)

Questo prodotto può causare interferenze dannose.

2) Questo prodotto deve accettare qualsiasi interferenza ricevuta, comprese quelle che potrebbero causare un funzionamento indesiderato.

**ATTENZIONE:** cambiamenti o modifiche al prodotto non espressamente approvati dalla parte responsabile della conformità potrebbero invalidare il diritto dell'utente a utilizzare il prodotto.

**Nota:** questo prodotto è stato testato e ritenuto conforme ai limiti per una Classe

Dispositivo digitale B ai sensi della Parte 15 delle Norme FCC. Questi limiti sono progettati per fornire una protezione ragionevole contro interferenze dannose in un'installazione residenziale.

Questo prodotto genera, utilizza e può irradiare energia a radiofrequenza e, se non installato e utilizzato in conformità alle istruzioni, può causare danni interferenze alle radiocomunicazioni. Tuttavia, non vi è alcuna garanzia che non si verifichino interferenze in una particolare installazione. Se questo prodotto causa interferenze dannose alla ricezione radiofonica o televisiva, il che può essere determinato accendendo e spegnendo il prodotto, si incoraggia l'utente a provare a correggere l'interferenza mediante una o più delle seguenti misure.

- Riorientare o riposizionare l'antenna ricevente.
- Aumentare la distanza tra il prodotto e il ricevitore.
- Collegare il prodotto a una presa di corrente su un circuito diverso da quello a cui è collegato il ricevitore è collegato.
- Per assistenza, consultare il rivenditore o un tecnico radio/TV esperto.

 
Continuiamo a impegnarci per fornirvi strumenti a prezzi competitivi.

"Risparmia la metà", "Metà prezzo" o qualsiasi altra espressione simile da noi utilizzata rappresenta solo una stima del risparmio che potresti ottenere acquistando determinati utensili con noi rispetto ai principali marchi principali e non significa necessariamente coprire tutte le categorie di utensili da noi offerti. Ti ricordiamo gentilmente di verificare attentamente quando effettui un ordine con noi se stai effettivamente risparmiando la metà rispetto ai principali marchi principali.


Questa è l'istruzione originale, si prega di leggere attentamente tutte le istruzioni del manuale prima di utilizzare. VEVOR si riserva una chiara interpretazione del nostro manuale utente. L'aspetto del prodotto sarà soggetto al prodotto ricevuto. Vi preghiamo di perdonarci se non vi informeremo di nuovo se ci sono aggiornamenti tecnologici o software sul nostro prodotto.

# Remote Control Manta Ray Manual

## Battery Installation:

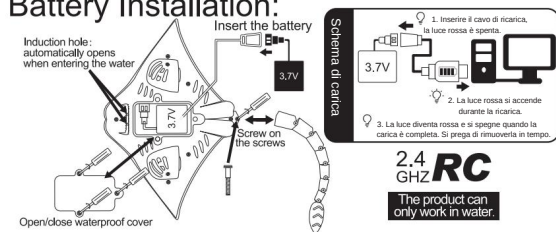

 The product requires one 3.7V/700mAh rechargeable battery.(included) pls install the battery in correct polarity.



Remote control requires 2x1.5V "AA" non-rechargeable batteries .  
(not included) pls install the battery in correct polarity.


- Open the waterproof cover: Loosen the screw counterclockwise with a Phillips screwdriver, and tap the main body in the opposite direction to make the waterproof cover come out naturally.
- Close the waterproof cover: Cover the waterproof cover, and use a Phillips screwdriver to tighten the screws clockwise.
- Tighten the screws to ensure the waterproof function when re-install the cover.
- If the battery compartment is gotten with water due to wrong operation, pls dry and replace new battery.
- When replacing the battery, make sure that the battery compartment is dry.

## CAUTION

 - Children toys. It can swim in the water by 2.4GHz wireless remote control.
- Match automatically. Only control one to one when match successfully.
- When matching, pls make the RC and product as near as possible.
- This product has the function of sensing water, and the motor will stop running after the product is taken out of the water.
- Both this product and the remote control are waterproof.
- Remote control distance: 30 to 40 meters in a clear environment.
- Only operate in tranquil, clean water. a shallow pool is recommended.
- After each use, please wipe with a towel and let it dry completely.
- Do not operate near concrete walls, which may interfere with transmission.
- This product is designed to use in fresh water, avoid operating in salt water too long.
- Up to 10 players can play at the same time.

## Operating Instructions:

The indicator light

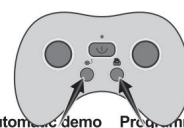

1. Method 1: Put the product into water, the manta ray eye light will turn on, then start the RC until its light turns off after flashing, That means match successfully.
2. Method 2: start the RC, and the red light turns on and keeps flashing, then put the manta ray into water, its eye light turns on, the RC red light turns off. That means match successfully. (Note: if the RC red light keeps flashing which means match fail, Then take the product out of water and turn off the RC, then operate according to the method above until match successfully.)
3. Automatic demonstration: Press the automatic demonstration button the product will automatically cruise for 100 seconds.
4. Program function: Press the programming button, the red light of the RC flashes, and the product gets into the programming state(static) and records the coming operations (12 records each time at most), then it will demonstrate itself when re-press the programming button.

## BATTERY CONSIDERATIONS

- 1) This product uses one 3.7V/700mAh rechargeable lithium battery, and the remote control uses two 1.5V "AA" non-rechargeable batteries.
- 2) The battery should be taken out and installed in correct polarity and voltage to avoid short circuit.
- 3) Non-rechargeable batteries cannot be charged.
- 4) Rechargeable batteries must be charged under adult supervision.
- 5) The rechargeable battery should be removed from the toy before charging.
- 6) Different types of batteries or old and new batteries cannot be mixed.
- 7) Only batteries that are the same as or equivalent to the recommended batteries can be used.
- 8) The exhausted battery should be taken out of the toy. If it is not used for a long time, please take out the battery from the toy.
- 9) The power terminals should not be short-circuited.
- 10) Never connect to the power sources which are more than recommended.
- 11) The wire, plug, shell and other parts of the charger should be checked regularly during use. If damaged, stop using until repaired.

12) Quando il caricabatterie è collegato alla batteria, la sua luce diventa rossa, quindi si spegne quando il caricabatterie è collegato a un computer o cellulare per carica. E diventerà di nuovo rosso quando sarà completamente carico.

## WARNING

- Children should only use under adult supervision. Never play alone in the water or by the pond.
- Small parts not for children under 3 years old.

# VEVOR®

## TOUGH TOOLS, HALF PRICE

Soporte técnico y certificado de garantía electrónica [www.vevor.com/](http://www.vevor.com/)

support

Fabricante: FÁBRICA DE JUGUETES SHUANG GE

Dirección: DISTRITO DE CHENGHAI, CIUDAD DE SHANTOU, GUANGDONG  
PROVINCIA, CHINA

REPRESENTANTE CE: E-CrossStu GmbH

Mainzer Landstr.69, 60329 Fráncfort del Meno

REPRESENTANTE DEL REINO UNIDO: YH CONSULTING LIMITED.

C/O YH Consulting Limited Oficina 147, Centurion House, London Road,

Staines-upon-Thames, Surrey, TW18 4AX

Importado a AUS: SIHAO PTY LTD.

1 ROKEVA STREET EASTWOOD NSW 2122 Australia

Importado a EE. UU.: Sanven Technology Ltd.

Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

Seguimos comprometidos a brindarle herramientas a precios competitivos.

"Ahorre la mitad", "mitad de precio" o cualquier otra expresión similar que utilicemos solo representa una estimación del ahorro que podría obtener al comprar ciertas herramientas con nosotros en comparación con las principales marcas y no necesariamente significa que cubra todas las categorías de herramientas que ofrecemos. Le recordamos que, al realizar un pedido con nosotros, verifique cuidadosamente si realmente está ahorrando la mitad en comparación con las principales marcas.

Estas son las instrucciones originales, lea atentamente todas las instrucciones del manual antes de utilizar el producto. VEVOR se reserva una interpretación clara de nuestro manual de usuario. La apariencia del producto estará sujeta al producto que recibió. Perdónenos por no informarle nuevamente si hay actualizaciones de tecnología o software en nuestro producto.

Modelo de barco de control remoto: 18005-118003-1

Información de la FCC( ID de la FCC: 2BD8U-380131):

PRECAUCIÓN: ¡ Los cambios o modificaciones no aprobados expresamente por la parte responsable del cumplimiento podrían anular la autoridad del usuario para operar el equipo!

Este dispositivo cumple con la Parte 15 de las Normas de la FCC. Su funcionamiento está sujeto a las siguientes dos condiciones: 1)

Este producto puede causar interferencias dañinas.

2) Este producto debe aceptar cualquier interferencia recibida, incluida aquella que pueda provocar un funcionamiento no deseado.

ADVERTENCIA: Los cambios o modificaciones a este producto no aprobados expresamente por la parte responsable del cumplimiento podrían anular la autoridad del usuario para operar el producto.

Nota: Este producto ha sido probado y se ha determinado que cumple con los límites para una Clase Dispositivo digital B de conformidad con la Parte 15 de las Normas de la FCC. Estos límites están diseñados para proporcionar una protección razonable contra interferencias dañinas en una instalación residencial.

Este producto genera, utiliza y puede irradiar energía de radiofrecuencia y, si no se instala y utiliza de acuerdo con las instrucciones, puede causar daños.

 
interferencias en las radiocomunicaciones. Sin embargo, no existe garantía de que no se produzcan interferencias en una instalación en particular. Si este producto causa interferencias perjudiciales en la recepción de radio o televisión, lo que se puede determinar encendiendo y apagando el producto, se recomienda al usuario que intente corregir la interferencia.

interferencia mediante una o más de las siguientes medidas.


- Reorientar o reubicar la antena receptora.
- Aumente la distancia entre el producto y el receptor.
- Conecte el producto a una toma de corriente de un circuito diferente de aquel al que está conectado. El receptor está conectado.
- Consulte al distribuidor o a un técnico de radio/TV experimentado para obtener ayuda.

# Remote Control Manta Ray Manual

## Battery Installation:

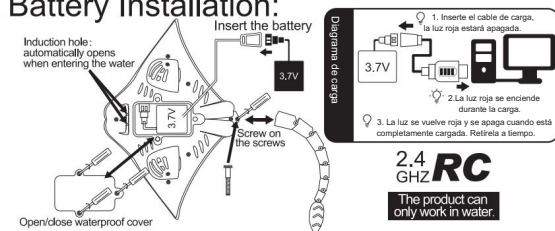

 The product requires one 3.7V/700mAh rechargeable battery.(included) pls install the battery in correct polarity.



Remote control requires 2x1.5V "AA" non-rechargeable batteries .  
(not included) pls install the battery in correct polarity.


- Open the waterproof cover: Loosen the screw counterclockwise with a Phillips screwdriver, and tap the main body in the opposite direction to make the waterproof cover come out naturally.
- Close the waterproof cover: Cover the waterproof cover, and use a Phillips screwdriver to tighten the screws clockwise.
- Tighten the screws to ensure the waterproof function when re-install the cover.
- If the battery compartment is gotten with water due to wrong operation, pls dry and replace new battery.
- When replacing the battery, make sure that the battery compartment is dry.

## CAUTION

 - Children toys. It can swim in the water by 2.4GHz wireless remote control.
- Match automatically. Only control one to one when match successfully.
- When matching, pls make the RC and product as near as possible.
- This product has the function of sensing water, and the motor will stop running after the product is taken out of the water.
- Both this product and the remote control are waterproof.
- Remote control distance: 30 to 40 meters in a clear environment.
- Only operate in tranquil, clean water. a shallow pool is recommended.
- After each use, please wipe with a towel and let it dry completely.
- Do not operate near concrete walls, which may interfere with transmission.
- This product is designed to use in fresh water, avoid operating in salt water too long.
- Up to 10 players can play at the same time.

## Operating Instructions:

The indicator light

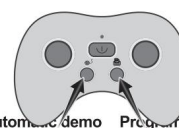

1. Method 1: Put the product into water, the manta ray eye light will turn on, then start the RC until its light turns off after flashing, That means match successfully.
2. Method 2: start the RC, and the red light turns on and keeps flashing, then put the manta ray into water, its eye light turns on, the RC red light turns off. That means match successfully. (Note: if the RC red light keeps flashing which means match fail, Then take the product out of water and turn off the RC, then operate according to the method above until match successfully.)
3. Automatic demonstration: Press the automatic demonstration button the product will automatically cruise for 100 seconds.
4. Program function: Press the programming button, the red light of the RC flashes, and the product gets into the programming state(static) and records the coming operations (12 records each time at most), then it will demonstrate itself when re-press the programming button.

## BATTERY CONSIDERATIONS

- 1) This product uses one 3.7V/700mAh rechargeable lithium battery, and the remote control usestwo 1.5V "AA" non-rechargeable batteries.
- 2) The battery should be taken out and installed in correct polarity and voltage to avoid short circuit.
- 3) Non-rechargeable batteries cannot be charged.
- 4) Rechargeable batteries must be charged under adult supervision.
- 5) The rechargeable battery should be removed from the toy before charging.
- 6) Different types of batteries or old and new batteries cannot be mixed.
- 7) Only batteries that are the same as or equivalent to the recommended batteries can be used.
- 8) The exhausted battery should be taken out of the toy. If it is not used for a long time, please take out the battery from the toy.
- 9) The power terminals should not be short-circuited.
- 10) Never connect to the power sources which are more than recommended.
- 11) The wire, plug, shell and other parts of the charger should be checked regularly during use. If damaged, stop using until repaired.
- 12) Cuando el cargador está conectado a la batería, su luz se vuelve roja, luego se apaga cuando el cargador se conecta a una computadora o móvil. cargar. Y se volverá rojo nuevamente cuando esté completamente cargado.

## WARNING

- Children should only use under adult supervision. Never play alone in the water or by the pond.
- Small parts not for children under 3 years old.

# VEVOR®

## TOUGH TOOLS, HALF PRICE

Wsparcie techniczne i certyfikat gwarancji elektronicznej

[www.vevor.com/support](http://www.vevor.com/support)

Producent: SHUANG GE TOYS FACTORY

Adres: DZIELNICA CHENGHAI, MIASTO SHANTOU, GUANGDONG  
PROWINCJA, CHINY

Przedstawiciel KE: E-CrossStu GmbH

Mainzer Landstr.69, 60329 Frankfurt nad Menem

ODPOWIEDZIALNOŚĆ W WIELKIEJ Brytanii: YH CONSULTING LIMITED.

C/O YH Consulting Limited Biuro 147, Centurion House, London Road,  
Staines-upon-Thames, Surrey, TW18 4AX

Importowane do AUS: SIHAO PTY LTD.

1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Importowane do USA: Sanven Technology Ltd.

Apartament 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

Nadal staramy się oferować Państwu narzędzia w konkurencyjnych cenach. „Oszczędź do połowy”, „Połowa ceny” lub inne podobne wyrażenia używane przez nas stanowią jedynie szacunkowe oszczędności, jakie możesz uzyskać, kupując u nas określone narzędzia w porównaniu z głównymi markami i niekoniecznie oznaczają one objęcie wszystkich kategorii narzędzi oferowanych przez nas. Uprzejmie przypominamy, aby dokładnie sprawdzić, czy składając u nas zamówienie faktycznie oszczędzasz połowę w porównaniu z głównymi markami.

To jest oryginalna instrukcja, przed użyciem należy uważnie przeczytać wszystkie instrukcje. VEVOR zastrzega sobie jasną interpretację naszej instrukcji obsługi. Wygląd produktu będzie zależał od produktu, który otrzymałeś. Prosimy o wybaczenie, że nie poinformujemy Cię ponownie, jeśli w naszym produkcie pojawiają się jakiegokolwiek aktualizacje technologiczne lub oprogramowania.

Łódź zdalnie sterowana Model: 18005-1, 18003-1  
Informacje FCC ( identyfikator FCC: 2BD8U-3801-1): )

UWAGA: Zmiany lub modyfikacje wykonane bez wyraźnej zgody strony odpowiedzialnej za zgodność mogą spowodować unieważnienie prawa użytkownika do korzystania ze sprzętu!

To urządzenie jest zgodne z częścią 15 przepisów FCC. Eksploatacja podlega

spełnione są następujące dwa

warunki: 1) Produkt ten może powodować szkodliwe zakłócenia.

2) Produkt ten musi być odporny na wszelkie zakłócenia, w tym zakłócenia mogące powodować niepożądane działanie.

OSTRZEŻENIE: Wszelkie zmiany lub modyfikacje tego produktu, które nie zostały wyraźnie zatwierdzone przez stronę odpowiedzialną za zgodność, mogą spowodować unieważnienie prawa użytkownika do korzystania z produktu.

Uwaga: Ten produkt został przetestowany i uznany za zgodny z limitami dla klasy

Urządzenie cyfrowe B zgodnie z częścią 15 przepisów FCC. Te ograniczenia mają na celu zapewnić odpowiednią ochronę przed szkodliwymi zakłóceniami w instalacjach domowych.

Ten produkt generuje, wykorzystuje i może emitować energię o częstotliwości radiowej i jeśli nie zostanie zainstalowany i używany zgodnie z instrukcją, może powodować szkodliwe skutki.

 
zakłócenia w komunikacji radiowej. Nie ma jednak gwarancji, że zakłócenia nie wystąpią w konkretnej instalacji. Jeśli ten produkt powoduje szkodliwe zakłócenia w odbiorze radia lub telewizji, co można ustalić, wyłączając i włączając produkt, zachęca się użytkownika do podjęcia próby ich skorygowania

zakłócenia spowodowane przez jeden lub więcej z następujących środków.


- Zmiana orientacji lub położenia anteny odbiorczej.
- Zwiększenie odległości między produktem a odbiornikiem.
- Podłączyć produkt do gniazdka w innym obwodzie niż ten, do którego jest podłączony. Odbiornik jest podłączony.
- Aby uzyskać pomoc, należy zwrócić się do sprzedawcy lub doświadczonego technika radiowo-telewizyjnego.

# Remote Control Manta Ray Manual

## Battery Installation:

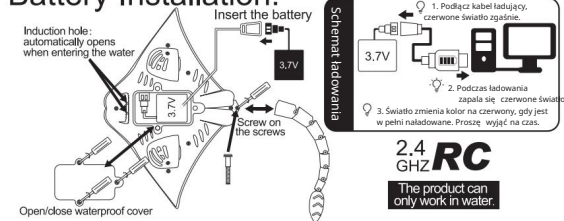

 The product requires one 3.7V/700mAh rechargeable battery.(included) pls install the battery in correct polarity.



Remote control requires 2x1.5V "AA" non-rechargeable batteries. (not included) pls install the battery in correct polarity.


- Open the waterproof cover: Loosen the screw counterclockwise with a Phillips screwdriver, and tap the main body in the opposite direction to make the waterproof cover come out naturally.
- Close the waterproof cover: Cover the waterproof cover, and use a Phillips screwdriver to tighten the screws clockwise.
- Tighten the screws to ensure the waterproof function when re-install the cover.
- If the battery compartment is gotten with water due to wrong operation, pls dry and replace new battery.
- When replacing the battery, make sure that the battery compartment is dry.

## CAUTION

 - Children toys. It can swim in the water by 2.4GHz wireless remote control.
- Match automatically. Only control one to one when match successfully.
- When matching, pls make the RC and product as near as possible.
- This product has the function of sensing water, and the motor will stop running after the product is taken out of the water.
- Both this product and the remote control are waterproof.
- Remote control distance: 30 to 40 meters in a clear environment.
- Only operate in tranquil, clean water. a shallow pool is recommended.
- After each use, please wipe with a towel and let it dry completely.
- Do not operate near concrete walls, which may interfere with transmission.
- This product is designed to use in fresh water, avoid operating in salt water too long.
- Up to 10 players can play at the same time.

## Operating Instructions:

The indicator light

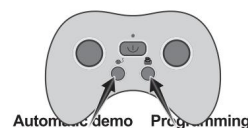

1. Method 1: Put the product into water, the manta ray eye light will turn on, then start the RC until its light turns off after flashing, That means match successfully.
2. Method 2: start the RC, and the red light turns on and keeps flashing, then put the manta ray into water, its eye light turns on, the RC red light turns off. That means match successfully. (Note: if the RC red light keeps flashing which means match fail, Then take the product out of water and turn off the RC, then operate according to the method above until match successfully.)
3. Automatic demonstration: Press the automatic demonstration button the product will automatically cruise for 100 seconds.
4. Program function: Press the programming button, the red light of the RC flashes, and the product gets into the programming state(static) and records the coming operations (12 records each time at most), then it will demonstrate itself when re-press the programming button.

## BATTERY CONSIDERATIONS

- 1) This product uses one 3.7V/700mAh rechargeable lithium battery, and the remote control uses two 1.5V "AA" non-rechargeable batteries.
- 2) The battery should be taken out and installed in correct polarity and voltage to avoid short circuit.
- 3) Non-rechargeable batteries cannot be charged.
- 4) Rechargeable batteries must be charged under adult supervision.
- 5) The rechargeable battery should be removed from the toy before charging.
- 6) Different types of batteries or old and new batteries cannot be mixed.
- 7) Only batteries that are the same as or equivalent to the recommended batteries can be used.
- 8) The exhausted battery should be taken out of the toy. If it is not used for a long time, please take out the battery from the toy.
- 9) The power terminals should not be short-circuited.
- 10) Never connect to the power sources which are more than recommended.
- 11) The wire, plug, shell and other parts of the charger should be checked regularly during use. If damaged, stop using until repaired.

12) Po podłączeniu ładowarki do akumulatora jej światło zmienia kolor na czerwony, a następnie gaśnie po podłączeniu ładowarki do komputera lub telefonu komórkowego. naładuje. Po pełnym naładowaniu kontrolka znów zaświeci się na czerwono.

## WARNING

- Children should only use under adult supervision. Never play alone in the water or by the pond.
- Small parts not for children under 3 years old.



Technische ondersteuning en e-garantiecertificaat

[www.vevor.com/support](http://www.vevor.com/support)

**Fabrikant:** SHUANG GE TOYS FACTORY

**Adres:** CHENGHAI DISTRICT, SHANTOU CITY, GUANGDONG  
PROVINCIE, CHINA

**EC-REP:** E-CrossStu GmbH

Mainzer Landstr.69, 60329 Frankfurt am Main

**VK VERTEGENWOORDIGING:** YH CONSULTING LIMITED.

C/O YH Consulting Limited Kantoor 147, Centurion House, London Road,  
Staines-upon-Thames, Surrey, TW18 4AX

**Geïmporteerd naar AUS:** SIHAO PTY LTD.

1 ROKEVA STRAAT EASTWOOD NSW 2122 Australië

**Geïmporteerd naar de VS:** Sarven Technology Ltd.

Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

Wij streven er voortdurend naar om u gereedschappen tegen concurrerende prijzen te leveren.

"Save Half", "Half Price" of andere soortgelijke uitdrukkingen die wij gebruiken, geven alleen een schatting van de besparingen die u kunt behalen door bepaalde gereedschappen bij ons te kopen in vergelijking met de grote topmerken en betekent niet noodzakelijkerwijs dat alle categorieën gereedschappen die wij aanbieden, worden gedekt. Wij herinneren u eraan om zorgvuldig te controleren of u daadwerkelijk de helft bespaart in vergelijking met de grote topmerken wanneer u een bestelling bij ons plaatst.

Dit is de originele instructie, lees alle handleidingen zorgvuldig door voordat u het product gebruikt. VEVOR behoudt zich een duidelijke interpretatie van onze gebruikershandleiding voor. Het uiterlijk van het product is afhankelijk van het product dat u hebt ontvangen. Vergeef ons dat we u niet opnieuw zullen informeren als er technologie- of software-updates voor ons product zijn.

**Afstandsbedieningsboot Model:** 18005-1y18003-1

**FCC-informatie (FCC-ID: 2BD8U-3801-1):** )

**LET OP:** Wijzigingen of aanpassingen die niet uitdrukkelijk zijn goedgekeurd door de partij die verantwoordelijk is voor de naleving, kunnen de bevoegdheid van de gebruiker om het apparaat te bedienen ongeldig maken!

Dit apparaat voldoet aan Deel 15 van de FCC-regels. De werking is onderworpen aan de volgende twee

omstandigheden: 1) Dit product kan schadelijke interferentie veroorzaken.

2) Dit product moet alle ontvangen interferentie accepteren, inclusief interferentie die ongewenste werking kan veroorzaken.

**WAARSCHUWING:** Wijzigingen of aanpassingen aan dit product die niet uitdrukkelijk zijn goedgekeurd door de partij die verantwoordelijk is voor de naleving, kunnen de bevoegdheid van de gebruiker om het product te bedienen ongeldig maken.

**Let op:** Dit product is getest en voldoet aan de limieten voor een klasse

B digitaal apparaat volgens Deel 15 van de FCC-regels. Deze limieten zijn ontworpen om redelijke bescherming bieden tegen schadelijke interferentie in een residentiële installatie.

 
Dit product genereert, gebruikt en kan radiofrequentie-energie uitstralen en kan, indien niet geïnstalleerd en gebruikt in overeenstemming met de instructies, schadelijke gevolgen hebben.

interferentie met radiocommunicatie. Er is echter geen garantie dat er geen interferentie zal optreden in een bepaalde installatie. Als dit product schadelijke interferentie veroorzaakt met radio- of televisieontvangst, wat kan worden vastgesteld door het product uit en weer in te schakelen, wordt de gebruiker aangemoedigd om te proberen de versterking door een of meer van de volgende maatregelen.


- Heroriënteer of verplaats de ontvangstantenne.
- Vergroot de afstand tussen het product en de ontvanger.
- Sluit het product aan op een stopcontact op een ander circuit dan dat waarop het product is aangesloten. ontvanger is aangesloten.
- Raadpleeg de dealer of een ervaren radio-/tv-technicus voor hulp.

# Remote Control Manta Ray Manual

## Battery Installation:

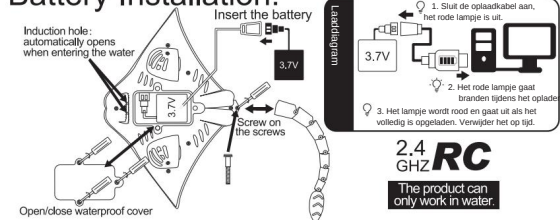

 The product requires one 3.7V/700mAh rechargeable battery.(included) pls install the battery in correct polarity.



Remote control requires 2x1.5V "AA" non-rechargeable batteries . (not included) pls install the battery in correct polarity.


- Open the waterproof cover: Loosen the screw counterclockwise with a Phillips screwdriver, and tap the main body in the opposite direction to make the waterproof cover come out naturally.
- Close the waterproof cover: Cover the waterproof cover, and use a Phillips screwdriver to tighten the screws clockwise.
- Tighten the screws to ensure the waterproof function when re-install the cover.
- If the battery compartment is gotten with water due to wrong operation, pls dry and replace new battery.
- When replacing the battery, make sure that the battery compartment is dry.

## CAUTION

 - Children toys. It can swim in the water by 2.4GHz wireless remote control.
- Match automatically. Only control one to one when match successfully.
- When matching, pls make the RC and product as near as possible.
- This product has the function of sensing water, and the motor will stop running after the product is taken out of the water.
- Both this product and the remote control are waterproof.
- Remote control distance: 30 to 40 meters in a clear environment.
- Only operate in tranquil, clean water. a shallow pool is recommended.
- After each use, please wipe with a towel and let it dry completely.
- Do not operate near concrete walls, which may interfere with transmission.
- This product is designed to use in fresh water, avoid operating in salt water too long.
- Up to 10 players can play at the same time.

## Operating Instructions:

The indicator light

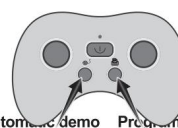

1. Method 1: Put the product into water, the manta ray eye light will turn on, then start the RC until its light turns off after flashing, That means match successfully.
2. Method 2: start the RC, and the red light turns on and keeps flashing, then put the manta ray into water, its eye light turns on, the RC red light turns off. That means match successfully. (Note: if the RC red light keeps flashing which means match fail, Then take the product out of water and turn off the RC, then operate according to the method above until match successfully.)
3. Automatic demonstration: Press the automatic demonstration button the product will automatically cruise for 100 seconds.
4. Program function: Press the programming button, the red light of the RC flashes, and the product gets into the programming state(static) and records the coming operations (12 records each time at most), then it will demonstrate itself when re-press the programming button.

## BATTERY CONSIDERATIONS

- 1) This product uses one 3.7V/700mAh rechargeable lithium battery, and the remote control uses two 1.5V "AA" non-rechargeable batteries.
- 2) The battery should be taken out and installed in correct polarity and voltage to avoid short circuit.
- 3) Non-rechargeable batteries cannot be charged.
- 4) Rechargeable batteries must be charged under adult supervision.
- 5) The rechargeable battery should be removed from the toy before charging.
- 6) Different types of batteries or old and new batteries cannot be mixed.
- 7) Only batteries that are the same as or equivalent to the recommended batteries can be used.
- 8) The exhausted battery should be taken out of the toy. If it is not used for a long time, please take out the battery from the toy.
- 9) The power terminals should not be short-circuited.
- 10) Never connect to the power sources which are more than recommended.
- 11) The wire, plug, shell and other parts of the charger should be checked regularly during use. If damaged, stop using until repaired.
- 12) Wanneer de oplader is aangesloten op de batterij, wordt het lampje rood en gaat het uit wanneer de oplader wordt aangesloten op een computer of mobiel apparaat. opladen. En het wordt weer rood als het volledig is opgeladen.

## WARNING

- Children should only use under adult supervision. Never play alone in the water or by the pond.
- Small parts not for children under 3 years old.

# VEVOR®

## TOUGH TOOLS, HALF PRICE

Teknisk support och e-garanticertifikat [www.vevor.com/support](http://www.vevor.com/support)

**Tillverkare:** SHUANG GE TOYS FACTORY

**Adress:** CHENGHAI DISTRICT, SHANTOU CITY, GUANGDONG  
PROVINS, KINA

**EC REP:** E-CrossStu GmbH

Mainzer Landstr.69, 60329 Frankfurt am Main

**UK REP:** YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House, London Road,  
Staines-upon-Thames, Surrey, TW18 4AX

**Importerad till AUS:** SIHAO PTY LTD.

1 ROKEVA STREETEASTWOOD NSW 2122 Australien

**Importerad till USA:** Sanven Technology Ltd.

Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

Vi fortsätter att vara engagerade i att ge dig verktyg till konkurrenskraftiga priser.  
"Spara hälften", "halva priset" eller andra liknande uttryck som används av oss representerar bara en uppskattning av besparingar du kan dra nytta av att köpa vissa verktyg hos oss jämfört med de stora toppmärkena och betyder inte nödvändigtvis att täcka alla kategorier av verktyg som erbjuds av oss. Du påminns vänligen om att noggrant kontrollera när du gör en beställning hos oss om du faktiskt sparar hälften i jämförelse med de främsta stora varumärkena.

Detta är den ursprungliga instruktionen, läs alla instruktioner noggrant innan du använder den. VEVOR reserverar sig för en tydlig tolkning av vår användarmanual. Utseendet på produkten är beroende av den produkt du fått. Ursäkta oss att vi inte kommer att informera dig igen om det finns någon teknik eller mjukvaruuppdateringar på vår produkt.

**Fjärrstyrd båtmodell:** 18005-1y18003-1

**FCC-information (FCC ID:2BD8U-3801-1):**

**FÖRSIKTIGHET:** Ändringar eller modifieringar som inte uttryckligen godkänts av den part som ansvarar för efterlevnaden kan upphäva användarens behörighet att använda utrustningen!

Denna enhet uppfyller del 15 av FCC-reglerna. Driften är föremål för följande två villkor: 1) Denna

produkt kan orsaka skadliga störningar.

2) Denna produkt måste acceptera alla mottagna störningar, inklusive störningar som kan orsaka oönskad funktion.

**VARNING:** Ändringar eller modifieringar av denna produkt som inte uttryckligen godkänts av den part som ansvarar för efterlevnaden kan ogiltigförklara användarens behörighet att använda produkten.

**Obs:** Denna produkt har testats och befunnits överensstämma med gränserna för en klass

B digital enhet i enlighet med del 15 av FCC-reglerna. Dessa gränser är utformade för att tillhandahålla rimligt skydd mot skadliga störningar i en bostadsinstallation.

Denna produkt genererar, använder och kan utstråla radiofrekvensenergi, och om den inte installeras

och används i enlighet med instruktionerna kan den orsaka skadlig

störningar på radiokommunikation. Det finns dock ingen garanti för att störningar inte kommer

att inträffa i en viss installation. Om denna produkt orsakar skadliga störningar på radio- eller tv-

 
mottagning, vilket kan fastställas genom att stänga av och på produkten, uppmanas användaren att försöka korrigera

störning av en eller flera av följande åtgärder.


- Rikta om eller flytta mottagningsantennen.
- Öka avståndet mellan produkten och mottagaren.
- Anslut produkten till ett uttag på en annan krets än den till vilken mottagaren är ansluten.
- Kontakta återförsäljaren eller en erfaren radio/TV-tekniker för hjälp.

# Remote Control Manta Ray Manual

## Battery Installation:

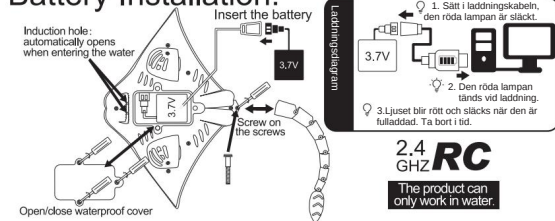

 The product requires one 3.7V/700mAh rechargeable battery.(included) pls install the battery in correct polarity.



Remote control requires 2x1.5V "AA" non-rechargeable batteries .  
(not included) pls install the battery in correct polarity.

- Open the waterproof cover: Loosen the screw counterclockwise with a Phillips screwdriver, and tap the main body in the opposite direction to make the waterproof cover come out naturally.
- Close the waterproof cover: Cover the waterproof cover, and use a Phillips screwdriver to tighten the screws clockwise.
- Tighten the screws to ensure the waterproof function when re-install the cover.
- If the battery compartment is gotten with water due to wrong operation, pls dry and replace new battery.
- When replacing the battery, make sure that the battery compartment is dry.

## CAUTION

- Children toys. It can swim in the water by 2.4GHz wireless remote control.
- Match automatically. Only control one to one when match successfully.
- When matching, pls make the RC and product as near as possible.
- This product has the function of sensing water, and the motor will stop running after the product is taken out of the water.
- Both this product and the remote control are waterproof.
- Remote control distance: 30 to 40 meters in a clear environment.
- Only operate in tranquil, clean water. a shallow pool is recommended.
- After each use, please wipe with a towel and let it dry completely.
- Do not operate near concrete walls, which may interfere with transmission.
- This product is designed to use in fresh water, avoid operating in salt water too long.
- Up to 10 players can play at the same time.

## Operating Instructions:

The indicator light



1. Method 1: Put the product into water, the manta ray eye light will turn on, then start the RC until its light turns off after flashing, That means match successfully.
2. Method 2: start the RC, and the red light turns on and keeps flashing, then put the manta ray into water, its eye light turns on, the RC red light turns off. That means match successfully. (Note: if the RC red light keeps flashing which means match fail, Then take the product out of water and turn off the RC, then operate according to the method above until match successfully.)
3. Automatic demonstration: Press the automatic demonstration button the product will automatically cruise for 100 seconds.
4. Program function: Press the programming button, the red light of the RC flashes, and the product gets into the programming state(static) and records the coming operations (12 records each time at most), then it will demonstrate itself when re-press the programming button.

## BATTERY CONSIDERATIONS

- 1) This product uses one 3.7V/700mAh rechargeable lithium battery, and the remote control uses two 1.5V "AA" non-rechargeable batteries.
- 2) The battery should be taken out and installed in correct polarity and voltage to avoid short circuit.
- 3) Non-rechargeable batteries cannot be charged.
- 4) Rechargeable batteries must be charged under adult supervision.
- 5) The rechargeable battery should be removed from the toy before charging.
- 6) Different types of batteries or old and new batteries cannot be mixed.
- 7) Only batteries that are the same as or equivalent to the recommended batteries can be used.
- 8) The exhausted battery should be taken out of the toy. If it is not used for a long time, please take out the battery from the toy.
- 9) The power terminals should not be short-circuited.
- 10) Never connect to the power sources which are more than recommended.
- 11) The wire, plug, shell and other parts of the charger should be checked regularly during use. If damaged, stop using until repaired.
- 12) När laddaren är ansluten till batteriet lyser dess lampor rött och släcks sedan när laddaren är ansluten till en dator eller mobil för att ladda. Och den blir röd igen när den är fulladdad.

## WARNING

- Children should only use under adult supervision. Never play alone in the water or by the pond.
- Small parts not for children under 3 years old.