


Instruction Manual

Smart Thermostat


ZigBee 3.0

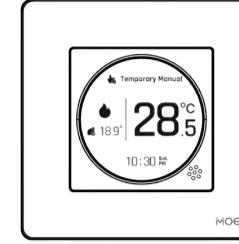


English

ZHT-SR-MS-DSK18

1

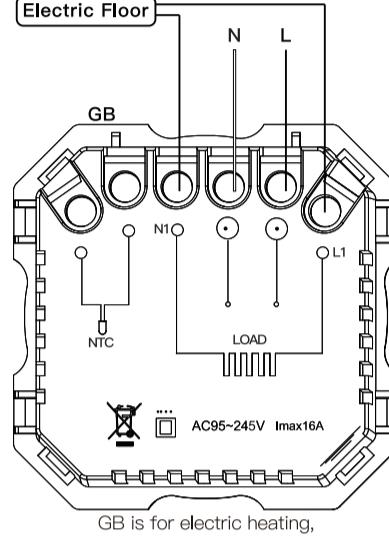


7

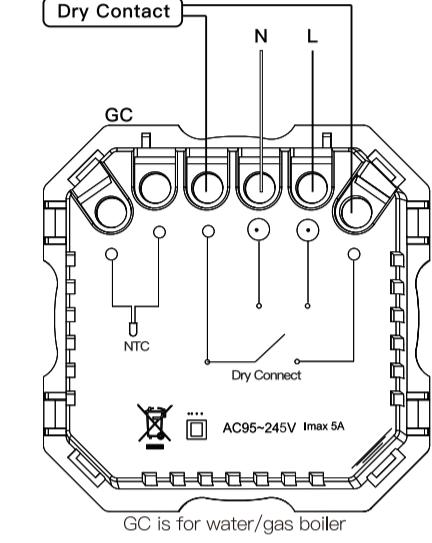

8


Main Control Interface

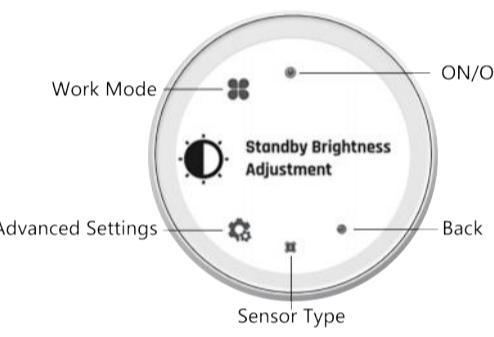

Tip: Press the screen once on the main interface to enter the main control interface.

13

Advanced Settings

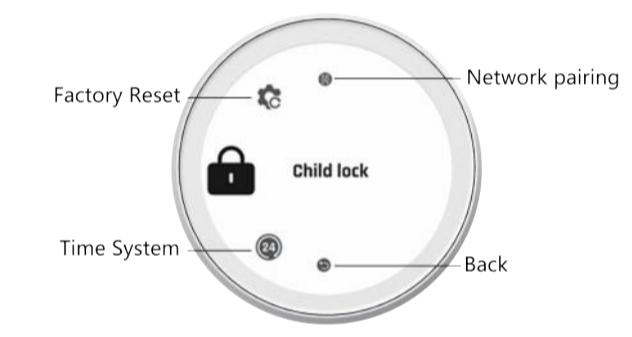

Tip: Turn the knob on the menu interface to "Advanced Settings" and press the screen once to enter the advanced settings interface.


14

ZigBee Connection

Ensure the device is within the effective signal coverage of your smart ZigBee gateway for successful connection into the ZigBee gateway in MOES APP.

Method One:


1. Make sure your Zigbee gateway is successfully connected to MOES APP.

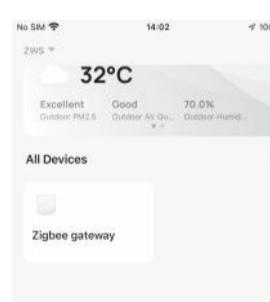

19


2. Reset: Refer to the following tutorial to enter the device into network configuration mode.

Note: If you are powering on the device for the first time, perform network distribution as prompted on the device screen.

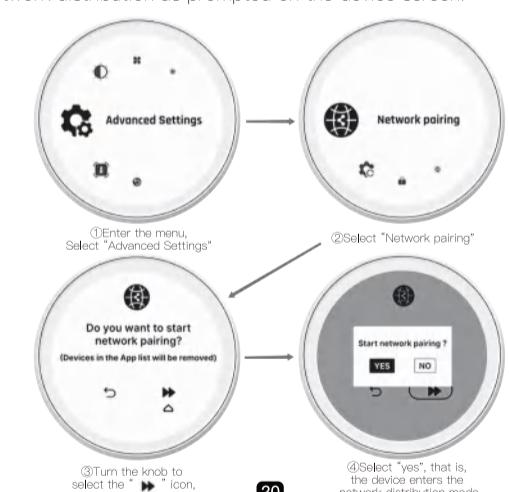


20

3. Enter the gateway, please follow the picture below to complete "Add sub-device → LED has flashed. Depending on your network conditions, the connection will take about 10-120 seconds to complete.

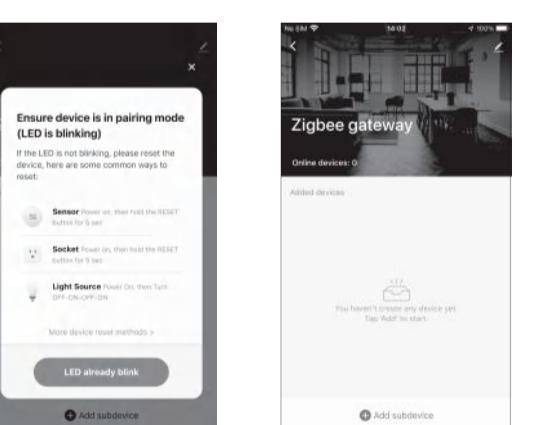


21

4. After adding the device successfully, you can edit the device name and click "Finish" to enter the device page.

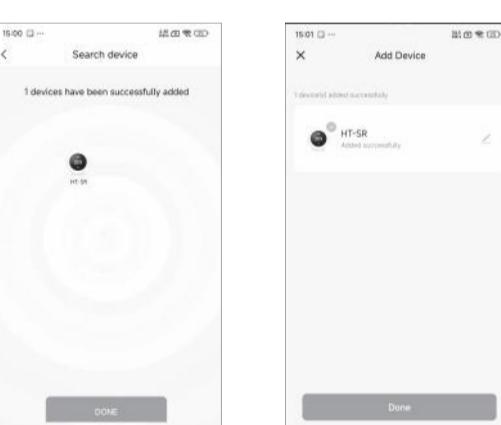

22

5. Click "Finish" to enter the device page and enjoy the smart life of home automation.

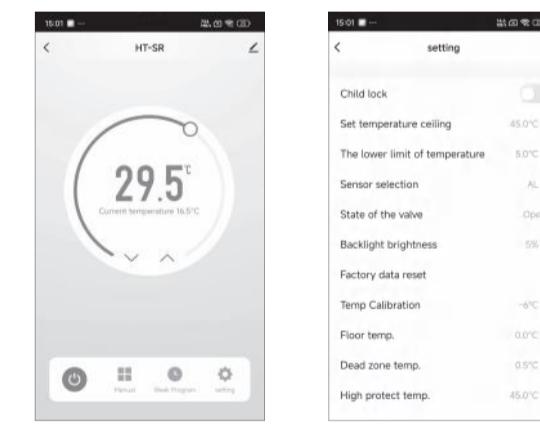


23

Method Two:
1. Make sure your MOES APP has successfully connected to the Zigbee gateway.

2. Refer to the "Method One: Reset" tutorial to enter the device into network configuration mode.

3. Scan the QR code to configure the network wizard.

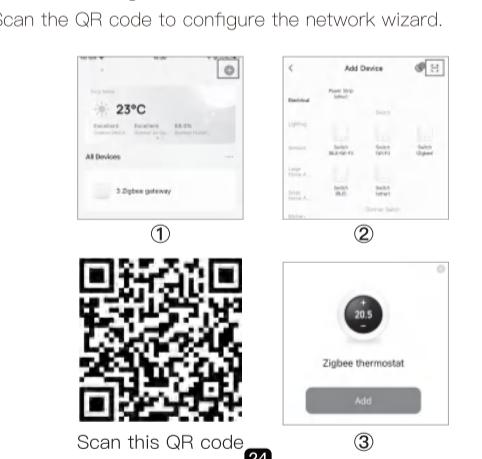

24

Thank you for your support and purchase at we Moes, we are always here for your complete satisfaction, just feel free to share your great shopping experience with us.



If you have any other need, please do not hesitate to contact us first, we will try to meet your demand.

FOLLOW US

UK REP: EVASTOS CONSULTING LTD
Address: Suite 11, First Floor, Taffs Well, Cardiff, Wales, CF15 7QR
Tel: +44-292-1680945
Email: contact@evatmaster.comEC REP: AMZLAB GmbH
Address: Laubenhof 23, ESENEN 45326
Email: info@anz-lab.de
Tel: +491745298066
Made in ChinaManufacturer:
WENZHOU NOVA NEW ENERGY CO.,LTD
Address: Power Science and Technology Innovation Center, NO.238, Wei 11 Road, Yueqing Economic Development Zone, Yueqing, Zhejiang, China
Tel: +86-577-57188615
After-sale Service: service@moeshouse.com

Simple Exception Handling

No.	Phenomenons	Handling
1	Power is on but without display.	*Check if the terminals between LCD panel and Power Unit Box is loosen.
2	Without output but display works.	*Use a new LC panel or new Power Unit Box to replace the old one.

CE Declaration of Conformity

Hereby, WENZHOU NOVA NEW ENERGY CO., LTD declares that the radio equipment type ZHT-SR is in compliance with Directive 2014/35/EU, 2014/30/EU, 2011/65/EU, 2014/53/EU, The full text of the EU declaration of conformity is available at the following internet address:

<https://www.moestech.com/blogs/news/zht-sr>

In The Box

Thermostat *1;
Screws *2;
QC Passed *1;
User Guide *1;
(Floor sensor is optional)

RECYCLING INFORMATION

All products marked with the symbol for separate collection of waste electrical and electronic equipment (WEEE Directive 2012/19 / EU) must be disposed of separately from unsorted municipal waste. To protect your health and the environment, this equipment must be disposed of at designated collection points for electrical and electronic equipment designated by the government or local authorities. Correct disposal and recycling will prevent potential negative consequences for the environment and human health. To find out where these collection points are and how they work, contact the installer or your local authority.



26

WARRANTY INSTRUCTIONS

Dear Sir or Madam, thank you for purchasing the product. We hope you'll enjoy using it.

The warranty for the products in the warranty card is hereby granted as follows:

As a condition of using the warranty, you must comply with the following terms and procedures:

- Products are covered by a 24-month warranty, effective from the date of purchase of the covered product by a retail customer.
- In order to exercise warranty rights, the purchaser must present: a) Warranty card, b) Proof of purchase (VAT invoice, financial receipt or other document confirming the actual date of purchase), unless the purchase date of the product comes from the warrant card.
- If quality problems occur within 24 months from the date of receipt, please prepare the product and packaging and go to the place or store where you purchased it to apply for after-sales maintenance. If the product is damaged due to personal reasons, a certain maintenance fee will be charged.
- We recommend that you properly protect the goods when delivering them to the guarantor – for this purpose, we recommend that you use the original packaging with padding to ensure safe transportation. If you choose to use replacement packaging, we recommend that you ensure that the product is adequately protected from damage during shipping. We recommend that you place an appropriate sticker on your

packaging indicating the product's susceptibility to impact, such as "Warning Glass".

5. Reported defects covered by the warranty will be considered immediately and no later than 14 days from the date of delivery of the goods to the Guarantor.

6. After checking and determining the legality of the warranty claim, the Guarantor's services will repair the product within a reasonable time, not exceeding 30 days from the date of delivery of the goods to the Guarantor. However, if hard-to-find spare parts are required, this deadline may extend the time it takes to deliver the part from the manufacturer's factory.

7. The warranty does not include the performance of maintenance and similar operations specified in the user manual, and users are obliged to do it themselves.

8. If defects occur due to natural wear and tear during use, the warranty does not cover it.

9. The warranty does not cover:

a) Mechanical damage caused by the user's fault and product defects caused by such damage.

b) Damage caused by improper use of the product.

10. The rights under the guarantee will expire in the following circumstances:

a) Remove the warranty seal from the product.

b) Remove the serial number from the product.

c) Take action to eliminate physical defects in the product outside of authorized service.

d) Use non-original parts and consumables.

WARRANTY CARD

Product Information

Product Name _____

Product Type _____

Purchase date _____

Warranty Period _____

Dealer Information _____

Customer's Name _____

Customer Phone _____

Customer Address _____



Failure date	Cause Of Issue	Fault Content	Principal

Maintenance Records


Failure date	Cause Of Issue	Fault Content	Principal

Wiring

Please check the information laser printed on the back of the thermostat for the actual voltage.

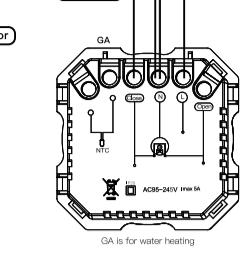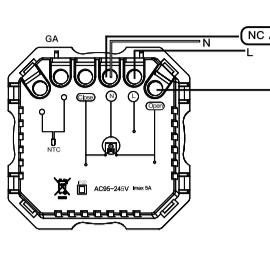

Main Interface Quick Reference

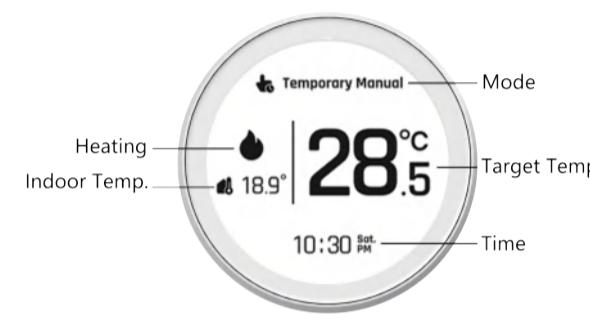


Note: The time will be synchronized in real time only after the device is successfully connected to the Internet.

How to Download MOES APP

1. Download MOES App on App store or scan the QR code



MOES APP is upgraded as much more compatibility than Tuya Smart/Smart Life APP, functional well for scene controlled by Siri, widget and scene recommendations as the fully new customized service. (Note:Tuya Smart/Smart Life APP still works, but MOES APP is highly recommended)

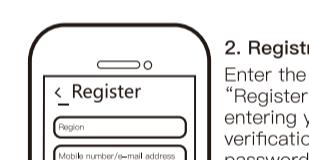

18

Method One:
1. Make sure your MOES APP has successfully connected to the Zigbee gateway.

2. Refer to the "Method One: Reset" tutorial to enter the device into network configuration mode.

3. Scan the QR code to configure the network wizard.



24

Thank you for your support and purchase at we Moes, we are always here for your complete satisfaction, just feel free to share your great shopping experience with us.

If you have any other need, please do not hesitate to contact us first, we will try to meet your demand.

Follow Us

UK REP: EVASTOS CONSULTING LTD
Address: Suite 11, First Floor, Taffs Well, Cardiff, Wales, CF15 7QR
Tel: +44-292-1680945
Email: contact@evatmaster.comEC REP: AMZLAB GmbH
Address: Laubenhof 23, ESENEN 45326
Email: info@anz-lab.de
Tel: +491745298066
Made in ChinaManufacturer:
WENZHOU NOVA NEW ENERGY CO.,LTD
Address: Power Science and Technology Innovation Center, NO.238, Wei 11 Road, Yueqing Economic Development Zone, Yueqing, Zhejiang, China
Tel: +86-577-57188615
After-sale Service: service@moeshouse.com

30

Gebrauchsanweisung (Deutsch)

Technische Parameter

Modell:	ZHT-SR
Spannung/Frequenz:	95~245V AC, 50/60Hz
Aktuelle Belastung:	5A (Wassererwärmung, Gasboiler)
Kommunikationsmethode:	ZigBee
Modulmodell:	ZT3L
Maximale RF-Leistung:	+20dBm
Arbeitsfrequenz:	2.405~2.480GHz
Sensor:	NTC3950, 10K
Genauigkeit:	±1°C

Warnungen


1.Risiko eines Stromschlags: Elektrizität kann Personen- und Sachschaden verursachen, wenn sie unsachgemäß gehandhabt wird. Wenn Sie sich bei irgendeinem Teil dieser Anweisungen nicht sicher sind,uchen Sie bitte professionelle Hilfe von einem qualifizierten Elektriker, montieren, modifizieren oder versuchen Sie nicht, das Produkt selbst zu reparieren. Solche Produkte können einen elektrischen Schlag verursachen, der schwere Verletzungen verursachen kann oder tödlich sein.

3.Schalten Sie die Stromversorgung am Leistungsschalter aus und testen Sie, ob die Stromversorgung ausgeschaltet ist, bevor Sie verdrillen.

31

Verkabelung

Die tatsächliche Spannung entnehmen Sie bitte dem Informationslaser auf der Rückseite des Thermostats.

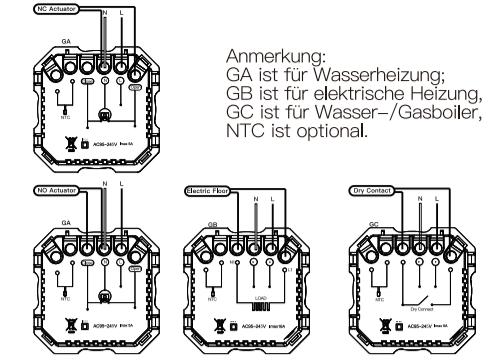

Anmerkung:
GA ist für Wasserheizung;
GB ist für elektrische Heizung,
GC ist für Wasser-/Gasboiler;
NTC ist optional.

Detaillierte "Schaltpläne" finden Sie auf den Seiten 6, 7 und 8.

32

Manual de instrucciones (Español)

Parámetros técnicos

Modelo:	ZHT-SR
Voltaje/Frecuencia:	95~245V AC, 50/60Hz
Carga actual:	5A (calefacción de agua, caldera de gas)
Método de comunicación:	ZigBee
Modelo de módulo:	ZT3L
Potencia máxima de RF:	+20dBm
Frecuencia de operación:	2.405~2.480GHz
Sensor:	NTC3950, 10K
Exactitud:	±1°C

Aviso

1.Riesgo de descarga eléctrica: si no se maneja adecuadamente, la electricidad puede causar lesiones personales y daños materiales. Si no está segura de ninguna parte de estas instrucciones, solicite ayuda profesional a un electricista calificado.


2.No desmontar, volver a ensamblar, modificar o intentar reparar el producto por sí mismo. Este tipo de productos pueden causar descargas eléctricas, lo que puede causar graves daños. O morir.

3.Antes de conectar el cable, apague la fuente de alimentación del disyuntor y pruebe si la fuente de alimentación está apagada.

37

Cableado

Compruebe el voltaje real en el láser de información impreso en la parte posterior del termostato.

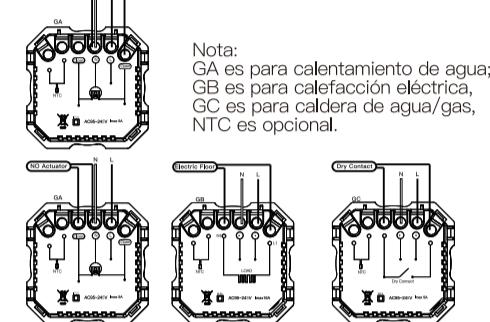

Nota:
GA es para calefacción de agua;
GB es para calefacción eléctrica;
GC es para calderas de agua/gas;
NTC es opcional.

Consulte las páginas 6, 7 y 8 para ver los "esquemas eléctricos" detallados.

38

Instalación

Si termostato es apto para su instalación en una caja de empotrar estándar de 86 mm o en una caja de empotrar europea de 60 mm.

39

Manuel d'instruction (Français)

Paramètres techniques

Modèle:	ZHT-SR
Tension/Fréquence :	95~245V AC, 50/60Hz
Charge actuelle :	5A (chauffage d'eau, chaudière à gaz)
Méthode de communication :	ZigBee
Modèle du module :	ZT3L
Puissance RF maximale :	+20dBm
Fréquence de fonctionnement:	2.405~2.480GHz
Capteur:	NTC3950, 10K
Précision:	±1°C

Avertissement

1.Risque d'électrocution: l'électricité peut causer des blessures corporelles et des dommages matériels si elle n'est pas manipulée correctement. Si vous êtes pas sûr d'une partie de ces instructions, demandez de l'aide professionnelle à un électricien qualifié.


2.Ne démontez, ne remontez pas, ne modifiez pas ou ne tentez pas de réparer le produit vous-même. Des produits peuvent provoquer des électrocutions qui peuvent causer des blessures graves. Ou la mort.

3.Avant de connecter le câble, aparez la source d'alimentation et vérifiez que l'alimentation est éteinte.

43

Câblage

Veuillez vérifier la tension réelle sur le laser d'information imprimé au dos du thermostat.

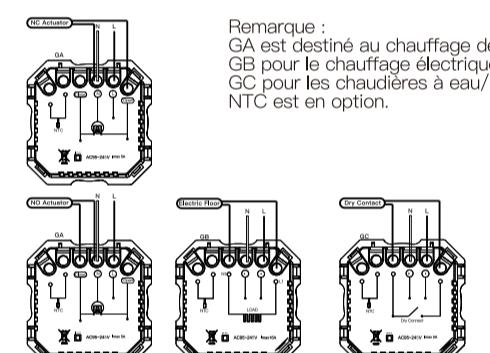

Remarque :
GA est destiné au chauffage de l'eau ;
GB pour le chauffage électrique,
GC pour les chaudières à eau/gaz,
NTC est en option.

Veuillez consulter les pages 6, 7 et 8 pour les "schémas de câblage" détaillés.

44

Installation

Votre thermostat peut être installé dans une boîte à pattes standard de 86 mm ou une boîte à pattes européenne de 60 mm.

45

Manuale di istruzioni (Italiano)

Parametri tecnici

Modello:	ZHT-SR
Voltaggio/Frequenza:	95~245V AC, 50/60Hz
Carico corrente:	5A (riscaldamento dell'acqua, caldaia a gas)
Metodo di comunicazione:	ZigBee
Modello del modulo:	ZT3L
Potenza RF massima:	+20dBm
Frequenza operativa:	2.405~2.480GHz
Sensore:	NTC3950, 10K
Precisione:	±1°C

Avvertenze

1.Rischio di scossa elettrica: L'elettricità può causare lesioni personali e danni alla proprietà se maneggiata impropriamente. Se non siete sicuri di qualsiasi parte di queste istruzioni, si prega di chiedere assistenza professionale da un elettricista qualificato.


2.Non smontate, rimontate, modificate o tentate di riparare il prodotto da soli. Tali prodotti possono causare scosse elettriche, che possono causare gravi lesioni o morte.

3.Specificate l'alimentazione all'interruttore e verificate che l'alimentazione sia spenta prima del cablaggio.

49

Cabaggio

Verificare il voltaggio effettivo sul laser informativo stampato sul retro del termostato.

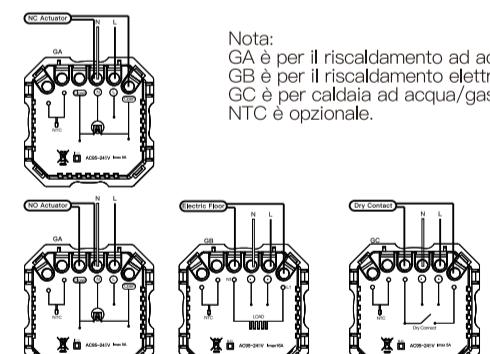

Nota:
GA è per il riscaldamento ad acqua;
GB è per il riscaldamento elettrico;
GC è per caldaia ad acqua/gas, NTC è opzionale.

Per gli "schemi di cabaggio" dettagliati, consultare le pagine 6, 7 e 8.

50

Installazione

Il termostato è dotato all'installazione in una cassetta standard da 86 mm o in una cassetta europea da 60 mm.

51

Руководство по эксплуатации (Русский язык)

Технические параметры

Модель:	ZHT-SR
Напряжение/частота:	95~245V AC, 50/60Hz
Текущая нагрузка:	5A (водяное отопление, газовый котел)
Метод связи:	ZigBee
Модель модуля:	ZT3L
Максимальная мощность RF:	+20dBm
Рабочая частота:	2.405~2.480GHz
Датчик:	NTC3950, 10K
Погрешность:	±1°C

предупреждение

1.Риск поражения электрическим током; при неправильном обращении электричество может привести к телесным повреждениям и материальному ущербу. Если вы не уверены в какой-либо части этих инструкций, обратитесь за помощью к професиональной электрической службе.


2.Не демонтируйте, не переделывайте, не комбинируйте и не заменяйте отремонтируйте продукт самостоятельно. Такие продукты могут привести к ущербу электрическим током, что может налечи серьезных ущерб или смерть.

3.Перед подключением выключите питание выключателя и проверьте, выключено ли питание.

55

Проводка

Пожалуйста, проверьте фактическое напряжение на информационном лазере, напечатанном на задней панели термостата.

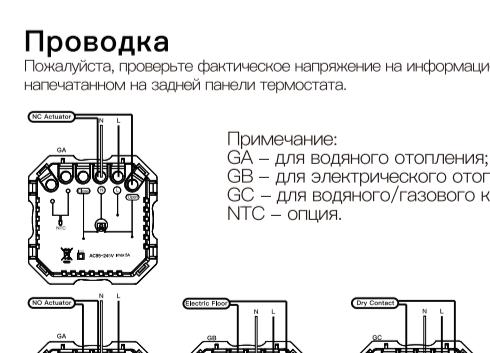

Примечание:
GA – для водяного отопления;
GB – для электрического отопления;
GC – для водяного/газового котла, NTC – опция.

Подробные электрические схемы приведены на страницах 6, 7 и 8.

56

Установка

Ваш термостат подходит для установки в стандартную 86-миллиметровую коробку или европейскую 60-миллиметровую коробку.

57

! Elektrischer Schlag oder Beschädigung der Ausrüstung Gefahr. Kann Personen einen Stromschlag verursachen oder Strömkreise von Geräten kurzschließen. Vor der Installation die Stromzuführung unterbrechen.

Schritt 1: Schalten Sie das Gerät aus, siehe Abbildung 1.

Schritt 2: Nehmen Sie den zu installierenden intelligenten Thermostat heraus und schließen Sie die Stromversorgung an die entsprechenden Klemmen an, alle auf der Rückseite des Produkts markiert sind. (Siehe "Verdrahtung" und Abbildung 2 für Details).

Schritt 3: Verwenden Sie einen kleinen Schraubendreher, um den Außenrahmen aus dem Spalt unter dem Frontrahmen zu öffnen. Siehe Abbildung 3.

Schritt 4: Befestigen Sie den Montierrahmen mit Schrauben an der Wand.

Schritt 5: Bringen Sie den soeben entfernten Außenrahmen wieder an seiner ursprünglichen Position an, und die Installation ist abgeschlossen. Siehe Abbildung 5.

Wie man die MOES APP herunterlädt

1. Laden Sie die MOES APP im App Store herunter oder scannen Sie den QR-Code



38

Detaillierte "Schaltpläne" finden Sie auf den Seiten 6, 7 und 8.

39


Einrichtung

Ihr Thermostat eignet sich für den Einbau in eine standardmäßige 86-mm-Unterputzdose oder eine europäische 60-mm-Unterputzdose.

40

Wie man die MOES APP herunterlädt

1. Laden Sie die MOES APP im App Store herunter oder scannen Sie den QR-Code

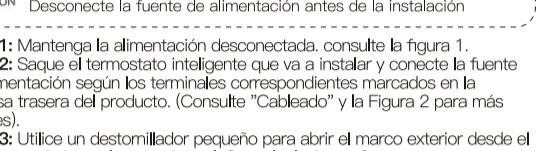

41

Detaillierte "Schaltpläne" finden Sie auf den Seiten 6, 7 und 8.

42

Wie man die MOES APP herunterlädt