
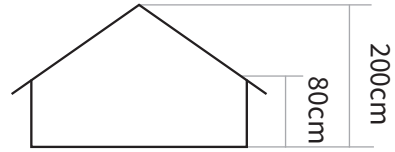



# INSTRUCTIONS

12M<sup>2</sup> PVC INFLATABLE TENT

## SIZE

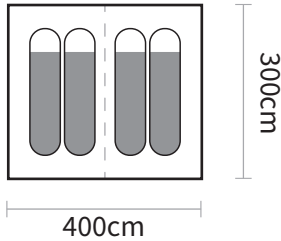

 
## ACCESSORY



Tent\*1



 Storage bag \* 1



Steel Nail\*18



Wind rope\*8



Pressure limiting pump\*1

## INSTALLATION STEPS

01




Take out the tent and spread it flat on the ground. Secure the four corners and two middle points with six ground nails

02




Adjust the inflatable valve to the closed state, connect the pump to the air valve, and inflate the first and the second air column to 80%.

03

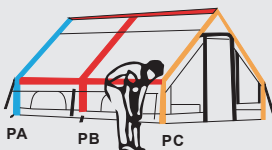

Inflate the third column to saturation, then fill the first two column to 100%.

04

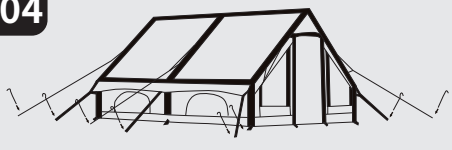

Secure the tent with ground nails and windbreak ropes.

\*The inflatable column can be identified through the air valve.