单页60*80mm

60mm

80mm

1.技术参数 额定功率: 5W 由源方式・充由式 在版分式: 光电式 充电器: 輸入: AC100-240V 50/60Hz 輸出: 5.0V--1000mA 执行标准: GB 4706.1 GB4706.9 2 技术特性 专用刀头,肌触面特殊R圆角处理,不划伤皮肤。 ● 低噪音、低震动 ● 防水设计

■产品介绍

防水设计,机身可水洗。 ● 充电器 全球通用电压,输入端短路保护5V输出,带USB充电接头。

● 拆分式刀头 可拆卸刀头设计方便清理碎发。 ● 定长梳套辅助


配合多个定长梳套,轻松修剪各种长度头发。 ■ 开/关机器

长按1.5秒,开关机 短按,关闭/开启 吸发功能 ■ 定位梳

1.定位梳说明 使用定位梳,可固定修剪相对应长度的毛发;



 把定位梳(所需长度朝上)对准到头边的卡槽,先套紧一边,再套紧另一边,听到"咔哒"即可。



用手指将定位梳其中一侧的扳扣轻轻向外拉开,即可取下,

使用定位梳可以避免操作失误,导致头发过薄,并能有效控制。 发型整体厚薄。使用前,最好先洗干净头发并吹干,然后用梳 子充分梳理头发, 如有凝结部位, 请先把凝结部位剪切掉。 *如头发有脏污或有异物会缩减刀头寿命。

1 刀头分类与特占 2.刀头拆卸

■ 刀头装卸



齿部位,沿箭头所示方向用力推 出,即可卸下刀头。 避免刀头跌落摔坏,拆卸时请托住刀头。



将刀头连接A外放入机身卡槽B外

对准后,用力按下刀背,直到听到"咔哒"一声。

 
注息事项 陶瓷刀片易摔碎,装取时请小心轻拿轻放;若陶瓷刀片破损,可能 导数以供及或者刀片无法转动,请及时更换刀头。请定期为刀片消 及工忌水。 请勿让孩子独白使用本产品。

■ 刀头清洁与保养



用清洁刷扫去粘在刀头上的发屑。清理卡在上下刀片缝隙间的发屑, 如箭头方向按下刀架压柄,用毛刷清理刀片缝隙间的发屑。

注意事项 切勿拆下刀头上的弹簧,否则可能导致刀头无法复原而损废。 每次使用完,务必取下刀头,清洁刀头表面以及刀片缝隙间的碎发以免影响刀头的锋利度。若用水清洗,请擦干刀头,以兔刀头弹簧 生锈。每次清洁完,请滴加润滑油进行保养。 2.刀头润滑





滴完后,按住动刀架来回拨动,使润滑油均匀润滑刀头。

磨损的刀头,可有效避免夹头发的现象发生;更换时,请咨询我厂代理商和维修服务点,请勿使用其他厂商不匹配的刀头;使用过程中,刀头可能略微发热,属于正常现象,不影响正常使用。

 
■ 机身清洁与保养



用清洁刷扫去机身刀头安装槽内的发屑;可用水清洗机身; 清洁机身后,请用干抹布擦干机身,装上刀头存放。



请勿用汽油、酒精、天那水或其他有腐蚀性的化学试剂擦拭机身 请勿擅自拆装或维修本品,如需维修请与维修点联系。



将USB充电线电源接口插入机身 温馨提示:初次购买新产品,使用前请充电! 用标配外的5V充电器务必确认电流为1A,方可充电。

三个指示灯从上到下分别为理发指示灯、吸发指示灯和充电指示灯。 充满-绿灯;充电中-红灯常亮;电量低-红灯闪烁。

一句题1:产品修剪效果不均匀可能的原因:1产品在头发上推动时没有触碰头皮。 2.您在湿发上使用本产品。 3. 4.您只向一个方向移动产品。 5.梳齿未正确安装到修剪部件上。 问题2:按下开/关按钮,产品不工作 可能的原因:充电电池电量耗尽。

本产品只适用于修剪头发,请勿用于其他用途;禁止修剪正在烫染或潮湿未干的头发,以免夹伤。

■ 故障排除

*手湿肘、请勿插拔电源、否则会有漏电的可能。 *注意不要用力拉扯电源适配线,否则可能引起海电,短路或火灾; 如电源适配器损坏、请立即停止使用并及时更换。 *本产品及树属品不是玩具,请将配件放置在儿童触及不到的地方,

为满足《电器电子产品有害物质限制使用管理办法》要求,以下提供 的是电器产品部件名称及可能含有的有害物质信息。

部件名称	有害物质						
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(CrVI)	多溴联苯(PBB)		
外壳及组件	0	0	0	0	0		
充电器	0	0	0	0	0		
电池组件	0	0	0	0	0		
内部电子组件	×	0	0	0	0		
部件名称	有害物质						
	タ油形学験/DDDE/						

本表格依据SJ/T 11364的规定编制

外壳及组件 〇

)表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572 规定的限量要求下。 表示该有害物质至少在该部件的某一均质材料中的含量均在GB/T 26572规定的限量要求。

备注:所有在中国区销售的电器电子产品必须标有环保使用期限标识。该标识期限(10年),为产品在正常使用情况下其有害物质或危险物质不会泄露,而不是保证产品的使用性能期限。

购买者:

联系地址: __

销售商地址:

销售商: ___

维修记录

日期

非保修范围

使用不值或错误和人为导致的损坏 购买后因意外从高处掉落引起的损坏与故障: 雷击或其他因供由由压显常所引起的故障。 当出现实行区域。 为遵循本说明书所列注意事项所造成的故障; 不可抗力自然灾害引起的损害与故障;

感谢您的使用,期盼我们的服务能继续给您和您家人的生活带来 方便和快乐!

维修内容

联系电话:

联系电话:

维修人员

合格

委托商: 宁波雨茉母婴用品有限公司 地 址:浙江省宁波市鄞州区金源路528号 生产商: 亿森(宁波)电器有限公司 地 址:浙江省宁波市鄞州区金源路528号

Product Description 1. Technical parameters Rated power: 5W
Power supply method: rechargeable
Charger: Input: AC100~240V 50/60Hz Output: 5.0V=1000m/ Executive standard: GB 4706.1 GB4706.9

2. Technical characteristics Special cutter head, special R rounded corner treatment on the

muscle contact surface, does not scratch the skin. Low noise, low vibration ow noise motor, soft sound and comfortable. Waterproof design Waterproof design, the body can be washed.

niversal voltage, input short circuit protection 5V output, with

The detachable head is designed for easy cleaning of broken hair.

■ Fixed length comb cover
Combine with multiple cut-to-length comb covers to easily trim all lengths of hair.

Turn the machine on/off

Press and hold for 1.5 seconds to switch the machine on and off Short press to turn off/on the suction function Positioning comb

1. Description of positioning con

Using the positioning comb, the hair of the corresponding length can be fixed and trimmed;

Align the positioning comb (with the required length upwards) to the card slot on the head, and tighten one side first.
Tighten the other side again and hear a "click".



Use your fingers to gently pull the pull button on one side of the Do not pull the comb teeth hard to avoid damage

*Using the positioning comb can avoid operation mistakes, resulting in thin hair, and can effectively control ,The overall thickness of the hairstyle. Before use, it is best to wash and blow dry your hair, then use a comb Thoroughly comb the hair, if there is a condensation part please cut off the condensation part first.

*Dirty hair or foreign objects will shorten the life of the cutter head.

02

 Classification and characteristics of cutter heads Ceramic cutter head: wear-resistant, high sharpness Stainless steel cutter head: good toughness, anti-collision 2. Disassembly of the cutter head

Turn off the switch and hold the knife 3. Tool head installation

Put the connection A of the cutter head into the slot B of the fuselage Once aligned, press firmly on the back of the blade until you hear a "click".

The ceramic blade is easy to break, so please handle it with care if the ceramic blade is days or breat, so present many in white day, if the ceramic blade is damaged, it may. If the hair is caught or the blade cannot be rotated, please replace the blade in time. Please clean the blade regularly. Toxic to ensure shaving hygiene. Please check whether the product is complete before use, if it is damaged, please stop using it.After using and cleaning the blade keep the blade out of the reach of children to avoid accident. Do not let children use this product alone.

 
03



Use a cleaning brush to remove hair flakes, Press the handle of the knife holder in the direction of the arrow, and use a brush to clean

the hair chips between the gaps of the blades. Do not remove the spring on the cutter head, otherwise it may caus the cutter head to be irreversible and scrapped.

After each use, clean the surface of the cutter head and the hair between the blades. If cleaning with water, please dry the cutter head to prevent the cutter head spring from rusting. Please add lubricating



The service life of the cutter head is related to the frequency of use hair trimming and maintenance; timely replacement has been. Worn cutter head; when replacing, please consult us, do not use the cutter head that does not match other manufacturers; the cutter head may be slightly hot, which is normal.

Do not wipe the body with gasoline, alcohol, tena or other corrosh chemicals.

Do not disassemble or repair this product without authorization, if need repair, please contact us. ■ Plug/Charge Use AC220

05

- Suction indicator ligh

Insert the power port of the USB charging cable into the body Reminder: When purchasing a new product for the first time, please charge it before use!
When using a 5V charger other than the standard one, make sure t hat the current is 1A before charging.

Make sure the machine is turned off and plug the USB charger into a power outlet. (USB charging cable Can be plugged into sockets with USB ports, mobile phone chargers, desktop computers, laptops,

with USB ports, mobile priorie chalgers, deskup computers, lapuops, mobilepower supply, etc.) The three indicators from top to bottom are the haircut indicator, the hair suction indicator and the charging indicator. Fully charged - gre -en light; charging - red light is always on; low battery - red light flashing. Troubleshooting

■ Troubleshooting
Problem 1: Product trimming is uneven
Possible reasons: 1. The product does not touch the scalp when pus
-hed on the hair.2. You use this product on wet hair. 3. When the bat
-tery is low, trimming performance will decrease.4. You only move the
product in one direction. 5. The comb teeth are not properly attached
to the trimming unit.
Problem 2: Press the on/off button, the product does not work
Possible cause: The rechargeable battery is exhausted.
Do not use this product for other purposes; no trimming damp wet hair.
■ Precardings

■ Precautions The cause of the power supply when your hands are wet. "Be careful not to pull the power adapter cable hard, if the part is damaged, please stop using it immediately and replace it. "Please keep the accessories out of the reach of children. Please use the original power adapter cable to charge This product can be washed under an open faucet.

Part Name	narmiul waterials						
	Pb	Hg	Cd	CrVI	PBB		
Shell	0	0	0	0	0		
Charger	0	0	0	0	0		
Battery pack	0	0	0	0	0		
Electronic	×	0	0	0	0		
Part Name	Harmful Materials						
	PBDE						

This form is prepared according to the provisions of SJ/T 11364 Indicates that the content of this hazardous substance in all ho

eneous materials of this part is in GB/T 26572 within the pre Imits.

X Indicates that the content of the hazardous substance in at least one homogeneous material of the part is within GB/T 26572 limit

Address: Sellers: __ Seller's address: Maintenance records Date Maintenance content Maintenance staff

Non-warranty coverage advertent use or error and man-made damage; allures caused by improper handling and unauthorized modification nauthorized maintenance personnel;

nase; ightning strike or other faults caused by abnormal supply voltage; lalfunctions caused by following the precautions listed in this manual amages and malfunctions caused by force majeure natural disasters

Thank you for your use, and we look forward to our services to continue to bring you and your family's life.Convenient and happy!

mage and failure caused by accidental falling from a height after pu

Purchase Date:

MISUTA

婴儿吸发理发器使用说明书 Baby Hair Clipper User's Guide



感谢您购买我们的产品。请在使用前详细阅读此说明书,阅读后请小心收藏,以便日后查阅。图片仅供参考,产品以实物为准。 Thank you for purchasing our products. Please read this manual

540mm