

Cover

100mm

说明书,100x140mm,80g书写纸,折页

140mm

color

Google TV

Model: GD2

Quick Reference Guide

Please read the user manual before operating the TV box

Accessory List

Please open the package and check the following accessories:

TV Box x1

Remote Control x1

User Manual x1

Power Adapter x1

HDMI Cable x1

Hardware Structure

• Front Panel

Led Indicators

• Left Side Panel

USB1

USB2

RESET

Reset

• Back Panel

DC IN

AV

HDMI output

Ethernet

Optical

12V 1A

AV

HDMI

8/P DIF

Remote Control

Standby On/Off

Profile

Enter

Back

Volume Up

Volume Down

YouTube

Prime Video

Input

Google Assistant

Dashboard

Direction Keys

Live Guide\*

Home

Channel Up

Channel Down

Mute

Netflix

Disney+

Instructions

• Indicator Light: Pressed any keys and indicator light flashes and the indicator will flashes quickly when the voltage is low.

• Bluetooth Pairing: Pressed the "HOME+BACK" keys together on your Remote Control for 10 seconds.

• Google Assistant: Press the Google Assistant button and use your voice to search what's on now, change channels, control your TV, open apps, and more.

• Live Guide\*: US Only. Live TV is just a click away, with its own dedicated tab. Live entertainment is also mixed into your recommendations, based on your favorite teams, shows, and channels.

正

System Connection

Please refer to below instructions to connect TV, Power, Network and other devices.

Note: Please turn off all equipment before connecting.

Power Input

TV

Internet Connection

Amplifier

12V 1A

AV

HDMI

8/P DIF

Step1: Connection with TV

Connect HDMI cable to HDMI port of the TV box and TV set.

Step2: Connection with network

The TV box supports both Ethernet and Wi-Fi connections.

• Ethernet: Use the Ethernet cable to connect the LAN port of the TV box and the port of the home broadband network.

• Wi-Fi: Select your Wi-Fi network & key in the password.(After the machine is powered on, press "Dashboard" button -->go to "All settings" -->"Network & Internet".)

Step3: Connection with Power

Connect the power adapter to the TV box. After power is on, it can start automatically.

Step4: Set up your device

Follow the on-screen to set up your device.

Troubleshooting

•No display after power on?

Confirm your device connected to the TV well and set the correct HDMI Input from your TV configuration.

•TV has images but no sound?

Make sure your TV is not in mute and low volume.

•Fail to connect to network?

Make sure the Ethernet cable is properly connected. Make sure Wi-Fi is functional and your box has a strong enough signal from your router.

•Remote Control Failure?

-Replace the battery of the remote control with a new one, and make sure it is placed in the correct polarity.

-Make sure the remote control is within the range of the TV box.

-Go to the Setting menu to unpair and re-pair the remote control.

-While the device is powered on, using a pin to push-down "RESET" for 3 seconds, follow the instructions on the screen to re-pair the remote control.

•Restore factory settings?

-To restore factory settings, disconnect the power. While holding down the RESET button with a pin, plug in the power cord. Keep holding the button for 6 seconds after power up to complete the factory reset.

•Please use our accessories to avoid any risk.

Safety Instructions

WARNING!

• Presence of live parts inside the device! Do not open. Risk of electric shock!

• No parts should be repaired by users.

• Place the device on a flat, firm and stable surface. Do not put it on a carpet or rug.

• Place the device in a well-ventilated location to prevent the accumulation of internal heat.

• Protect the device from high temperatures, humidity, water and dust.

• Do not place any objects near your device that may damage it (e.g. liquid-filled objects or candles).

• Do not mix old and new batteries and Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cd, ni-mh, etc.) batteries.

• Operating Temperature: 0°C~40°C.

Compliance

Dolby

AUDIO

Google TV is the name of this device's software experience and a trademark of Google LLC. Google and YouTube are trademarks of Google LLC.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

Netflix is a trademark of Netflix, Inc.

All brands contained herein are trademarks of their respective owners.

反