

How to install the APP to the phone with android system?

The first step:

Open the URL with your phone

<http://www.radioway.cn/AppDownLoad/qv.btcontrol.html>

The second step: install successfully interface.

or use the phone to scan the QR code.

Android Download



QR CODE



How to install the APP to the phone with IOS system?

The first step:

Open the URL with your phone.

<https://itunes.apple.com/us/app/bt-control/id1441728854?l=zh&ls=1&mt=8>

The second step; install successfully interface.

or scan the QR code with phone.

IOS Download



QR CODE



REMOTE CONTROL

Voltage: 12V


Battery: 6V

Coding: Learning Code


Current: 15mA

Frequency: 433.92MHz

Code Times: >1 million

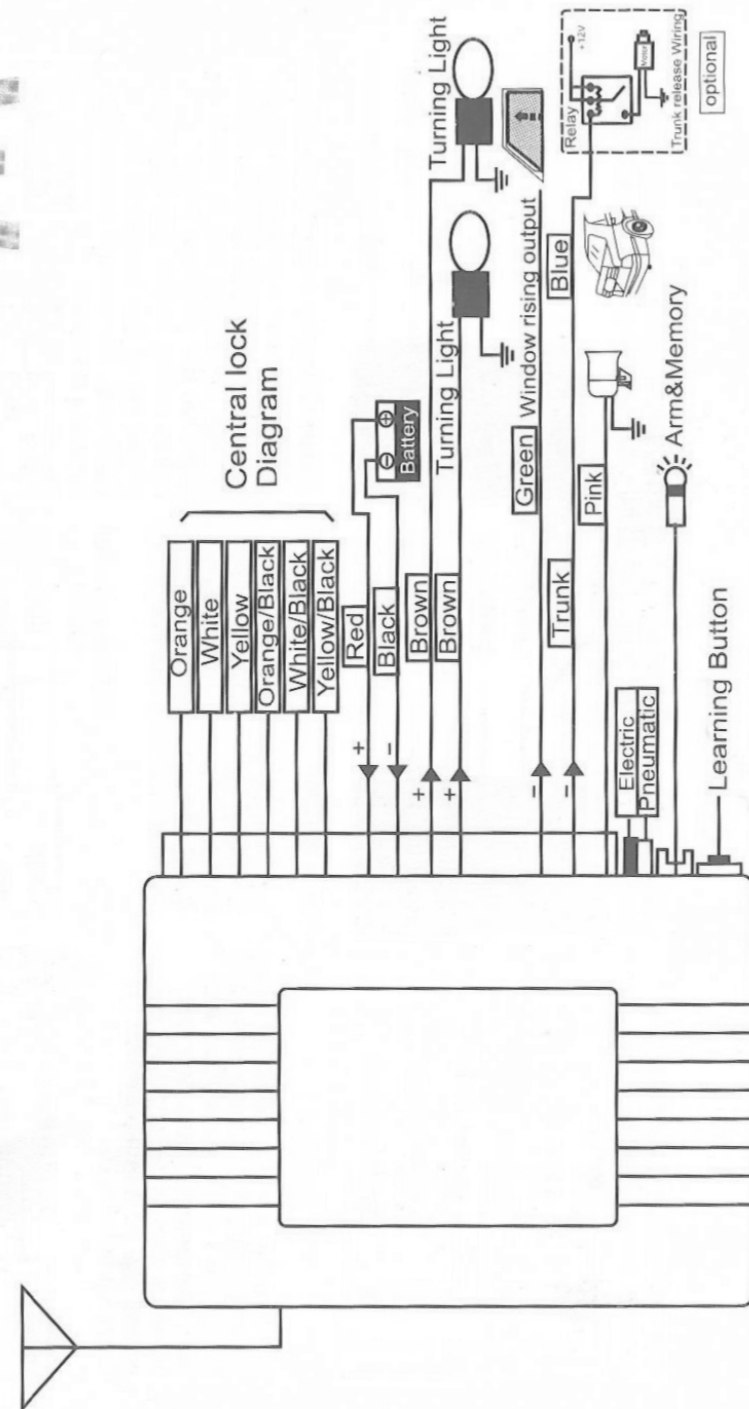


* INSTALLATION DIA GRAM FOR CENTRAL-LOCKING

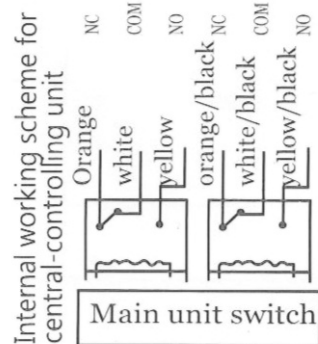


(Figure A)

2. When the car is originally equipped with central-locking system and the driver's door is installed with only one switch, then a two wire actuator should be installed, the wiring can be made based on the diagram below: (D)

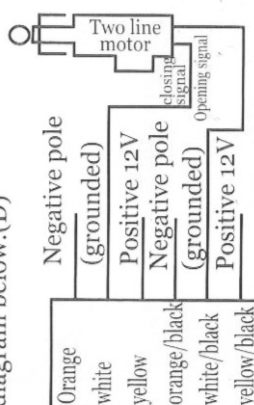


(Figure D wiring diagram for positive trigger installation)

1. If the car is originally equipped with central-locking system and the driver's door has been installed with electric motor, the wiring can be made on the diagram below: (B,C)

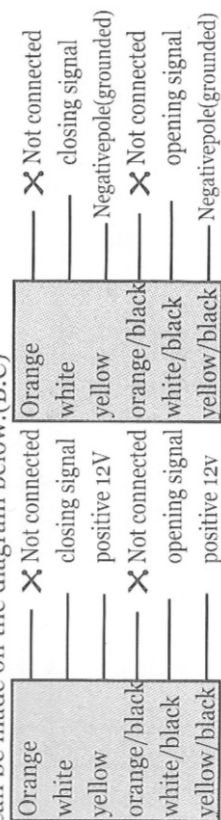

(Figure B positive trigger wiring diagram)


3. When the car is originally equipped with central-locking system (including in the driver's door), the wiring can be made based on the diagram below: (E)

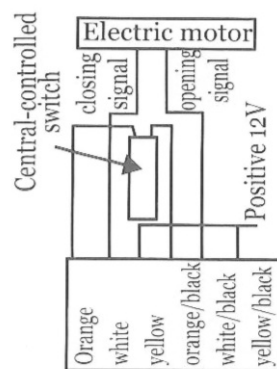

(Figure E wiring diagram for positive electric circuit installation)

(Figure C Negative trigger wiring diagram)

4. When the car is originally equipped with pneumatic central-locking system, the wiring can be made based on the diagram below: (when wiring as per this diagram, please cut of the jumper at the main unit, the central-controlling time is 4 seconds):

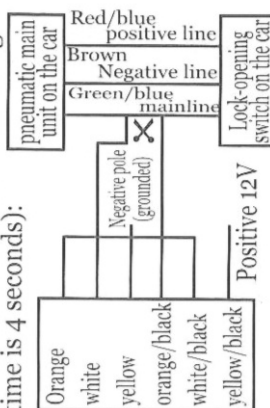

(Figure F wiring diagram for pneumatic circuit installation)

Operation Manual

Function Operational Specification

1. Set (Every time effectively)

Press remote control or BT control , lock door, Turning light flash once, siren sound one time, door lock, window output, LED flashes.

2. Unset (Every time effectively)

Press remote control or BT control once , turning light flash twice, siren sound twice, door unlock.

3. Trunk release (The car must have trunk motor)

- In any state, Press remote control or BT control for 1.5 seconds , trunk release automatically, turning light flash and siren three times.
- In any state, Press remote control or BT control for 1.5 seconds , trunk release automatically, turning light flash and siren three times.
- In any state, long press remote control or BT control for 1.5 seconds , trunk release automatically, turning light flash and siren three times.
- In any state, long press remote control or BT control for 1.5 seconds , trunk release automatically, turning light flash and siren three times.

4. Vehicle locator

Press remote control or BT control for 3 seconds, turning light flash and siren three times.

5. Learning code

Long press learning button 1 time, turning light flash and siren for a long time, enter learning code state, in 5 seconds, press remote control and BT control any button, turning light flash and siren once, if learn one more, press remote control and BT control any button, turning light flash and siren twice, and by this analogy, for remote control can learning at the same time.

NOTE: Turning light output time is 0.1second, unlock/lock pneumatic is 3 seconds, electric 0.5 sec, trunk 0.5 sec, window output 30 sec, LED 0.5 sec, siren 0.1 sec.

Specification of Electronic

Main Unit

Output current: signal light: 5A*2, siren 10A, central lock 10A

Coding: Learning code

Voltage: 12±2V

Static Current: <12mA (except indicator, sensor)

Frequency: □ 315MHz □ 433.92MHz