 
 


4. User Codes (Monitor bit codes) Setup

- Every room station must have an ID, set through the bit codes(list below)
- Bit-1 to Bit-5 are used to configure the room ID.
- Bit-6 is the line-terminal switch, set the LAST monitor to ON,otherwise set OFF.
- Bit-7 is to turn the ringtone at the door station ON/OFF.
- You can have a Max of 4 monitor per button/code.



Monitor NOT at the end of the line

Monitor at the end of the line

Bit state	User Code	Bit state	User Code	Bit state	User Code
	Code=1		Code=12		Code=23
	Code=2		Code=13		Code=24
	Code=3		Code=14		Code=25
	Code=4		Code=15		Code=26
	Code=5		Code=16		Code=27
	Code=6		Code=17		Code=28
	Code=7		Code=18		Code=29
	Code=8		Code=19		Code=30
	Code=9		Code=20		Code=31
	Code=10		Code=21		Code=32
	Code=11		Code=22		


5. Specification

- Power supply: DC 24V (supplied by adaptor)
- Consumption: Standby 2.1mA,working75.9mA
- Wiring: : 2 wires, non-polarity
- Dimension: 150(H)X80(W)X15(D)mm

AUDIO DOOR PHONE



Hand-free

USER MANUAL

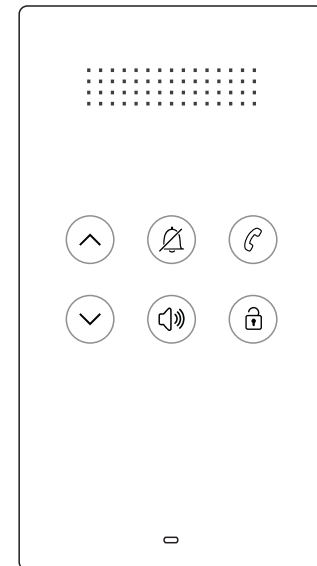


Please read this manual carefully before using the product

1. Parts and Functions

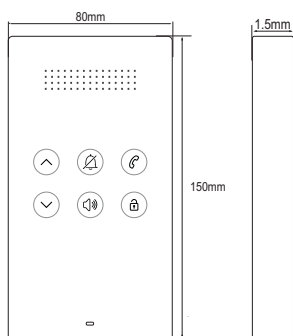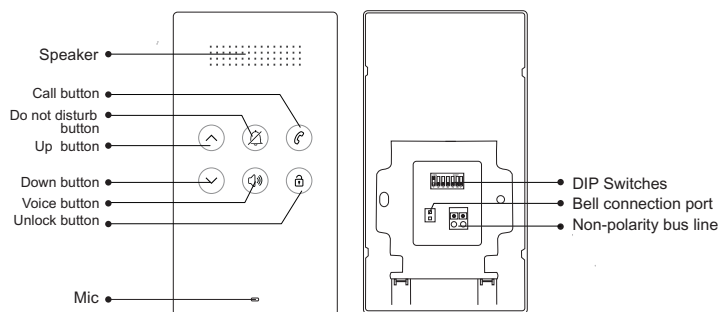

- (1) **Call button:** Answering, Inner call, Entering button of inner call room ID setting.
- (2) **Unlock button:** Release the door.
- (3) **Do not disturb button:** Press will enter the Do Not Disturb mode.
- (4) **Voice button:** Setting the voice level and select the ring tone.
- (5) **Up and Down button:** Selecting buttons for hand-free audio phone to setting choice and add / subtract choice.

2. Monitor Mounting

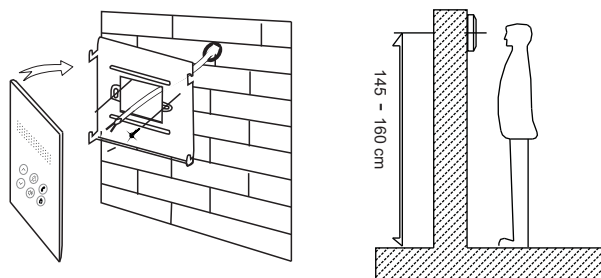

Using the screws to fix the Mounting Bracket on the wall. Connecting the system correctly, then hang the Monitor on the mounting bracket firmly.

3. Operation Instructions

Door release function:

When visitor calls from outdoor station, the phone rings, Press to talk with the visitor, then press to open the door.

Door Bell Call Button:

Additional door bell call button can be connected to the phone, so that the visitors can ring the door bell again in front of the user's apartment.

When the call button is pressed, the phone will output ring tones.

Inner call:

Pick up handset, then press CALL button to activate the inner call. To start the inner call, first you need to setup a dial number on the hand-free audio phone.

How to setup the inner call dial number on the hand-free audio phone?

Keep press until you hear a long beep, and indicator light colors will display on the upper left of phone. Start setting 2 digit dial number (1-32). You need to set the first one before setting the second one. The number corresponding to the light colors: Red refers to 0; Green-1; Blue-2; Indigo-3; Yellow-4; Purple-5; White-6; Flashing red-7; Flashing green-8; Flashing blue-9.

refers to confirm.

refers to different choices for indicator light colors (0-9 dial numbers).

Eg. Set the dial number to 09.

Press (long beep) - indicator lights up - light colors displayed, Press to choose the Red (refers to 0) - Press (to save first dial, will beep once saved successfully) - Press

to choose the Flashing blue light color (refers to 9) - Press (to save second dial) - Final press to inner call 09.

Set the dial number to 12.

Press (long beep) - indicator lights up - light colors displayed, Press to choose the Green (refers to 1) - Press (to save first dial, will beep once saved successfully) - Press to choose the blue light color (refers to 2) - Press (to save second dial) - Final press to inner call 12.

How to change the ring tone?

Press until you hear the music, then you can press to select the ring tone you preferred. Press again to save and exit. There are 16 ring tones for optional.

How to set up the volume?

Keep press until you hear the ring tone, then you can press to set up the volume bigger or smaller.