



## Assembly instructions for **KIDS PLAY SET 4in1:**

TRIANGLE LADDER —

SLIDE BOARD —

ARCH —

 
NET —




**& SCAN QR**  
to find video





Step 1:

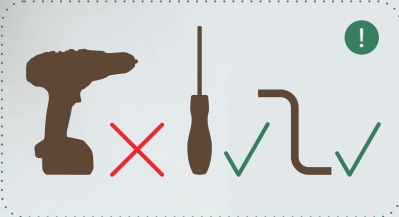

TRIANGLE LADDER

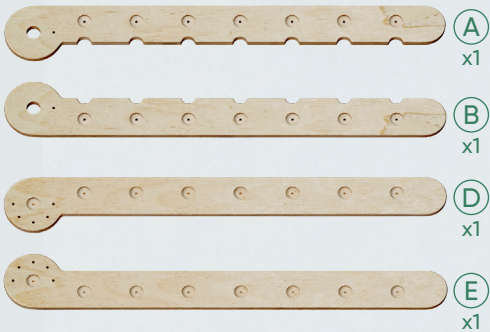 


C < F  
x7 x8

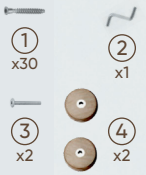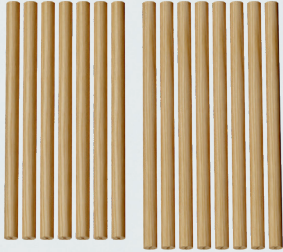  


ARCH



 F  
x11



NET

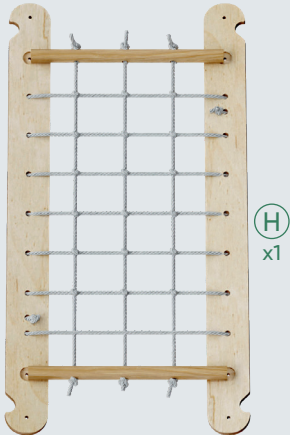 

SLIDE BOARD



I  
x4



J  
x1



K  
x2







# Step 2:
 
# TRIANGLE LADDER


2.1

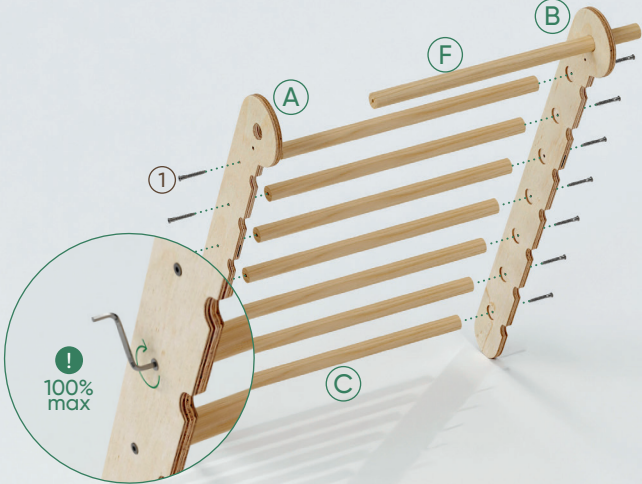

 2.2

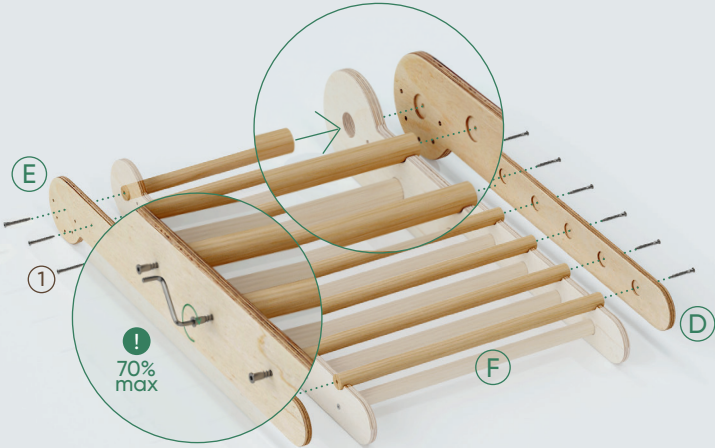

 2.3

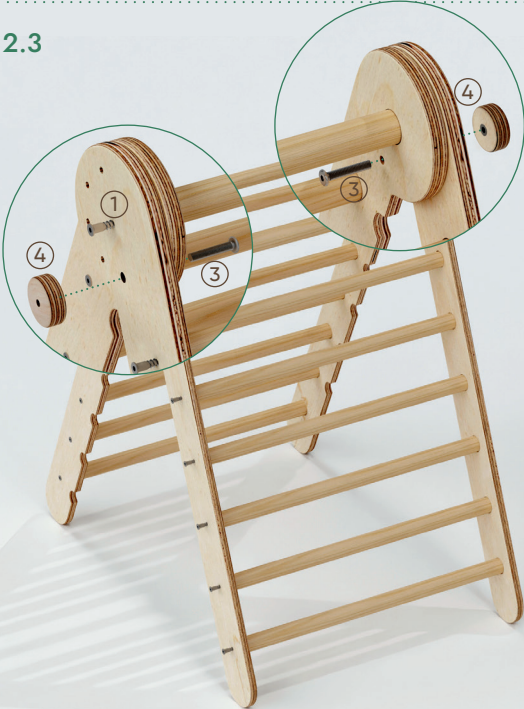

2.4



# Step 3:

# ARCH

3.1



3.2



 
3.3




# Step 4:

# NET

4.1

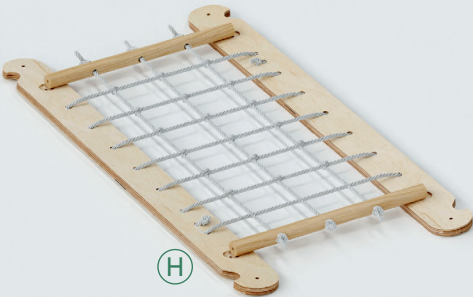

 4.2

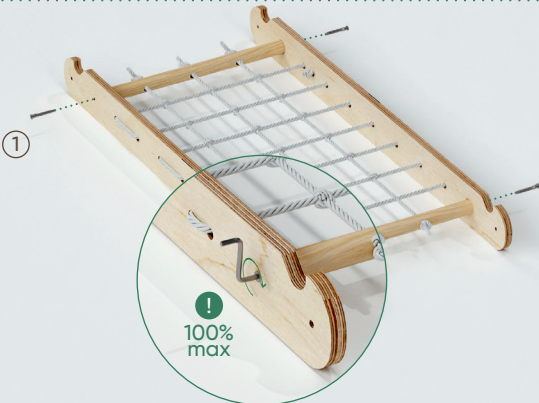

4.3



4.4

 





Step 5:

SLIDE BOARD

5.1

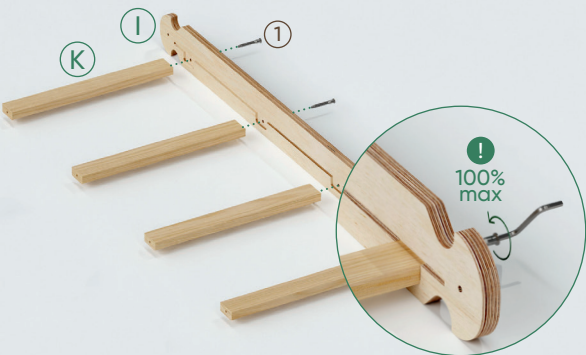

 5.2

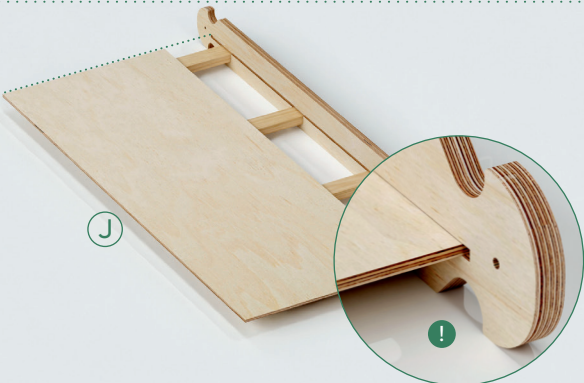

5.3



5.4



5.5



## Our support here:



**INSTAGRAM.COM/GOODEVAS**



**FACEBOOK.COM/GOODEVAS**



**TIKTOK.COM/@GOODEVAS**

## Standard consumer safety performance specification for home playground equipment

1. Play Structure Use Zone. The minimum use zone for play equipment shall extend no less than 72 in. from all sides of the play structure. 1.2. Installation. Place the equipment on leveled ground, not less than 6 ft. from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires. Do not install home playground equipment over concrete, asphalt, packed earth, grass, carpet, or any other hard surface. A fall onto a hard surface can result in serious injury or death to the equipment user. Caution: Tighten bolts securely. Tighten the cap nuts on bolts flush to the member. Children must not use the equipment until properly installed. 2. Maintenance Instructions. At the beginning of each play season: Tighten all hardware. Check metal parts for rust. If found, sand and repaint using a non-lead-based paint meeting the requirements of 16 CFR 1303. Check all wooden members for deterioration and splinters. Sand down splinters and replace deteriorating wood members. Rate and check the depth of loose-fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace if necessary. Twice a month during play season. At the end of each play season or when the temperature drops below 41°F (5°C). Disassemble and dispose of the playground equipment in such a way that no unreasonable hazards will exist at the time the playground equipment is discarded. 3. Language and Signage. 3.1. Risk of serious head injury or death due to falls from equipment placed over hard surfaces. 3.2. Risk of using helmets and other items that can wrap around a child's neck, become entangled or entrapped by the equipment, and lead to strangulation or death. 4. Information. EAN 4820212190513 Save the instruction and information sheet in the event that the manufacturer has to be contacted. Manufacturer's Address: GOODEVAS LLC, ESKAVATORNA 35, KYIV, UKRAINE, 02000. To negate the risk of trauma, falls are prohibited. To reduce the likelihood of serious head injuries, install shock-absorbing protective surfacing under and around your play equipment. Observing the following statements and warnings reduces the likelihood of serious or fatal injury. On-site adult supervision for children of all ages is recommended. Instruct children not to use the equipment in a manner other than intended. Do not allow children to wear inappropriate items, such as but not limited to, loose-fitting clothing, hood, and neck drawstrings, scarves, cord-connected items, capes, and ponchos. These items can cause death by strangulation. Instruct children not to climb when the equipment is wet. Instruct children not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothes lines, pet leashes, cables, and chains as they may cause a strangulation hazard. Instruct children to remove their bikes or other sports helmet before playing on the playground equipment. Instruct children to dress children with well-fitting and full foot enclosing footwear. Examples of inappropriate footwear are clogs, flip-flops, and sandals.