 
 
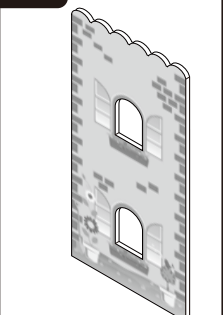 
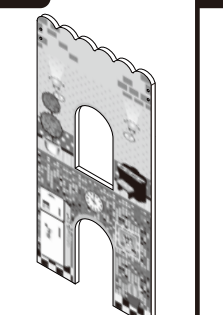 
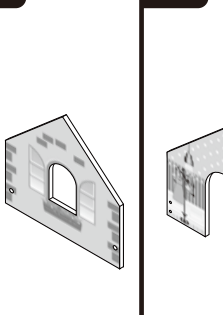 
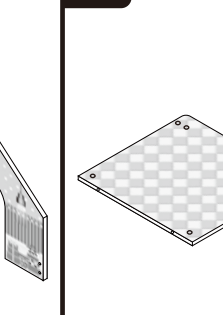 
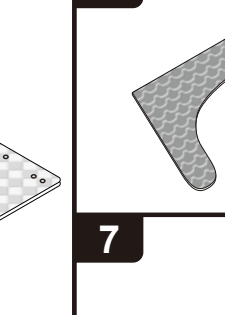 
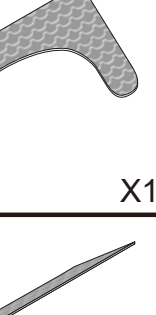 
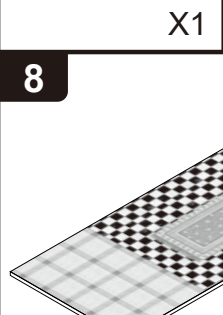 
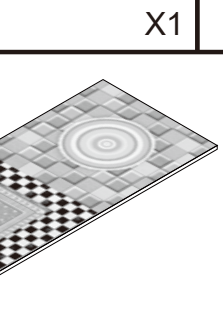 
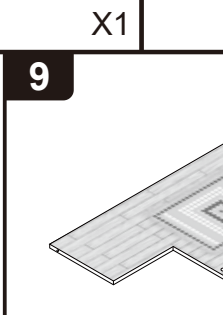 
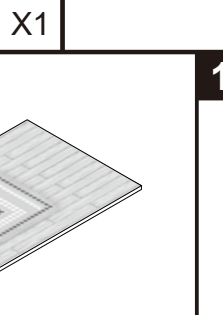 
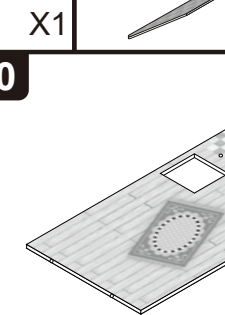 
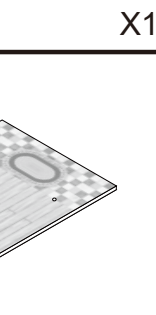 
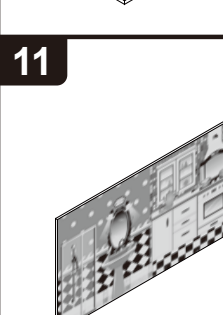 
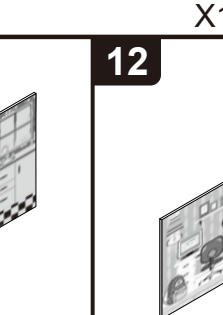 
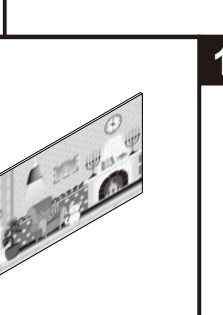 
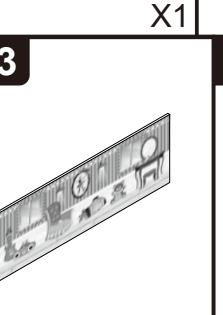 
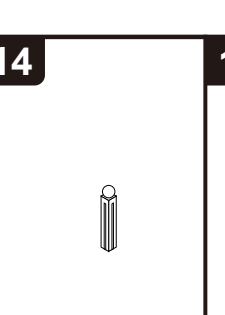 
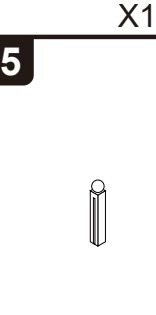 
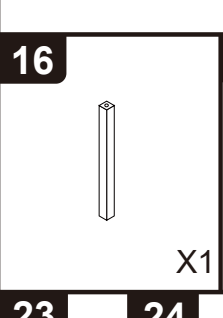 
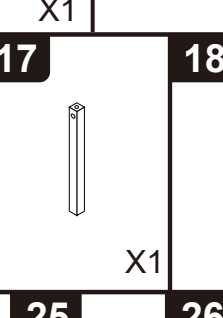 
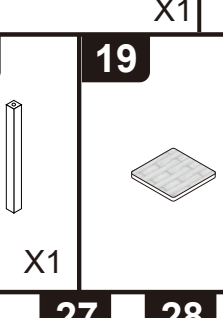 
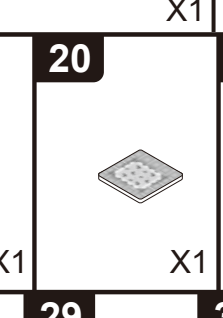 
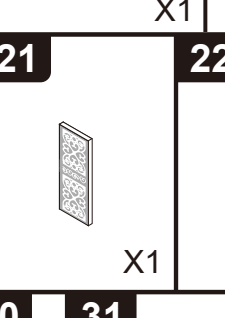 
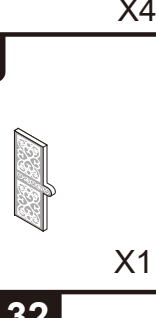 
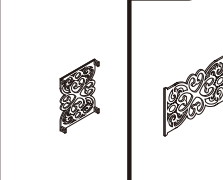 
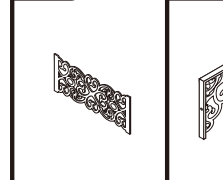 
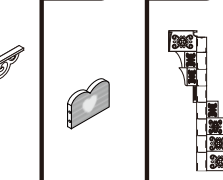 
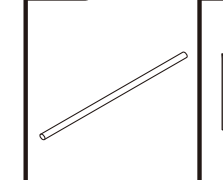 
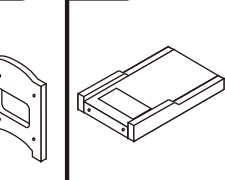 


Instrukcja Montażu

Assembly Instruction

Lista części / Parts List:

A Green  42mm X2	B Pink  42mm X7	C  42mm X2	D  28mm X14	E Pink  28mm X1	F  24mm X5	G Pink  24mm X26	H  X2	I  X2																							
J Pink  16mm X4	K  14mm X8	L  X2	M White  28mm X8	 X1	The following tool (not included) is required for assembly: Wymagany śrubokręt (niezałączony do zestawu)																										
1  X1	2  X1	3  X1	4  X1	5  X1	6  X1	7  X1	8  X1	9  X1	10  X1	11  X1	12  X1	13  X1	14  X1	15  X4	16  X1	17  X1	18  X1	19  X1	20  X1	21  X1	22  X1	23  X1	24  X1	25  X2	26  X4	27  X2	28  X1	29  X1	30  X2	31  X1	32  X1

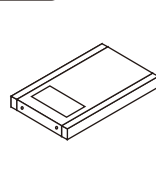

X1



X1



 
X1



X1



X1




X1




X1



 X1

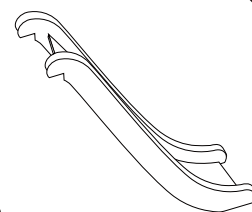


X1

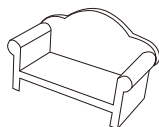 

X1



 X1

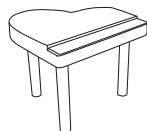

X1



X1



X2



X1



 
X2



X1




X1

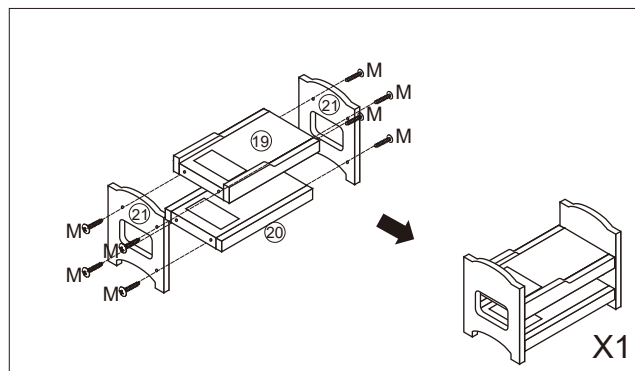


X1

 
KROK 1

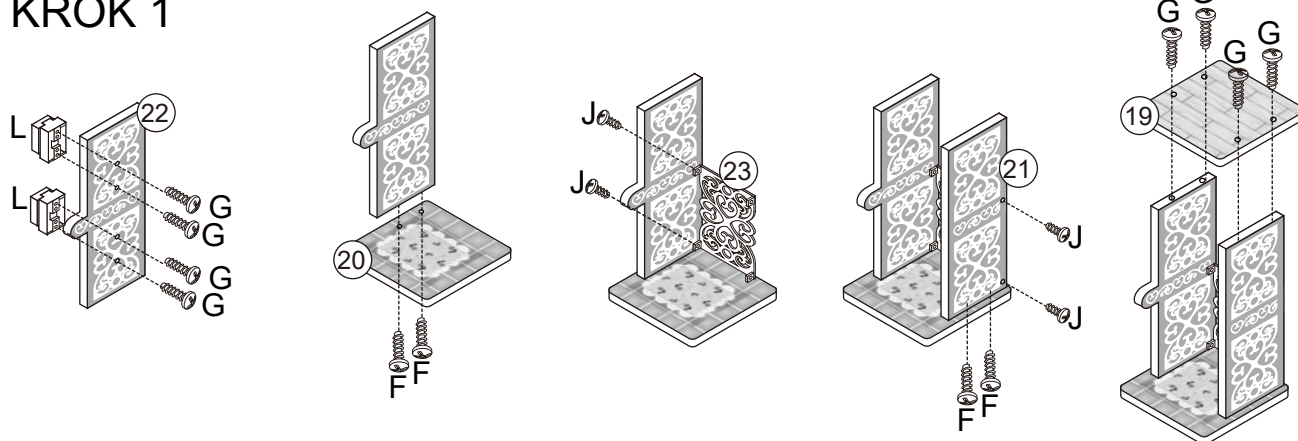


KROK 2

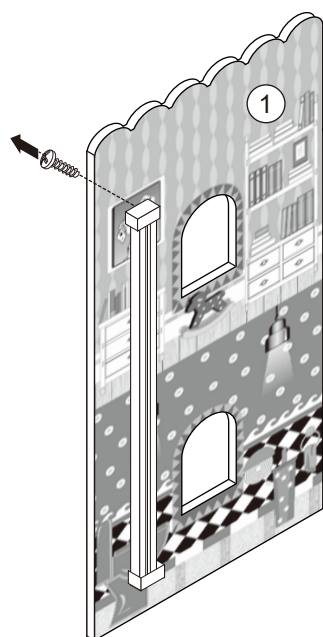 


KROK 3

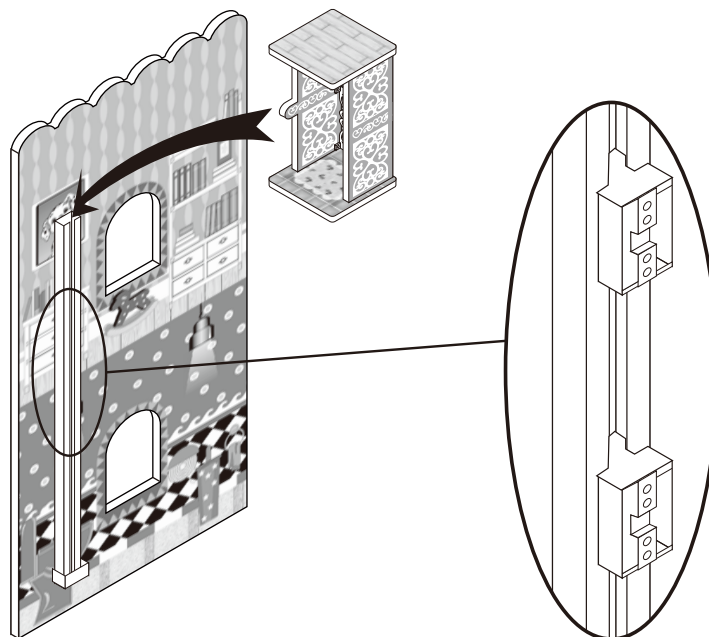 


KROK 4

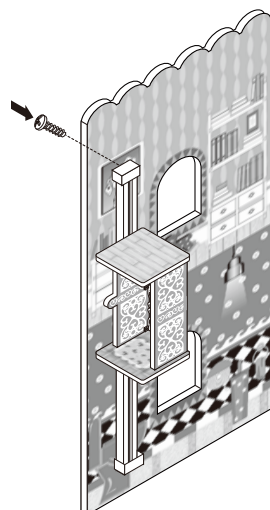 


KROK 5

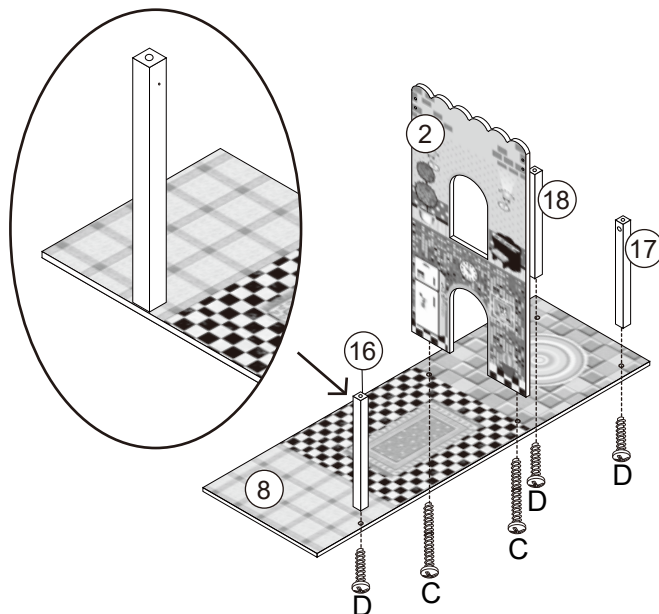 


KROK 6

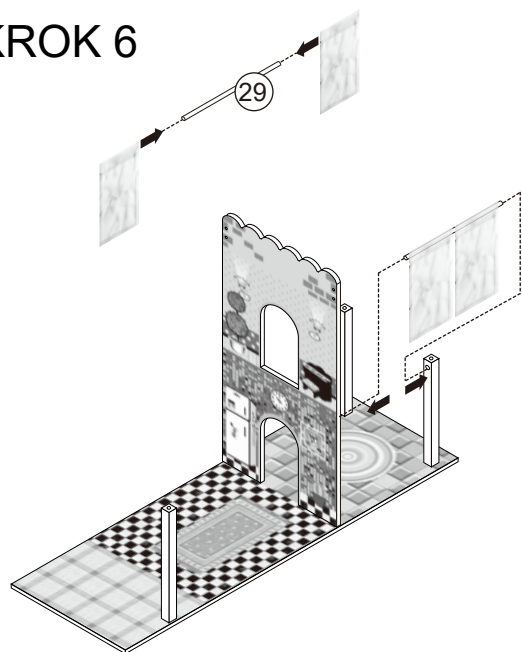 


KROK 7

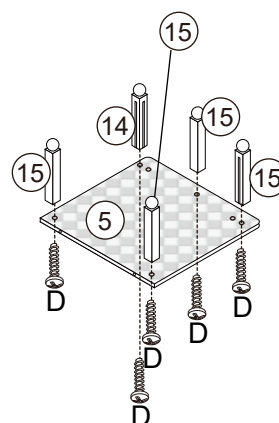 


KROK 8

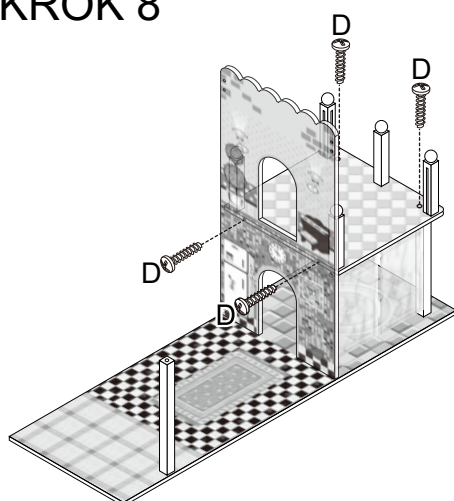 


KROK 9

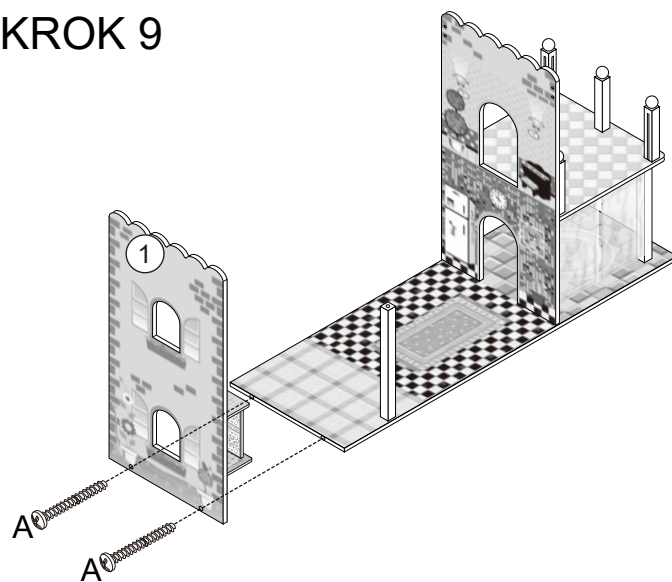 


KROK 10

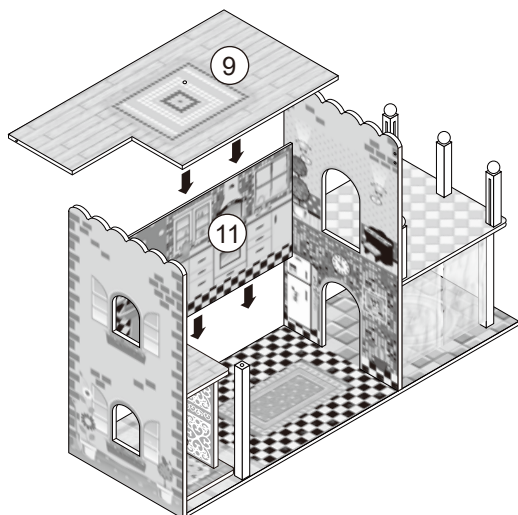 


KROK 11

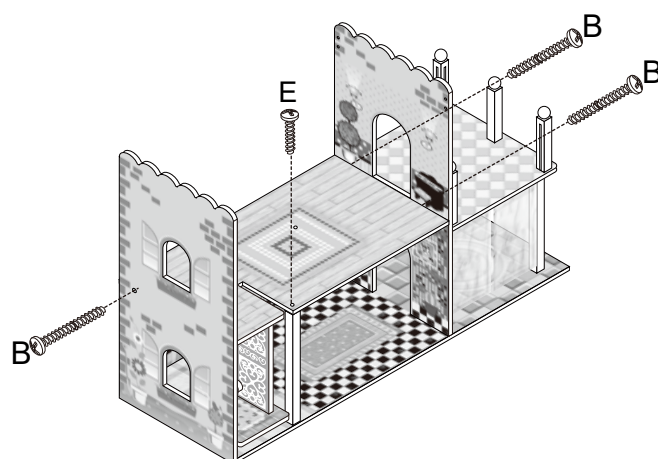 


KROK 12

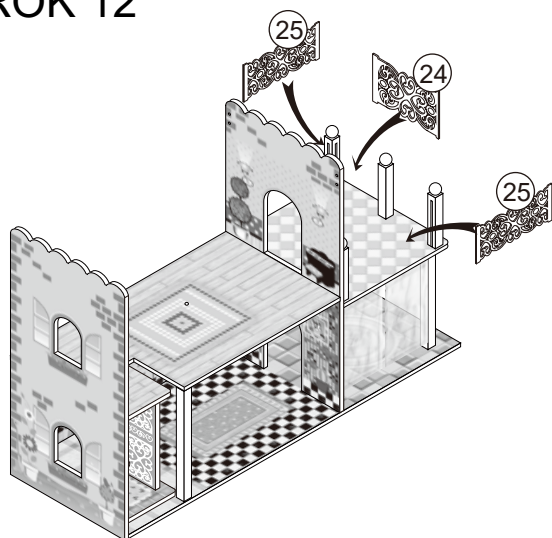 


KROK 13

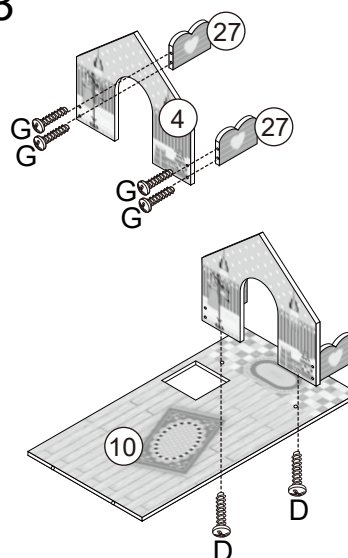 


KROK 14

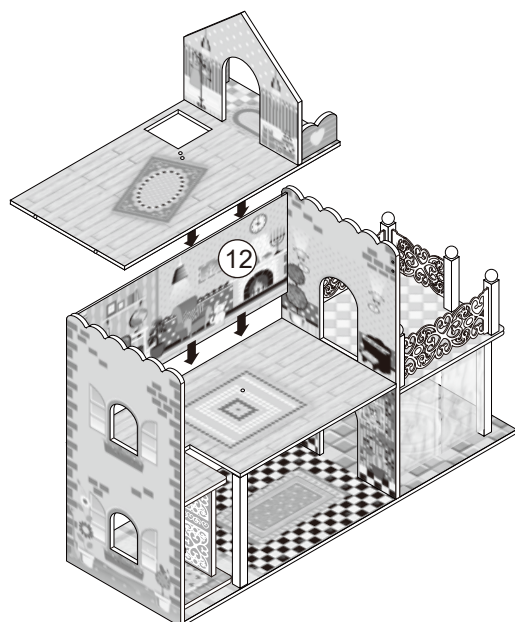 


KROK 15

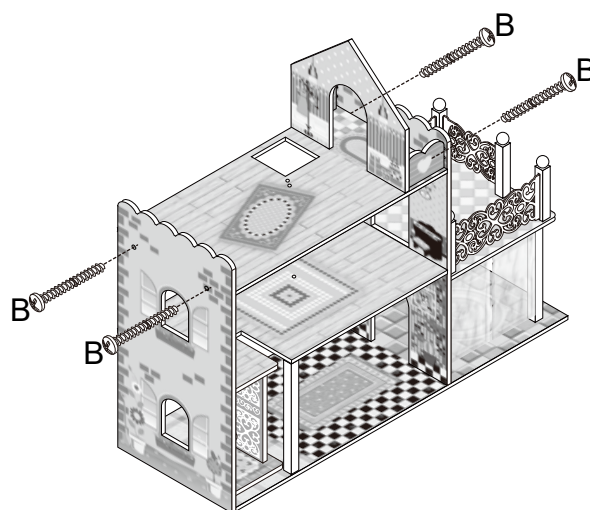 


KROK 16

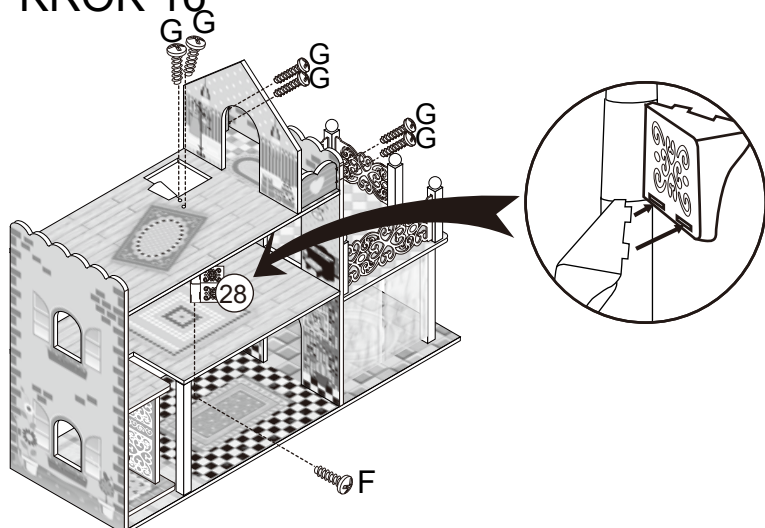 


KROK 17

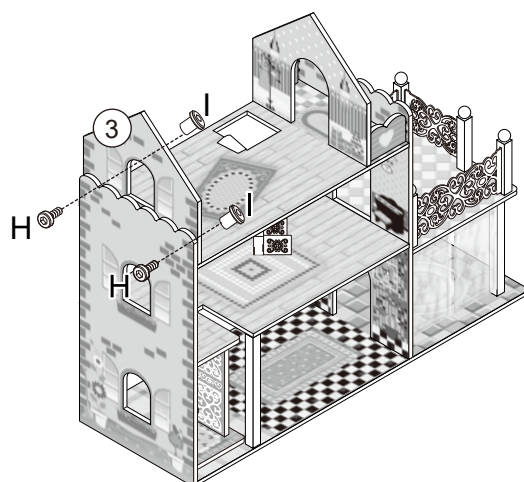 

KROK 18

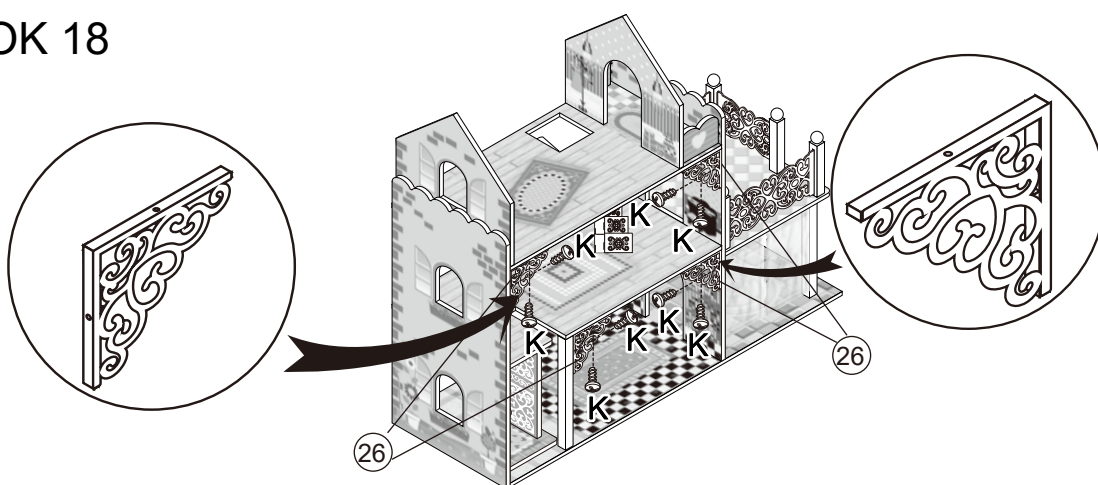 

KROK 19

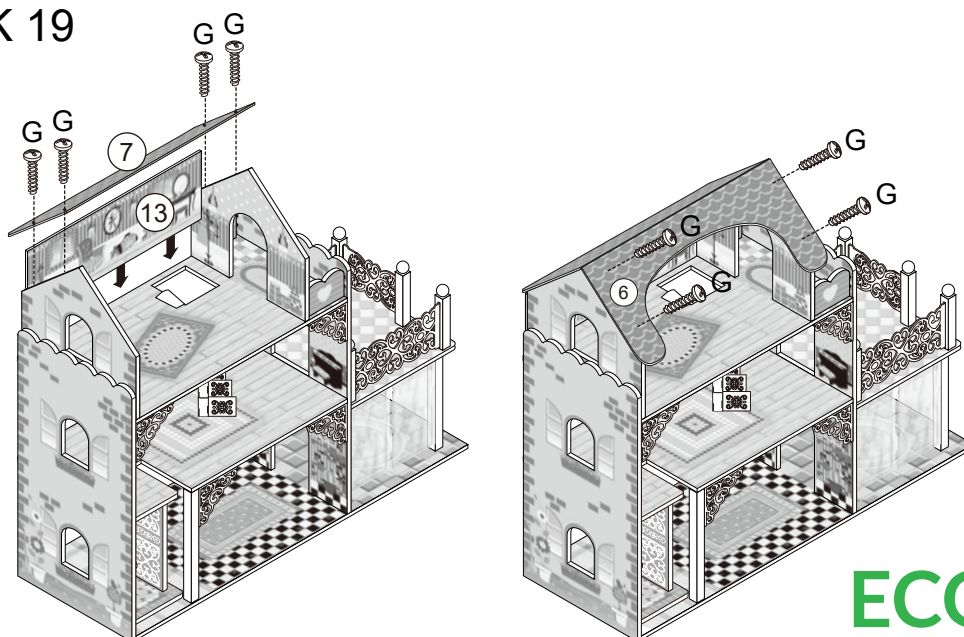 

ECOTOYS

Montaż:
Wymagany montaż przez osoby dorosłe.
Zawiera małe śrubki, które mogą stworzyć zagrożenie. Regularnie należy sprawdzać, czy śruby są dobrze dokręcone. Należy trzymać nie skrócone elementy z dala od dzieci.

Użytkowanie i konserwacja:
Używaj tylko na równej powierzchni. Regularnie należy sprawdzać czy śruby są dobrze dokręcone.

Ostrzeżenie:
Nieodpowiednie dla dzieci w wieku poniżej 36 miesięcy.

Ostrzeżenie:
Aby uniknąć niebezpieczeństwa uduszenia, należy trzymać worki i opakowania z dala od dzieci. Każde opakowanie nie jest częścią zabawki i musi być usunięte przed montażem zabawki.



Caution: Adult assembly required.
Hardware contains small screws with sharp points. Keep unassembled parts out of the reach of small children.

Use and maintenance:
- Use on level surfaces only
- Please check assembly at regular intervals, and frequently tighten hardware if necessary. If maintenance is not carried out, the product could cease to function properly.

Warning: Choking Hazard
Unassembled parts may be a choking hazard to children 3 years and younger.

Warning: To avoid danger of suffocation, keep any bag or packaging away from babies and children. Any packaging or bag is not part of the toy and must be discarded immediately before assembly of the toy.