

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

 
PIANO USER MANUAL

MODEL: BD-881D

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

MODEL: BD-881D

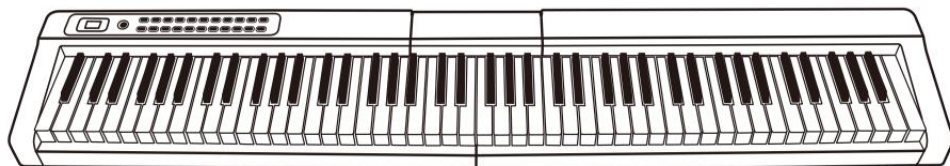

(The picture is for reference only, please refer to the actual object)

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

 


Accessory


Type-C adapter* 1
power cord * 1
Music sheet stand * 1

Music sheet clip * 1
Microphone * 1
Earphones * 1

piano sticker * 1
piano bag * 1
Midi cord * 1
sustain pedal* 1

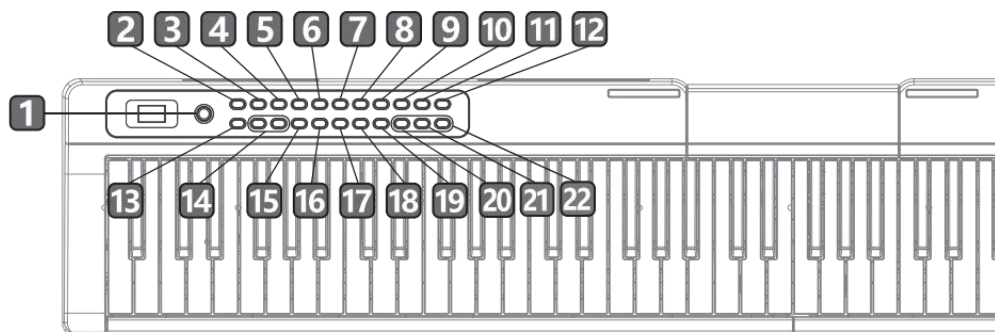

1 Power	6 Volume	11 Key drum	16 Chord	Bluetooth/MP3 mode
2 Tone	7 Rhythm vol	12 Lesson	17 Record	20 ►/◀
3 Rhythm	8 Tempo	13 Start/stop	18 Play/LED	21 ◀/VOL-
4 Demo One	9 Transpose	14 +/-	19 Metronome	22 ►/VOL+
5 Demo All	10 Dual key	15 Sync/Vel		

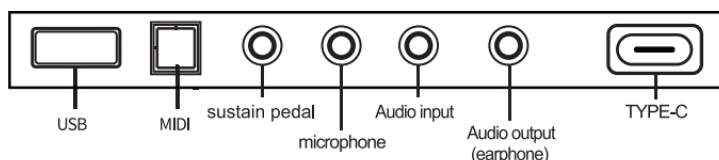 

1. Power

Turn on the [Power] button to play the keyboard and enter the performance state.

2. Tone

After pressing [Tone] button, you can use the [+/-] button to select the tone.

3. Rhythm

After pressing [Rhythm] button, you can use the [+/-] button to select the rhythm.

4. Demo One

Press the [Demo One] for the first time to enter the [Demo One] mode, and press the Demo One for the second time to exit the Demo One mode. After entering the Demo One mode, play the selected song from the next song. When the song finishes playing, the current song is played repeatedly. In the Demo One mode, press the [+/-] key to switch songs.

5. Demo All

Press the [Demo All] for the first time to enter the continuous singing mode, and press the Demo All for the second time to exit the continuous singing mode. After entering continuous singing mode, After entering continuous singing mode, playback starts from the current song. When the song is finished, continue to play the next song and play all the songs in a loop. In continuous singing mode, press [+/-] key to switch songs.

6. Volume

After pressing the Volume, you can use the [+] and [-] keys to increase/decrease the volume. The volume control has a total of 16 segments (1~16).

7. Rhythm vol

After pressing the [Rhythm vol], you can use the [+/-] keys to increase/decrease the rhythm volume. The rhythm vol control has a total of 17 sections (0~16). The Rhythm volume keys can also control the volume of demo songs, chords and drums.

8. Tempo

After pressing the [Tempo], you can use 【+/-】 to increase/decrease the speed continuously. The speed control has a total of 270 segments (30~300).

9. Transpose

After pressing the [Transpose] button, you can use the [+/-] button to transpose. There are 25 segments (-12~12) for the transposition control, and the preset value is in the 13th segment after power-on. Hold [+/-] button for more than 1 second, can continuously increase/decrease the transposition. The chord pitch also changes with the transposition value.

10. Dual key

Press [Dual Key] button for the first time to activate the dual keyboard function, and press [Dual Key] button for the second time to cancel the dual keyboard function. When the dual keyboard function is activated, the scales of the left keys A1 ~ B4 will be played corresponding to the scales of A2 ~ B5, and the scales of the right keys C5 ~ C9 will be played corresponding to the scales of C4 ~ C8. You can use the [+] [-] keys to select the main tone to replace the tone of the right key.

11. Key drum

Press [Key Drum] button for the first time to activate the keyboard drum function, and press [Key Drum] button for the second time to cancel the keyboard drum function. When the keyboard drum function is activated, the corresponding drum sound will be played when you play the key.

12. Lesson

Press [Lesson] button for the first time to enter the single-key mode, and press [Lesson] button for the second time to exit the single-key mode.

After entering the one-touch mode, use the current song to teach,

After the song is played, if the user presses the keys at will, it is the main melody. If the main melody does not reach the next bar, the background sound will repeat the bar until the song is played and stop after the song ends.

Press [Lesson] button for the third time to enter the ensemble mode, and press [Lesson] button for the fourth time to exit the ensemble mode.

After entering the ensemble mode, the current song is used for teaching. After the song is played, the user can play the keys at will and interrupt the main string rhythm. If not pressed the key again after 5 seconds, the main string rhythm will automatically resume playback. The background sound is played completely, and the teaching is repeated until the end of the song. After the song is over the ensemble will play a song.

Press [Lesson] button the fifth time to enter the follow-up mode, and press [Lesson] the sixth time to exit the follow-up mode.

After entering the follow-up mode, the current song is used for teaching. After the song is played, the main melody is not played, and the user must follow the notes displayed on the digital tube. Press the corresponding key to continue to play the next note, and the background sound will repeat that measure until the song ends.

Press the corresponding key to continue to play the next note, and the background sound will repeat that measure until the song ends.

In the teaching mode, [+/-] button automatically enters the song selection mode, and exits the teaching mode to return to the tone selection mode.

Press [Tone] button while playing the music will temporarily switch to the tone selection mode, and return to the song selection mode in 3 seconds

13. Start/stop

Press the [Start/Stop] button for the first time to start playing the rhythm, and press the [Start/Stop] button for the second time to stop playing the rhythm.

Exit this mode under the mode of teaching, recording, playback, metronome, demo music, etc.

14. -/+

There are [+] and [-] sequential selection, a total of 2 keys. Can be used to select the tone, rhythm, song, volume, accompaniment volume, speed, transpose quickly.

If the number pressed exceeds the maximum number of tone, rhythms or songs, the original value will be maintained.

15. Sync/Vel

Press [Sync/Vel] for the first time to enter the sync mode, and press the Sync for the second time to exit the sync mode. When entering the sync mode, stop playing the rhythm, and then press the first 34 keys to automatically play the selected rhythm (chord). For the chord synchronization part, please refer to the single fingering accompaniment or multi-fingering accompaniment instructions.

(The default value of power on is the key strength off. Long press this key for 5 seconds to control the key strength on/off.)

16. Chord

Press [Chord] button for the first time to enter the integrated chord mode, and press [Chord] button for the second time to exit the integrated chord mode. [Chord] button only works in rhythm and normal mode. When playing the rhythm, press [Chord] button and press the fingering within the range of the keys A1 ~ F4#, and then you can hear the corresponding chord accompaniment sound. If you don't press the fingering of the fingering, the single fingering will be played. Refers to the chord of the chord fingering.

When the rhythm is not playing, press [Chord] button and press the fingering within the range of keys A1 ~ F4#, and you will hear the corresponding chord sound. If you do not press the fingering of the fingering, the single fingering will be played. Refers to the chord tone. For the detailed fingering of the integrated fingering accompaniment, please refer to the single fingered chord table and the multi-finger chord table attached. The integrated fingering can be used with rhythm/chord/synchronization.

17. Record

Press the [Recording] button the first time to enter the recording mode, and the last record will be cleared; pressing the [recording] button for the second time will exit the recording mode. In the recording mode, the metronome will be played, and you can start recording by pressing any key. The maximum number of recordings is 700. When the recording is full, the next note cannot be recorded; during recording, you can press the [Play] button at any time to play the recorded notes or drum sounds.

18. Play/LED

Press [Play/LED] for the first time to play the recorded note or drum sound, and press the Play/LED for the second time to stop playing. Press the Play to exit the recording mode. If there is no recorded value before, press Play and no action will occur. (The default value for powering on is that the keyboard light is on. Press and hold this button for 5 seconds to control the keyboard LED on/off.)

19. Metronome

Press [Metronome] button, the action function is 1/4 beat ~ 7/4 beat + stop-+ beat. 4. The preset value of tempo is 120. There are 7 variations of the metronome sound, in sequence from 1/4 beat to 7/4 beat. When recording, press [Metronome] button to switch the metronome sound.

Bluetooth/MP3 mode

20. Press [⏮/⏭] shortly (within 1 second) to play or pause the song. In pause mode, press [⏮/⏭] to continue playing the song.

21. Press [⏮/VOL-] shortly (within 1 second) to select the previous song. Press the [⏮/VOL-] for more than 1 second to decrease the volume.

22. Press [⏭/VOL+] shortly (within 1 second) to select the next song. Press [⏭/VOL+] for more than 1 second to increase the volume.

Appendix 1 (Voice Comparison Table)

T001	Acoustic Grand Piano	T055	Synth Voice	T119	Synth Drum
T002	Bright Acoustic Piano	T056	Orchestra Hit	T120	Reverse Cymbal
T003	Electric Grand Piano	T057	Trumpet	T121	Guitar Fret Noise
T004	Honky-tonk Piano	T058	Trombone	T122	Breath Noise
T005	Rhodes Piano	T059	Tuba	T123	Seashore
T006	Chorused Piano	T060	Muted Trumpet	T124	Bird Tweet
T007	Harpsichord	T061	French Horn	T125	Telephone Ring
T008	Clavichord	T062	Brass Section	T126	Helicopter
T009	Celesta	T063	Synth Brass 1	T127	Applause
T010	Glockenspiel	T064	Synth Brass 2	T128	Gunshot
T011	Music box	T065	Soprano Sax	T129	Yong Gin
T012	Vibraphone	T066	Alto Sax	T130	Zheng
T013	Marimba	T067	Tenor Sax	T131	Zhong Ruan
T014	Xylophone	T068	Baritone Sax	T132	Pi Pa
T015	Tubular Bell	T069	Oboe	T133	Big Souna
T016	Dulcimer	T070	English Horn	T134	Souna
T017	Drawbar Organ	T071	Bassoon	T135	Er Hu
T018	Percussive Organ	T072	Clarinet	T136	Yue Hu
T019	Rock Organ	T073	Piccolo	T137	Di Zi
T020	Church Organ	T074	Flute	T138	Bong Di
T021	Reed Organ	T075	Recorder	T139	Koto 2
T022	Accordion	T076	Pan Flute	T140	Qu Di
T023	Harmonica	T077	Bottle Blow	T141	Jungle Bass
T024	Tango Accordion	T078	Shakuhachi	T142	Koto 3
T025	Acoustic Guitar (nylon)	T079	Whistle	T143	Marimba 2
T026	Acoustic Guitar (steel)	T080	Ocarina	T144	Tsugaru
T027	Electric Guitar (jazz)	T081	Lead 1 (square)	T145	Kawala
T028	Electric Guitar (clean)	T082	Lead 2 (sawtooth)	T146	Attack Clav.
T029	Electric Guitar (muted)	T083	Lead 3 (calliope lead)	T147	Crystal
T030	Overdriven Guitar	T084	Lead 4 (chiff lead)	T148	Bright String
T031	Distortion Guitar	T085	Lead 5 (charang)	T149	Clavi 2
T032	Guitar Harmonics	T086	Lead 6 (voice)	T150	Chorus Guitar.
T033	Acoustic Bass	T087	Lead 7 (fifths)	T151	Barafon
T034	Electric Bass(finger)	T088	Lead 8 (bass+lead)	T152	Jazz Organ
T035	Electric Bass (pick)	T089	Pad 1 (new age)	T153	Indian Flute
T036	Fretless Bass	T090	Pad 2 (warm)	T154	Mute Barafon
T037	Slap Bass 1	T091	Pad 3 (polysynth)	T155	Dual Horns
T038	Slap Bass 2	T092	Pad 4 (choir)	T156	Electric Giutar (Clean) 2
T039	Synth Bass 1	T093	Pad 5 (bowed)	T157	Clavi 3
T040	Synth Bass 2	T094	Pad 6 (metallic)	T158	Soft Sax
T041	Violin	T095	Pad 7 (halo)	T159	Electric Viaphone
T042	Viola	T096	Pad 8 (sweep)	T160	Didgeridoo
T043	Cello	T097	FX 1 (rain)	T161	Barafon 2
T044	Contrabass	T098	FX 2 (soundtrack)	T162	Tubular Bells 2
T045	Tremolo Strings	T099	FX 3 (crystal)	T163	Soft Accord
T046	Pizzicato Strings	T100	FX 4 (atmosphere)	T164	Barafon 3
T047	Orchestral Harp	T101	FX 5 (brightness)	T165	Clavi 4
T048	Timpani	T102	FX 6 (goblins)	T166	Nay
T049	String Ensemble 1	T103	FX 7 (echoes)	T167	Oct Harp
T050	String Ensemble 2	T104	FX 8 (sci-fi)	T168	Attack Barafon
T051	Synth Strings 1	T105	Sitar	T169	Clavi 5
T052	Synth Strings 2	T106	Banjo	T170	Kalimba 2
T053	Choir Aahs	T107	Shamisen	T171	Tsugaru 2
T054	Voice Oohs	T108	Koto	T172	Shamisen 2
		T109	Kalimba	T173	Woodblock 2
		T110	Bagpipe	T174	Crystal 2
		T111	Fiddle	T175	Shamisen 3
		T112	Shanai	T176	Synth Harpsi.
		T113	Tinkle Bell	T177	Jazz Organ 2
		T114	Agogo	T178	Viola Attack
		T115	Steel Drums	T179	Viola Attack 2
		T116	Woodblock	T180	Hard Barsoon
		T117	Taiko Drum	T181	Mute Barafon 2
		T118	Melodic Tom	T182	Bodhran

T183	Kawala 2	T247	Tsugaru 4	T311	Attack Barafon 4
T184	Didgeridoo 2	T248	Tsugaru 5	T312	Hard Barsoon 3
T185	Soft Guitar	T249	Mute Barafon 4	T313	Dulcimer 4
T186	Suona 2	T250	Dual Horns 4	T314	Twin Bones 4
T187	Twin Bones	T251	Soft Sax 3	T315	Soft Sax 5
T188	Jazz Organ 3	T252	Bodhran 3	T316	Shamisen 5
T189	Woodblock 3	T253	Guitar Pinch 3	T317	Suona 4
T190	Soft Santur	T254	Crystal 3	T318	Bodhran 4
T191	Koto 4	T255	Grow Guitar 2	T319	Shamisen 6
T192	Castanets	T256	Jazz Organ 6	T320	Electric Vraphone 6
T193	Viola Attack 3	T257	Attack Barafon 2	T321	Tsugaru 7
T194	Woodblock 4	T258	Xylophone 4	T322	Oct Harp 3
T195	Bright String 2	T259	Soft Santur 3	T323	Kalimba 4
T196	Twin Bones 2	T260	Kawala 4	T324	Soft Clav. 2
T197	Tenor Sax 2	T261	Soft Guitar 5	T325	English Horn 4
T198	Wind Organ	T262	Nay 4	T326	Didgeridoo 6
T199	Tron Flute	T263	Synth Harpsi. 3	T327	Barafon 4
T200	Bodhran 2	T264	Wind Organ 3	T328	Indian Flute 7
T201	Tron Flute 2	T265	Shanai 2	T329	Organ Flute 2
T202	Jazz Organ 4	T266	Woodblock 6	T330	Soft Santur 4
T203	Soft Santur 2	T267	Electric Vraphone 4	T331	Mute Barafon 7
T204	Woodblock 5	T268	Kawala 5	T332	Nay 7
T205	Shamisen 4	T269	Grow Guitar 3	T333	Hard Vibe 5
T206	Indian Flute 2	T270	Grow Guitar 4	T334	Bari & Tenor 4
T207	Electric Vraphone 2	T271	Steel Bell	T335	Bag Pipe 4
T208	Soft Guitar 2	T272	Wind Organ 4	T336	Tenor Sax 3
T209	Mute Barafon 3	T273	Soft Accord 2	T337	Organ Flute 3
T210	Dual Horns 2	T274	Kalimba 3	T338	Dulcimer 5
T211	Xylophone 2	T275	Twin Bones 3	T339	Twin Bones 5
T212	Didgeridoo 3	T276	Church Bells 3	T340	Grow Guitar 5
T213	Wind Organ 2	T277	Koto 6	T341	Kalimba 5
T214	Church Bells 2	T278	Attack Barafon 3	T342	Oct Harp 4
T215	Tsugaru 3	T279	Mute Barafon 5	T343	Nay 8
T216	Nay 2	T280	Nay 5	T344	Dual Horns 5
T217	Guitar Pinch 2	T281	Jungle Bass 2	T345	Didgeridoo 7
T218	Grow Guitar	T282	Soft Accord 3	T346	English Horn 5
T219	Indian Flute 3	T283	Hard Vibe 3	T347	Kawala 6
T220	Synth Harpsi. 2	T284	Soft Clav.	T348	Marimba 5
T221	Soft Sax 2	T285	Bag Pipe 2	T349	Barafon 5
T222	Xylophone 3	T286	Oct Harp 2	T350	Soft Accord 5
T223	English Horn 2	T287	Woodblock 7	T351	Mute Barafon 8
T224	Soft Guitar 3	T288	Mute Barafon 6	T352	Dual Horns 6
T225	Castanets 2	T289	Guitar Pinch 4	T353	Church Bells 4
T226	Soft Guitar 4	T290	Dulcimer 3	T354	Wind Organ 5
T227	Hard Vibe 2	T291	Soft Sax 4	T355	Attack Clav. 5
T228	Reed Horn	T292	Electric Vraphone 5	T356	Jazz Organ 7
T229	Nay 3	T293	Tsugaru 6	T357	Reed Horn 3
T230	Bari & Tenor	T294	Reed Horn 2	T358	Tenor Sax 4
T231	Kawala 3	T295	Castanets 3	T359	Chorus Guitar. 2
T232	Indian Flute 4	T296	Tron Flute 3	T360	Didgeridoo 8
T233	Didgeridoo 4	T297	Attack Clav. 3	T361	Soft Santur 5
T234	Attack Clav. 2	T298	Bari & Tenor 3	T362	Clavi 6
T235	Marimba 3	T299	Indian Flute 6	T363	Kalimba 6
T236	Bari & Tenor 2	T300	Soft Guitar 6	T364	Didgeridoo 9
T237	Slow Violin	T301	Nay 6	T365	Wind Organ 6
T238	Organ Flute	T302	Didgeridoo 5	T366	Tron Flute 4
T239	Jazz Organ 5	T303	Marimba 4	T367	Soft Sax 6
T240	Electric Vraphone 3	T304	Attack Clav. 4	T368	Suona 5
T241	Dual Horns 3	T305	Jungle Bass 3	T369	Soft Guitar 7
T242	Indian Flute 5	T306	Hard Barsoon 2	T370	Hard Vibe 6
T243	English Horn 3	T307	Suona 3	T371	Jazz Organ 8
T244	Dulcimer 2	T308	Hard Vibe 4	T372	Grow Guitar 6
T245	Koto 5	T309	Bag Pipe 3	T373	Xylophone 5
T246	Tubular Bells 3	T310	Soft Accord 4	T374	Bag Pipe 5

T375	Bag Pipe 6	T439	Shanai 5	T503	Bag Pipe 11
T376	Clavi 7	T440	English Horn 10	T504	Hard Barsoon 7
T377	Hard Vibe 7	T441	Didgeridoo 11	T505	Mute Barafon 15
T378	Kawala 7	T442	Organ Flute 5	T506	Soft Sax 12
T379	Shanai 3	T443	Attack Barafon 6	T507	Attack Clav. 9
T380	Suona 6	T444	Jungle Bass 5	T508	Jazz Organ 12
T381	Jungle Bass 4	T445	Barafon 7	T509	Soft Guitar 9
T382	Grow Guitar 7	T446	Soft Santur 6	T510	Didgeridoo 13
T383	Bag Pipe 7	T447	Slow Violin 3	T511	Bright String 4
T384	Crystal 4	T448	Hard Barsoon 6	T512	Electric Giutar (Clean) 4
T385	Guitar Pinch 5	T449	Didgeridoo 12	T513	Tsugaru 9
T386	Woodblock 8	T450	Kalimba 8	T514	Nay 10
T387	Soft Sax 7	T451	Electric Giutar (Clean) 3	T515	Reed Horn 6
T388	Attack Barafon 5	T452	Dulcimer 8	T516	Didgeridoo 14
T389	Barafon 6	T453	Reed Horn 5	T517	Soft Clav. 5
T390	Organ Flute 4	T454	Bodhran 5	T518	Soft Sax 13
T391	Mute Barafon 9	T455	Soft Sax 9	T519	Reed Organ 3
T392	Shanai 4	T456	Mute Barafon 14	T520	Steel Bell 3
T393	Soft Clav. 3	T457	Guitar Pinch 7	T521	Clavi 10
T394	Oct Harp 5	T458	Wind Organ 7	T522	Wind Organ 8
T395	Tron Flute 5	T459	Guitar Pinch 8	T523	Synth Harpsi. 6
T396	Bright String 3	T460	Indian Flute 9	T524	Bari & Tenor 5
T397	Jazz Organ 9	T461	Bag Pipe 9	T525	Steel Bell 4
T398	Mute Barafon 10	T462	Crystal 6	T526	Soft Sax 14
T399	Slow Violin 2	T463	Twin Bones 6	T527	Castanets 8
T400	Soft Sax 8	T464	Crystal 7	T528	Didgeridoo 15
T401	English Horn 6	T465	Soft Guitar 8	T529	Soft Sax 15
T402	Reed Horn 4	T466	Guitar Pinch 9	T530	Mute Barafon 16
T403	Indian Flute 8	T467	Attack Clav. 6	T531	Soft Guitar 10
T404	Castanets 4	T468	Bodhran 6	T532	Soft Accord 8
T405	English Horn 7	T469	Suona 7	T533	Wind Organ 9
T406	Tron Flute 6	T470	Chorus Guitar. 3	T534	Didgeridoo 16
T407	English Horn 8	T471	Slow Violin 4	T535	Electric Giutar (Clean) 5
T408	Hard Barsoon 4	T472	Clavi 9	T536	English Horn 11
T409	Dulcimer 6	T473	Castanets 6	T537	Soft Sax 16
T410	Xylophone 6	T474	Slow Violin 5	T538	Soft Guitar 11
T411	Mute Barafon 11	T475	Jazz Organ 10	T539	Hard Barsoon 8
T412	Nay 9	T476	Jazz Organ 11	T540	Kalimba 9
T413	Mute Barafon 12	T477	Electric Vraphone 8	T541	Koto 8
T414	Dual Horns 7	T478	Bodhran 7	T542	Soft Clav. 6
T415	Kawala 8	T479	Steel Bell 2	T543	Xylophone 7
T416	Soft Clav. 4	T480	Synth Harpsi. 5	T544	Soft Clav. 7
T417	Hard Barsoon 5	T481	Marimba 6	T545	Church Bells 6
T418	Dulcimer 7	T482	Marimba 7	T546	Kawala 10
T419	Soft Accord 6	T483	Attack Barafon 7	T547	Didgeridoo 17
T420	Church Bells 5	T484	Castanets 7	T548	Kalimba 10
T421	Shamisen 7	T485	Hard Vibe 9	T549	Castanets 9
T422	Synth Harpsi. 4	T486	Tron Flute 7	T550	Didgeridoo 18
T423	Crystal 5	T487	Soft Accord 7	T551	Bodhran 8
T424	Kawala 9	T488	Shanai 6	T552	English Horn 12
T425	Dual Horns 8	T489	Woodblock 9	T553	Hard Vibe 10
T426	Clavi 8	T490	Soft Sax 10	T554	Bodhran 9
T427	Electric Vraphone 7	T491	Slow Violin 6	T555	Indian Flute 10
T428	Castanets 5	T492	Soft Sax 11	T556	Dulcimer 9
T429	Tenor Sax 5	T493	Chorus Guitar. 4	T557	Soft Clav. 8
T430	Tenor Sax 6	T494	Attack Clav. 7	T558	Viola Attack 5
T431	Didgeridoo 10	T495	Reed Organ 2	T559	Attack Harp
T432	Kalimba 7	T496	Viola Attack 4	T560	Mute Barafon 17
T433	English Horn 9	T497	Koto 7	T561	Tenor Sax 8
T434	Guitar Pinch 6	T498	Tsugaru 8	T562	Twin Bones 7
T435	Hard Vibe 8	T499	Bag Pipe 10	T563	Chorus Guitar. 6
T436	Mute Barafon 13	T500	Attack Clav. 8	T564	Shanai 7
T437	Tenor Sax 7	T501	Tron Flute 8	T565	Kalimba 11
T438	Bag Pipe 8	T502	Marimba 8	T566	Jungle Bass 6

T567	Attack Barafon 8	T631	Koto 11	T695	Viola Attack 9
T568	Soft Clav. 9	T632	Kalimba 12	T696	Hard Vibe 13
T569	Tubular Bells 4	T633	Suona 10	T697	Koto 13
T570	Reed Organ 4	T634	Oct Harp 6	T698	Tenor Sax 9
T571	Guitar Pinch 10	T635	Koto 12	T699	Kawala 15
T572	Bodhran 10	T636	Shanai 8	T700	Steel Bell 6
T573	Clavi 11	T637	Electric Guitar (Clean) 8	T701	Soft Accord 11
T574	Viola Attack 6	T638	Clavi 12	T702	Organ Flute 10
T575	Synth Harpsi. 7	T639	Attack Harp 3	T703	Organ Flute 11
T576	Jungle Bass 7	T640	Attack Clav. 10	T704	Bright String 9
T577	Koto 9	T641	Bright String 6	T705	Soft Santur 11
T578	Church Bells 7	T642	Organ Flute 7	T706	Hard Barsoon 10
T579	Soft Accord 9	T643	Electric Guitar (Clean) 9	T707	Wind Organ 14
T580	Tubular Bells 5	T644	Kawala 12	T708	Synth Harpsi. 11
T581	Bag Pipe 12	T645	Bodhran 11	T709	Soft Sax 19
T582	Grow Guitar 8	T646	Shanai 9	T710	Bright String 10
T583	Mute Barafon 18	T647	Suona 11	T711	Bright String 11
T584	Soft Accord 10	T648	Synth Harpsi. 10	T712	Jungle Bass 9
T585	Electric Guitar (Clean) 6	T649	Bari & Tenor 6	T713	Soft Accord 12
T586	Viola Attack 7	T650	Kawala 13	T714	Reed Horn 8
T587	Kawala 11	T651	Bari & Tenor 7	T715	Slow Violin 10
T588	Soft Santur 7	T652	Reed Horn 7	T716	Synth Harpsi. 12
T589	Bright String 5	T653	Shamisen 10	T717	Attack Harp 6
T590	Electric Guitar (Clean) 7	T654	Soft Clav. 11	T718	Soft Santur 12
T591	Attack Barafon 9	T655	Bari & Tenor 8	T719	Hard Barsoon 11
T592	Electric Viphraphone 9	T656	Soft Santur 9	T720	English Horn 15
T593	Steel Bell 5	T657	Attack Harp 4	T721	Crystal 8
T594	Mute Barafon 19	T658	Bright String 7	T722	Bari & Tenor 10
T595	Chorus Guitar. 7	T659	Guitar Pinch 11	T723	Koto 14
T596	Soft Clav. 10	T660	Wind Organ 11	T724	Didgeridoo 20
T597	Viola Attack 8	T661	Soft Guitar 12	T725	Tenor Sax 10
T598	Church Bells 8	T662	English Horn 14	T726	Bright String 12
T599	Soft Santur 8	T663	Kawala 14	T727	Hard Vibe 14
T600	Wind Organ 10	T664	Grow Guitar 11	T728	Dual Horns 10
T601	Indian Flute 11	T665	Attack Harp 5	T729	Kawala 16
T602	Tsugaru 10	T666	Bari & Tenor 9	T730	Kawala 17
T603	Dulcimer 10	T667	Organ Flute 8	T731	Bag Pipe 13
T604	Grow Guitar 9	T668	Woodblock 10	T732	Electric Guitar (Clean) 10
T605	Tubular Bells 6	T669	Hard Vibe 11	T733	Tron Flute 10
T606	Jungle Bass 8	T670	Mute Barafon 20	T734	Kawala 18
T607	Dulcimer 11	T671	Tubular Bells 7	T735	Tron Flute 11
T608	Organ Flute 6	T672	Suona 12	T736	Tubular Bells 8
T609	Nay 11	T673	Bright String 8	T737	Synth Harpsi. 13
T610	Attack Barafon 10	T674	Hard Vibe 12	T738	Soft Santur 13
T611	English Horn 13	T675	Slow Violin 8	T739	Tubular Bells 9
T612	Suona 8	T676	Shamisen 11	T740	Attack Barafon 11
T613	Reed Organ 5	T677	Tron Flute 9	T741	Attack Barafon 12
T614	Shamisen 8	T678	Attack Clav. 11	T742	Electric Viphraphone 10
T615	Koto 10	T679	Dual Horns 9	T743	Dual Horns 11
T616	Shamisen 9	T680	Wind Organ 12	T744	Shanai 10
T617	Church Bells 9	T681	Twin Bones 8	T745	Bright String 13
T618	Nay 12	T682	Reed Organ 6	T746	Crystal 9
T619	Hard Barsoon 9	T683	Organ Flute 9	T747	Clavi 13
T620	Slow Violin 7	T684	Slow Violin 9	T748	Soft Sax 20
T621	Soft Sax 17	T685	Dulcimer 12	T749	Tron Flute 12
T622	Grow Guitar 10	T686	Tsugaru 11	T750	Dulcimer 14
T623	Attack Harp 2	T687	Wind Organ 13	T751	Slow Violin 11
T624	Suona 9	T688	Soft Santur 10	T752	Tenor Sax 11
T625	Nay 13	T689	Suona 13	T753	Nay 15
T626	Synth Harpsi. 8	T690	Soft Guitar 13	T754	Soft Guitar 15
T627	Didgeridoo 19	T691	Xylophone 8	T755	Shanai 11
T628	Nay 14	T692	Dulcimer 13	T756	Hard Barsoon 12
T629	Synth Harpsi. 9	T693	Marimba 9	T757	Synth Harpsi. 14
T630	Soft Sax 18	T694	Soft Guitar 14	T758	Soft Sax 21

T759	Suona 14	T821	Attack Barafon 14	T883	Crystal 14
T760	Kalimba 13	T822	Electric Vraphone 13	T884	Barafon 9
T761	Suona 15	T823	Soft Guitar 18	T885	Reed Horn 12
T762	Slow Violin 12	T824	Xylophone 11	T886	Dual Horns 13
T763	Reed Organ 7	T825	Tenor Sax 12	T887	Chorus Guitar. 12
T764	Kawala 19	T826	Oct Harp 8	T888	Grow Guitar 13
T765	Reed Horn 9	T827	Shamisen 12	T889	Shanai 12
T766	Attack Harp 7	T828	Reed Horn 10	T890	Twin Bones 12
T767	Oct Harp 7	T829	Marimba 12	T891	Barafon 10
T768	Kalimba 14	T830	Reed Organ 11	T892	Jungle Bass 11
T769	Twin Bones 9	T831	Attack Clav. 13	T893	Marimba 13
T770	Attack Clav. 12	T832	Hard Barsoon 15	T894	Grow Guitar 14
T771	Bari & Tenor 11	T833	Dual Horns 12	T895	Viola Attack 12
T772	Attack Harp 8	T834	Soft Clav. 13	T896	Shamisen 15
T773	English Horn 16	T835	Church Bells 12	T897	Tsugaru 12
T774	Twin Bones 10	T836	Oct Harp 9	T898	Reed Horn 13
T775	Soft Clav. 12	T837	Oct Harp 10	T899	Shanai 13
T776	Tubular Bells 10	T838	Indian Flute 13	T900	Castanets 13
T777	Slow Violin 13	T839	Viola Attack 11	T901	Reed Organ 12
T778	Synth Harpsi. 15	T840	Clavi 14	T902	Twin Bones 13
T779	Guitar Pinch 12	T841	Koto 15	T903	Chorus Guitar. 13
T780	Church Bells 10	T842	Soft Guitar 19	T904	Tron Flute 13
T781	Castanets 10	T843	Castanets 12	T905	Koto 16
T782	Twin Bones 11	T844	Jazz Organ 14	T906	Oct Harp 12
T783	Indian Flute 12	T845	Bag Pipe 14	T907	Grow Guitar 15
T784	Woodblock 11	T846	Steel Bell 8	T908	Shanai 14
T785	Attack Harp 9	T847	Church Bells 13	T909	Electric Giutar (Clean) 12
T786	Crystal 10	T848	Guitar Pinch 13	T910	Castanets 14
T787	Mute Barafon 21	T849	Soft Clav. 14	T911	Reed Organ 13
T788	Synth Harpsi. 16	T850	Tubular Bells 12	T912	Electric Giutar (Clean) 13
T789	Reed Organ 8	T851	Grow Guitar 12	T913	Soft Accord 14
T790	Steel Bell 7	T852	Steel Bell 9	T914	Twin Bones 14
T791	Chorus Guitar. 8	T853	Chorus Guitar. 10	T915	Marimba 14
T792	Reed Organ 9	T854	Crystal 13	T916	Jungle Bass 12
T793	Marimba 10	T855	Reed Horn 11	T917	Electric Giutar (Clean) 14
T794	Electric Vraphone 11	T856	Steel Bell 10	T918	Barafon 11
T795	Soft Guitar 16	T857	Kawala 21	T919	Viola Attack 13
T796	Viola Attack 10	T858	Attack Harp 10	T920	Slow Violin 14
T797	Reed Organ 10	T859	Oct Harp 11	T921	Oct Harp 13
T798	Bari & Tenor 12	T860	Kalimba 15	T922	Dulcimer 15
T799	Soft Sax 22	T861	Tubular Bells 13	T923	Bari & Tenor 13
T800	Jazz Organ 13	T862	Electric Giutar (Clean) 11	T924	Bag Pipe 15
T801	Soft Guitar 17	T863	Jazz Organ 15	T925	Attack Clav. 14
T802	Xylophone 9	T864	Attack Barafon 15	T926	Kalimba 16
T803	Xylophone 10	T865	Soft Guitar 20	T927	Hard Vibe 15
T804	Church Bells 11	T866	Soft Accord 13	T928	Organ Flute 14
T805	Suona 16	T867	Synth Harpsi. 17	T929	Jungle Bass 13
T806	Crystal 11	T868	Bodhran 12	T930	Electric Vraphone 14
T807	Chorus Guitar. 9	T869	Woodblock 12	T931	Viola Attack 14
T808	Crystal 12	T870	Attack Harp 11	T932	Bodhran 13
T809	Hard Barsoon 13	T871	Organ Flute 12	T933	Tubular Bells 15
T810	Castanets 11	T872	Jazz Organ 16	T934	Indian Flute 14
T811	Kawala 20	T873	Didgeridoo 21	T935	Tenor Sax 13
T812	Nay 16	T874	Church Bells 14	T936	Guitar Pinch 14
T813	Tubular Bells 11	T875	Synth Harpsi. 18	T937	Steel Bell 11
T814	Hard Barsoon 14	T876	Chorus Guitar. 11	T938	Tsugaru 13
T815	Barafon 8	T877	Organ Flute 13	T939	Soft Santur 14
T816	Marimba 11	T878	Shamisen 13	T940	Bright String 14
T817	Soft Sax 23	T879	Jungle Bass 10	T941	Oct Harp 14
T818	Attack Barafon 13	T880	Shamisen 14	T942	Attack Harp 12
T819	Electric Vraphone 12	T881	Tubular Bells 14	T943	Church Bells 15
T820	Wind Organ 15	T882	English Horn 17	T944	Tenor Sax 14

T945	Dual Horns 14	T964	Bag Pipe 16	T983	Attack Harp 15
T946	Barafon 12	T965	Viola Attack 15	T984	Koto 17
T947	Steel Bell 12	T966	Steel Bell 14	T985	Reed Organ 15
T948	Marimba 15	T967	Crystal 15	T986	Attack Clav. 15
T949	Electric Vraphone 15	T968	Bright String 15	T987	Clavi 15
T950	Soft Accord 15	T969	Reed Horn 14	T988	Dual Horns 15
T951	Steel Bell 13	T970	Guitar Pinch 15	T989	Steel Bell 15
T952	Tenor Sax 15	T971	Oct Harp 15	T990	Slow Violin 15
T953	Electric Giutar (Clean) 15	T972	Twin Bones 15	T991	Soft Santur 15
T954	Soft Clav. 15	T973	Chorus Guitar. 15	T992	Barafon 14
T955	Bari & Tenor 14	T974	Bari & Tenor 15	T993	Organ Flute 15
T956	Attack Harp 13	T975	Tenor Sax 16	T994	Castanets 15
T957	Chorus Guitar. 14	T976	Indian Flute 15	T995	Guitar Pinch 16
T958	Shanai 15	T977	Bodhran 15	T996	Tron Flute 15
T959	Reed Organ 14	T978	Shamisen 16	T997	Tsugaru 15
T960	Bodhran 14	T979	Attack Harp 14	T998	Reed Horn 15
T961	Jungle Bass 14	T980	Barafon 13	T999	Barafon 15
T962	Tsu aru 14	T981	Jungle Bass 15	T1000	Electric Giutar (Clean) 16
T963	Shanai 16	T982	Tron Flute 14		

22.Appendix 2 (Rhythm comparison table)

R001	8Beat 1	R040	Pop 14	R079	Shuffle 1
R002	8Beat 2	R041	Pop Bolero	R080	Shuffle 2
R003	8Beat 3	R042	Pop BossaNova	R081	Boogie 1
R004	8Beat 4	R043	Pop Waltz	R082	Boogie 2
R005	8Beat 5	R044	Pop Dance	R083	Boogie 3
R006	8Beat 6	R045	Motown	R084	Twist
R007	8Beat 7	R046	British Pop 1	R085	Ballad 1
R008	8Beat 8	R047	British Pop 2	R086	Ballad 2
R009	8Beat 9	R048	British Pop 3	R087	Ballad 3
R010	8Beat 10	R049	Guitar Pop	R088	Ballad 4
R011	8Beat 11	R050	Slow Pop	R089	Ballad 5
R012	8Beat 12	R051	50's Pop	R090	Soul Ballad
R013	8Beat 13	R052	80's Pop	R091	6/8 Ballad
R014	8Beat 14	R053	Rock 1	R092	Acoustic Ballad
R015	8Beat 15	R054	Rock 2	R093	Colour Ballad
R016	8Beat 16	R055	Rock 3	R094	Guitar Ballad
R017	8Beat 17	R056	Rock 4	R095	Piano Ballad
R018	8Beat 18	R057	50's Rock	R096	Organ Ballad
R019	16Beat 1	R058	60's Rock 1	R097	Groove 1
R020	16Beat 2	R059	60's Rock 2	R098	Groove 2
R021	16Beat 3	R060	70's Rock	R099	Groove 3
R022	16Beat 4	R061	80's Rock	R100	Groove 4
R023	16Beat 5	R062	Big Rock	R101	Groove 5
R024	16Beat 6	R063	Power Rock	R102	Groove 6
R025	16Beat 7	R064	Dark Rock	R103	Groove 7
R026	16Beat 8	R065	Jazz Rock	R104	Groove 8
R027	Pop 1	R066	Soft Rock	R105	Groove 9
R028	Pop 2	R067	Pop Rock 1	R106	Piano 1
R029	Pop 3	R068	Pop Rock 2	R107	Piano 2
R030	Pop 4	R069	Funky Rock 1	R108	Piano 3
R031	Pop 5	R070	Funky Rock 2	R109	Piano 4
R032	Pop 6	R071	Ballad Rock	R110	Piano 5
R033	Pop 7	R072	Folk Rock	R111	Piano 6
R034	Pop 8	R073	Slow Rock 1	R112	Piano 7
R035	Pop 9	R074	Slow Rock 2	R113	Piano 8
R036	Pop 10	R075	Slow Rock 3	R114	Piano 9
R037	Pop 11	R076	Slow Rock 4	R115	Piano 10
R038	Pop 12	R077	Rock&Roll 1	R116	Unplugged 1
R039	Pop 13	R078	Rock&Roll 2	R117	Unplugged 2

R118	Unplugged 3	R182	March	R246	Tango4
R119	Unplugged 4	R183	Polka	R247	Tango5
R120	Unplugged 5	R184	Classical 1	R248	Rock &Roll
R121	Unplugged 6	R185	Classical 2	R249	Rock & Roll Shfl1
R122	Unplugged 7	R186	China Folk 1	R250	Oldies R & R
R123	Unplugged 8	R187	China Folk 2	R251	Detroit Pop1
R124	Dance 1	R188	China Opera 1	R252	Detroit Pop2
R125	Dance 2	R189	China Opera 2	R253	Worship Med
R126	Disco	R190	China Ballad	R254	Worship Fast
R127	House	R191	China Pop	R255	Piano Boogie
R128	Euro Beat	R192	Xin Jiang	R256	Lovely Shuffle
R129	Funky Dance	R193	Shan Bei	R257	60's Rock & Roll
R130	80's Dance	R194	Yun Nan	R258	Kool Funk
R131	Techno	R195	He Nan	R259	Blueberry Blues
R132	Fusion	R196	An Hui	R260	Shuffle Blues
R133	Blues 1	R197	Guang Dong	R261	Mambo 4
R134	Blues 2	R198	Xi Zang	R262	Mambo 5
R135	Blues 3	R199	Mongolian	R263	Pop Classics
R136	Funky 1	R200	Korean	R264	Live 8 Beat
R137	Funky 2	R201	J-Pop Hit	R265	Power Rock2
R138	Funky 3	R202	16 Beat Ballad2	R266	Acoustic Rock2
R139	Gospel	R203	70's Pop Ballad	R267	Cool 8 Beat
R140	Rap 1	R204	EP Ballad	R268	Uptempo 8Beat
R141	Rap 2	R205	Power Ballad	R269	90's Rock Ballad
R142	Soul 1	R206	Guitar Ballad2	R270	Chart Rock Shfl2
R143	Soul 2	R207	New R&B Ballad	R271	Brit Pop
R144	Soul 3	R208	Guitar Serenade	R272	Brazilian Samba
R145	Soul 4	R209	Organ Ballad2	R273	Brit Pop Swing
R146	Country 1	R210	Joropo	R274	60's 8 Beat
R147	Country 2	R211	Reggaeton	R275	Fast Bossa
R148	Country 3	R212	French Waltz	R276	60's Guitar Pop
R149	Country 4	R213	Merengue	R277	70's 8 Beat
R150	Country 5	R214	12-8 Ballad	R278	90's Guitar Pop
R151	Jazz 1	R215	Norteno	R279	Soft Rock2
R152	Jazz 2	R216	Jig	R280	Chart Guita rPop
R153	Jazz Waltz	R217	Hawaiian	R281	Gujiira
R154	Jazz Ballad	R218	Electronica	R282	Modern Pop Bld
R155	Lounge	R219	Funky House	R283	Soul
R156	Jive	R220	Club Beat	R284	Skiffle2
R157	Ragtime	R221	Retro Club	R285	6-8Soul
R158	Charlston	R222	Mod Chart Pop	R286	Soul Brothers
R159	Big Band	R223	MOR Swing	R287	Happy Reggae
R160	Swing	R224	Retro Pop	R288	Pop Latin
R161	Caribbean	R225	Rumba Flamenco	R289	6-8Slow Rock
R162	Reggae	R226	Trance Pop	R290	6-8 Modern
R163	Cha Cha	R227	Orch Big Band2	R291	6-8 Orchestral
R164	Rumba	R228	Big Band Fast2	R292	Schlager Shuffle
R165	Samba	R229	Midnight Swing	R293	Schlager Pop
R166	BossaNova	R230	German Rock	R294	Schlager Rumba
R167	Mambo	R231	Schlager Beat	R295	Euro Pop Organ
R168	Salsa	R232	Mellow Hip Hop	R296	70's French Hit
R169	Beguine	R233	Classic Hip Hop	R297	Italian Mazurka
R170	Cumbia	R234	New Hip Hop	R298	Bohemian Waltz
R171	Latin	R235	Duranguense	R299	Schlager Samba1
R172	Baroque	R236	Laff	R300	Schlager Samba2
R173	Bolero	R237	Ober Walzer	R301	Scand Slow Rock
R174	Holly Wood	R238	Bhangra	R302	Schlager 6-8
R175	Foxtrot	R239	Zouk	R303	Schlager Fox
R176	Paso Doble	R240	German March	R304	Highland Waltz
R177	Quick Step	R241	Enka	R305	Italian Polka
R178	Bachata	R242	Bolero Lento	R306	Grupera
R179	Boston	R243	Sherif fReggae	R307	Danzon
R180	Tango	R244	Beguine2	R308	Schlager Alp
R181	Waltz	R245	Latin Disco	R309	Saeidy

R310	Bhajan	R374	Scand Country1	R438	Hoedown
R311	Hip Hop Groove	R375	Scand Country2	R439	Country Shuffle
R312	Chart Pop1	R376	Scand Shuffle	R440	Waltz2
R313	Organ Groove	R377	Worship Slow	R441	Cha Cha2
R314	Chart Pop2	R378	Disco Teens	R442	Rumba2
R315	New R&B	R379	Scand Bugg	R443	Jive2
R316	Pop R&B	R380	Rock Cha Cha	R444	Pasodoble
R317	Chart R&B	R381	Organ Swing	R445	Samba1
R318	Modern Shuffle	R382	Secret Service	R446	Samba2
R319	Blues Rock	R383	Animation Bld	R447	Schlager Rock 1
R320	Dream Dance	R384	Christmas Waltz	R448	Schlager Rock 2
R321	US Chart Hit	R385	Movie Swing	R449	Foxtrot2
R322	Soul R&B	R386	Movie Ballad	R450	Viennese Waltz
R323	R&B Soul Ballad	R387	Bubblegum Pop	R451	Tango2
R324	Euro Hip Hop	R388	Rock & Roll Shfl2	R452	Tango3
R325	Trip Hop	R389	West Coast Pop	R453	German Waltz
R326	Ibiza 2004	R390	Classic 16 Beat	R454	Carnival
R327	Mod Big Band Shfl	R391	Jazz Pop	R455	Organ Samba
R328	Modern Big Band	R392	Kool Shuffle	R456	Reel
R329	Pop Gtr Ballad	R393	8 Beat Ballad2	R457	Gay Gordons
R330	Ibiza 2002	R394	Chillout	R458	Scand Waltz
R331	Euro Trance	R395	16 Beat Ballad1	R459	60's Rock Style
R332	6-8 Trance	R396	Epic Ballad	R460	Standard Rock
R333	Latin DJ's	R397	Easy Ballad	R461	Brit Rock Pop
R334	Bomba	R398	Cuban Son	R462	60's Vintage Rock
R335	Chillout Cafe	R399	Bachata2	R463	Chart Rock Shfl
R336	70's Glam Piano	R400	Forro	R464	60's Pop Rock
R337	French House	R401	70's Chart Ballad	R465	Rock Billy
R338	English Waltz	R402	Romantic Ballad	R466	Rock Boogie
R339	8 Beat Ballad1	R403	90's Cool Ballad	R467	Latin Cha Cha
R340	Club House	R404	Alp Ballad1	R468	Rock Classical
R341	House2	R405	Alp Ballad2	R469	Rock Shuffle
R342	Jazz Gtr Club	R406	E_Ballad	R470	Rock Pop
R343	Modern Jazz	R407	Unplugged 9	R471	Rock'n Roll 1
R344	Acoustic Jazz	R408	Pop Ballad	R472	Rock'n Roll 2
R345	Cool Jazz Ballad	R409	Pop New Age	R473	Straight Rock
R346	Modern Jazz Bld	R410	8 Beat Modern	R474	Jazz Rock2
R347	Easy Listening	R411	Country Ballad1	R475	Fast Gospel
R348	Bebop	R412	Love Song	R476	Folk Rock2
R349	Orch Big Band1	R413	Modern Country Pop	R477	Skiffle
R350	Big Band Fast1	R414	Electro Pop	R478	Funk Pop Rock
R351	Orchestra Swing1	R415	Acoustic Ballad 2	R479	Contemp Rock
R352	Orchestra Swing2	R416	Piano Ballad 1	R480	Acoustic Rock
R353	70's Ranking Country	R417	R&B Ballad	R481	50's Pop2
R354	Jazz Waltz Med	R418	Rock Ballad	R482	Cool Pop
R355	Mariachi Waltz	R419	Slow & Easy	R483	Groovy Pop
R356	US March	R420	Analog Ballad	R484	60's Vintage Pop
R357	Guitar Rumba	R421	Slow Rock 5	R485	80's Pop2
R358	Slow Blues	R422	Slow Rock 6	R486	Rap Pop
R359	Jazz Waltz Fast	R423	Slow Rock 7	R487	Pop Rock 3
R360	70's Country Pop	R424	Slow Soul	R488	60's Soul
R361	Dixieland	R425	8 Beat Adria	R489	70's Soul
R362	40's Big Band	R426	Classic Piano	R490	Funk
R363	Easy Country	R427	80's EP Ballad	R491	16 Beat Shuffle
R364	Country Hits	R428	80's Boy Band	R492	Twist2
R365	Country 8 Beat	R429	Country Ballad2	R493	British Pop 4
R366	Sci-fi March	R430	Country Two Step	R494	British Pop 5
R367	Tap Dance Swing	R431	Country 6	R495	Hard Rock1
R368	Orchestral Bolero	R432	Country 7	R496	Hard Rock2
R369	Gospel Sisters	R433	Finger Pickin	R497	Fusion2
R370	Italian Waltz	R434	Country Brothers	R498	Fusion3
R371	6-8 March	R435	New Country	R499	Funk Shuffl 1
R372	Bluegrass	R436	Brisk Country	R500	Funk Shuffl 2
R373	Mod Cntry Bld1	R437	70's Chart Cntry	R501	Fusion Shuffl 1

R502	Fusion Shuffl 2	R566	Carnival2	R632	Disco Funk2
R503	Club Pop1	R567	BossaNova2	R633	Disco Samba2
R504	Club Pop2	R568	Mambo 2	R634	New Hip Hop2
R505	16 Beat Pop1	R569	Mambo 3	R635	Cat Groove2
R506	16 Beat Pop2	R570	Bolero2	R636	Laff2
R507	8 Beat Pop1	R571	Cumbia3	R637	Pop Waltz3
R508	8 Beat Pop2	R572	Latin Rock	R638	Bhangra2
R509	8 Beat Soul1	R573	Disco Latin	R639	Twist3
R510	8 Beat Soul2	R574	Tijuana	R640	German March2
R511	8 Beat Rock1	R575	Reggae2	R641	Enka2
R512	8 Beat Rock2	R576	Salsa2	R642	Bolero Lento2
R513	Classic 8Beat	R577	Calypso	R643	Midnight Swing2
R514	Vintage Gtr Pop	R578	Guad Dance	R644	French Jazz2
R515	Schlager Italia	R579	Reggae 12Beat	R645	Latin Party Pop2
R516	70's Disco1	R580	Reggae 16Beat	R646	Tango6
R517	70's Disco2	R581	Swing Fox	R647	Tango7
R518	Funky Disco	R582	Slow Fox	R648	Parranda2
R519	Saturday Night	R583	Organ Cha Cha	R649	Latin Rock2
R520	Club Latin	R584	Organ Quick Step	R650	Acoustic Rock3
R521	Disco Chocolate	R585	Cat Groove	R651	80's Pop3
R522	Disco Fox	R586	Dixie Jazz	R652	60's Soul2
R523	Disco Funk	R587	Medium Jazz	R653	Fusion Shuffl3
R524	Disco Hands	R588	Jazz Big Band	R654	Fusion Shuffl4
R525	Disco Party	R589	Jazz Club	R655	16 Beat Pop3
R526	Disco Samba	R590	Ragtime2	R656	16 Beat Pop4
R527	UK Pop	R591	Big Band Shuffle 1	R657	60's Rock 3
R528	Club Dance	R592	Big Band Shuffle 2	R658	Brit Rock Pop2
R529	Modern R&B	R593	Big Band Shuffle 3	R659	Blueberry Blues2
R530	Hip Shuffle	R594	Fast Band 1	R660	Skiffle3
R531	Charleston	R595	Fast Band 2	R661	Mambo6
R532	Disco Pop	R596	Frankly Soul	R662	Mambo7
R533	Disco Soul	R597	Jazz Funk	R663	Club Pop3
R534	Disco Trot	R598	Classic Big Band	R664	Schlager Italia2
R535	Euro Beat2	R599	French Jazz	R665	Power Rock3
R536	Rap 3	R600	Jump Jive	R666	Rock'n Roll 3
R537	Rave	R601	Standard Rock2	R667	Cool8 Beat2
R538	Techno2	R602	16 Beat Ballad3	R668	British Pop6
R539	Techno3	R603	Contemp Rock2	R669	British Pop7
R540	70's Disco Funk	R604	EP Ballad2	R670	8 Beat Soul3
R541	Disco Philly	R605	Fusion4	R671	Brit Pop2
R542	Disco House	R606	Fusion5	R672	Disco Latin2
R543	80's Disco	R607	Funk2	R673	Brit Pop Swing2
R544	Schlager Polka	R608	Guitar Serenade2	R674	Fast Gospel2
R545	Polka Pop	R609	Organ Ballad3	R675	Fast Bossa2
R546	Blue Grass 1	R610	Joropo2	R676	60's Guitar Pop2
R547	Blue Grass 2	R611	Reggaeton2	R677	90's Soul
R548	Blue Grass 3	R612	French Waltz2	R678	Funk Shuffl 3
R549	Pop Waltz2	R613	Merengue2	R679	8 Beat Rock3
R550	USA March	R614	Pop Ballad2	R680	Rock Cha Cha2
R551	Hully Gully	R615	Norteno2	R681	Gujiira2
R552	Tarantella	R616	Jig2	R682	Rock Ballad2
R553	Limbo Rock	R617	Hawaiian2	R683	Soul 5
R554	Swing Waltz	R618	70's Disco3	R684	Classic 8Beat2
R555	Pub Piano	R619	70's Disco4	R685	Bolero3
R556	Jazz Waltz2	R620	Club Beat2	R686	Soul Brothers2
R557	Jazz Waltz3	R621	Rap 4	R687	Happy Reggae2
R558	Show Tune	R622	Disco House2	R688	Pop Latin2
R559	Polka2	R623	MOR Swing2	R689	6-8Slow Rock2
R560	Ober Polka	R624	Retro Pop2	R690	6-8 Modern2
R561	Party Polka	R625	Calypso2	R691	6-8 Orchestral2
R562	Pop Mambo	R626	Trance Pop2	R692	Slow Soul2
R563	Latin Party Pop	R627	Big Band Shuffle4	R693	Piano Ballad3
R564	Cumbia2	R628	Big Band Shuffle5	R694	Disco Trot2
R565	Parranda	R629	Big Band Shuffle6	R695	Disco Hands2
		R630	German Rock2	R696	British Pop8
		R631	Schlager Beat2		

R697	Italian Mazurka2	R763	Easy Country2	R830	Fast Band5
R698	Bohemian Waltz2	R764	Country Hits2	R831	Orchestra Swing5
R699	Samba3	R765	Country 8 Beat2	R832	Movie Ballad3
R700	Samba4	R766	Blue Grass4	R833	Rock & Roll Shfl4
R701	Jive3	R767	Blue Grass5	R834	Hard Rock5
R702	Foxtrot3	R768	Blue Grass6	R835	8 Beat Pop5
R703	Pasodoble2	R769	Gospel Sisters2	R836	8 Beat Pop6
R704	Highland Waltz2	R770	Italian Waltz2	R837	16 Beat Ballad5
R705	Schlager Polka2	R771	Limbo Rock2	R838	Straight Rock3
R706	Grupera2	R772	Bluegrass2	R839	Easy Ballad3
R707	Danzon2	R773	Country Brothers2	R840	Fofo3
R708	Schlager Alp2	R774	Scand Country3	R841	Fusion6
R709	Saeidy2	R775	Scand Country4	R842	Funk3
R710	Bhajan2	R776	Scand Shuffle2	R843	Viennese Waltz3
R711	Hip Hop Groove2	R777	70's Chart Cntry2	R844	Show Tune3
R712	Hip Shuffle2	R778	Pub Piano2	R845	Dixieland3
R713	Organ Groove2	R779	Polka3	R846	Big Band Shuffle7
R714	Chart Pop3	R780	Rock Cha Cha3	R847	Big Band Shuffle8
R715	Country Ballad3	R781	Schlager Rock3	R848	Big Band Shuffle9
R716	Romantic Ballad2	R782	Organ Samba2	R849	Pop Waltz4
R717	Analog Ballad2	R783	Gay Gordons2	R850	USA March3
R718	Electro Pop2	R784	Swing Waltz2	R851	Hully Gully3
R719	Blues Rock2	R785	Reel2	R852	Tarantella2
R720	Rave2	R786	Movie Ballad2	R853	Limbo Rock3
R721	US Chart Hit2	R787	Cool Pop2	R854	Swing Waltz3
R722	Alp Ballad3	R788	Rock & Roll Shfl3	R855	Pub Piano3
R723	8 Beat Modern2	R789	Hard Rock3	R856	Jazz Waltz 5
R724	Euro Hip Hop2	R790	Hard Rock4	R857	Jazz Waltz 6
R725	Disco Pop2	R791	Club Pop4	R858	Show Tune4
R726	Disco Philly2	R792	8 Beat Pop3	R859	Polka4
R727	Mod Big BandShfl2	R793	8 Beat Pop4	R860	Ober Polka3
R728	Modern Big Band2	R794	60's Rock 4	R861	Party Polka2
R729	8 Beat Adria2	R795	16 Beat Ballad4	R862	Waltz3
R730	Disco Chocolate2	R796	Straight Rock2	R863	Cha Cha3
R731	Euro Trance2	R797	Easy Ballad2	R864	Rumba4
R732	Euro Beat3	R798	Pop Mambo2	R865	Jive4
R733	Techno4	R799	BossaNova3	R866	Pasodoble3
R734	Reggae3	R800	Fofo2	R867	Samba5
R735	Chillout Cafe2	R801	Pop Classics2	R868	Samba6
R736	Love Song2	R802	Live 8 Beat2	R869	Schlager Rock5
R737	French House2	R803	Power Rock4	R870	Schlager Rock6
R738	Jazz Waltz4	R804	Acoustic Rock4	R871	Foxtrot4
R739	Classic Piano2	R805	Cool 8 Beat3	R872	Viennese Waltz4
R740	Disco Party2	R806	Uptempo 8Beat2	R873	Tango8
R741	Club Dance2	R807	90's Rock Ballad2	R874	Tango9
R742	Jazz Gtr Club2	R808	Chart Rock Shfl3	R875	Country Ballad5
R743	Modern Jazz2	R809	Brit Pop3	R876	Country Two Step2
R744	Polka Pop2	R810	Brazilian Samba2	R877	Country 8
R745	USA March2	R811	Brit Pop Swing3	R878	Country 9
R746	Ober Polka2	R812	60's 8 Beat2	R879	Finger Pickin3
R747	Easy Listening2	R813	Fast Bossa3	R880	Country Brothers3
R748	Fast Band3	R814	60's Guitar Pop3	R881	New Country2
R749	Fast Band4	R815	90's Soul2	R882	Easy Country3
R750	Big Band Fast3	R816	Gujiira3	R883	70's Chart Cntry3
R751	Orchestra Swing3	R817	Euro Hip Hop3	R884	Hoedown2
R752	Orchestra Swing4	R818	Disco Pop3	R885	Country Shuffle2
R753	Finger Pickin2	R819	Disco Philly3	R886	Schlager Polka3
R754	Hully Gully2	R820	Mod Big BandShfl3	R887	Polka Pop4
R755	Viennese Waltz2	R821	Modern Big Band3	R888	Blue Grass 7
R756	Show Tune2	R822	8 Beat Adria3	R889	Blue Grass 8
R757	Rumba3	R823	Disco Chocolate3	R890	Blue Grass 9
R758	Schlager Rock4	R824	Euro Trance3	R891	70's Disco Funk2
R759	Jazz Waltz Fast2	R825	Love Song3	R892	Disco Philly4
R760	Country Ballad4	R826	Disco Party3	R893	Disco House3
R761	Dixieland2	R827	Club Dance3	R894	80's Disco2
R762	French Jazz3	R828	Modern Jazz3	R895	Swing Fox2
		R829	Polka Pop3	R896	Slow Fox2

R897	Organ Cha Cha2	R931	90's Guitar Pop2	R965	House3
R898	Organ Quick Step2	R932	Soft Rock3	R966	Jazz Gtr Club3
R899	Cat Groove3	R933	Chart Guita rPop2	R967	Modern Jazz4
R900	Dixie Jazz2	R934	Guijira4	R968	Acoustic Jazz2
R901	Medium Jazz2	R935	Easy Listening3	R969	Cool Jazz Ballad2
R902	Jazz Big Band2	R936	Bebop2	R970	Modern Jazz Bld2
R903	Jazz Club2	R937	Orch Big Band3	R971	Modern Pop Bld2
R904	Ragtime3	R938	Big Band Fast4	R972	Soul R&B2
R905	Big Band Shuffle 10	R939	Orchestra Swing6	R973	R&B Soul Ballad2
R906	Big Band Shuffle 11	R940	Orchestra Swing7	R974	Euro Hip Hop4
R907	Big Band Shuffle 12	R941	Rock Cha Cha4	R975	Trip Hop2
R908	Fast Band 6	R942	Organ Swing2	R976	Ibiza 2002_2
R909	Fast Band 7	R943	Secret Service2	R977	Soft Rock4
R910	German Waltz2	R944	Animation Bld2	R978	Chart Guita rPop3
R911	Carnival3	R945	Christmas Waltz2	R979	Guijira5
R912	Organ Samba3	R946	Frankly Soul2	R980	Easy Listening4
R913	Reel3	R947	Jazz Funk2	R981	Bebop3
R914	Gay Gordons3	R948	Classic Big Band2	R982	Orch Big Band4
R915	Scand Waltz2	R949	French Jazz4	R983	Big Band Fast5
R916	Pop Classics3	R950	Jump Jive2	R984	Orchestra Swing8
R917	Live 8 Beat3	R951	Mod Big Band Shfl4	R985	Orchestra Swing9
R918	Power Rock5	R952	Modern Big Band4	R986	Rock Cha Cha5
R919	Acoustic Rock5	R953	Pop Gtr Ballad2	R987	Organ Swing3
R920	Cool 8 Beat4	R954	Ibiza 2002_2	R988	Secret Service3
R921	Uptempo 8Beat3	R955	Euro Trance4	R989	Animation Bld3
R922	90's Rock Ballad3	R956	6-8 Trance2	R990	Reggae4
R923	Chart Rock Shfl4	R957	Latin DJ's2	R991	Frankly Soul3
R924	Brit Pop4	R958	Bomba2	R992	Jazz Funk3
R925	Brazilian Samba3	R959	Chillout Cafe3	R993	Classic Big Band3
R926	Brit Pop Swing4	R960	70's Glam Piano2	R994	French Jazz5
R927	60's 8 Beat3	R961	French House3	R995	Jump Jive3
R928	Fast Bossa4	R962	English Waltz2	R996	Mod Big Band Shfl5
R929	60's Guitar Pop4	R963	8 Beat Ballad3	R997	Modern Big Band5
R930	70's 8 Beat2	R964	Club House2	R998-R1000	Big Band Shuffle 13-15

Appendix 3 (Demonstration Song Comparison Table)

S001	Chopin Fantasia Impromptu	S027	Schumann Frohlicher Landmann
S002	Chopin Nocturne	S028	Schumann Sicilienne
S003	Chopin Petit Chien	S029	Richard Ballade Pour Adeline
S004	Chopin Chanson De L'adieu	S030	Richard Ping Pong Sous Les Arbres
S005	Chopin Nocturne	S031	Richard A Comme Amour
S006	Chopin Black keys	S032	Richard Mariage D'amour
S007	Chopin - Valse op.64 no.2	S033	Mendelssohn Jagerlied op.19b-3
S008	Beethoven- Piano Sonate op. 13 "Pathetique" 2nd mov	S034	Mendelssohn Frühlingslied
S009	Beethoven For Elise	S035	Haydn Little Serenade
S010	Beethoven Mondschein Sonate	S036	Pachelbel Canon In D
S011	Beethoven Minuet In G	S037	Badarzewska Maiden's Prayer
S012	Beethoven Marcia Alla Turca	S038	Liszt Liebestraume
S013	Beethoven piano sonata op.49-2 1st mov	S039	Tchaikovsky- Danse des mirlitons
S014	Beethoven Ecossaise	S040	Oesten Dolly's Dreaming Awakening
S015	Mozart Twinkle Twinkle Little Star	S041	Dvorak Humoresque
S016	Mozart Turkish March	S042	Joplin The Entertainer
S017	Mozart Sonate	S043	Debussy La Fille aux Cheveux de Lin
S018	Mozart Menuett	S044	Debussy Aeabesque
S019	Bach Waltz In A Mino	S045	Dubessy Clair De lune
S020	Bach Menuett	S046	L-C.Daquin Le Coucou
S021	Bach The Well-Tempered Clavier	S047	Karl Bohm The Fountain
S022	Bach Bourree	S048	Burgmüller Pastorale
S023	Bach Invention	S049	Korsakov Bumblebee
S024	Schubert Military Marches	S050	Haydn-Sunrise
S025	Schubert Monents Musicaux	S051-S150	
S026	Schumann Traumerei		Czerny 599 No.001-Czerny 599 No.100

1 Battery



- o please take care off following attentions
- o Do not attempt to disassemble or short-circuit the battery
- o Do not expose or burn it in the fire
- o Do not mix the new and old battery
- o Do not mix different types of batteries
- o Do not charge the battery
- o The positive and negative poles of the battery must be properly installed
- o please remove the battery from the electronic keyboard If you do not use for a long time ,

2 Exception



please do the following steps when exception for the electronic keyboard like fuming , over hot and So on .

- 1) . power off
 - 2) . pull the adaptor down from the power socket on the wall when are using.
 - 3) . contact your local dealer in time.
- It's normal for adaptor getting hot when long time using AC adaptor, not indicate Malfunction

please power off and restart the electronic keyboard when sometime function problem ,

3 Install the battery

- 1) . Exit the screw and remove the battery cover
- 2) . put the battery with correct positive+ and negative- direction into the battery slot with 6*"AA" 1 .5v
- 3) . put the battery cover and Lock the screws

This product contains electronic components and should not allow liquids to enter or be used in damp environments. Daily dust-proof cleaning should be done well , and surface stains can be wiped with a soft and clean cloth.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

VEVOR®

TOUGH TOOLS, HALF PRICE

Support technique et Garantie électronique
Certificat www.vevor.com/support

 
PIANO

UTILISATEUR MANUEL

MODÈLE: BD-881D

Nous continuons à nous engager à vous fournir des outils avec compétitif prix. "Sauvegarder Moitié", "Moitié Prix " ou toute autre expression similaire utilisée par nous seulement représente un estimation des économies que vous pourriez réaliser en achetant certains outils chez nous par rapport aux principaux grandes marques et fait pas signifie nécessairement couvrir tous catégories des outils proposés par nous. Toi nous vous rappelons de bien vouloir vérifier attentivement lorsque vous êtes placer un commander avec nous si tu sont en fait, on économise la moitié par rapport au top majeur marques.

MODÈLE: BD-881D

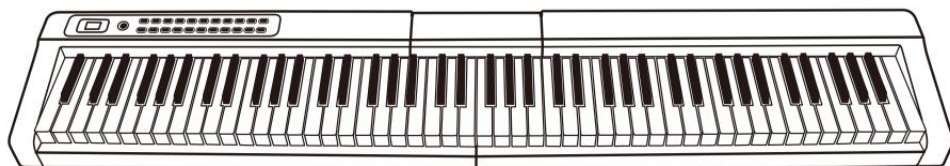

(L'image est à titre indicatif seulement, s'il te plaît se référer à la réel objet)

BESOIN DE L'AIDE? CONTACT NOUS!

Avoir produit Des questions ? Besoin technique soutien? S'il te plaît sentir gratuit à contact nous:

**Assistance technique et certificat de garantie
électronique
www.vevor.com/support**

C'est l'original instruction, s'il vous plaît lisez tout manuel instructions soigneusement avant de l'utiliser. VEVOR se réserve une interprétation claire de notre manuel d'utilisation. L'apparence du produit doit être soumis à la produit vous reçu. S'il te plaît, pardonne nous que nous ne le ferons pas je vous informe à nouveau s'il existe une technologie ou un logiciel mises à jour sur notre produit.

 


Accessoire


Type - C
adaptateur * 1
pouvoir corde * 1
Partition musicale rester * 1

Musique feuille
agrafe * 1
Microphone * 1
Écouteurs * 1

piano
autocollant * 1
piano sac * 1
Midi corde * 1
soutenir pédé l* 1

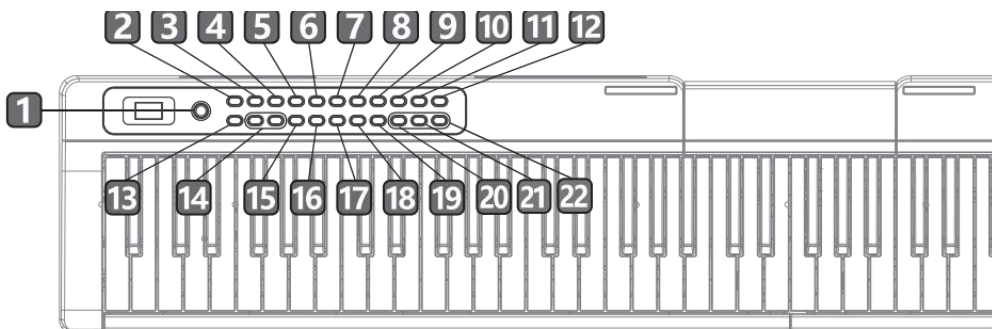

1 Power	6 Volume	11 Key drum	16 Chord	Bluetooth/MP3 mode
2 Tone	7 Rhythm vol	12 Lesson	17 Record	20 ►/⏮
3 Rhythm	8 Tempo	13 Start/stop	18 Play/LED	21 ◀/VOL-
4 Demo One	9 Transpose	14 +/-	19 Metronome	22 ►/VOL+
5 Demo All	10 Dual key	15 Sync/Vel		

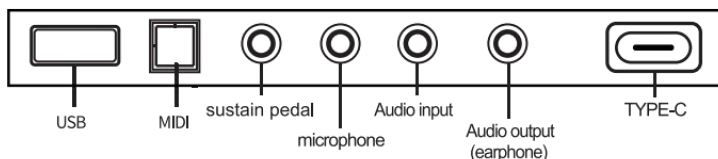 

1. Power

Turn on the [Power] button to play the keyboard and enter the performance state.

2. Tone

After pressing [Tone] button, you can use the [+/-] button to select the tone.

3. Rhythm

After pressing [Rhythm] button, you can use the [+/-] button to select the rhythm.

4. Demo One

Press the [Demo One] for the first time to enter the [Demo One] mode, and press the Demo One for the second time to exit the Demo One mode. After entering the Demo One mode, play the selected song from the next song. When the song finishes playing, the current song is played repeatedly. In the Demo One mode, press the [+/-] key to switch songs.

5. Demo All

Press the [Demo All] for the first time to enter the continuous singing mode, and press the Demo All for the second time to exit the continuous singing mode. After entering continuous singing mode, playback starts from the current song.

When the song is finished, continue to play the next song and play all the songs in a loop. In continuous singing mode, press [+/-] key to switch songs.

6. Volume

After pressing the Volume, you can use the [+] and [-] keys to increase/decrease the volume. The volume control has a total of 16 segments (1~16).

7. Rhythm vol

After pressing the [Rhythm vol], you can use the [+/-] keys to increase/decrease the rhythm volume. The rhythm control has a total of 17 sections (0~16). The Rhythm volume keys can also control the volume of demo songs, chords and drums.

8. Tempo

After pressing the [Tempo], you can use the [+/-] to increase/decrease the speed continuously. The speed control has a total of 270 segments (30~300).

9. Transpose

After pressing the [Transpose] button, you can use the [+/-] button to transpose. There are 25 segments (-12~12) for the transposition control, and the preset value is in the 13th segment after power-on. Hold [+/-] button for more than 1 second, can continuously increase/decrease the transposition. The chord pitch also changes with the transposition value.

10. Dual key

Press [Dual Key] button for the first time to activate the dual keyboard function, and press [Dual Key] button for the second time to cancel the dual keyboard function. When the dual keyboard function is activated, the scales of the left keys A1 ~ B4 will be played corresponding to the scales of A2 ~ B5, and the scales of the right keys C5 ~ C9 will be played corresponding to the scales of C4 ~ C8. You can use the [+] [-] keys to select the main tone to replace the tone of the right key.

11. Key drum

Press [Key Drum] button for the first time to activate the keyboard drum function, and press [Key Drum] button for the second time to cancel the keyboard drum function. When the keyboard drum function is activated, the corresponding drum sound will be played when you play the key.

12. Lesson

Press [Lesson] button for the first time to enter the single-key mode, and press [Lesson] button for the second time to exit the single-key mode.

After entering the one-touch mode, use the current song to teach,

After the song is played, if the user presses the keys at will, it is the main melody. If the main melody does not reach the next bar, the background sound will repeat the bar until the song is played and stop after the song ends.

Press [Lesson] button for the third time to enter the ensemble mode, and press [Lesson] button for the fourth time to exit the ensemble mode.

After entering the ensemble mode, the current song is used for teaching. After the song is played, the user can play the keys at will and interrupt the main string rhythm. If not pressed the key again after 5 seconds, the main string rhythm will automatically resume playback. The background sound is played completely, and the teaching is repeated until the end of the song. After the song is over the ensemble will play a song.

Press [Lesson] button the fifth time to enter the follow-up mode, and press [Lesson] the sixth time to exit the follow-up mode.

After entering the follow-up mode, the current song is used for teaching. After the song is played, the main melody is not played, and the user must follow the notes displayed on the digital tube. Press the corresponding key to continue to play the next note, and the background sound will repeat that measure until the song ends.

Press the corresponding key to continue to play the next note, and the background sound will repeat that measure until the song ends.

In the teaching mode, [+/-] button automatically enters the song selection mode, and exits the teaching mode to return to the tone selection mode.

Press [Tone] button while playing the music will temporarily switch to the tone selection mode, and return to the song selection mode in 3 seconds.

13. Start/stop

Press the [Start/Stop] button for the first time to start playing the rhythm, and press the [Start/Stop] button for the second time to stop playing the rhythm.

Exit this mode under the mode of teaching, recording, playback, metronome, demo music, etc.

14. -/+

There are [+] and [-] sequential selection, a total of 2 keys. Can be used to select the tone, rhythm, song, volume, accompaniment volume, speed, transpose quickly.

If the number pressed exceeds the maximum number of tone, rhythms or songs, the original value will be maintained.

15. Sync/Vel

Press [Sync/Vel] for the first time to enter the sync mode, and press the Sync for the second time to exit the sync mode. When entering the sync mode, stop playing the rhythm, and then press the first 34 keys to automatically play the selected rhythm (chord). For the chord synchronization part, please refer to the single fingering accompaniment or multi-fingering accompaniment instructions.

(The default value of power on is the key strength off. Long press this key for 5 seconds to control the key strength on/off.)

16. Chord

Press [Chord] button for the first time to enter the integrated chord mode, and press [Chord] button for the second time to exit the integrated chord mode. [Chord] button only works in rhythm and normal mode. When playing the rhythm, press [Chord] button and press the fingering within the range of the keys A1 ~ F4#, and then you can hear the corresponding chord accompaniment sound. If you don't press the fingering of the fingering, the single fingering will be played. Refers to the chord of the chord fingering.

When the rhythm is not playing, press [Chord] button and press the fingering within the range of keys A1 ~ F4#, and you will hear the corresponding chord sound. If you do not press the fingering of the fingering, the single fingering will be played. Refers to the chord tone. For the detailed fingering of the integrated fingering accompaniment, please refer to the single fingered chord table and the multi-finger chord table attached. The integrated fingering can be used with rhythm/chord/synchronization.

17. Record

Press the [Recording] button the first time to enter the recording mode, and the last record will be cleared; pressing the [recording] button for the second time will exit the recording mode. In the recording mode, the metronome will be played, and you can start recording by pressing any key. The maximum number of recordings is 700. When the recording is full, the next note cannot be recorded; during recording, you can press the [Play] button at any time to play the recorded notes or drum sounds.

18. Play/LED

Press [Play/LED] for the first time to play the recorded note or drum sound, and press the Play/LED for the second time to stop playing. Press the Play to exit the recording mode. If there is no recorded value before, press Play and no action will occur. (The default value for powering on is that the keyboard light is on. Press and hold this button for 5 seconds to control the keyboard LED on/off.)

19. Metronome

Press [Metronome] button, the action function is 1/4 beat ~ 7/4 beat + stop-+ beat. 4. The preset value of tempo is 120. There are 7 variations of the metronome sound, in sequence from 1/4 beat to 7/4 beat. When recording, press [Metronome] button to switch the metronome sound.

Bluetooth/MP3 mode

20. Press [⏮/⏭] shortly (within 1 second) to play or pause the song. In pause mode, press [⏮/⏭] to continue playing the song.

21. Press [⏮/VOL-] shortly (within 1 second) to select the previous song. Press the [⏮/VOL-] for more than 1 second to decrease the volume.

22. Press [⏭/VOL+] shortly (within 1 second) to select the next song. Press [⏭/VOL+] for more than 1 second to increase the volume.

Appendix 1 (Voice Comparison Table)

T001	Acoustic Grand Piano	T055	Synth Voice	T119	Synth Drum
T002	Bright Acoustic Piano	T056	Orchestra Hit	T120	Reverse Cymbal
T003	Electric Grand Piano	T057	Trumpet	T121	Guitar Fret Noise
T004	Honky-tonk Piano	T058	Trombone	T122	Breath Noise
T005	Rhodes Piano	T059	Tuba	T123	Seashore
T006	Chorused Piano	T060	Muted Trumpet	T124	Bird Tweet
T007	Harpsichord	T061	French Horn	T125	Telephone Ring
T008	Clavichord	T062	Brass Section	T126	Helicopter
T009	Celesta	T063	Synth Brass 1	T127	Applause
T010	Glockenspiel	T064	Synth Brass 2	T128	Gunshot
T011	Music box	T065	Soprano Sax	T129	Yong Gin
T012	Vibraphone	T066	Alto Sax	T130	Zheng
T013	Marimba	T067	Tenor Sax	T131	Zhong Ruan
T014	Xylophone	T068	Baritone Sax	T132	Pi Pa
T015	Tubular Bell	T069	Oboe	T133	Big Souna
T016	Dulcimer	T070	English Horn	T134	Souna
T017	Drawbar Organ	T071	Bassoon	T135	Er Hu
T018	Percussive Organ	T072	Clarinet	T136	Yue Hu
T019	Rock Organ	T073	Piccolo	T137	Di Zi
T020	Church Organ	T074	Flute	T138	Bong Di
T021	Reed Organ	T075	Recorder	T139	Koto 2
T022	Accordion	T076	Pan Flute	T140	Qu Di
T023	Harmonica	T077	Bottle Blow	T141	Jungle Bass
T024	Tango Accordion	T078	Shakuhachi	T142	Koto 3
T025	Acoustic Guitar (nylon)	T079	Whistle	T143	Marimba 2
T026	Acoustic Guitar (steel)	T080	Ocarina	T144	Tsugaru
T027	Electric Guitar (jazz)	T081	Lead 1 (square)	T145	Kawala
T028	Electric Guitar (clean)	T082	Lead 2 (sawtooth)	T146	Attack Clav.
T029	Electric Guitar (muted)	T083	Lead 3 (calliope lead)	T147	Crystal
T030	Overdriven Guitar	T084	Lead 4 (chiff lead)	T148	Bright String
T031	Distortion Guitar	T085	Lead 5 (charang)	T149	Clavi 2
T032	Guitar Harmonics	T086	Lead 6 (voice)	T150	Chorus Guitar.
T033	Acoustic Bass	T087	Lead 7 (fifths)	T151	Barafon
T034	Electric Bass(finger)	T088	Lead 8 (bass+lead)	T152	Jazz Organ
T035	Electric Bass (pick)	T089	Pad 1 (new age)	T153	Indian Flute
T036	Fretless Bass	T090	Pad 2 (warm)	T154	Mute Barafon
T037	Slap Bass 1	T091	Pad 3 (polysynth)	T155	Dual Horns
T038	Slap Bass 2	T092	Pad 4 (choir)	T156	Electric Giutar (Clean) 2
T039	Synth Bass 1	T093	Pad 5 (bowed)	T157	Clavi 3
T040	Synth Bass 2	T094	Pad 6 (metallic)	T158	Soft Sax
T041	Violin	T095	Pad 7 (halo)	T159	Electric Vipraphone
T042	Viola	T096	Pad 8 (sweep)	T160	Didgeridoo
T043	Cello	T097	FX 1 (rain)	T161	Barafon 2
T044	Contrabass	T098	FX 2 (soundtrack)	T162	Tubular Bells 2
T045	Tremolo Strings	T099	FX 3 (crystal)	T163	Soft Accord
T046	Pizzicato Strings	T100	FX 4 (atmosphere)	T164	Barafon 3
T047	Orchestral Harp	T101	FX 5 (brightness)	T165	Clavi 4
T048	Timpani	T102	FX 6 (goblins)	T166	Nay
T049	String Ensemble 1	T103	FX 7 (echoes)	T167	Oct Harp
T050	String Ensemble 2	T104	FX 8 (sci-fi)	T168	Attack Barafon
T051	Synth Strings 1	T105	Sitar	T169	Clavi 5
T052	Synth Strings 2	T106	Banjo	T170	Kalimba 2
T053	Choir Aahs	T107	Shamisen	T171	Tsugaru 2
T054	Voice Oohs	T108	Koto	T172	Shamisen 2
		T109	Kalimba	T173	Woodblock 2
		T110	Bagpipe	T174	Crystal 2
		T111	Fiddle	T175	Shamisen 3
		T112	Shanai	T176	Synth Harpsi.
		T113	Tinkle Bell	T177	Jazz Organ 2
		T114	Agogo	T178	Viola Attack
		T115	Steel Drums	T179	Viola Attack 2
		T116	Woodblock	T180	Hard Barsoon
		T117	Taiko Drum	T181	Mute Barafon 2
		T118	Melodic Tom	T182	Bodhran

T183	Kawala 2	T247	Tsugaru 4	T311	Attack Barafon 4
T184	Didgeridoo 2	T248	Tsugaru 5	T312	Hard Barsoon 3
T185	Soft Guitar	T249	Mute Barafon 4	T313	Dulcimer 4
T186	Suona 2	T250	Dual Horns 4	T314	Twin Bones 4
T187	Twin Bones	T251	Soft Sax 3	T315	Soft Sax 5
T188	Jazz Organ 3	T252	Bodhran 3	T316	Shamisen 5
T189	Woodblock 3	T253	Guitar Pinch 3	T317	Suona 4
T190	Soft Santur	T254	Crystal 3	T318	Bodhran 4
T191	Koto 4	T255	Grow Guitar 2	T319	Shamisen 6
T192	Castanets	T256	Jazz Organ 6	T320	Electric Vraphone 6
T193	Viola Attack 3	T257	Attack Barafon 2	T321	Tsugaru 7
T194	Woodblock 4	T258	Xylophone 4	T322	Oct Harp 3
T195	Bright String 2	T259	Soft Santur 3	T323	Kalimba 4
T196	Twin Bones 2	T260	Kawala 4	T324	Soft Clav. 2
T197	Tenor Sax 2	T261	Soft Guitar 5	T325	English Horn 4
T198	Wind Organ	T262	Nay 4	T326	Didgeridoo 6
T199	Tron Flute	T263	Synth Harpsi. 3	T327	Barafon 4
T200	Bodhran 2	T264	Wind Organ 3	T328	Indian Flute 7
T201	Tron Flute 2	T265	Shanai 2	T329	Organ Flute 2
T202	Jazz Organ 4	T266	Woodblock 6	T330	Soft Santur 4
T203	Soft Santur 2	T267	Electric Vraphone 4	T331	Mute Barafon 7
T204	Woodblock 5	T268	Kawala 5	T332	Nay 7
T205	Shamisen 4	T269	Grow Guitar 3	T333	Hard Vibe 5
T206	Indian Flute 2	T270	Grow Guitar 4	T334	Bari & Tenor 4
T207	Electric Vraphone 2	T271	Steel Bell	T335	Bag Pipe 4
T208	Soft Guitar 2	T272	Wind Organ 4	T336	Tenor Sax 3
T209	Mute Barafon 3	T273	Soft Accord 2	T337	Organ Flute 3
T210	Dual Horns 2	T274	Kalimba 3	T338	Dulcimer 5
T211	Xylophone 2	T275	Twin Bones 3	T339	Twin Bones 5
T212	Didgeridoo 3	T276	Church Bells 3	T340	Grow Guitar 5
T213	Wind Organ 2	T277	Koto 6	T341	Kalimba 5
T214	Church Bells 2	T278	Attack Barafon 3	T342	Oct Harp 4
T215	Tsugaru 3	T279	Mute Barafon 5	T343	Nay 8
T216	Nay 2	T280	Nay 5	T344	Dual Horns 5
T217	Guitar Pinch 2	T281	Jungle Bass 2	T345	Didgeridoo 7
T218	Grow Guitar	T282	Soft Accord 3	T346	English Horn 5
T219	Indian Flute 3	T283	Hard Vibe 3	T347	Kawala 6
T220	Synth Harpsi. 2	T284	Soft Clav.	T348	Marimba 5
T221	Soft Sax 2	T285	Bag Pipe 2	T349	Barafon 5
T222	Xylophone 3	T286	Oct Harp 2	T350	Soft Accord 5
T223	English Horn 2	T287	Woodblock 7	T351	Mute Barafon 8
T224	Soft Guitar 3	T288	Mute Barafon 6	T352	Dual Horns 6
T225	Castanets 2	T289	Guitar Pinch 4	T353	Church Bells 4
T226	Soft Guitar 4	T290	Dulcimer 3	T354	Wind Organ 5
T227	Hard Vibe 2	T291	Soft Sax 4	T355	Attack Clav. 5
T228	Reed Horn	T292	Electric Vraphone 5	T356	Jazz Organ 7
T229	Nay 3	T293	Tsugaru 6	T357	Reed Horn 3
T230	Bari & Tenor	T294	Reed Horn 2	T358	Tenor Sax 4
T231	Kawala 3	T295	Castanets 3	T359	Chorus Guitar. 2
T232	Indian Flute 4	T296	Tron Flute 3	T360	Didgeridoo 8
T233	Didgeridoo 4	T297	Attack Clav. 3	T361	Soft Santur 5
T234	Attack Clav. 2	T298	Bari & Tenor 3	T362	Clavi 6
T235	Marimba 3	T299	Indian Flute 6	T363	Kalimba 6
T236	Bari & Tenor 2	T300	Soft Guitar 6	T364	Didgeridoo 9
T237	Slow Violin	T301	Nay 6	T365	Wind Organ 6
T238	Organ Flute	T302	Didgeridoo 5	T366	Tron Flute 4
T239	Jazz Organ 5	T303	Marimba 4	T367	Soft Sax 6
T240	Electric Vraphone 3	T304	Attack Clav. 4	T368	Suona 5
T241	Dual Horns 3	T305	Jungle Bass 3	T369	Soft Guitar 7
T242	Indian Flute 5	T306	Hard Barsoon 2	T370	Hard Vibe 6
T243	English Horn 3	T307	Suona 3	T371	Jazz Organ 8
T244	Dulcimer 2	T308	Hard Vibe 4	T372	Grow Guitar 6
T245	Koto 5	T309	Bag Pipe 3	T373	Xylophone 5
T246	Tubular Bells 3	T310	Soft Accord 4	T374	Bag Pipe 5

T375	Bag Pipe 6	T439	Shanai 5	T503	Bag Pipe 11
T376	Clavi 7	T440	English Horn 10	T504	Hard Barsoon 7
T377	Hard Vibe 7	T441	Didgeridoo 11	T505	Mute Barafon 15
T378	Kawala 7	T442	Organ Flute 5	T506	Soft Sax 12
T379	Shanai 3	T443	Attack Barafon 6	T507	Attack Clav. 9
T380	Suona 6	T444	Jungle Bass 5	T508	Jazz Organ 12
T381	Jungle Bass 4	T445	Barafon 7	T509	Soft Guitar 9
T382	Grow Guitar 7	T446	Soft Santur 6	T510	Didgeridoo 13
T383	Bag Pipe 7	T447	Slow Violin 3	T511	Bright String 4
T384	Crystal 4	T448	Hard Barsoon 6	T512	Electric Giutar (Clean) 4
T385	Guitar Pinch 5	T449	Didgeridoo 12	T513	Tsugaru 9
T386	Woodblock 8	T450	Kalimba 8	T514	Nay 10
T387	Soft Sax 7	T451	Electric Giutar (Clean) 3	T515	Reed Horn 6
T388	Attack Barafon 5	T452	Dulcimer 8	T516	Didgeridoo 14
T389	Barafon 6	T453	Reed Horn 5	T517	Soft Clav. 5
T390	Organ Flute 4	T454	Bodhran 5	T518	Soft Sax 13
T391	Mute Barafon 9	T455	Soft Sax 9	T519	Reed Organ 3
T392	Shanai 4	T456	Mute Barafon 14	T520	Steel Bell 3
T393	Soft Clav. 3	T457	Guitar Pinch 7	T521	Clavi 10
T394	Oct Harp 5	T458	Wind Organ 7	T522	Wind Organ 8
T395	Tron Flute 5	T459	Guitar Pinch 8	T523	Synth Harpsi. 6
T396	Bright String 3	T460	Indian Flute 9	T524	Bari & Tenor 5
T397	Jazz Organ 9	T461	Bag Pipe 9	T525	Steel Bell 4
T398	Mute Barafon 10	T462	Crystal 6	T526	Soft Sax 14
T399	Slow Violin 2	T463	Twin Bones 6	T527	Castanets 8
T400	Soft Sax 8	T464	Crystal 7	T528	Didgeridoo 15
T401	English Horn 6	T465	Soft Guitar 8	T529	Soft Sax 15
T402	Reed Horn 4	T466	Guitar Pinch 9	T530	Mute Barafon 16
T403	Indian Flute 8	T467	Attack Clav. 6	T531	Soft Guitar 10
T404	Castanets 4	T468	Bodhran 6	T532	Soft Accord 8
T405	English Horn 7	T469	Suona 7	T533	Wind Organ 9
T406	Tron Flute 6	T470	Chorus Guitar. 3	T534	Didgeridoo 16
T407	English Horn 8	T471	Slow Violin 4	T535	Electric Giutar (Clean) 5
T408	Hard Barsoon 4	T472	Clavi 9	T536	English Horn 11
T409	Dulcimer 6	T473	Castanets 6	T537	Soft Sax 16
T410	Xylophone 6	T474	Slow Violin 5	T538	Soft Guitar 11
T411	Mute Barafon 11	T475	Jazz Organ 10	T539	Hard Barsoon 8
T412	Nay 9	T476	Jazz Organ 11	T540	Kalimba 9
T413	Mute Barafon 12	T477	Electric Vraphone 8	T541	Koto 8
T414	Dual Horns 7	T478	Bodhran 7	T542	Soft Clav. 6
T415	Kawala 8	T479	Steel Bell 2	T543	Xylophone 7
T416	Soft Clav. 4	T480	Synth Harpsi. 5	T544	Soft Clav. 7
T417	Hard Barsoon 5	T481	Marimba 6	T545	Church Bells 6
T418	Dulcimer 7	T482	Marimba 7	T546	Kawala 10
T419	Soft Accord 6	T483	Attack Barafon 7	T547	Didgeridoo 17
T420	Church Bells 5	T484	Castanets 7	T548	Kalimba 10
T421	Shamisen 7	T485	Hard Vibe 9	T549	Castanets 9
T422	Synth Harpsi. 4	T486	Tron Flute 7	T550	Didgeridoo 18
T423	Crystal 5	T487	Soft Accord 7	T551	Bodhran 8
T424	Kawala 9	T488	Shanai 6	T552	English Horn 12
T425	Dual Horns 8	T489	Woodblock 9	T553	Hard Vibe 10
T426	Clavi 8	T490	Soft Sax 10	T554	Bodhran 9
T427	Electric Vraphone 7	T491	Slow Violin 6	T555	Indian Flute 10
T428	Castanets 5	T492	Soft Sax 11	T556	Dulcimer 9
T429	Tenor Sax 5	T493	Chorus Guitar. 4	T557	Soft Clav. 8
T430	Tenor Sax 6	T494	Attack Clav. 7	T558	Viola Attack 5
T431	Didgeridoo 10	T495	Reed Organ 2	T559	Attack Harp
T432	Kalimba 7	T496	Viola Attack 4	T560	Mute Barafon 17
T433	English Horn 9	T497	Koto 7	T561	Tenor Sax 8
T434	Guitar Pinch 6	T498	Tsugaru 8	T562	Twin Bones 7
T435	Hard Vibe 8	T499	Bag Pipe 10	T563	Chorus Guitar. 6
T436	Mute Barafon 13	T500	Attack Clav. 8	T564	Shanai 7
T437	Tenor Sax 7	T501	Tron Flute 8	T565	Kalimba 11
T438	Bag Pipe 8	T502	Marimba 8	T566	Jungle Bass 6

T567	Attack Barafon 8	T631	Koto 11	T695	Viola Attack 9
T568	Soft Clav. 9	T632	Kalimba 12	T696	Hard Vibe 13
T569	Tubular Bells 4	T633	Suona 10	T697	Koto 13
T570	Reed Organ 4	T634	Oct Harp 6	T698	Tenor Sax 9
T571	Guitar Pinch 10	T635	Koto 12	T699	Kawala 15
T572	Bodhran 10	T636	Shanai 8	T700	Steel Bell 6
T573	Clavi 11	T637	Electric Guitar (Clean) 8	T701	Soft Accord 11
T574	Viola Attack 6	T638	Clavi 12	T702	Organ Flute 10
T575	Synth Harpsi. 7	T639	Attack Harp 3	T703	Organ Flute 11
T576	Jungle Bass 7	T640	Attack Clav. 10	T704	Bright String 9
T577	Koto 9	T641	Bright String 6	T705	Soft Santur 11
T578	Church Bells 7	T642	Organ Flute 7	T706	Hard Barsoon 10
T579	Soft Accord 9	T643	Electric Guitar (Clean) 9	T707	Wind Organ 14
T580	Tubular Bells 5	T644	Kawala 12	T708	Synth Harpsi. 11
T581	Bag Pipe 12	T645	Bodhran 11	T709	Soft Sax 19
T582	Grow Guitar 8	T646	Shanai 9	T710	Bright String 10
T583	Mute Barafon 18	T647	Suona 11	T711	Bright String 11
T584	Soft Accord 10	T648	Synth Harpsi. 10	T712	Jungle Bass 9
T585	Electric Guitar (Clean) 6	T649	Bari & Tenor 6	T713	Soft Accord 12
T586	Viola Attack 7	T650	Kawala 13	T714	Reed Horn 8
T587	Kawala 11	T651	Bari & Tenor 7	T715	Slow Violin 10
T588	Soft Santur 7	T652	Reed Horn 7	T716	Synth Harpsi. 12
T589	Bright String 5	T653	Shamisen 10	T717	Attack Harp 6
T590	Electric Guitar (Clean) 7	T654	Soft Clav. 11	T718	Soft Santur 12
T591	Attack Barafon 9	T655	Bari & Tenor 8	T719	Hard Barsoon 11
T592	Electric Viphraphone 9	T656	Soft Santur 9	T720	English Horn 15
T593	Steel Bell 5	T657	Attack Harp 4	T721	Crystal 8
T594	Mute Barafon 19	T658	Bright String 7	T722	Bari & Tenor 10
T595	Chorus Guitar. 7	T659	Guitar Pinch 11	T723	Koto 14
T596	Soft Clav. 10	T660	Wind Organ 11	T724	Didgeridoo 20
T597	Viola Attack 8	T661	Soft Guitar 12	T725	Tenor Sax 10
T598	Church Bells 8	T662	English Horn 14	T726	Bright String 12
T599	Soft Santur 8	T663	Kawala 14	T727	Hard Vibe 14
T600	Wind Organ 10	T664	Grow Guitar 11	T728	Dual Horns 10
T601	Indian Flute 11	T665	Attack Harp 5	T729	Kawala 16
T602	Tsugaru 10	T666	Bari & Tenor 9	T730	Kawala 17
T603	Dulcimer 10	T667	Organ Flute 8	T731	Bag Pipe 13
T604	Grow Guitar 9	T668	Woodblock 10	T732	Electric Guitar (Clean) 10
T605	Tubular Bells 6	T669	Hard Vibe 11	T733	Tron Flute 10
T606	Jungle Bass 8	T670	Mute Barafon 20	T734	Kawala 18
T607	Dulcimer 11	T671	Tubular Bells 7	T735	Tron Flute 11
T608	Organ Flute 6	T672	Suona 12	T736	Tubular Bells 8
T609	Nay 11	T673	Bright String 8	T737	Synth Harpsi. 13
T610	Attack Barafon 10	T674	Hard Vibe 12	T738	Soft Santur 13
T611	English Horn 13	T675	Slow Violin 8	T739	Tubular Bells 9
T612	Suona 8	T676	Shamisen 11	T740	Attack Barafon 11
T613	Reed Organ 5	T677	Tron Flute 9	T741	Attack Barafon 12
T614	Shamisen 8	T678	Attack Clav. 11	T742	Electric Viphraphone 10
T615	Koto 10	T679	Dual Horns 9	T743	Dual Horns 11
T616	Shamisen 9	T680	Wind Organ 12	T744	Shanai 10
T617	Church Bells 9	T681	Twin Bones 8	T745	Bright String 13
T618	Nay 12	T682	Reed Organ 6	T746	Crystal 9
T619	Hard Barsoon 9	T683	Organ Flute 9	T747	Clavi 13
T620	Slow Violin 7	T684	Slow Violin 9	T748	Soft Sax 20
T621	Soft Sax 17	T685	Dulcimer 12	T749	Tron Flute 12
T622	Grow Guitar 10	T686	Tsugaru 11	T750	Dulcimer 14
T623	Attack Harp 2	T687	Wind Organ 13	T751	Slow Violin 11
T624	Suona 9	T688	Soft Santur 10	T752	Tenor Sax 11
T625	Nay 13	T689	Suona 13	T753	Nay 15
T626	Synth Harpsi. 8	T690	Soft Guitar 13	T754	Soft Guitar 15
T627	Didgeridoo 19	T691	Xylophone 8	T755	Shanai 11
T628	Nay 14	T692	Dulcimer 13	T756	Hard Barsoon 12
T629	Synth Harpsi. 9	T693	Marimba 9	T757	Synth Harpsi. 14
T630	Soft Sax 18	T694	Soft Guitar 14	T758	Soft Sax 21

T759	Suona 14	T821	Attack Barafon 14	T883	Crystal 14
T760	Kalimba 13	T822	Electric Viaphone 13	T884	Barafon 9
T761	Suona 15	T823	Soft Guitar 18	T885	Reed Horn 12
T762	Slow Violin 12	T824	Xylophone 11	T886	Dual Horns 13
T763	Reed Organ 7	T825	Tenor Sax 12	T887	Chorus Guitar. 12
T764	Kawala 19	T826	Oct Harp 8	T888	Grow Guitar 13
T765	Reed Horn 9	T827	Shamisen 12	T889	Shanai 12
T766	Attack Harp 7	T828	Reed Horn 10	T890	Twin Bones 12
T767	Oct Harp 7	T829	Marimba 12	T891	Barafon 10
T768	Kalimba 14	T830	Reed Organ 11	T892	Jungle Bass 11
T769	Twin Bones 9	T831	Attack Clav. 13	T893	Marimba 13
T770	Attack Clav. 12	T832	Hard Barsoon 15	T894	Grow Guitar 14
T771	Bari & Tenor 11	T833	Dual Horns 12	T895	Viola Attack 12
T772	Attack Harp 8	T834	Soft Clav. 13	T896	Shamisen 15
T773	English Horn 16	T835	Church Bells 12	T897	Tsugaru 12
T774	Twin Bones 10	T836	Oct Harp 9	T898	Reed Horn 13
T775	Soft Clav. 12	T837	Oct Harp 10	T899	Shanai 13
T776	Tubular Bells 10	T838	Indian Flute 13	T900	Castanets 13
T777	Slow Violin 13	T839	Viola Attack 11	T901	Reed Organ 12
T778	Synth Harpsi. 15	T840	Clavi 14	T902	Twin Bones 13
T779	Guitar Pinch 12	T841	Koto 15	T903	Chorus Guitar. 13
T780	Church Bells 10	T842	Soft Guitar 19	T904	Tron Flute 13
T781	Castanets 10	T843	Castanets 12	T905	Koto 16
T782	Twin Bones 11	T844	Jazz Organ 14	T906	Oct Harp 12
T783	Indian Flute 12	T845	Bag Pipe 14	T907	Grow Guitar 15
T784	Woodblock 11	T846	Steel Bell 8	T908	Shanai 14
T785	Attack Harp 9	T847	Church Bells 13	T909	Electric Giutar (Clean) 12
T786	Crystal 10	T848	Guitar Pinch 13	T910	Castanets 14
T787	Mute Barafon 21	T849	Soft Clav. 14	T911	Reed Organ 13
T788	Synth Harpsi. 16	T850	Tubular Bells 12	T912	Electric Giutar (Clean) 13
T789	Reed Organ 8	T851	Grow Guitar 12	T913	Soft Accord 14
T790	Steel Bell 7	T852	Steel Bell 9	T914	Twin Bones 14
T791	Chorus Guitar. 8	T853	Chorus Guitar. 10	T915	Marimba 14
T792	Reed Organ 9	T854	Crystal 13	T916	Jungle Bass 12
T793	Marimba 10	T855	Reed Horn 11	T917	Electric Giutar (Clean) 14
T794	Electric Viaphone 11	T856	Steel Bell 10	T918	Barafon 11
T795	Soft Guitar 16	T857	Kawala 21	T919	Viola Attack 13
T796	Viola Attack 10	T858	Attack Harp 10	T920	Slow Violin 14
T797	Reed Organ 10	T859	Oct Harp 11	T921	Oct Harp 13
T798	Bari & Tenor 12	T860	Kalimba 15	T922	Dulcimer 15
T799	Soft Sax 22	T861	Tubular Bells 13	T923	Bari & Tenor 13
T800	Jazz Organ 13	T862	Electric Giutar (Clean) 11	T924	Bag Pipe 15
T801	Soft Guitar 17	T863	Jazz Organ 15	T925	Attack Clav. 14
T802	Xylophone 9	T864	Attack Barafon 15	T926	Kalimba 16
T803	Xylophone 10	T865	Soft Guitar 20	T927	Hard Vibe 15
T804	Church Bells 11	T866	Soft Accord 13	T928	Organ Flute 14
T805	Suona 16	T867	Synth Harpsi. 17	T929	Jungle Bass 13
T806	Crystal 11	T868	Bodhran 12	T930	Electric Viaphone 14
T807	Chorus Guitar. 9	T869	Woodblock 12	T931	Viola Attack 14
T808	Crystal 12	T870	Attack Harp 11	T932	Bodhran 13
T809	Hard Barsoon 13	T871	Organ Flute 12	T933	Tubular Bells 15
T810	Castanets 11	T872	Jazz Organ 16	T934	Indian Flute 14
T811	Kawala 20	T873	Didgeridoo 21	T935	Tenor Sax 13
T812	Nay 16	T874	Church Bells 14	T936	Guitar Pinch 14
T813	Tubular Bells 11	T875	Synth Harpsi. 18	T937	Steel Bell 11
T814	Hard Barsoon 14	T876	Chorus Guitar. 11	T938	Tsugaru 13
T815	Barafon 8	T877	Organ Flute 13	T939	Soft Santur 14
T816	Marimba 11	T878	Shamisen 13	T940	Bright String 14
T817	Soft Sax 23	T879	Jungle Bass 10	T941	Oct Harp 14
T818	Attack Barafon 13	T880	Shamisen 14	T942	Attack Harp 12
T819	Electric Viaphone 12	T881	Tubular Bells 14	T943	Church Bells 15
T820	Wind Organ 15	T882	English Horn 17	T944	Tenor Sax 14

T945	Dual Horns 14	T964	Bag Pipe 16	T983	Attack Harp 15
T946	Barafon 12	T965	Viola Attack 15	T984	Koto 17
T947	Steel Bell 12	T966	Steel Bell 14	T985	Reed Organ 15
T948	Marimba 15	T967	Crystal 15	T986	Attack Clav. 15
T949	Electric Vraphone 15	T968	Bright String 15	T987	Clavi 15
T950	Soft Accord 15	T969	Reed Horn 14	T988	Dual Horns 15
T951	Steel Bell 13	T970	Guitar Pinch 15	T989	Steel Bell 15
T952	Tenor Sax 15	T971	Oct Harp 15	T990	Slow Violin 15
T953	Electric Guita (Clean) 15	T972	Twin Bones 15	T991	Soft Santur 15
T954	Soft Clav. 15	T973	Chorus Guitar. 15	T992	Barafon 14
T955	Bari & Tenor 14	T974	Bari & Tenor 15	T993	Organ Flute 15
T956	Attack Harp 13	T975	Tenor Sax 16	T994	Castanets 15
T957	Chorus Guitar. 14	T976	Indian Flute 15	T995	Guitar Pinch 16
T958	Shanai 15	T977	Bodhran 15	T996	Tron Flute 15
T959	Reed Organ 14	T978	Shamisen 16	T997	Tsugaru 15
T960	Bodhran 14	T979	Attack Harp 14	T998	Reed Horn 15
T961	Jungle Bass 14	T980	Barafon 13	T999	Barafon 15
T962	Tsu aru 14	T981	Jungle Bass 15	T1000	Electric Guita (Clean) 16
T963	Shanai 16	T982	Tron Flute 14		

22.Appendix 2 (Rhythm comparison table)

R001	8Beat 1	R040	Pop 14	R079	Shuffle 1
R002	8Beat 2	R041	Pop Bolero	R080	Shuffle 2
R003	8Beat 3	R042	Pop BossaNova	R081	Boogie 1
R004	8Beat 4	R043	Pop Waltz	R082	Boogie 2
R005	8Beat 5	R044	Pop Dance	R083	Boogie 3
R006	8Beat 6	R045	Motown	R084	Twist
R007	8Beat 7	R046	British Pop 1	R085	Ballad 1
R008	8Beat 8	R047	British Pop 2	R086	Ballad 2
R009	8Beat 9	R048	British Pop 3	R087	Ballad 3
R010	8Beat 10	R049	Guitar Pop	R088	Ballad 4
R011	8Beat 11	R050	Slow Pop	R089	Ballad 5
R012	8Beat 12	R051	50's Pop	R090	Soul Ballad
R013	8Beat 13	R052	80's Pop	R091	6/8 Ballad
R014	8Beat 14	R053	Rock 1	R092	Acoustic Ballad
R015	8Beat 15	R054	Rock 2	R093	Colour Ballad
R016	8Beat 16	R055	Rock 3	R094	Guitar Ballad
R017	8Beat 17	R056	Rock 4	R095	Piano Ballad
R018	8Beat 18	R057	50's Rock	R096	Organ Ballad
R019	16Beat 1	R058	60's Rock 1	R097	Groove 1
R020	16Beat 2	R059	60's Rock 2	R098	Groove 2
R021	16Beat 3	R060	70's Rock	R099	Groove 3
R022	16Beat 4	R061	80's Rock	R100	Groove 4
R023	16Beat 5	R062	Big Rock	R101	Groove 5
R024	16Beat 6	R063	Power Rock	R102	Groove 6
R025	16Beat 7	R064	Dark Rock	R103	Groove 7
R026	16Beat 8	R065	Jazz Rock	R104	Groove 8
R027	Pop 1	R066	Soft Rock	R105	Groove 9
R028	Pop 2	R067	Pop Rock 1	R106	Piano 1
R029	Pop 3	R068	Pop Rock 2	R107	Piano 2
R030	Pop 4	R069	Funky Rock 1	R108	Piano 3
R031	Pop 5	R070	Funky Rock 2	R109	Piano 4
R032	Pop 6	R071	Ballad Rock	R110	Piano 5
R033	Pop 7	R072	Folk Rock	R111	Piano 6
R034	Pop 8	R073	Slow Rock 1	R112	Piano 7
R035	Pop 9	R074	Slow Rock 2	R113	Piano 8
R036	Pop 10	R075	Slow Rock 3	R114	Piano 9
R037	Pop 11	R076	Slow Rock 4	R115	Piano 10
R038	Pop 12	R077	Rock&Roll 1	R116	Unplugged 1
R039	Pop 13	R078	Rock&Roll 2	R117	Unplugged 2

R118	Unplugged 3	R182	March	R246	Tango4
R119	Unplugged 4	R183	Polka	R247	Tango5
R120	Unplugged 5	R184	Classical 1	R248	Rock &Roll
R121	Unplugged 6	R185	Classical 2	R249	Rock & Roll Shfl1
R122	Unplugged 7	R186	China Folk 1	R250	Oldies R & R
R123	Unplugged 8	R187	China Folk 2	R251	Detroit Pop1
R124	Dance 1	R188	China Opera 1	R252	Detroit Pop2
R125	Dance 2	R189	China Opera 2	R253	Worship Med
R126	Disco	R190	China Ballad	R254	Worship Fast
R127	House	R191	China Pop	R255	Piano Boogie
R128	Euro Beat	R192	Xin Jiang	R256	Lovely Shuffle
R129	Funky Dance	R193	Shan Bei	R257	60's Rock & Roll
R130	80's Dance	R194	Yun Nan	R258	Kool Funk
R131	Techno	R195	He Nan	R259	Blueberry Blues
R132	Fusion	R196	An Hui	R260	Shuffle Blues
R133	Blues 1	R197	Guang Dong	R261	Mambo 4
R134	Blues 2	R198	Xi Zang	R262	Mambo 5
R135	Blues 3	R199	Mongolian	R263	Pop Classics
R136	Funky 1	R200	Korean	R264	Live 8 Beat
R137	Funky 2	R201	J-Pop Hit	R265	Power Rock2
R138	Funky 3	R202	16 Beat Ballad2	R266	Acoustic Rock2
R139	Gospel	R203	70's Pop Ballad	R267	Cool 8 Beat
R140	Rap 1	R204	EP Ballad	R268	Uptempo 8Beat
R141	Rap 2	R205	Power Ballad	R269	90's Rock Ballad
R142	Soul 1	R206	Guitar Ballad2	R270	Chart Rock Shfl2
R143	Soul 2	R207	New R&B Ballad	R271	Brit Pop
R144	Soul 3	R208	Guitar Serenade	R272	Brazilian Samba
R145	Soul 4	R209	Organ Ballad2	R273	Brit Pop Swing
R146	Country 1	R210	Joropo	R274	60's 8 Beat
R147	Country 2	R211	Reggaeton	R275	Fast Bossa
R148	Country 3	R212	French Waltz	R276	60's Guitar Pop
R149	Country 4	R213	Merengue	R277	70's 8 Beat
R150	Country 5	R214	12-8 Ballad	R278	90's Guitar Pop
R151	Jazz 1	R215	Norteno	R279	Soft Rock2
R152	Jazz 2	R216	Jig	R280	Chart Guita rPop
R153	Jazz Waltz	R217	Hawaiian	R281	Gujiira
R154	Jazz Ballad	R218	Electronica	R282	Modern Pop Bld
R155	Lounge	R219	Funky House	R283	Soul
R156	Jive	R220	Club Beat	R284	Skiffle2
R157	Ragtime	R221	Retro Club	R285	6-8Soul
R158	Charlston	R222	Mod Chart Pop	R286	Soul Brothers
R159	Big Band	R223	MOR Swing	R287	Happy Reggae
R160	Swing	R224	Retro Pop	R288	Pop Latin
R161	Caribbean	R225	Rumba Flamenco	R289	6-8Slow Rock
R162	Reggae	R226	Trance Pop	R290	6-8 Modern
R163	Cha Cha	R227	Orch Big Band2	R291	6-8 Orchestral
R164	Rumba	R228	Big Band Fast2	R292	Schlager Shuffle
R165	Samba	R229	Midnight Swing	R293	Schlager Pop
R166	BossaNova	R230	German Rock	R294	Schlager Rumba
R167	Mambo	R231	Schlager Beat	R295	Euro Pop Organ
R168	Salsa	R232	Mellow Hip Hop	R296	70's French Hit
R169	Beguine	R233	Classic Hip Hop	R297	Italian Mazurka
R170	Cumbia	R234	New Hip Hop	R298	Bohemian Waltz
R171	Latin	R235	Duranguense	R299	Schlager Samba1
R172	Baroque	R236	Laff	R300	Schlager Samba2
R173	Bolero	R237	Ober Walzer	R301	Scand Slow Rock
R174	Holly Wood	R238	Bhangra	R302	Schlager 6-8
R175	Foxtrot	R239	Zouk	R303	Schlager Fox
R176	Paso Doble	R240	German March	R304	Highland Waltz
R177	Quick Step	R241	Enka	R305	Italian Polka
R178	Bachata	R242	Bolero Lento	R306	Grupera
R179	Boston	R243	Sherif fReggae	R307	Danzon
R180	Tango	R244	Beguine2	R308	Schlager Alp
R181	Waltz	R245	Latin Disco	R309	Saeidy

R310	Bhajan	R374	Scand Country1	R438	Hoedown
R311	Hip Hop Groove	R375	Scand Country2	R439	Country Shuffle
R312	Chart Pop1	R376	Scand Shuffle	R440	Waltz2
R313	Organ Groove	R377	Worship Slow	R441	Cha Cha2
R314	Chart Pop2	R378	Disco Teens	R442	Rumba2
R315	New R&B	R379	Scand Bugg	R443	Jive2
R316	Pop R&B	R380	Rock Cha Cha	R444	Pasodoble
R317	Chart R&B	R381	Organ Swing	R445	Samba1
R318	Modern Shuffle	R382	Secret Service	R446	Samba2
R319	Blues Rock	R383	Animation Bld	R447	Schlager Rock 1
R320	Dream Dance	R384	Christmas Waltz	R448	Schlager Rock 2
R321	US Chart Hit	R385	Movie Swing	R449	Foxtrot2
R322	Soul R&B	R386	Movie Ballad	R450	Viennese Waltz
R323	R&B Soul Ballad	R387	Bubblegum Pop	R451	Tango2
R324	Euro Hip Hop	R388	Rock & Roll Shfl2	R452	Tango3
R325	Trip Hop	R389	West Coast Pop	R453	German Waltz
R326	Ibiza 2004	R390	Classic 16 Beat	R454	Carnival
R327	Mod Big Band Shfl	R391	Jazz Pop	R455	Organ Samba
R328	Modern Big Band	R392	Kool Shuffle	R456	Reel
R329	Pop Gtr Ballad	R393	8 Beat Ballad2	R457	Gay Gordons
R330	Ibiza 2002	R394	Chillout	R458	Scand Waltz
R331	Euro Trance	R395	16 Beat Ballad1	R459	60's Rock Style
R332	6-8 Trance	R396	Epic Ballad	R460	Standard Rock
R333	Latin DJ's	R397	Easy Ballad	R461	Brit Rock Pop
R334	Bomba	R398	Cuban Son	R462	60's Vintage Rock
R335	Chillout Cafe	R399	Bachata2	R463	Chart Rock Shfl
R336	70's Glam Piano	R400	Forro	R464	60's Pop Rock
R337	French House	R401	70's Chart Ballad	R465	Rock Billy
R338	English Waltz	R402	Romantic Ballad	R466	Rock Boogie
R339	8 Beat Ballad1	R403	90's Cool Ballad	R467	Latin Cha Cha
R340	Club House	R404	Alp Ballad1	R468	Rock Classical
R341	House2	R405	Alp Ballad2	R469	Rock Shuffle
R342	Jazz Gtr Club	R406	E_Ballad	R470	Rock Pop
R343	Modern Jazz	R407	Unplugged 9	R471	Rock'n Roll 1
R344	Acoustic Jazz	R408	Pop Ballad	R472	Rock'n Roll 2
R345	Cool Jazz Ballad	R409	Pop New Age	R473	Straight Rock
R346	Modern Jazz Bld	R410	8 Beat Modern	R474	Jazz Rock2
R347	Easy Listening	R411	Country Ballad1	R475	Fast Gospel
R348	Bebop	R412	Love Song	R476	Folk Rock2
R349	Orch Big Band1	R413	Modern Country Pop	R477	Skiffle
R350	Big Band Fast1	R414	Electro Pop	R478	Funk Pop Rock
R351	Orchestra Swing1	R415	Acoustic Ballad 2	R479	Contemp Rock
R352	Orchestra Swing2	R416	Piano Ballad 1	R480	Acoustic Rock
R353	70's Ranking Country	R417	R&B Ballad	R481	50's Pop2
R354	Jazz Waltz Med	R418	Rock Ballad	R482	Cool Pop
R355	Mariachi Waltz	R419	Slow & Easy	R483	Groovy Pop
R356	US March	R420	Analog Ballad	R484	60's Vintage Pop
R357	Guitar Rumba	R421	Slow Rock 5	R485	80's Pop2
R358	Slow Blues	R422	Slow Rock 6	R486	Rap Pop
R359	Jazz Waltz Fast	R423	Slow Rock 7	R487	Pop Rock 3
R360	70's Country Pop	R424	Slow Soul	R488	60's Soul
R361	Dixieland	R425	8 Beat Adria	R489	70's Soul
R362	40's Big Band	R426	Classic Piano	R490	Funk
R363	Easy Country	R427	80's EP Ballad	R491	16 Beat Shuffle
R364	Country Hits	R428	80's Boy Band	R492	Twist2
R365	Country 8 Beat	R429	Country Ballad2	R493	British Pop 4
R366	Sci-fi March	R430	Country Two Step	R494	British Pop 5
R367	Tap Dance Swing	R431	Country 6	R495	Hard Rock1
R368	Orchestral Bolero	R432	Country 7	R496	Hard Rock2
R369	Gospel Sisters	R433	Finger Pickin	R497	Fusion2
R370	Italian Waltz	R434	Country Brothers	R498	Fusion3
R371	6-8 March	R435	New Country	R499	Funk Shuffl 1
R372	Bluegrass	R436	Brisk Country	R500	Funk Shuffl 2
R373	Mod Cntry Bld1	R437	70's Chart Cntry	R501	Fusion Shuffl 1

R502	Fusion Shuffl 2	R566	Carnival2	R632	Disco Funk2
R503	Club Pop1	R567	BossaNova2	R633	Disco Samba2
R504	Club Pop2	R568	Mambo 2	R634	New Hip Hop2
R505	16 Beat Pop1	R569	Mambo 3	R635	Cat Groove2
R506	16 Beat Pop2	R570	Bolero2	R636	Laff2
R507	8 Beat Pop1	R571	Cumbia3	R637	Pop Waltz3
R508	8 Beat Pop2	R572	Latin Rock	R638	Bhangra2
R509	8 Beat Soul1	R573	Disco Latin	R639	Twist3
R510	8 Beat Soul2	R574	Tijuana	R640	German March2
R511	8 Beat Rock1	R575	Reggae2	R641	Enka2
R512	8 Beat Rock2	R576	Salsa2	R642	Bolero Lento2
R513	Classic 8Beat	R577	Calypso	R643	Midnight Swing2
R514	Vintage Gtr Pop	R578	Guad Dance	R644	French Jazz2
R515	Schlager Italia	R579	Reggae 12Beat	R645	Latin Party Pop2
R516	70's Disco1	R580	Reggae 16Beat	R646	Tango6
R517	70's Disco2	R581	Swing Fox	R647	Tango7
R518	Funky Disco	R582	Slow Fox	R648	Parranda2
R519	Saturday Night	R583	Organ Cha Cha	R649	Latin Rock2
R520	Club Latin	R584	Organ Quick Step	R650	Acoustic Rock3
R521	Disco Chocolate	R585	Cat Groove	R651	80's Pop3
R522	Disco Fox	R586	Dixie Jazz	R652	60's Soul2
R523	Disco Funk	R587	Medium Jazz	R653	Fusion Shuffl3
R524	Disco Hands	R588	Jazz Big Band	R654	Fusion Shuffl4
R525	Disco Party	R589	Jazz Club	R655	16 Beat Pop3
R526	Disco Samba	R590	Ragtime2	R656	16 Beat Pop4
R527	UK Pop	R591	Big Band Shuffle 1	R657	60's Rock 3
R528	Club Dance	R592	Big Band Shuffle 2	R658	Brit Rock Pop2
R529	Modern R&B	R593	Big Band Shuffle 3	R659	Blueberry Blues2
R530	Hip Shuffle	R594	Fast Band 1	R660	Skiffle3
R531	Charleston	R595	Fast Band 2	R661	Mambo6
R532	Disco Pop	R596	Frankly Soul	R662	Mambo7
R533	Disco Soul	R597	Jazz Funk	R663	Club Pop3
R534	Disco Trot	R598	Classic Big Band	R664	Schlager Italia2
R535	Euro Beat2	R599	French Jazz	R665	Power Rock3
R536	Rap 3	R600	Jump Jive	R666	Rock'n Roll 3
R537	Rave	R601	Standard Rock2	R667	Cool8 Beat2
R538	Techno2	R602	16 Beat Ballad3	R668	British Pop6
R539	Techno3	R603	Contemp Rock2	R669	British Pop7
R540	70's Disco Funk	R604	EP Ballad2	R670	8 Beat Soul3
R541	Disco Philly	R605	Fusion4	R671	Brit Pop2
R542	Disco House	R606	Fusion5	R672	Disco Latin2
R543	80's Disco	R607	Funk2	R673	Brit Pop Swing2
R544	Schlager Polka	R608	Guitar Serenade2	R674	Fast Gospel2
R545	Polka Pop	R609	Organ Ballad3	R675	Fast Bossa2
R546	Blue Grass 1	R610	Joropo2	R676	60's Guitar Pop2
R547	Blue Grass 2	R611	Reggaeton2	R677	90's Soul
R548	Blue Grass 3	R612	French Waltz2	R678	Funk Shuffl 3
R549	Pop Waltz2	R613	Merengue2	R679	8 Beat Rock3
R550	USA March	R614	Pop Ballad2	R680	Rock Cha Cha2
R551	Hully Gully	R615	Norteno2	R681	Guijira2
R552	Tarantella	R616	Jig2	R682	Rock Ballad2
R553	Limbo Rock	R617	Hawaiian2	R683	Soul 5
R554	Swing Waltz	R618	70's Disco3	R684	Classic 8Beat2
R555	Pub Piano	R619	70's Disco4	R685	Bolero3
R556	Jazz Waltz2	R620	Club Beat2	R686	Soul Brothers2
R557	Jazz Waltz3	R621	Rap 4	R687	Happy Reggae2
R558	Show Tune	R622	Disco House2	R688	Pop Latin2
R559	Polka2	R623	MOR Swing2	R689	6-8Slow Rock2
R560	Ober Polka	R624	Retro Pop2	R690	6-8 Modern2
R561	Party Polka	R625	Calypso2	R691	6-8 Orchestral2
R562	Pop Mambo	R626	Trance Pop2	R692	Slow Soul2
R563	Latin Party Pop	R627	Big Band Shuffle4	R693	Piano Ballad3
R564	Cumbia2	R628	Big Band Shuffle5	R694	Disco Trot2
R565	Parranda	R629	Big Band Shuffle6	R695	Disco Hands2
		R630	German Rock2	R696	British Pop8
		R631	Schlager Beat2		

R697	Italian Mazurka2	R763	Easy Country2	R830	Fast Band5
R698	Bohemian Waltz2	R764	Country Hits2	R831	Orchestra Swing5
R699	Samba3	R765	Country 8 Beat2	R832	Movie Ballad3
R700	Samba4	R766	Blue Grass4	R833	Rock & Roll Shfl4
R701	Jive3	R767	Blue Grass5	R834	Hard Rock5
R702	Foxtrot3	R768	Blue Grass6	R835	8 Beat Pop5
R703	Pasodoble2	R769	Gospel Sisters2	R836	8 Beat Pop6
R704	Highland Waltz2	R770	Italian Waltz2	R837	16 Beat Ballad5
R705	Schlager Polka2	R771	Limbo Rock2	R838	Straight Rock3
R706	Grupera2	R772	Bluegrass2	R839	Easy Ballad3
R707	Danzon2	R773	Country Brothers2	R840	Fofo3
R708	Schlager Alp2	R774	Scand Country3	R841	Fusion6
R709	Saeidy2	R775	Scand Country4	R842	Funk3
R710	Bhajan2	R776	Scand Shuffle2	R843	Viennese Waltz3
R711	Hip Hop Groove2	R777	70's Chart Cntry2	R844	Show Tune3
R712	Hip Shuffle2	R778	Pub Piano2	R845	Dixieland3
R713	Organ Groove2	R779	Polka3	R846	Big Band Shuffle7
R714	Chart Pop3	R780	Rock Cha Cha3	R847	Big Band Shuffle8
R715	Country Ballad3	R781	Schlager Rock3	R848	Big Band Shuffle9
R716	Romantic Ballad2	R782	Organ Samba2	R849	Pop Waltz4
R717	Analog Ballad2	R783	Gay Gordons2	R850	USA March3
R718	Electro Pop2	R784	Swing Waltz2	R851	Hully Gully3
R719	Blues Rock2	R785	Reel2	R852	Tarantella2
R720	Rave2	R786	Movie Ballad2	R853	Limbo Rock3
R721	US Chart Hit2	R787	Cool Pop2	R854	Swing Waltz3
R722	Alp Ballad3	R788	Rock & Roll Shfl3	R855	Pub Piano3
R723	8 Beat Modern2	R789	Hard Rock3	R856	Jazz Waltz 5
R724	Euro Hip Hop2	R790	Hard Rock4	R857	Jazz Waltz 6
R725	Disco Pop2	R791	Club Pop4	R858	Show Tune4
R726	Disco Philly2	R792	8 Beat Pop3	R859	Polka4
R727	Mod Big BandShfl2	R793	8 Beat Pop4	R860	Ober Polka3
R728	Modern Big Band2	R794	60's Rock 4	R861	Party Polka2
R729	8 Beat Adria2	R795	16 Beat Ballad4	R862	Waltz3
R730	Disco Chocolate2	R796	Straight Rock2	R863	Cha Cha3
R731	Euro Trance2	R797	Easy Ballad2	R864	Rumba4
R732	Euro Beat3	R798	Pop Mambo2	R865	Jive4
R733	Techno4	R799	BossaNova3	R866	Pasodoble3
R734	Reggae3	R800	Fofo2	R867	Samba5
R735	Chillout Cafe2	R801	Pop Classics2	R868	Samba6
R736	Love Song2	R802	Live 8 Beat2	R869	Schlager Rock5
R737	French House2	R803	Power Rock4	R870	Schlager Rock6
R738	Jazz Waltz4	R804	Acoustic Rock4	R871	Foxtrot4
R739	Classic Piano2	R805	Cool 8 Beat3	R872	Viennese Waltz4
R740	Disco Party2	R806	Uptempo 8Beat2	R873	Tango8
R741	Club Dance2	R807	90's Rock Ballad2	R874	Tango9
R742	Jazz Gtr Club2	R808	Chart Rock Shfl3	R875	Country Ballad5
R743	Modern Jazz2	R809	Brit Pop3	R876	Country Two Step2
R744	Polka Pop2	R810	Brazilian Samba2	R877	Country 8
R745	USA March2	R811	Brit Pop Swing3	R878	Country 9
R746	Ober Polka2	R812	60's 8 Beat2	R879	Finger Pickin3
R747	Easy Listening2	R813	Fast Bossa3	R880	Country Brothers3
R748	Fast Band3	R814	60's Guitar Pop3	R881	New Country2
R749	Fast Band4	R815	90's Soul2	R882	Easy Country3
R750	Big Band Fast3	R816	Gujiira3	R883	70's Chart Cntry3
R751	Orchestra Swing3	R817	Euro Hip Hop3	R884	Hoedown2
R752	Orchestra Swing4	R818	Disco Pop3	R885	Country Shuffle2
R753	Finger Pickin2	R819	Disco Philly3	R886	Schlager Polka3
R754	Hully Gully2	R820	Mod Big BandShfl3	R887	Polka Pop4
R755	Viennese Waltz2	R821	Modern Big Band3	R888	Blue Grass 7
R756	Show Tune2	R822	8 Beat Adria3	R889	Blue Grass 8
R757	Rumba3	R823	Disco Chocolate3	R890	Blue Grass 9
R758	Schlager Rock4	R824	Euro Trance3	R891	70's Disco Funk2
R759	Jazz Waltz Fast2	R825	Love Song3	R892	Disco Philly4
R760	Country Ballad4	R826	Disco Party3	R893	Disco House3
R761	Dixieland2	R827	Club Dance3	R894	80's Disco2
R762	French Jazz3	R828	Modern Jazz3	R895	Swing Fox2
		R829	Polka Pop3	R896	Slow Fox2

R897	Organ Cha Cha2	R931	90's Guitar Pop2	R965	House3
R898	Organ Quick Step2	R932	Soft Rock3	R966	Jazz Gtr Club3
R899	Cat Groove3	R933	Chart Guita rPop2	R967	Modern Jazz4
R900	Dixie Jazz2	R934	Guijira4	R968	Acoustic Jazz2
R901	Medium Jazz2	R935	Easy Listening3	R969	Cool Jazz Ballad2
R902	Jazz Big Band2	R936	Bebop2	R970	Modern Jazz Bld2
R903	Jazz Club2	R937	Orch Big Band3	R971	Modern Pop Bld2
R904	Ragtime3	R938	Big Band Fast4	R972	Soul R&B2
R905	Big Band Shuffle 10	R939	Orchestra Swing6	R973	R&B Soul Ballad2
R906	Big Band Shuffle 11	R940	Orchestra Swing7	R974	Euro Hip Hop4
R907	Big Band Shuffle 12	R941	Rock Cha Cha4	R975	Trip Hop2
R908	Fast Band 6	R942	Organ Swing2	R976	Ibiza 2002_2
R909	Fast Band 7	R943	Secret Service2	R977	Soft Rock4
R910	German Waltz2	R944	Animation Bld2	R978	Chart Guita rPop3
R911	Carnival3	R945	Christmas Waltz2	R979	Guijira5
R912	Organ Samba3	R946	Frankly Soul2	R980	Easy Listening4
R913	Reel3	R947	Jazz Funk2	R981	Bebop3
R914	Gay Gordons3	R948	Classic Big Band2	R982	Orch Big Band4
R915	Scand Waltz2	R949	French Jazz4	R983	Big Band Fast5
R916	Pop Classics3	R950	Jump Jive2	R984	Orchestra Swing8
R917	Live 8 Beat3	R951	Mod Big Band Shfl4	R985	Orchestra Swing9
R918	Power Rock5	R952	Modern Big Band4	R986	Rock Cha Cha5
R919	Acoustic Rock5	R953	Pop Gtr Ballad2	R987	Organ Swing3
R920	Cool 8 Beat4	R954	Ibiza 2002_2	R988	Secret Service3
R921	Uptempo 8Beat3	R955	Euro Trance4	R989	Animation Bld3
R922	90's Rock Ballad3	R956	6-8 Trance2	R990	Reggae4
R923	Chart Rock Shfl4	R957	Latin DJ's2	R991	Frankly Soul3
R924	Brit Pop4	R958	Bomba2	R992	Jazz Funk3
R925	Brazilian Samba3	R959	Chillout Cafe3	R993	Classic Big Band3
R926	Brit Pop Swing4	R960	70's Glam Piano2	R994	French Jazz5
R927	60's 8 Beat3	R961	French House3	R995	Jump Jive3
R928	Fast Bossa4	R962	English Waltz2	R996	Mod Big Band Shfl5
R929	60's Guitar Pop4	R963	8 Beat Ballad3	R997	Modern Big Band5
R930	70's 8 Beat2	R964	Club House2	R998-R1000	Big Band Shuffle 13-15

Appendix 3 (Demonstration Song Comparison Table)

S001	Chopin Fantasia Impromptu	S027	Schumann Frohlicher Landmann
S002	Chopin Nocturne	S028	Schumann Sicilienne
S003	Chopin Petit Chien	S029	Richard Ballade Pour Adeline
S004	Chopin Chanson De L'adieu	S030	Richard Ping Pong Sous Les Arbres
S005	Chopin Nocturne	S031	Richard A Comme Amour
S006	Chopin Black keys	S032	Richard Mariage D'amour
S007	Chopin - Valse op.64 no.2	S033	Mendelssohn Jagerlied op.19b-3
S008	Beethoven- Piano Sonate op. 13 "Pathetique" 2nd mov	S034	Mendelssohn Frühlingslied
S009	Beethoven For Elise	S035	Haydn Little Serenade
S010	Beethoven Mondschein Sonate	S036	Pachelbel Canon In D
S011	Beethoven Minuet In G	S037	Badarzewska Maiden's Prayer
S012	Beethoven Marcia Alla Turca	S038	Liszt Liebestraume
S013	Beethoven piano sonata op.49-2 1st mov	S039	Tchaikovsky- Danse des mirlitons
S014	Beethoven Ecossaise	S040	Oesten Dolly's Dreaming Awakening
S015	Mozart Twinkle Twinkle Little Star	S041	Dvorak Humoresque
S016	Mozart Turkish March	S042	Joplin The Entertainer
S017	Mozart Sonate	S043	Debussy La Fille aux Cheveux de Lin
S018	Mozart Menuett	S044	Debussy Aeabesque
S019	Bach Waltz In A Mino	S045	Dubessy Clair De lune
S020	Bach Menuett	S046	L-C.Daquin Le Coucou
S021	Bach The Well-Tempered Clavier	S047	Karl Bohm The Fountain
S022	Bach Bourree	S048	Burgmüller Pastorale
S023	Bach Invention	S049	Korsakov Bumblebee
S024	Schubert Military Marches	S050	Haydn-Sunrise
S025	Schubert Monents Musicaux	S051-S150	
S026	Schumann Traumerei		Czerny 599 No.001-Czerny 599 No.100

1 Battery



ou S'il te plaît, prends soin de toi désactivé attentions suivantes
ou Faire n'essayez pas de démonter ou court-circuiter le batterie
ou Faire ne pas exposer ou brûler il dans le feu
ou Faire ne pas mélanger les nouveau et vieux batterie
ou Faire pas mélanger différent types de piles
ou Faire pas charge le batterie
ou Le positif et négatif poteaux de le la batterie doit être correctement installé

ou s'il te plaît retirer la batterie de l'électronique clavier Si tu faire ne pas utiliser pour un long temps ,

2 Exception



s'il vous plaît faites ce qui suit étapes quand exception pour l'électronique

clavier comme fumant , trop chaud et

Donc sur . 1) . pouvoir désactivé

2) . tirer le adaptateur vers le bas depuis le pouvoir douille sur le mur quand

sont en utilisant.

3) . contact ton locale revendeur dans temps .

C'est normale pour adaptateur obtenir chaud quand long temps en utilisant CA adaptateur , ne pas indiquer Mauvais fonctionnement

s'il te plaît éteindre et redémarrer le clavier électronique lorsque parfois fonction problème ,

3 Install the battery

1) . Sortie le vis et retirer le batterie couverture

2) . mettre le batterie avec correct positif + et négatif - direction dans le batterie fente avec 6* " AA " 1 .5v

3) . mettre le batterie couverture et Verrouillage le vis

Ce le produit contient des composants électroniques et devrait pas permettre liquides à entrer ou être utilisé dans humide environnements .

Tous les jours étanche à la poussière nettoyage devrait être fait Bien , et taches superficielles peut être essuyé avec un doux et faire le ménage tissu .

VEVOR[®]

TOUGH TOOLS, HALF PRICE

**Support technique et Certificat de garantie
électronique www.vevor.com/support**

VEVOR®

TOUGH TOOLS, HALF PRICE

Technischer Support und E-Garantie

Zertifikat www.vevor.com/support

KLAVIER BENUTZER HANDBUCH

MODELL: BD-881D

Wir sind weiterhin bestrebt, Ihnen Werkzeuge zur Verfügung zu stellen, mit wettbewerbsfähig Preis.

"Speichern Halb", "Halber Preis " oder andere ähnliche Ausdrücke von uns nur repräsentiert ein

 
Schätzung der Ersparnisse, die Sie durch den Kauf bestimmter Werkzeuge bei uns im Vergleich zu den großen

Top-Marken und tut nicht bedeutet nicht notwendigerweise alle Kategorien der angebotenen Werkzeuge von uns. Sie

Wir möchten Sie bitten, sorgfältig zu prüfen, wenn Sie Platzieren eines Bestellen mit uns wenn du Sind

tatsächlich die Hälfte sparen im Vergleich zu den Top wesentlich Marken.

MODELL: BD-881D

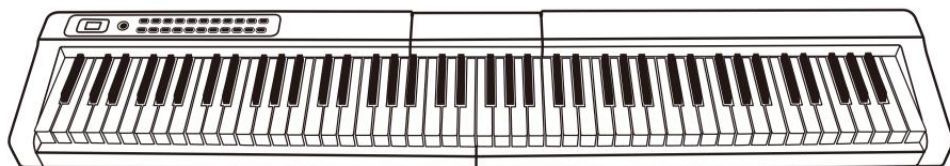

(Das Bild dient nur als Referenz, Bitte siehe die tatsächlich Objekt)

BRAUCHEN HILFE? KONTAKT UNS!

Haben Produkt Fragen? Brauchen technisch Unterstützung? Bitte fühlen frei Zu Kontakt uns:

**Technischer Support und E-Garantie-
Zertifikat www.vevor.com/support**

Dies ist das Original Anweisung, bitte alles lesen Handbuch Anweisungen

sorgfältig vor dem Betrieb. VEVOR behält sich eine klare Auslegung unserer Bedienungsanleitung vor. Das Aussehen des Produkts soll unterliegen dem

Produkt Sie erhalten. Bitte verzeihen Sie uns, dass wir nicht informiere euch nochmal wenn es Technologien oder Software gibt Updates auf unserer Produkt.



Zubehör

Typ C Adapter *

1 Leistung Kabel

* 1

Notenblätter Stand * 1

Musik Blatt

Beschneiden * 1

Mikrofon * 1

Kopfhörer * 1

Klavier

 
Aufkleber * 1

Klavier Tasche *


1

Midi Kabel * 1

aufrechterhalten Fuß
* 1

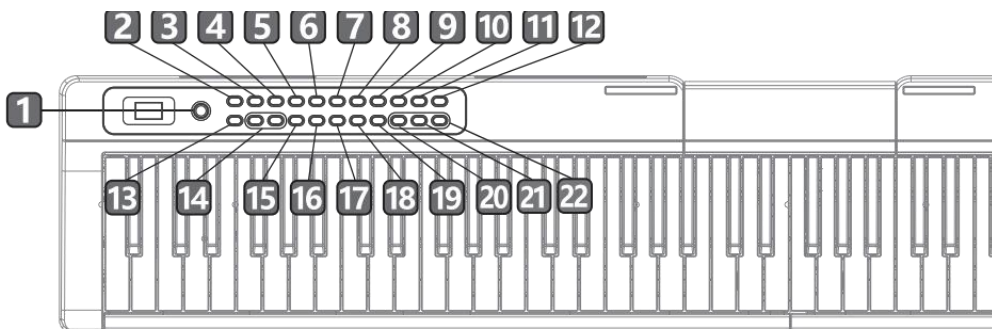

1 Power	6 Volume	11 Key drum	16 Chord	Bluetooth/MP3 mode
2 Tone	7 Rhythm vol	12 Lesson	17 Record	20 ►/⏮
3 Rhythm	8 Tempo	13 Start/stop	18 Play/LED	21 ◀/VOL-
4 Demo One	9 Transpose	14 +/-	19 Metronome	22 ▶/VOL+
5 Demo All	10 Dual key	15 Sync/Vel		

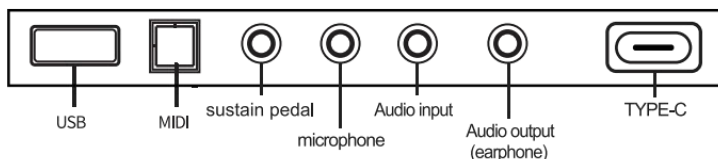 

1. Power

Turn on the [Power] button to play the keyboard and enter the performance state.

2. Tone

After pressing [Tone] button, you can use the [+/-] button to select the tone.

3. Rhythm

After pressing [Rhythm] button, you can use the [+/-] button to select the rhythm.

4. Demo One

Press the [Demo One] for the first time to enter the [Demo One] mode, and press the Demo One for the second time to exit the Demo One mode. After entering the Demo One mode, play the selected song from the next song. When the song finishes playing, the current song is played repeatedly. In the Demo One mode, press the [+/-] key to switch songs.

5. Demo All

Press the [Demo All] for the first time to enter the continuous singing mode, and press the Demo All for the second time to exit the continuous singing mode. After entering continuous singing mode, playback starts from the current song. When the song is finished, continue to play the next song and play all the songs in a loop. In continuous singing mode, press [+/-] key to switch songs.

6. Volume

After pressing the Volume, you can use the [+] and [-] keys to increase/decrease the volume. The volume control has a total of 16 segments (1~16).

7. Rhythm vol

After pressing the [Rhythm vol], you can use the [+/-] keys to increase/decrease the rhythm volume. The rhythm control has a total of 17 sections (0~16). The Rhythm volume keys can also control the volume of demo songs, chords and drums.

8. Tempo

After pressing the [Tempo], you can use the [+/-] to increase/decrease the speed continuously. The speed control has a total of 270 segments (30~300).

9. Transpose

After pressing the [Transpose] button, you can use the [+/-] button to transpose. There are 25 segments (-12~12) for the transposition control, and the preset value is in the 13th segment after power-on. Hold [+/-] button for more than 1 second, can continuously increase/decrease the transposition. The chord pitch also changes with the transposition value.

10. Dual key

Press [Dual Key] button for the first time to activate the dual keyboard function, and press [Dual Key] button for the second time to cancel the dual keyboard function. When the dual keyboard function is activated, the scales of the left keys A1 ~ B4 will be played corresponding to the scales of A2 ~ B5, and the scales of the right keys C5 ~ C9 will be played corresponding to the scales of C4 ~ C8. You can use the [+] [-] keys to select the main tone to replace the tone of the right key.

11. Key drum

Press [Key Drum] button for the first time to activate the keyboard drum function, and press [Key Drum] button for the second time to cancel the keyboard drum function. When the keyboard drum function is activated, the corresponding drum sound will be played when you play the key.

12. Lesson

Press [Lesson] button for the first time to enter the single-key mode, and press [Lesson] button for the second time to exit the single-key mode.

After entering the one-touch mode, use the current song to teach,

After the song is played, if the user presses the keys at will, it is the main melody. If the main melody does not reach the next bar, the background sound will repeat the bar until the song is played and stop after the song ends.

Press [Lesson] button for the third time to enter the ensemble mode, and press [Lesson] button for the fourth time to exit the ensemble mode.

After entering the ensemble mode, the current song is used for teaching. After the song is played, the user can play the keys at will and interrupt the main string rhythm. If not pressed the key again after 5 seconds, the main string rhythm will automatically resume playback. The background sound is played completely, and the teaching is repeated until the end of the song. After the song is over the ensemble will play a song.

Press [Lesson] button the fifth time to enter the follow-up mode, and press [Lesson] the sixth time to exit the follow-up mode.

After entering the follow-up mode, the current song is used for teaching. After the song is played, the main melody is not played, and the user must follow the notes displayed on the digital tube. Press the corresponding key to continue to play the next note, and the background sound will repeat that measure until the song ends.

Press the corresponding key to continue to play the next note, and the background sound will repeat that measure until the song ends.

In the teaching mode, [+/-] button automatically enters the song selection mode, and exits the teaching mode to return to the tone selection mode.

Press [Tone] button while playing the music will temporarily switch to the tone selection mode, and return to the song selection mode in 3 seconds.

13. Start/stop

Press the [Start/Stop] button for the first time to start playing the rhythm, and press the [Start/Stop] button for the second time to stop playing the rhythm.

Exit this mode under the mode of teaching, recording, playback, metronome, demo music, etc.

14. -/+

There are [+] and [-] sequential selection, a total of 2 keys. Can be used to select the tone, rhythm, song, volume, accompaniment volume, speed, transpose quickly.

If the number pressed exceeds the maximum number of tone, rhythms or songs, the original value will be maintained.

15. Sync/Vel

Press [Sync/Vel] for the first time to enter the sync mode, and press the Sync for the second time to exit the sync mode. When entering the sync mode, stop playing the rhythm, and then press the first 34 keys to automatically play the selected rhythm (chord). For the chord synchronization part, please refer to the single fingering accompaniment or multi-fingering accompaniment instructions.

(The default value of power on is the key strength off. Long press this key for 5 seconds to control the key strength on/off.)

16. Chord

Press [Chord] button for the first time to enter the integrated chord mode, and press [Chord] button for the second time to exit the integrated chord mode. [Chord] button only works in rhythm and normal mode. When playing the rhythm, press [Chord] button and press the fingering within the range of the keys A1 ~ F4#, and then you can hear the corresponding chord accompaniment sound. If you don't press the fingering of the fingering, the single fingering will be played. Refers to the chord of the chord fingering.

When the rhythm is not playing, press [Chord] button and press the fingering within the range of keys A1 ~ F4#, and you will hear the corresponding chord sound. If you do not press the fingering of the fingering, the single fingering will be played. Refers to the chord tone. For the detailed fingering of the integrated fingering accompaniment, please refer to the single fingered chord table and the multi-finger chord table attached. The integrated fingering can be used with rhythm/chord/synchronization.

17. Record

Press the [Recording] button the first time to enter the recording mode, and the last record will be cleared; pressing the [recording] button for the second time will exit the recording mode. In the recording mode, the metronome will be played, and you can start recording by pressing any key. The maximum number of recordings is 700. When the recording is full, the next note cannot be recorded; during recording, you can press the [Play] button at any time to play the recorded notes or drum sounds.

18. Play/LED

Press [Play/LED] for the first time to play the recorded note or drum sound, and press the Play/LED for the second time to stop playing. Press the Play to exit the recording mode. If there is no recorded value before, press Play and no action will occur. (The default value for powering on is that the keyboard light is on. Press and hold this button for 5 seconds to control the keyboard LED on/off.)

19. Metronome

Press [Metronome] button, the action function is 1/4 beat ~ 7/4 beat + stop-+ beat. 4. The preset value of tempo is 120. There are 7 variations of the metronome sound, in sequence from 1/4 beat to 7/4 beat. When recording, press [Metronome] button to switch the metronome sound.

Bluetooth/MP3 mode

20. Press [⏮/⏭] shortly (within 1 second) to play or pause the song. In pause mode, press [⏮/⏭] to continue playing the song.

21. Press [⏮/VOL-] shortly (within 1 second) to select the previous song. Press the [⏮/VOL-] for more than 1 second to decrease the volume.

22. Press [⏭/VOL+] shortly (within 1 second) to select the next song. Press [⏭/VOL+] for more than 1 second to increase the volume.

Appendix 1 (Voice Comparison Table)

T001	Acoustic Grand Piano	T055	Synth Voice	T119	Synth Drum
T002	Bright Acoustic Piano	T056	Orchestra Hit	T120	Reverse Cymbal
T003	Electric Grand Piano	T057	Trumpet	T121	Guitar Fret Noise
T004	Honky-tonk Piano	T058	Trombone	T122	Breath Noise
T005	Rhodes Piano	T059	Tuba	T123	Seashore
T006	Chorused Piano	T060	Muted Trumpet	T124	Bird Tweet
T007	Harpsichord	T061	French Horn	T125	Telephone Ring
T008	Clavichord	T062	Brass Section	T126	Helicopter
T009	Celesta	T063	Synth Brass 1	T127	Applause
T010	Glockenspiel	T064	Synth Brass 2	T128	Gunshot
T011	Music box	T065	Soprano Sax	T129	Yong Gin
T012	Vibraphone	T066	Alto Sax	T130	Zheng
T013	Marimba	T067	Tenor Sax	T131	Zhong Ruan
T014	Xylophone	T068	Baritone Sax	T132	Pi Pa
T015	Tubular Bell	T069	Oboe	T133	Big Souna
T016	Dulcimer	T070	English Horn	T134	Souna
T017	Drawbar Organ	T071	Bassoon	T135	Er Hu
T018	Percussive Organ	T072	Clarinet	T136	Yue Hu
T019	Rock Organ	T073	Piccolo	T137	Di Zi
T020	Church Organ	T074	Flute	T138	Bong Di
T021	Reed Organ	T075	Recorder	T139	Koto 2
T022	Accordion	T076	Pan Flute	T140	Qu Di
T023	Harmonica	T077	Bottle Blow	T141	Jungle Bass
T024	Tango Accordion	T078	Shakuhachi	T142	Koto 3
T025	Acoustic Guitar (nylon)	T079	Whistle	T143	Marimba 2
T026	Acoustic Guitar (steel)	T080	Ocarina	T144	Tsugaru
T027	Electric Guitar (jazz)	T081	Lead 1 (square)	T145	Kawala
T028	Electric Guitar (clean)	T082	Lead 2 (sawtooth)	T146	Attack Clav.
T029	Electric Guitar (muted)	T083	Lead 3 (calliope lead)	T147	Crystal
T030	Overdriven Guitar	T084	Lead 4 (chiff lead)	T148	Bright String
T031	Distortion Guitar	T085	Lead 5 (charang)	T149	Clavi 2
T032	Guitar Harmonics	T086	Lead 6 (voice)	T150	Chorus Guitar.
T033	Acoustic Bass	T087	Lead 7 (fifths)	T151	Barafon
T034	Electric Bass(finger)	T088	Lead 8 (bass+lead)	T152	Jazz Organ
T035	Electric Bass (pick)	T089	Pad 1 (new age)	T153	Indian Flute
T036	Fretless Bass	T090	Pad 2 (warm)	T154	Mute Barafon
T037	Slap Bass 1	T091	Pad 3 (polysynth)	T155	Dual Horns
T038	Slap Bass 2	T092	Pad 4 (choir)	T156	Electric Giutar (Clean) 2
T039	Synth Bass 1	T093	Pad 5 (bowed)	T157	Clavi 3
T040	Synth Bass 2	T094	Pad 6 (metallic)	T158	Soft Sax
T041	Violin	T095	Pad 7 (halo)	T159	Electric Vpraphone
T042	Viola	T096	Pad 8 (sweep)	T160	Didgeridoo
T043	Cello	T097	FX 1 (rain)	T161	Barafon 2
T044	Contrabass	T098	FX 2 (soundtrack)	T162	Tubular Bells 2
T045	Tremolo Strings	T099	FX 3 (crystal)	T163	Soft Accord
T046	Pizzicato Strings	T100	FX 4 (atmosphere)	T164	Barafon 3
T047	Orchestral Harp	T101	FX 5 (brightness)	T165	Clavi 4
T048	Timpani	T102	FX 6 (goblins)	T166	Nay
T049	String Ensemble 1	T103	FX 7 (echoes)	T167	Oct Harp
T050	String Ensemble 2	T104	FX 8 (sci-fi)	T168	Attack Barafon
T051	Synth Strings 1	T105	Sitar	T169	Clavi 5
T052	Synth Strings 2	T106	Banjo	T170	Kalimba 2
T053	Choir Aahs	T107	Shamisen	T171	Tsugaru 2
T054	Voice Oohs	T108	Koto	T172	Shamisen 2
		T109	Kalimba	T173	Woodblock 2
		T110	Bagpipe	T174	Crystal 2
		T111	Fiddle	T175	Shamisen 3
		T112	Shanai	T176	Synth Harpsi.
		T113	Tinkle Bell	T177	Jazz Organ 2
		T114	Agogo	T178	Viola Attack
		T115	Steel Drums	T179	Viola Attack 2
		T116	Woodblock	T180	Hard Barsoon
		T117	Taiko Drum	T181	Mute Barafon 2
		T118	Melodic Tom	T182	Bodhran

T183	Kawala 2	T247	Tsugaru 4	T311	Attack Barafon 4
T184	Didgeridoo 2	T248	Tsugaru 5	T312	Hard Barsoon 3
T185	Soft Guitar	T249	Mute Barafon 4	T313	Dulcimer 4
T186	Suona 2	T250	Dual Horns 4	T314	Twin Bones 4
T187	Twin Bones	T251	Soft Sax 3	T315	Soft Sax 5
T188	Jazz Organ 3	T252	Bodhran 3	T316	Shamisen 5
T189	Woodblock 3	T253	Guitar Pinch 3	T317	Suona 4
T190	Soft Santur	T254	Crystal 3	T318	Bodhran 4
T191	Koto 4	T255	Grow Guitar 2	T319	Shamisen 6
T192	Castanets	T256	Jazz Organ 6	T320	Electric Vraphone 6
T193	Viola Attack 3	T257	Attack Barafon 2	T321	Tsugaru 7
T194	Woodblock 4	T258	Xylophone 4	T322	Oct Harp 3
T195	Bright String 2	T259	Soft Santur 3	T323	Kalimba 4
T196	Twin Bones 2	T260	Kawala 4	T324	Soft Clav. 2
T197	Tenor Sax 2	T261	Soft Guitar 5	T325	English Horn 4
T198	Wind Organ	T262	Nay 4	T326	Didgeridoo 6
T199	Tron Flute	T263	Synth Harpsi. 3	T327	Barafon 4
T200	Bodhran 2	T264	Wind Organ 3	T328	Indian Flute 7
T201	Tron Flute 2	T265	Shanai 2	T329	Organ Flute 2
T202	Jazz Organ 4	T266	Woodblock 6	T330	Soft Santur 4
T203	Soft Santur 2	T267	Electric Vraphone 4	T331	Mute Barafon 7
T204	Woodblock 5	T268	Kawala 5	T332	Nay 7
T205	Shamisen 4	T269	Grow Guitar 3	T333	Hard Vibe 5
T206	Indian Flute 2	T270	Grow Guitar 4	T334	Bari & Tenor 4
T207	Electric Vraphone 2	T271	Steel Bell	T335	Bag Pipe 4
T208	Soft Guitar 2	T272	Wind Organ 4	T336	Tenor Sax 3
T209	Mute Barafon 3	T273	Soft Accord 2	T337	Organ Flute 3
T210	Dual Horns 2	T274	Kalimba 3	T338	Dulcimer 5
T211	Xylophone 2	T275	Twin Bones 3	T339	Twin Bones 5
T212	Didgeridoo 3	T276	Church Bells 3	T340	Grow Guitar 5
T213	Wind Organ 2	T277	Koto 6	T341	Kalimba 5
T214	Church Bells 2	T278	Attack Barafon 3	T342	Oct Harp 4
T215	Tsugaru 3	T279	Mute Barafon 5	T343	Nay 8
T216	Nay 2	T280	Nay 5	T344	Dual Horns 5
T217	Guitar Pinch 2	T281	Jungle Bass 2	T345	Didgeridoo 7
T218	Grow Guitar	T282	Soft Accord 3	T346	English Horn 5
T219	Indian Flute 3	T283	Hard Vibe 3	T347	Kawala 6
T220	Synth Harpsi. 2	T284	Soft Clav.	T348	Marimba 5
T221	Soft Sax 2	T285	Bag Pipe 2	T349	Barafon 5
T222	Xylophone 3	T286	Oct Harp 2	T350	Soft Accord 5
T223	English Horn 2	T287	Woodblock 7	T351	Mute Barafon 8
T224	Soft Guitar 3	T288	Mute Barafon 6	T352	Dual Horns 6
T225	Castanets 2	T289	Guitar Pinch 4	T353	Church Bells 4
T226	Soft Guitar 4	T290	Dulcimer 3	T354	Wind Organ 5
T227	Hard Vibe 2	T291	Soft Sax 4	T355	Attack Clav. 5
T228	Reed Horn	T292	Electric Vraphone 5	T356	Jazz Organ 7
T229	Nay 3	T293	Tsugaru 6	T357	Reed Horn 3
T230	Bari & Tenor	T294	Reed Horn 2	T358	Tenor Sax 4
T231	Kawala 3	T295	Castanets 3	T359	Chorus Guitar. 2
T232	Indian Flute 4	T296	Tron Flute 3	T360	Didgeridoo 8
T233	Didgeridoo 4	T297	Attack Clav. 3	T361	Soft Santur 5
T234	Attack Clav. 2	T298	Bari & Tenor 3	T362	Clavi 6
T235	Marimba 3	T299	Indian Flute 6	T363	Kalimba 6
T236	Bari & Tenor 2	T300	Soft Guitar 6	T364	Didgeridoo 9
T237	Slow Violin	T301	Nay 6	T365	Wind Organ 6
T238	Organ Flute	T302	Didgeridoo 5	T366	Tron Flute 4
T239	Jazz Organ 5	T303	Marimba 4	T367	Soft Sax 6
T240	Electric Vraphone 3	T304	Attack Clav. 4	T368	Suona 5
T241	Dual Horns 3	T305	Jungle Bass 3	T369	Soft Guitar 7
T242	Indian Flute 5	T306	Hard Barsoon 2	T370	Hard Vibe 6
T243	English Horn 3	T307	Suona 3	T371	Jazz Organ 8
T244	Dulcimer 2	T308	Hard Vibe 4	T372	Grow Guitar 6
T245	Koto 5	T309	Bag Pipe 3	T373	Xylophone 5
T246	Tubular Bells 3	T310	Soft Accord 4	T374	Bag Pipe 5

T375	Bag Pipe 6	T439	Shanai 5	T503	Bag Pipe 11
T376	Clavi 7	T440	English Horn 10	T504	Hard Barsoon 7
T377	Hard Vibe 7	T441	Didgeridoo 11	T505	Mute Barafon 15
T378	Kawala 7	T442	Organ Flute 5	T506	Soft Sax 12
T379	Shanai 3	T443	Attack Barafon 6	T507	Attack Clav. 9
T380	Suona 6	T444	Jungle Bass 5	T508	Jazz Organ 12
T381	Jungle Bass 4	T445	Barafon 7	T509	Soft Guitar 9
T382	Grow Guitar 7	T446	Soft Santur 6	T510	Didgeridoo 13
T383	Bag Pipe 7	T447	Slow Violin 3	T511	Bright String 4
T384	Crystal 4	T448	Hard Barsoon 6	T512	Electric Giutar (Clean) 4
T385	Guitar Pinch 5	T449	Didgeridoo 12	T513	Tsugaru 9
T386	Woodblock 8	T450	Kalimba 8	T514	Nay 10
T387	Soft Sax 7	T451	Electric Giutar (Clean) 3	T515	Reed Horn 6
T388	Attack Barafon 5	T452	Dulcimer 8	T516	Didgeridoo 14
T389	Barafon 6	T453	Reed Horn 5	T517	Soft Clav. 5
T390	Organ Flute 4	T454	Bodhran 5	T518	Soft Sax 13
T391	Mute Barafon 9	T455	Soft Sax 9	T519	Reed Organ 3
T392	Shanai 4	T456	Mute Barafon 14	T520	Steel Bell 3
T393	Soft Clav. 3	T457	Guitar Pinch 7	T521	Clavi 10
T394	Oct Harp 5	T458	Wind Organ 7	T522	Wind Organ 8
T395	Tron Flute 5	T459	Guitar Pinch 8	T523	Synth Harpsi. 6
T396	Bright String 3	T460	Indian Flute 9	T524	Bari & Tenor 5
T397	Jazz Organ 9	T461	Bag Pipe 9	T525	Steel Bell 4
T398	Mute Barafon 10	T462	Crystal 6	T526	Soft Sax 14
T399	Slow Violin 2	T463	Twin Bones 6	T527	Castanets 8
T400	Soft Sax 8	T464	Crystal 7	T528	Didgeridoo 15
T401	English Horn 6	T465	Soft Guitar 8	T529	Soft Sax 15
T402	Reed Horn 4	T466	Guitar Pinch 9	T530	Mute Barafon 16
T403	Indian Flute 8	T467	Attack Clav. 6	T531	Soft Guitar 10
T404	Castanets 4	T468	Bodhran 6	T532	Soft Accord 8
T405	English Horn 7	T469	Suona 7	T533	Wind Organ 9
T406	Tron Flute 6	T470	Chorus Guitar. 3	T534	Didgeridoo 16
T407	English Horn 8	T471	Slow Violin 4	T535	Electric Giutar (Clean) 5
T408	Hard Barsoon 4	T472	Clavi 9	T536	English Horn 11
T409	Dulcimer 6	T473	Castanets 6	T537	Soft Sax 16
T410	Xylophone 6	T474	Slow Violin 5	T538	Soft Guitar 11
T411	Mute Barafon 11	T475	Jazz Organ 10	T539	Hard Barsoon 8
T412	Nay 9	T476	Jazz Organ 11	T540	Kalimba 9
T413	Mute Barafon 12	T477	Electric Vraphone 8	T541	Koto 8
T414	Dual Horns 7	T478	Bodhran 7	T542	Soft Clav. 6
T415	Kawala 8	T479	Steel Bell 2	T543	Xylophone 7
T416	Soft Clav. 4	T480	Synth Harpsi. 5	T544	Soft Clav. 7
T417	Hard Barsoon 5	T481	Marimba 6	T545	Church Bells 6
T418	Dulcimer 7	T482	Marimba 7	T546	Kawala 10
T419	Soft Accord 6	T483	Attack Barafon 7	T547	Didgeridoo 17
T420	Church Bells 5	T484	Castanets 7	T548	Kalimba 10
T421	Shamisen 7	T485	Hard Vibe 9	T549	Castanets 9
T422	Synth Harpsi. 4	T486	Tron Flute 7	T550	Didgeridoo 18
T423	Crystal 5	T487	Soft Accord 7	T551	Bodhran 8
T424	Kawala 9	T488	Shanai 6	T552	English Horn 12
T425	Dual Horns 8	T489	Woodblock 9	T553	Hard Vibe 10
T426	Clavi 8	T490	Soft Sax 10	T554	Bodhran 9
T427	Electric Vraphone 7	T491	Slow Violin 6	T555	Indian Flute 10
T428	Castanets 5	T492	Soft Sax 11	T556	Dulcimer 9
T429	Tenor Sax 5	T493	Chorus Guitar. 4	T557	Soft Clav. 8
T430	Tenor Sax 6	T494	Attack Clav. 7	T558	Viola Attack 5
T431	Didgeridoo 10	T495	Reed Organ 2	T559	Attack Harp
T432	Kalimba 7	T496	Viola Attack 4	T560	Mute Barafon 17
T433	English Horn 9	T497	Koto 7	T561	Tenor Sax 8
T434	Guitar Pinch 6	T498	Tsugaru 8	T562	Twin Bones 7
T435	Hard Vibe 8	T499	Bag Pipe 10	T563	Chorus Guitar. 6
T436	Mute Barafon 13	T500	Attack Clav. 8	T564	Shanai 7
T437	Tenor Sax 7	T501	Tron Flute 8	T565	Kalimba 11
T438	Bag Pipe 8	T502	Marimba 8	T566	Jungle Bass 6

T567	Attack Barafon 8	T631	Koto 11	T695	Viola Attack 9
T568	Soft Clav. 9	T632	Kalimba 12	T696	Hard Vibe 13
T569	Tubular Bells 4	T633	Suona 10	T697	Koto 13
T570	Reed Organ 4	T634	Oct Harp 6	T698	Tenor Sax 9
T571	Guitar Pinch 10	T635	Koto 12	T699	Kawala 15
T572	Bodhran 10	T636	Shanai 8	T700	Steel Bell 6
T573	Clavi 11	T637	Electric Guitar (Clean) 8	T701	Soft Accord 11
T574	Viola Attack 6	T638	Clavi 12	T702	Organ Flute 10
T575	Synth Harpsi. 7	T639	Attack Harp 3	T703	Organ Flute 11
T576	Jungle Bass 7	T640	Attack Clav. 10	T704	Bright String 9
T577	Koto 9	T641	Bright String 6	T705	Soft Santur 11
T578	Church Bells 7	T642	Organ Flute 7	T706	Hard Barsoon 10
T579	Soft Accord 9	T643	Electric Guitar (Clean) 9	T707	Wind Organ 14
T580	Tubular Bells 5	T644	Kawala 12	T708	Synth Harpsi. 11
T581	Bag Pipe 12	T645	Bodhran 11	T709	Soft Sax 19
T582	Grow Guitar 8	T646	Shanai 9	T710	Bright String 10
T583	Mute Barafon 18	T647	Suona 11	T711	Bright String 11
T584	Soft Accord 10	T648	Synth Harpsi. 10	T712	Jungle Bass 9
T585	Electric Guitar (Clean) 6	T649	Bari & Tenor 6	T713	Soft Accord 12
T586	Viola Attack 7	T650	Kawala 13	T714	Reed Horn 8
T587	Kawala 11	T651	Bari & Tenor 7	T715	Slow Violin 10
T588	Soft Santur 7	T652	Reed Horn 7	T716	Synth Harpsi. 12
T589	Bright String 5	T653	Shamisen 10	T717	Attack Harp 6
T590	Electric Guitar (Clean) 7	T654	Soft Clav. 11	T718	Soft Santur 12
T591	Attack Barafon 9	T655	Bari & Tenor 8	T719	Hard Barsoon 11
T592	Electric Viphraphone 9	T656	Soft Santur 9	T720	English Horn 15
T593	Steel Bell 5	T657	Attack Harp 4	T721	Crystal 8
T594	Mute Barafon 19	T658	Bright String 7	T722	Bari & Tenor 10
T595	Chorus Guitar. 7	T659	Guitar Pinch 11	T723	Koto 14
T596	Soft Clav. 10	T660	Wind Organ 11	T724	Didgeridoo 20
T597	Viola Attack 8	T661	Soft Guitar 12	T725	Tenor Sax 10
T598	Church Bells 8	T662	English Horn 14	T726	Bright String 12
T599	Soft Santur 8	T663	Kawala 14	T727	Hard Vibe 14
T600	Wind Organ 10	T664	Grow Guitar 11	T728	Dual Horns 10
T601	Indian Flute 11	T665	Attack Harp 5	T729	Kawala 16
T602	Tsugaru 10	T666	Bari & Tenor 9	T730	Kawala 17
T603	Dulcimer 10	T667	Organ Flute 8	T731	Bag Pipe 13
T604	Grow Guitar 9	T668	Woodblock 10	T732	Electric Guitar (Clean) 10
T605	Tubular Bells 6	T669	Hard Vibe 11	T733	Tron Flute 10
T606	Jungle Bass 8	T670	Mute Barafon 20	T734	Kawala 18
T607	Dulcimer 11	T671	Tubular Bells 7	T735	Tron Flute 11
T608	Organ Flute 6	T672	Suona 12	T736	Tubular Bells 8
T609	Nay 11	T673	Bright String 8	T737	Synth Harpsi. 13
T610	Attack Barafon 10	T674	Hard Vibe 12	T738	Soft Santur 13
T611	English Horn 13	T675	Slow Violin 8	T739	Tubular Bells 9
T612	Suona 8	T676	Shamisen 11	T740	Attack Barafon 11
T613	Reed Organ 5	T677	Tron Flute 9	T741	Attack Barafon 12
T614	Shamisen 8	T678	Attack Clav. 11	T742	Electric Viphraphone 10
T615	Koto 10	T679	Dual Horns 9	T743	Dual Horns 11
T616	Shamisen 9	T680	Wind Organ 12	T744	Shanai 10
T617	Church Bells 9	T681	Twin Bones 8	T745	Bright String 13
T618	Nay 12	T682	Reed Organ 6	T746	Crystal 9
T619	Hard Barsoon 9	T683	Organ Flute 9	T747	Clavi 13
T620	Slow Violin 7	T684	Slow Violin 9	T748	Soft Sax 20
T621	Soft Sax 17	T685	Dulcimer 12	T749	Tron Flute 12
T622	Grow Guitar 10	T686	Tsugaru 11	T750	Dulcimer 14
T623	Attack Harp 2	T687	Wind Organ 13	T751	Slow Violin 11
T624	Suona 9	T688	Soft Santur 10	T752	Tenor Sax 11
T625	Nay 13	T689	Suona 13	T753	Nay 15
T626	Synth Harpsi. 8	T690	Soft Guitar 13	T754	Soft Guitar 15
T627	Didgeridoo 19	T691	Xylophone 8	T755	Shanai 11
T628	Nay 14	T692	Dulcimer 13	T756	Hard Barsoon 12
T629	Synth Harpsi. 9	T693	Marimba 9	T757	Synth Harpsi. 14
T630	Soft Sax 18	T694	Soft Guitar 14	T758	Soft Sax 21

T759	Suona 14	T821	Attack Barafon 14	T883	Crystal 14
T760	Kalimba 13	T822	Electric Viaphone 13	T884	Barafon 9
T761	Suona 15	T823	Soft Guitar 18	T885	Reed Horn 12
T762	Slow Violin 12	T824	Xylophone 11	T886	Dual Horns 13
T763	Reed Organ 7	T825	Tenor Sax 12	T887	Chorus Guitar. 12
T764	Kawala 19	T826	Oct Harp 8	T888	Grow Guitar 13
T765	Reed Horn 9	T827	Shamisen 12	T889	Shanai 12
T766	Attack Harp 7	T828	Reed Horn 10	T890	Twin Bones 12
T767	Oct Harp 7	T829	Marimba 12	T891	Barafon 10
T768	Kalimba 14	T830	Reed Organ 11	T892	Jungle Bass 11
T769	Twin Bones 9	T831	Attack Clav. 13	T893	Marimba 13
T770	Attack Clav. 12	T832	Hard Barsoon 15	T894	Grow Guitar 14
T771	Bari & Tenor 11	T833	Dual Horns 12	T895	Viola Attack 12
T772	Attack Harp 8	T834	Soft Clav. 13	T896	Shamisen 15
T773	English Horn 16	T835	Church Bells 12	T897	Tsugaru 12
T774	Twin Bones 10	T836	Oct Harp 9	T898	Reed Horn 13
T775	Soft Clav. 12	T837	Oct Harp 10	T899	Shanai 13
T776	Tubular Bells 10	T838	Indian Flute 13	T900	Castanets 13
T777	Slow Violin 13	T839	Viola Attack 11	T901	Reed Organ 12
T778	Synth Harpsi. 15	T840	Clavi 14	T902	Twin Bones 13
T779	Guitar Pinch 12	T841	Koto 15	T903	Chorus Guitar. 13
T780	Church Bells 10	T842	Soft Guitar 19	T904	Tron Flute 13
T781	Castanets 10	T843	Castanets 12	T905	Koto 16
T782	Twin Bones 11	T844	Jazz Organ 14	T906	Oct Harp 12
T783	Indian Flute 12	T845	Bag Pipe 14	T907	Grow Guitar 15
T784	Woodblock 11	T846	Steel Bell 8	T908	Shanai 14
T785	Attack Harp 9	T847	Church Bells 13	T909	Electric Giutar (Clean) 12
T786	Crystal 10	T848	Guitar Pinch 13	T910	Castanets 14
T787	Mute Barafon 21	T849	Soft Clav. 14	T911	Reed Organ 13
T788	Synth Harpsi. 16	T850	Tubular Bells 12	T912	Electric Giutar (Clean) 13
T789	Reed Organ 8	T851	Grow Guitar 12	T913	Soft Accord 14
T790	Steel Bell 7	T852	Steel Bell 9	T914	Twin Bones 14
T791	Chorus Guitar. 8	T853	Chorus Guitar. 10	T915	Marimba 14
T792	Reed Organ 9	T854	Crystal 13	T916	Jungle Bass 12
T793	Marimba 10	T855	Reed Horn 11	T917	Electric Giutar (Clean) 14
T794	Electric Viaphone 11	T856	Steel Bell 10	T918	Barafon 11
T795	Soft Guitar 16	T857	Kawala 21	T919	Viola Attack 13
T796	Viola Attack 10	T858	Attack Harp 10	T920	Slow Violin 14
T797	Reed Organ 10	T859	Oct Harp 11	T921	Oct Harp 13
T798	Bari & Tenor 12	T860	Kalimba 15	T922	Dulcimer 15
T799	Soft Sax 22	T861	Tubular Bells 13	T923	Bari & Tenor 13
T800	Jazz Organ 13	T862	Electric Giutar (Clean) 11	T924	Bag Pipe 15
T801	Soft Guitar 17	T863	Jazz Organ 15	T925	Attack Clav. 14
T802	Xylophone 9	T864	Attack Barafon 15	T926	Kalimba 16
T803	Xylophone 10	T865	Soft Guitar 20	T927	Hard Vibe 15
T804	Church Bells 11	T866	Soft Accord 13	T928	Organ Flute 14
T805	Suona 16	T867	Synth Harpsi. 17	T929	Jungle Bass 13
T806	Crystal 11	T868	Bodhran 12	T930	Electric Viaphone 14
T807	Chorus Guitar. 9	T869	Woodblock 12	T931	Viola Attack 14
T808	Crystal 12	T870	Attack Harp 11	T932	Bodhran 13
T809	Hard Barsoon 13	T871	Organ Flute 12	T933	Tubular Bells 15
T810	Castanets 11	T872	Jazz Organ 16	T934	Indian Flute 14
T811	Kawala 20	T873	Didgeridoo 21	T935	Tenor Sax 13
T812	Nay 16	T874	Church Bells 14	T936	Guitar Pinch 14
T813	Tubular Bells 11	T875	Synth Harpsi. 18	T937	Steel Bell 11
T814	Hard Barsoon 14	T876	Chorus Guitar. 11	T938	Tsugaru 13
T815	Barafon 8	T877	Organ Flute 13	T939	Soft Santur 14
T816	Marimba 11	T878	Shamisen 13	T940	Bright String 14
T817	Soft Sax 23	T879	Jungle Bass 10	T941	Oct Harp 14
T818	Attack Barafon 13	T880	Shamisen 14	T942	Attack Harp 12
T819	Electric Viaphone 12	T881	Tubular Bells 14	T943	Church Bells 15
T820	Wind Organ 15	T882	English Horn 17	T944	Tenor Sax 14

T945	Dual Horns 14	T964	Bag Pipe 16	T983	Attack Harp 15
T946	Barafon 12	T965	Viola Attack 15	T984	Koto 17
T947	Steel Bell 12	T966	Steel Bell 14	T985	Reed Organ 15
T948	Marimba 15	T967	Crystal 15	T986	Attack Clav. 15
T949	Electric Vraphone 15	T968	Bright String 15	T987	Clavi 15
T950	Soft Accord 15	T969	Reed Horn 14	T988	Dual Horns 15
T951	Steel Bell 13	T970	Guitar Pinch 15	T989	Steel Bell 15
T952	Tenor Sax 15	T971	Oct Harp 15	T990	Slow Violin 15
T953	Electric Gutar (Clean) 15	T972	Twin Bones 15	T991	Soft Santur 15
T954	Soft Clav. 15	T973	Chorus Guitar. 15	T992	Barafon 14
T955	Bari & Tenor 14	T974	Bari & Tenor 15	T993	Organ Flute 15
T956	Attack Harp 13	T975	Tenor Sax 16	T994	Castanets 15
T957	Chorus Guitar. 14	T976	Indian Flute 15	T995	Guitar Pinch 16
T958	Shanai 15	T977	Bodhran 15	T996	Tron Flute 15
T959	Reed Organ 14	T978	Shamisen 16	T997	Tsugaru 15
T960	Bodhran 14	T979	Attack Harp 14	T998	Reed Horn 15
T961	Jungle Bass 14	T980	Barafon 13	T999	Barafon 15
T962	Tsu aru 14	T981	Jungle Bass 15	T1000	Electric Gutar (Clean) 16
T963	Shanai 16	T982	Tron Flute 14		

22.Appendix 2 (Rhythm comparison table)

R001	8Beat 1	R040	Pop 14	R079	Shuffle 1
R002	8Beat 2	R041	Pop Bolero	R080	Shuffle 2
R003	8Beat 3	R042	Pop BossaNova	R081	Boogie 1
R004	8Beat 4	R043	Pop Waltz	R082	Boogie 2
R005	8Beat 5	R044	Pop Dance	R083	Boogie 3
R006	8Beat 6	R045	Motown	R084	Twist
R007	8Beat 7	R046	British Pop 1	R085	Ballad 1
R008	8Beat 8	R047	British Pop 2	R086	Ballad 2
R009	8Beat 9	R048	British Pop 3	R087	Ballad 3
R010	8Beat 10	R049	Guitar Pop	R088	Ballad 4
R011	8Beat 11	R050	Slow Pop	R089	Ballad 5
R012	8Beat 12	R051	50's Pop	R090	Soul Ballad
R013	8Beat 13	R052	80's Pop	R091	6/8 Ballad
R014	8Beat 14	R053	Rock 1	R092	Acoustic Ballad
R015	8Beat 15	R054	Rock 2	R093	Colour Ballad
R016	8Beat 16	R055	Rock 3	R094	Guitar Ballad
R017	8Beat 17	R056	Rock 4	R095	Piano Ballad
R018	8Beat 18	R057	50's Rock	R096	Organ Ballad
R019	16Beat 1	R058	60's Rock 1	R097	Groove 1
R020	16Beat 2	R059	60's Rock 2	R098	Groove 2
R021	16Beat 3	R060	70's Rock	R099	Groove 3
R022	16Beat 4	R061	80's Rock	R100	Groove 4
R023	16Beat 5	R062	Big Rock	R101	Groove 5
R024	16Beat 6	R063	Power Rock	R102	Groove 6
R025	16Beat 7	R064	Dark Rock	R103	Groove 7
R026	16Beat 8	R065	Jazz Rock	R104	Groove 8
R027	Pop 1	R066	Soft Rock	R105	Groove 9
R028	Pop 2	R067	Pop Rock 1	R106	Piano 1
R029	Pop 3	R068	Pop Rock 2	R107	Piano 2
R030	Pop 4	R069	Funky Rock 1	R108	Piano 3
R031	Pop 5	R070	Funky Rock 2	R109	Piano 4
R032	Pop 6	R071	Ballad Rock	R110	Piano 5
R033	Pop 7	R072	Folk Rock	R111	Piano 6
R034	Pop 8	R073	Slow Rock 1	R112	Piano 7
R035	Pop 9	R074	Slow Rock 2	R113	Piano 8
R036	Pop 10	R075	Slow Rock 3	R114	Piano 9
R037	Pop 11	R076	Slow Rock 4	R115	Piano 10
R038	Pop 12	R077	Rock&Roll 1	R116	Unplugged 1
R039	Pop 13	R078	Rock&Roll 2	R117	Unplugged 2

R118	Unplugged 3	R182	March	R246	Tango4
R119	Unplugged 4	R183	Polka	R247	Tango5
R120	Unplugged 5	R184	Classical 1	R248	Rock &Roll
R121	Unplugged 6	R185	Classical 2	R249	Rock & Roll Shfl1
R122	Unplugged 7	R186	China Folk 1	R250	Oldies R & R
R123	Unplugged 8	R187	China Folk 2	R251	Detroit Pop1
R124	Dance 1	R188	China Opera 1	R252	Detroit Pop2
R125	Dance 2	R189	China Opera 2	R253	Worship Med
R126	Disco	R190	China Ballad	R254	Worship Fast
R127	House	R191	China Pop	R255	Piano Boogie
R128	Euro Beat	R192	Xin Jiang	R256	Lovely Shuffle
R129	Funky Dance	R193	Shan Bei	R257	60's Rock & Roll
R130	80's Dance	R194	Yun Nan	R258	Kool Funk
R131	Techno	R195	He Nan	R259	Blueberry Blues
R132	Fusion	R196	An Hui	R260	Shuffle Blues
R133	Blues 1	R197	Guang Dong	R261	Mambo 4
R134	Blues 2	R198	Xi Zang	R262	Mambo 5
R135	Blues 3	R199	Mongolian	R263	Pop Classics
R136	Funky 1	R200	Korean	R264	Live 8 Beat
R137	Funky 2	R201	J-Pop Hit	R265	Power Rock2
R138	Funky 3	R202	16 Beat Ballad2	R266	Acoustic Rock2
R139	Gospel	R203	70's Pop Ballad	R267	Cool 8 Beat
R140	Rap 1	R204	EP Ballad	R268	Uptempo 8Beat
R141	Rap 2	R205	Power Ballad	R269	90's Rock Ballad
R142	Soul 1	R206	Guitar Ballad2	R270	Chart Rock Shfl2
R143	Soul 2	R207	New R&B Ballad	R271	Brit Pop
R144	Soul 3	R208	Guitar Serenade	R272	Brazilian Samba
R145	Soul 4	R209	Organ Ballad2	R273	Brit Pop Swing
R146	Country 1	R210	Joropo	R274	60's 8 Beat
R147	Country 2	R211	Reggaeton	R275	Fast Bossa
R148	Country 3	R212	French Waltz	R276	60's Guitar Pop
R149	Country 4	R213	Merengue	R277	70's 8 Beat
R150	Country 5	R214	12-8 Ballad	R278	90's Guitar Pop
R151	Jazz 1	R215	Norteno	R279	Soft Rock2
R152	Jazz 2	R216	Jig	R280	Chart Guita rPop
R153	Jazz Waltz	R217	Hawaiian	R281	Gujiira
R154	Jazz Ballad	R218	Electronica	R282	Modern Pop Bld
R155	Lounge	R219	Funky House	R283	Soul
R156	Jive	R220	Club Beat	R284	Skiffle2
R157	Ragtime	R221	Retro Club	R285	6-8Soul
R158	Charlston	R222	Mod Chart Pop	R286	Soul Brothers
R159	Big Band	R223	MOR Swing	R287	Happy Reggae
R160	Swing	R224	Retro Pop	R288	Pop Latin
R161	Caribbean	R225	Rumba Flamenco	R289	6-8Slow Rock
R162	Reggae	R226	Trance Pop	R290	6-8 Modern
R163	Cha Cha	R227	Orch Big Band2	R291	6-8 Orchestral
R164	Rumba	R228	Big Band Fast2	R292	Schlager Shuffle
R165	Samba	R229	Midnight Swing	R293	Schlager Pop
R166	BossaNova	R230	German Rock	R294	Schlager Rumba
R167	Mambo	R231	Schlager Beat	R295	Euro Pop Organ
R168	Salsa	R232	Mellow Hip Hop	R296	70's French Hit
R169	Beguine	R233	Classic Hip Hop	R297	Italian Mazurka
R170	Cumbia	R234	New Hip Hop	R298	Bohemian Waltz
R171	Latin	R235	Duranguense	R299	Schlager Samba1
R172	Baroque	R236	Laff	R300	Schlager Samba2
R173	Bolero	R237	Ober Walzer	R301	Scand Slow Rock
R174	Holly Wood	R238	Bhangra	R302	Schlager 6-8
R175	Foxtrot	R239	Zouk	R303	Schlager Fox
R176	Paso Doble	R240	German March	R304	Highland Waltz
R177	Quick Step	R241	Enka	R305	Italian Polka
R178	Bachata	R242	Bolero Lento	R306	Grupera
R179	Boston	R243	Sherif fReggae	R307	Danzon
R180	Tango	R244	Beguine2	R308	Schlager Alp
R181	Waltz	R245	Latin Disco	R309	Saeidy

R310	Bhajan	R374	Scand Country1	R438	Hoedown
R311	Hip Hop Groove	R375	Scand Country2	R439	Country Shuffle
R312	Chart Pop1	R376	Scand Shuffle	R440	Waltz2
R313	Organ Groove	R377	Worship Slow	R441	Cha Cha2
R314	Chart Pop2	R378	Disco Teens	R442	Rumba2
R315	New R&B	R379	Scand Bugg	R443	Jive2
R316	Pop R&B	R380	Rock Cha Cha	R444	Pasodoble
R317	Chart R&B	R381	Organ Swing	R445	Samba1
R318	Modern Shuffle	R382	Secret Service	R446	Samba2
R319	Blues Rock	R383	Animation Bld	R447	Schlager Rock 1
R320	Dream Dance	R384	Christmas Waltz	R448	Schlager Rock 2
R321	US Chart Hit	R385	Movie Swing	R449	Foxtrot2
R322	Soul R&B	R386	Movie Ballad	R450	Viennese Waltz
R323	R&B Soul Ballad	R387	Bubblegum Pop	R451	Tango2
R324	Euro Hip Hop	R388	Rock & Roll Shfl2	R452	Tango3
R325	Trip Hop	R389	West Coast Pop	R453	German Waltz
R326	Ibiza 2004	R390	Classic 16 Beat	R454	Carnival
R327	Mod Big Band Shfl	R391	Jazz Pop	R455	Organ Samba
R328	Modern Big Band	R392	Kool Shuffle	R456	Reel
R329	Pop Gtr Ballad	R393	8 Beat Ballad2	R457	Gay Gordons
R330	Ibiza 2002	R394	Chillout	R458	Scand Waltz
R331	Euro Trance	R395	16 Beat Ballad1	R459	60's Rock Style
R332	6-8 Trance	R396	Epic Ballad	R460	Standard Rock
R333	Latin DJ's	R397	Easy Ballad	R461	Brit Rock Pop
R334	Bomba	R398	Cuban Son	R462	60's Vintage Rock
R335	Chillout Cafe	R399	Bachata2	R463	Chart Rock Shfl
R336	70's Glam Piano	R400	Forro	R464	60's Pop Rock
R337	French House	R401	70's Chart Ballad	R465	Rock Billy
R338	English Waltz	R402	Romantic Ballad	R466	Rock Boogie
R339	8 Beat Ballad1	R403	90's Cool Ballad	R467	Latin Cha Cha
R340	Club House	R404	Alp Ballad1	R468	Rock Classical
R341	House2	R405	Alp Ballad2	R469	Rock Shuffle
R342	Jazz Gtr Club	R406	E_Ballad	R470	Rock Pop
R343	Modern Jazz	R407	Unplugged 9	R471	Rock'n Roll 1
R344	Acoustic Jazz	R408	Pop Ballad	R472	Rock'n Roll 2
R345	Cool Jazz Ballad	R409	Pop New Age	R473	Straight Rock
R346	Modern Jazz Bld	R410	8 Beat Modern	R474	Jazz Rock2
R347	Easy Listening	R411	Country Ballad1	R475	Fast Gospel
R348	Bebop	R412	Love Song	R476	Folk Rock2
R349	Orch Big Band1	R413	Modern Country Pop	R477	Skiffle
R350	Big Band Fast1	R414	Electro Pop	R478	Funk Pop Rock
R351	Orchestra Swing1	R415	Acoustic Ballad 2	R479	Contemp Rock
R352	Orchestra Swing2	R416	Piano Ballad 1	R480	Acoustic Rock
R353	70's Ranking Country	R417	R&B Ballad	R481	50's Pop2
R354	Jazz Waltz Med	R418	Rock Ballad	R482	Cool Pop
R355	Mariachi Waltz	R419	Slow & Easy	R483	Groovy Pop
R356	US March	R420	Analog Ballad	R484	60's Vintage Pop
R357	Guitar Rumba	R421	Slow Rock 5	R485	80's Pop2
R358	Slow Blues	R422	Slow Rock 6	R486	Rap Pop
R359	Jazz Waltz Fast	R423	Slow Rock 7	R487	Pop Rock 3
R360	70's Country Pop	R424	Slow Soul	R488	60's Soul
R361	Dixieland	R425	8 Beat Adria	R489	70's Soul
R362	40's Big Band	R426	Classic Piano	R490	Funk
R363	Easy Country	R427	80's EP Ballad	R491	16 Beat Shuffle
R364	Country Hits	R428	80's Boy Band	R492	Twist2
R365	Country 8 Beat	R429	Country Ballad2	R493	British Pop 4
R366	Sci-fi March	R430	Country Two Step	R494	British Pop 5
R367	Tap Dance Swing	R431	Country 6	R495	Hard Rock1
R368	Orchestral Bolero	R432	Country 7	R496	Hard Rock2
R369	Gospel Sisters	R433	Finger Pickin	R497	Fusion2
R370	Italian Waltz	R434	Country Brothers	R498	Fusion3
R371	6-8 March	R435	New Country	R499	Funk Shuffl 1
R372	Bluegrass	R436	Brisk Country	R500	Funk Shuffl 2
R373	Mod Cntry Bld1	R437	70's Chart Cntry	R501	Fusion Shuffl 1

R502	Fusion Shuffl 2	R566	Carnival2	R632	Disco Funk2
R503	Club Pop1	R567	BossaNova2	R633	Disco Samba2
R504	Club Pop2	R568	Mambo 2	R634	New Hip Hop2
R505	16 Beat Pop1	R569	Mambo 3	R635	Cat Groove2
R506	16 Beat Pop2	R570	Bolero2	R636	Laff2
R507	8 Beat Pop1	R571	Cumbia3	R637	Pop Waltz3
R508	8 Beat Pop2	R572	Latin Rock	R638	Bhangra2
R509	8 Beat Soul1	R573	Disco Latin	R639	Twist3
R510	8 Beat Soul2	R574	Tijuana	R640	German March2
R511	8 Beat Rock1	R575	Reggae2	R641	Enka2
R512	8 Beat Rock2	R576	Salsa2	R642	Bolero Lento2
R513	Classic 8Beat	R577	Calypso	R643	Midnight Swing2
R514	Vintage Gtr Pop	R578	Guad Dance	R644	French Jazz2
R515	Schlager Italia	R579	Reggae 12Beat	R645	Latin Party Pop2
R516	70's Disco1	R580	Reggae 16Beat	R646	Tango6
R517	70's Disco2	R581	Swing Fox	R647	Tango7
R518	Funky Disco	R582	Slow Fox	R648	Parranda2
R519	Saturday Night	R583	Organ Cha Cha	R649	Latin Rock2
R520	Club Latin	R584	Organ Quick Step	R650	Acoustic Rock3
R521	Disco Chocolate	R585	Cat Groove	R651	80's Pop3
R522	Disco Fox	R586	Dixie Jazz	R652	60's Soul2
R523	Disco Funk	R587	Medium Jazz	R653	Fusion Shuffl3
R524	Disco Hands	R588	Jazz Big Band	R654	Fusion Shuffl4
R525	Disco Party	R589	Jazz Club	R655	16 Beat Pop3
R526	Disco Samba	R590	Ragtime2	R656	16 Beat Pop4
R527	UK Pop	R591	Big Band Shuffle 1	R657	60's Rock 3
R528	Club Dance	R592	Big Band Shuffle 2	R658	Brit Rock Pop2
R529	Modern R&B	R593	Big Band Shuffle 3	R659	Blueberry Blues2
R530	Hip Shuffle	R594	Fast Band 1	R660	Skiffle3
R531	Charleston	R595	Fast Band 2	R661	Mambo6
R532	Disco Pop	R596	Frankly Soul	R662	Mambo7
R533	Disco Soul	R597	Jazz Funk	R663	Club Pop3
R534	Disco Trot	R598	Classic Big Band	R664	Schlager Italia2
R535	Euro Beat2	R599	French Jazz	R665	Power Rock3
R536	Rap 3	R600	Jump Jive	R666	Rock'n Roll 3
R537	Rave	R601	Standard Rock2	R667	Cool8 Beat2
R538	Techno2	R602	16 Beat Ballad3	R668	British Pop6
R539	Techno3	R603	Contemp Rock2	R669	British Pop7
R540	70's Disco Funk	R604	EP Ballad2	R670	8 Beat Soul3
R541	Disco Philly	R605	Fusion4	R671	Brit Pop2
R542	Disco House	R606	Fusion5	R672	Disco Latin2
R543	80's Disco	R607	Funk2	R673	Brit Pop Swing2
R544	Schlager Polka	R608	Guitar Serenade2	R674	Fast Gospel2
R545	Polka Pop	R609	Organ Ballad3	R675	Fast Bossa2
R546	Blue Grass 1	R610	Joropo2	R676	60's Guitar Pop2
R547	Blue Grass 2	R611	Reggaeton2	R677	90's Soul
R548	Blue Grass 3	R612	French Waltz2	R678	Funk Shuffl 3
R549	Pop Waltz2	R613	Merengue2	R679	8 Beat Rock3
R550	USA March	R614	Pop Ballad2	R680	Rock Cha Cha2
R551	Hully Gully	R615	Norteno2	R681	Gujiira2
R552	Tarantella	R616	Jig2	R682	Rock Ballad2
R553	Limbo Rock	R617	Hawaiian2	R683	Soul 5
R554	Swing Waltz	R618	70's Disco3	R684	Classic 8Beat2
R555	Pub Piano	R619	70's Disco4	R685	Bolero3
R556	Jazz Waltz2	R620	Club Beat2	R686	Soul Brothers2
R557	Jazz Waltz3	R621	Rap 4	R687	Happy Reggae2
R558	Show Tune	R622	Disco House2	R688	Pop Latin2
R559	Polka2	R623	MOR Swing2	R689	6-8Slow Rock2
R560	Ober Polka	R624	Retro Pop2	R690	6-8 Modern2
R561	Party Polka	R625	Calypso2	R691	6-8 Orchestral2
R562	Pop Mambo	R626	Trance Pop2	R692	Slow Soul2
R563	Latin Party Pop	R627	Big Band Shuffle4	R693	Piano Ballad3
R564	Cumbia2	R628	Big Band Shuffle5	R694	Disco Trot2
R565	Parranda	R629	Big Band Shuffle6	R695	Disco Hands2
		R630	German Rock2	R696	British Pop8
		R631	Schlager Beat2		

R697	Italian Mazurka2	R763	Easy Country2	R830	Fast Band5
R698	Bohemian Waltz2	R764	Country Hits2	R831	Orchestra Swing5
R699	Samba3	R765	Country 8 Beat2	R832	Movie Ballad3
R700	Samba4	R766	Blue Grass4	R833	Rock & Roll Shfl4
R701	Jive3	R767	Blue Grass5	R834	Hard Rock5
R702	Foxtrot3	R768	Blue Grass6	R835	8 Beat Pop5
R703	Pasodoble2	R769	Gospel Sisters2	R836	8 Beat Pop6
R704	Highland Waltz2	R770	Italian Waltz2	R837	16 Beat Ballad5
R705	Schlager Polka2	R771	Limbo Rock2	R838	Straight Rock3
R706	Grupera2	R772	Bluegrass2	R839	Easy Ballad3
R707	Danzon2	R773	Country Brothers2	R840	Fofo3
R708	Schlager Alp2	R774	Scand Country3	R841	Fusion6
R709	Saeidy2	R775	Scand Country4	R842	Funk3
R710	Bhajan2	R776	Scand Shuffle2	R843	Viennese Waltz3
R711	Hip Hop Groove2	R777	70's Chart Cntry2	R844	Show Tune3
R712	Hip Shuffle2	R778	Pub Piano2	R845	Dixieland3
R713	Organ Groove2	R779	Polka3	R846	Big Band Shuffle7
R714	Chart Pop3	R780	Rock Cha Cha3	R847	Big Band Shuffle8
R715	Country Ballad3	R781	Schlager Rock3	R848	Big Band Shuffle9
R716	Romantic Ballad2	R782	Organ Samba2	R849	Pop Waltz4
R717	Analog Ballad2	R783	Gay Gordons2	R850	USA March3
R718	Electro Pop2	R784	Swing Waltz2	R851	Hully Gully3
R719	Blues Rock2	R785	Reel2	R852	Tarantella2
R720	Rave2	R786	Movie Ballad2	R853	Limbo Rock3
R721	US Chart Hit2	R787	Cool Pop2	R854	Swing Waltz3
R722	Alp Ballad3	R788	Rock & Roll Shfl3	R855	Pub Piano3
R723	8 Beat Modern2	R789	Hard Rock3	R856	Jazz Waltz 5
R724	Euro Hip Hop2	R790	Hard Rock4	R857	Jazz Waltz 6
R725	Disco Pop2	R791	Club Pop4	R858	Show Tune4
R726	Disco Philly2	R792	8 Beat Pop3	R859	Polka4
R727	Mod Big BandShfl2	R793	8 Beat Pop4	R860	Ober Polka3
R728	Modern Big Band2	R794	60's Rock 4	R861	Party Polka2
R729	8 Beat Adria2	R795	16 Beat Ballad4	R862	Waltz3
R730	Disco Chocolate2	R796	Straight Rock2	R863	Cha Cha3
R731	Euro Trance2	R797	Easy Ballad2	R864	Rumba4
R732	Euro Beat3	R798	Pop Mambo2	R865	Jive4
R733	Techno4	R799	BossaNova3	R866	Pasodoble3
R734	Reggae3	R800	Fofo2	R867	Samba5
R735	Chillout Cafe2	R801	Pop Classics2	R868	Samba6
R736	Love Song2	R802	Live 8 Beat2	R869	Schlager Rock5
R737	French House2	R803	Power Rock4	R870	Schlager Rock6
R738	Jazz Waltz4	R804	Acoustic Rock4	R871	Foxtrot4
R739	Classic Piano2	R805	Cool 8 Beat3	R872	Viennese Waltz4
R740	Disco Party2	R806	Uptempo 8Beat2	R873	Tango8
R741	Club Dance2	R807	90's Rock Ballad2	R874	Tango9
R742	Jazz Gtr Club2	R808	Chart Rock Shfl3	R875	Country Ballad5
R743	Modern Jazz2	R809	Brit Pop3	R876	Country Two Step2
R744	Polka Pop2	R810	Brazilian Samba2	R877	Country 8
R745	USA March2	R811	Brit Pop Swing3	R878	Country 9
R746	Ober Polka2	R812	60's 8 Beat2	R879	Finger Pickin3
R747	Easy Listening2	R813	Fast Bossa3	R880	Country Brothers3
R748	Fast Band3	R814	60's Guitar Pop3	R881	New Country2
R749	Fast Band4	R815	90's Soul2	R882	Easy Country3
R750	Big Band Fast3	R816	Gujiira3	R883	70's Chart Cntry3
R751	Orchestra Swing3	R817	Euro Hip Hop3	R884	Hoedown2
R752	Orchestra Swing4	R818	Disco Pop3	R885	Country Shuffle2
R753	Finger Pickin2	R819	Disco Philly3	R886	Schlager Polka3
R754	Hully Gully2	R820	Mod Big BandShfl3	R887	Polka Pop4
R755	Viennese Waltz2	R821	Modern Big Band3	R888	Blue Grass 7
R756	Show Tune2	R822	8 Beat Adria3	R889	Blue Grass 8
R757	Rumba3	R823	Disco Chocolate3	R890	Blue Grass 9
R758	Schlager Rock4	R824	Euro Trance3	R891	70's Disco Funk2
R759	Jazz Waltz Fast2	R825	Love Song3	R892	Disco Philly4
R760	Country Ballad4	R826	Disco Party3	R893	Disco House3
R761	Dixieland2	R827	Club Dance3	R894	80's Disco2
R762	French Jazz3	R828	Modern Jazz3	R895	Swing Fox2
		R829	Polka Pop3	R896	Slow Fox2

R897	Organ Cha Cha2	R931	90's Guitar Pop2	R965	House3
R898	Organ Quick Step2	R932	Soft Rock3	R966	Jazz Gtr Club3
R899	Cat Groove3	R933	Chart Guita rPop2	R967	Modern Jazz4
R900	Dixie Jazz2	R934	Guijira4	R968	Acoustic Jazz2
R901	Medium Jazz2	R935	Easy Listening3	R969	Cool Jazz Ballad2
R902	Jazz Big Band2	R936	Bebop2	R970	Modern Jazz Bld2
R903	Jazz Club2	R937	Orch Big Band3	R971	Modern Pop Bld2
R904	Ragtime3	R938	Big Band Fast4	R972	Soul R&B2
R905	Big Band Shuffle 10	R939	Orchestra Swing6	R973	R&B Soul Ballad2
R906	Big Band Shuffle 11	R940	Orchestra Swing7	R974	Euro Hip Hop4
R907	Big Band Shuffle 12	R941	Rock Cha Cha4	R975	Trip Hop2
R908	Fast Band 6	R942	Organ Swing2	R976	Ibiza 2002_2
R909	Fast Band 7	R943	Secret Service2	R977	Soft Rock4
R910	German Waltz2	R944	Animation Bld2	R978	Chart Guita rPop3
R911	Carnival3	R945	Christmas Waltz2	R979	Guijira5
R912	Organ Samba3	R946	Frankly Soul2	R980	Easy Listening4
R913	Reel3	R947	Jazz Funk2	R981	Bebop3
R914	Gay Gordons3	R948	Classic Big Band2	R982	Orch Big Band4
R915	Scand Waltz2	R949	French Jazz4	R983	Big Band Fast5
R916	Pop Classics3	R950	Jump Jive2	R984	Orchestra Swing8
R917	Live 8 Beat3	R951	Mod Big Band Shfl4	R985	Orchestra Swing9
R918	Power Rock5	R952	Modern Big Band4	R986	Rock Cha Cha5
R919	Acoustic Rock5	R953	Pop Gtr Ballad2	R987	Organ Swing3
R920	Cool 8 Beat4	R954	Ibiza 2002_2	R988	Secret Service3
R921	Uptempo 8Beat3	R955	Euro Trance4	R989	Animation Bld3
R922	90's Rock Ballad3	R956	6-8 Trance2	R990	Reggae4
R923	Chart Rock Shfl4	R957	Latin DJ's2	R991	Frankly Soul3
R924	Brit Pop4	R958	Bomba2	R992	Jazz Funk3
R925	Brazilian Samba3	R959	Chillout Cafe3	R993	Classic Big Band3
R926	Brit Pop Swing4	R960	70's Glam Piano2	R994	French Jazz5
R927	60's 8 Beat3	R961	French House3	R995	Jump Jive3
R928	Fast Bossa4	R962	English Waltz2	R996	Mod Big Band Shfl5
R929	60's Guitar Pop4	R963	8 Beat Ballad3	R997	Modern Big Band5
R930	70's 8 Beat2	R964	Club House2	R998-R1000	Big Band Shuffle 13-15

Appendix 3 (Demonstration Song Comparison Table)

S001	Chopin Fantasia Impromptu	S027	Schumann Frohlicher Landmann
S002	Chopin Nocturne	S028	Schumann Sicilienne
S003	Chopin Petit Chien	S029	Richard Ballade Pour Adeline
S004	Chopin Chanson De L'adieu	S030	Richard Ping Pong Sous Les Arbres
S005	Chopin Nocturne	S031	Richard A Comme Amour
S006	Chopin Black keys	S032	Richard Mariage D'amour
S007	Chopin - Valse op.64 no.2	S033	Mendelssohn Jagerlied op.19b-3
S008	Beethoven- Piano Sonate op. 13 "Pathetique" 2nd mov	S034	Mendelssohn Frühlingslied
S009	Beethoven For Elise	S035	Haydn Little Serenade
S010	Beethoven Mondschein Sonate	S036	Pachelbel Canon In D
S011	Beethoven Minuet In G	S037	Badarzewska Maiden's Prayer
S012	Beethoven Marcia Alla Turca	S038	Liszt Liebestraume
S013	Beethoven piano sonata op.49-2 1st mov	S039	Tchaikovsky- Danse des mirlitons
S014	Beethoven Ecossaise	S040	Oesten Dolly's Dreaming Awakening
S015	Mozart Twinkle Twinkle Little Star	S041	Dvorak Humoresque
S016	Mozart Turkish March	S042	Joplin The Entertainer
S017	Mozart Sonate	S043	Debussy La Fille aux Cheveux de Lin
S018	Mozart Menuett	S044	Debussy Aeabesque
S019	Bach Waltz In A Mino	S045	Dubessy Clair De lune
S020	Bach Menuett	S046	L-C.Daquin Le Coucou
S021	Bach The Well-Tempered Clavier	S047	Karl Bohm The Fountain
S022	Bach Bourree	S048	Burgmüller Pastorale
S023	Bach Invention	S049	Korsakov Bumblebee
S024	Schubert Military Marches	S050	Haydn-Sunrise
S025	Schubert Monents Musicaux	S051-S150	
S026	Schumann Traumerei		Czerny 599 No.001-Czerny 599 No.100

1 Battery



WARNING

- bitte pass auf dich auf aus folgende Aufmerksamkeiten
- Tun nicht versuchen, zu zerlegen oder kurzschließen
- Batterie ○ Tun nicht aussetzen oder brennen Es In das Feuer
- Tun nicht vermischen neu und alt Batterie
- Tun nicht mischen anders Typen von Batterien oder Tun nicht Aufladung Die Batterie
- Der positiv und Negativ Stangen von Die Batterie muss richtig installiert
- Bitte Entfernen Sie die Batterie aus dem elektronischen Tastatur Wenn du Tun nicht verwenden für eine lang Zeit,

2 Exception



WARNING

- Bitte gehen Sie wie folgt vor Schritte, wenn Ausnahme für die elektronische
- Tastatur wie rauchend , über heißem und
- Also An. 1). Leistung aus
- 2). ziehen Die Adapter runter aus Die Leistung Buchse An Die Wand Wann
- Sind verwenden.
- 3). Kontakt dein lokal Händler In Zeit .
- Es ist Normal für Adapter bekommen heiß Wann lang Zeit mit Klimaanlage Adapter , nicht angeben Fehlfunktion
- Bitte ausschalten und Starten Sie die elektronische Tastatur neu, wenn irgendwann Funktion Problem ,

3 Install the battery

- 1). Ausfahrt Die schrauben Und entfernen Die Batterie Abdeckung
- 2). setzen Die Batterie mit richtig positiv + und Negativ - Richtung in die Batterie Slot mit 6"" AA " 1 . 5 V
- 3). setzen Die Batterie Abdeckung Und Sperren Die Schrauben

Das Produkt enthält elektronische Komponenten und sollen nicht

erlauben Flüssigkeiten Zu eingeben oder Sei gebraucht In Feuchte Umgebungen .

Täglich staubdicht Reinigung sollen Sei Erledigt Also , Und Oberflächenflecken dürfen Sei abgewischt mit A weich Und sauber Tuch .

VEVOR[®]

TOUGH TOOLS, HALF PRICE

**Technischer Support und E-Garantie-
Zertifikat ate www.vevor.com/support**

VEVOR®

TOUGH TOOLS, HALF PRICE

Supporto tecnico e Garanzia elettronica

Certificato www.vevor.com/support

PIANOFORTE UTENTE MANUALE

MODELLO: Modello BD-881D

Continuiamo a impegnarci per fornirti strumenti con competitivo prezzo.

"Salva Metà", "Metà prezzo " o altre espressioni simili utilizzate di noi soltanto rappresenta UN

stima del risparmio che potresti ottenere acquistando determinati utensili con noi rispetto ai principali

di noi. Tu i migliori marchi e fa non significa necessariamente coprire Tutto categorie di strumenti offerti

si ricorda gentilmente di verificare attentamente quando si è posizionare un ordina con noi se tu Sono

risparmiando effettivamente la metà rispetto al top maggiore marchi.

MODELLO: Modello BD-881D



(L'immagine è solo di riferimento, Per favore fare riferimento al attuale oggetto)

BISOGNO AIUTO? CONTATTO NOI!

Avere prodotto domande? Bisogno tecnico supporto? Per favore Tasto gratuito A contatto noi:

**Supporto tecnico e certificato di garanzia
elettronica
www.vevor.com/support**

Questo è l'originale istruzione, per favore leggi tutto manuale istruzioni accuratamente prima di operare. VEVOR si riserva una chiara interpretazione del nostro manuale utente. L'aspetto del prodotto deve essere soggetto al prodotto tu ricevuto. Per favore perdonami noi che non lo faremo informarti di nuovo se ci sono tecnologie o software aggiornamenti sul nostro prodotto.



Accessorio

Tipo - C adattatore

* 1 energia corda

* 1

Spartito musicale in piedi *

1

Musica foglio clip *

1 Microfono * 1

Auricolari * 1

pianoforte

 
adesivo * 1

pianoforte borsa


* 1

Mezzogiorno corda * 1

sostenere piede !* 1

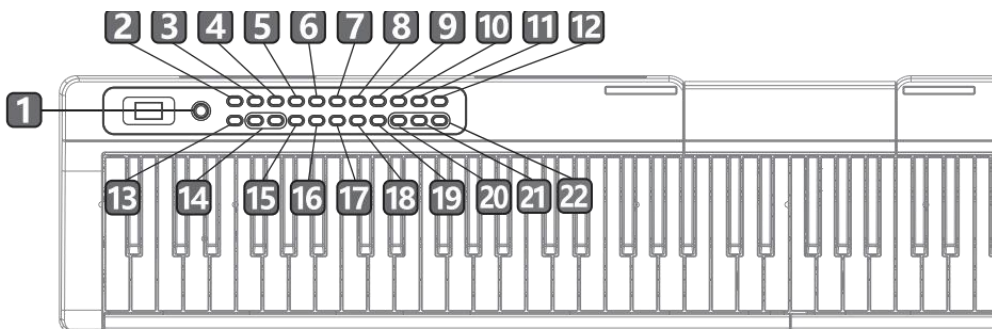

1 Power	6 Volume	11 Key drum	16 Chord	Bluetooth/MP3 mode
2 Tone	7 Rhythm vol	12 Lesson	17 Record	20 ►/⏮
3 Rhythm	8 Tempo	13 Start/stop	18 Play/LED	21 ◀/VOL-
4 Demo One	9 Transpose	14 +/-	19 Metronome	22 ▶/VOL+
5 Demo All	10 Dual key	15 Sync/Vel		

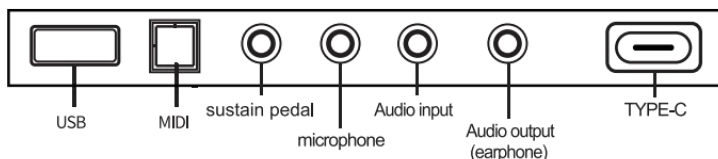 

1. Power

Turn on the [Power] button to play the keyboard and enter the performance state.

2. Tone

After pressing [Tone] button, you can use the [+/-] button to select the tone.

3. Rhythm

After pressing [Rhythm] button, you can use the [+/-] button to select the rhythm.

4. Demo One

Press the [Demo One] for the first time to enter the [Demo One] mode, and press the Demo One for the second time to exit the Demo One mode. After entering the Demo One mode, play the selected song from the next song. When the song finishes playing, the current song is played repeatedly. In the Demo One mode, press the [+/-] key to switch songs.

5. Demo All

Press the [Demo All] for the first time to enter the continuous singing mode, and press the Demo All for the second time to exit the continuous singing mode. After entering continuous singing mode, playback starts from the current song. When the song is finished, continue to play the next song and play all the songs in a loop. In continuous singing mode, press [+/-] key to switch songs.

6. Volume

After pressing the Volume, you can use the [+] and [-] keys to increase/decrease the volume. The volume control has a total of 16 segments (1~16).

7. Rhythm vol

After pressing the [Rhythm vol], you can use the [+/-] keys to increase/decrease the rhythm volume. The rhythm control has a total of 17 sections (0~16). The Rhythm volume keys can also control the volume of demo songs, chords and drums.

8. Tempo

After pressing the [Tempo], you can use the [+/-] to increase/decrease the speed continuously. The speed control has a total of 270 segments (30~300).

9. Transpose

After pressing the [Transpose] button, you can use the [+/-] button to transpose. There are 25 segments (-12~12) for the transposition control, and the preset value is in the 13th segment after power-on. Hold [+/-] button for more than 1 second, can continuously increase/decrease the transposition. The chord pitch also changes with the transposition value.

10. Dual key

Press [Dual Key] button for the first time to activate the dual keyboard function, and press [Dual Key] button for the second time to cancel the dual keyboard function. When the dual keyboard function is activated, the scales of the left keys A1 ~ B4 will be played corresponding to the scales of A2 ~ B5, and the scales of the right keys C5 ~ C9 will be played corresponding to the scales of C4 ~ C8. You can use the [+] [-] keys to select the main tone to replace the tone of the right key.

11. Key drum

Press [Key Drum] button for the first time to activate the keyboard drum function, and press [Key Drum] button for the second time to cancel the keyboard drum function. When the keyboard drum function is activated, the corresponding drum sound will be played when you play the key.

12. Lesson

Press [Lesson] button for the first time to enter the single-key mode, and press [Lesson] button for the second time to exit the single-key mode.

After entering the one-touch mode, use the current song to teach,

After the song is played, if the user presses the keys at will, it is the main melody. If the main melody does not reach the next bar, the background sound will repeat the bar until the song is played and stop after the song ends.

Press [Lesson] button for the third time to enter the ensemble mode, and press [Lesson] button for the fourth time to exit the ensemble mode.

After entering the ensemble mode, the current song is used for teaching. After the song is played, the user can play the keys at will and interrupt the main string rhythm. If not pressed the key again after 5 seconds, the main string rhythm will automatically resume playback. The background sound is played completely, and the teaching is repeated until the end of the song. After the song is over the ensemble will play a song.

Press [Lesson] button the fifth time to enter the follow-up mode, and press [Lesson] the sixth time to exit the follow-up mode.

After entering the follow-up mode, the current song is used for teaching. After the song is played, the main melody is not played, and the user must follow the notes displayed on the digital tube. Press the corresponding key to continue to play the next note, and the background sound will repeat that measure until the song ends.

Press the corresponding key to continue to play the next note, and the background sound will repeat that measure until the song ends.

In the teaching mode, [+/-] button automatically enters the song selection mode, and exits the teaching mode to return to the tone selection mode.

Press [Tone] button while playing the music will temporarily switch to the tone selection mode, and return to the song selection mode in 3 seconds.

13. Start/stop

Press the [Start/Stop] button for the first time to start playing the rhythm, and press the [Start/Stop] button for the second time to stop playing the rhythm.

Exit this mode under the mode of teaching, recording, playback, metronome, demo music, etc.

14. -/+

There are [+] and [-] sequential selection, a total of 2 keys. Can be used to select the tone, rhythm, song, volume, accompaniment volume, speed, transpose quickly.

If the number pressed exceeds the maximum number of tone, rhythms or songs, the original value will be maintained.

15. Sync/Vel

Press [Sync/Vel] for the first time to enter the sync mode, and press the Sync for the second time to exit the sync mode. When entering the sync mode, stop playing the rhythm, and then press the first 34 keys to automatically play the selected rhythm (chord). For the chord synchronization part, please refer to the single fingering accompaniment or multi-fingering accompaniment instructions.

(The default value of power on is the key strength off. Long press this key for 5 seconds to control the key strength on/off.)

16. Chord

Press [Chord] button for the first time to enter the integrated chord mode, and press [Chord] button for the second time to exit the integrated chord mode. [Chord] button only works in rhythm and normal mode. When playing the rhythm, press [Chord] button and press the fingering within the range of the keys A1 ~ F4#, and then you can hear the corresponding chord accompaniment sound. If you don't press the fingering of the fingering, the single fingering will be played. Refers to the chord of the chord fingering.

When the rhythm is not playing, press [Chord] button and press the fingering within the range of keys A1 ~ F4#, and you will hear the corresponding chord sound. If you do not press the fingering of the fingering, the single fingering will be played. Refers to the chord tone. For the detailed fingering of the integrated fingering accompaniment, please refer to the single fingered chord table and the multi-finger chord table attached. The integrated fingering can be used with rhythm/chord/synchronization.

17. Record

Press the [Recording] button the first time to enter the recording mode, and the last record will be cleared; pressing the [recording] button for the second time will exit the recording mode. In the recording mode, the metronome will be played, and you can start recording by pressing any key. The maximum number of recordings is 700. When the recording is full, the next note cannot be recorded; during recording, you can press the [Play] button at any time to play the recorded notes or drum sounds.

18. Play/LED

Press [Play/LED] for the first time to play the recorded note or drum sound, and press the Play/LED for the second time to stop playing. Press the Play to exit the recording mode. If there is no recorded value before, press Play and no action will occur. (The default value for powering on is that the keyboard light is on. Press and hold this button for 5 seconds to control the keyboard LED on/off.)

19. Metronome

Press [Metronome] button, the action function is 1/4 beat ~ 7/4 beat + stop-+ beat. 4. The preset value of tempo is 120. There are 7 variations of the metronome sound, in sequence from 1/4 beat to 7/4 beat. When recording, press [Metronome] button to switch the metronome sound.

Bluetooth/MP3 mode

20. Press [⏮/⏭] shortly (within 1 second) to play or pause the song. In pause mode, press [⏮/⏭] to continue playing the song.

21. Press [⏮/VOL-] shortly (within 1 second) to select the previous song. Press the [⏮/VOL-] for more than 1 second to decrease the volume.

22. Press [⏭/VOL+] shortly (within 1 second) to select the next song. Press [⏭/VOL+] for more than 1 second to increase the volume.

Appendix 1 (Voice Comparison Table)

T001	Acoustic Grand Piano	T055	Synth Voice	T119	Synth Drum
T002	Bright Acoustic Piano	T056	Orchestra Hit	T120	Reverse Cymbal
T003	Electric Grand Piano	T057	Trumpet	T121	Guitar Fret Noise
T004	Honky-tonk Piano	T058	Trombone	T122	Breath Noise
T005	Rhodes Piano	T059	Tuba	T123	Seashore
T006	Chorused Piano	T060	Muted Trumpet	T124	Bird Tweet
T007	Harpsichord	T061	French Horn	T125	Telephone Ring
T008	Clavichord	T062	Brass Section	T126	Helicopter
T009	Celesta	T063	Synth Brass 1	T127	Applause
T010	Glockenspiel	T064	Synth Brass 2	T128	Gunshot
T011	Music box	T065	Soprano Sax	T129	Yong Gin
T012	Vibraphone	T066	Alto Sax	T130	Zheng
T013	Marimba	T067	Tenor Sax	T131	Zhong Ruan
T014	Xylophone	T068	Baritone Sax	T132	Pi Pa
T015	Tubular Bell	T069	Oboe	T133	Big Souna
T016	Dulcimer	T070	English Horn	T134	Souna
T017	Drawbar Organ	T071	Bassoon	T135	Er Hu
T018	Percussive Organ	T072	Clarinet	T136	Yue Hu
T019	Rock Organ	T073	Piccolo	T137	Di Zi
T020	Church Organ	T074	Flute	T138	Bong Di
T021	Reed Organ	T075	Recorder	T139	Koto 2
T022	Accordion	T076	Pan Flute	T140	Qu Di
T023	Harmonica	T077	Bottle Blow	T141	Jungle Bass
T024	Tango Accordion	T078	Shakuhachi	T142	Koto 3
T025	Acoustic Guitar (nylon)	T079	Whistle	T143	Marimba 2
T026	Acoustic Guitar (steel)	T080	Ocarina	T144	Tsugaru
T027	Electric Guitar (jazz)	T081	Lead 1 (square)	T145	Kawala
T028	Electric Guitar (clean)	T082	Lead 2 (sawtooth)	T146	Attack Clav.
T029	Electric Guitar (muted)	T083	Lead 3 (calliope lead)	T147	Crystal
T030	Overdriven Guitar	T084	Lead 4 (chiff lead)	T148	Bright String
T031	Distortion Guitar	T085	Lead 5 (charang)	T149	Clavi 2
T032	Guitar Harmonics	T086	Lead 6 (voice)	T150	Chorus Guitar.
T033	Acoustic Bass	T087	Lead 7 (fifths)	T151	Barafon
T034	Electric Bass(finger)	T088	Lead 8 (bass+lead)	T152	Jazz Organ
T035	Electric Bass (pick)	T089	Pad 1 (new age)	T153	Indian Flute
T036	Fretless Bass	T090	Pad 2 (warm)	T154	Mute Barafon
T037	Slap Bass 1	T091	Pad 3 (polysynth)	T155	Dual Horns
T038	Slap Bass 2	T092	Pad 4 (choir)	T156	Electric Giutar (Clean) 2
T039	Synth Bass 1	T093	Pad 5 (bowed)	T157	Clavi 3
T040	Synth Bass 2	T094	Pad 6 (metallic)	T158	Soft Sax
T041	Violin	T095	Pad 7 (halo)	T159	Electric Vpraphone
T042	Viola	T096	Pad 8 (sweep)	T160	Didgeridoo
T043	Cello	T097	FX 1 (rain)	T161	Barafon 2
T044	Contrabass	T098	FX 2 (soundtrack)	T162	Tubular Bells 2
T045	Tremolo Strings	T099	FX 3 (crystal)	T163	Soft Accord
T046	Pizzicato Strings	T100	FX 4 (atmosphere)	T164	Barafon 3
T047	Orchestral Harp	T101	FX 5 (brightness)	T165	Clavi 4
T048	Timpani	T102	FX 6 (goblins)	T166	Nay
T049	String Ensemble 1	T103	FX 7 (echoes)	T167	Oct Harp
T050	String Ensemble 2	T104	FX 8 (sci-fi)	T168	Attack Barafon
T051	Synth Strings 1	T105	Sitar	T169	Clavi 5
T052	Synth Strings 2	T106	Banjo	T170	Kalimba 2
T053	Choir Aahs	T107	Shamisen	T171	Tsugaru 2
T054	Voice Oohs	T108	Koto	T172	Shamisen 2
		T109	Kalimba	T173	Woodblock 2
		T110	Bagpipe	T174	Crystal 2
		T111	Fiddle	T175	Shamisen 3
		T112	Shanai	T176	Synth Harpsi.
		T113	Tinkle Bell	T177	Jazz Organ 2
		T114	Agogo	T178	Viola Attack
		T115	Steel Drums	T179	Viola Attack 2
		T116	Woodblock	T180	Hard Barsoon
		T117	Taiko Drum	T181	Mute Barafon 2
		T118	Melodic Tom	T182	Bodhran

T183	Kawala 2	T247	Tsugaru 4	T311	Attack Barafon 4
T184	Didgeridoo 2	T248	Tsugaru 5	T312	Hard Barsoon 3
T185	Soft Guitar	T249	Mute Barafon 4	T313	Dulcimer 4
T186	Suona 2	T250	Dual Horns 4	T314	Twin Bones 4
T187	Twin Bones	T251	Soft Sax 3	T315	Soft Sax 5
T188	Jazz Organ 3	T252	Bodhran 3	T316	Shamisen 5
T189	Woodblock 3	T253	Guitar Pinch 3	T317	Suona 4
T190	Soft Santur	T254	Crystal 3	T318	Bodhran 4
T191	Koto 4	T255	Grow Guitar 2	T319	Shamisen 6
T192	Castanets	T256	Jazz Organ 6	T320	Electric Vraphone 6
T193	Viola Attack 3	T257	Attack Barafon 2	T321	Tsugaru 7
T194	Woodblock 4	T258	Xylophone 4	T322	Oct Harp 3
T195	Bright String 2	T259	Soft Santur 3	T323	Kalimba 4
T196	Twin Bones 2	T260	Kawala 4	T324	Soft Clav. 2
T197	Tenor Sax 2	T261	Soft Guitar 5	T325	English Horn 4
T198	Wind Organ	T262	Nay 4	T326	Didgeridoo 6
T199	Tron Flute	T263	Synth Harpsi. 3	T327	Barafon 4
T200	Bodhran 2	T264	Wind Organ 3	T328	Indian Flute 7
T201	Tron Flute 2	T265	Shanai 2	T329	Organ Flute 2
T202	Jazz Organ 4	T266	Woodblock 6	T330	Soft Santur 4
T203	Soft Santur 2	T267	Electric Vraphone 4	T331	Mute Barafon 7
T204	Woodblock 5	T268	Kawala 5	T332	Nay 7
T205	Shamisen 4	T269	Grow Guitar 3	T333	Hard Vibe 5
T206	Indian Flute 2	T270	Grow Guitar 4	T334	Bari & Tenor 4
T207	Electric Vraphone 2	T271	Steel Bell	T335	Bag Pipe 4
T208	Soft Guitar 2	T272	Wind Organ 4	T336	Tenor Sax 3
T209	Mute Barafon 3	T273	Soft Accord 2	T337	Organ Flute 3
T210	Dual Horns 2	T274	Kalimba 3	T338	Dulcimer 5
T211	Xylophone 2	T275	Twin Bones 3	T339	Twin Bones 5
T212	Didgeridoo 3	T276	Church Bells 3	T340	Grow Guitar 5
T213	Wind Organ 2	T277	Koto 6	T341	Kalimba 5
T214	Church Bells 2	T278	Attack Barafon 3	T342	Oct Harp 4
T215	Tsugaru 3	T279	Mute Barafon 5	T343	Nay 8
T216	Nay 2	T280	Nay 5	T344	Dual Horns 5
T217	Guitar Pinch 2	T281	Jungle Bass 2	T345	Didgeridoo 7
T218	Grow Guitar	T282	Soft Accord 3	T346	English Horn 5
T219	Indian Flute 3	T283	Hard Vibe 3	T347	Kawala 6
T220	Synth Harpsi. 2	T284	Soft Clav.	T348	Marimba 5
T221	Soft Sax 2	T285	Bag Pipe 2	T349	Barafon 5
T222	Xylophone 3	T286	Oct Harp 2	T350	Soft Accord 5
T223	English Horn 2	T287	Woodblock 7	T351	Mute Barafon 8
T224	Soft Guitar 3	T288	Mute Barafon 6	T352	Dual Horns 6
T225	Castanets 2	T289	Guitar Pinch 4	T353	Church Bells 4
T226	Soft Guitar 4	T290	Dulcimer 3	T354	Wind Organ 5
T227	Hard Vibe 2	T291	Soft Sax 4	T355	Attack Clav. 5
T228	Reed Horn	T292	Electric Vraphone 5	T356	Jazz Organ 7
T229	Nay 3	T293	Tsugaru 6	T357	Reed Horn 3
T230	Bari & Tenor	T294	Reed Horn 2	T358	Tenor Sax 4
T231	Kawala 3	T295	Castanets 3	T359	Chorus Guitar. 2
T232	Indian Flute 4	T296	Tron Flute 3	T360	Didgeridoo 8
T233	Didgeridoo 4	T297	Attack Clav. 3	T361	Soft Santur 5
T234	Attack Clav. 2	T298	Bari & Tenor 3	T362	Clavi 6
T235	Marimba 3	T299	Indian Flute 6	T363	Kalimba 6
T236	Bari & Tenor 2	T300	Soft Guitar 6	T364	Didgeridoo 9
T237	Slow Violin	T301	Nay 6	T365	Wind Organ 6
T238	Organ Flute	T302	Didgeridoo 5	T366	Tron Flute 4
T239	Jazz Organ 5	T303	Marimba 4	T367	Soft Sax 6
T240	Electric Vraphone 3	T304	Attack Clav. 4	T368	Suona 5
T241	Dual Horns 3	T305	Jungle Bass 3	T369	Soft Guitar 7
T242	Indian Flute 5	T306	Hard Barsoon 2	T370	Hard Vibe 6
T243	English Horn 3	T307	Suona 3	T371	Jazz Organ 8
T244	Dulcimer 2	T308	Hard Vibe 4	T372	Grow Guitar 6
T245	Koto 5	T309	Bag Pipe 3	T373	Xylophone 5
T246	Tubular Bells 3	T310	Soft Accord 4	T374	Bag Pipe 5

T375	Bag Pipe 6	T439	Shanai 5	T503	Bag Pipe 11
T376	Clavi 7	T440	English Horn 10	T504	Hard Barsoon 7
T377	Hard Vibe 7	T441	Didgeridoo 11	T505	Mute Barafon 15
T378	Kawala 7	T442	Organ Flute 5	T506	Soft Sax 12
T379	Shanai 3	T443	Attack Barafon 6	T507	Attack Clav. 9
T380	Suona 6	T444	Jungle Bass 5	T508	Jazz Organ 12
T381	Jungle Bass 4	T445	Barafon 7	T509	Soft Guitar 9
T382	Grow Guitar 7	T446	Soft Santur 6	T510	Didgeridoo 13
T383	Bag Pipe 7	T447	Slow Violin 3	T511	Bright String 4
T384	Crystal 4	T448	Hard Barsoon 6	T512	Electric Giutar (Clean) 4
T385	Guitar Pinch 5	T449	Didgeridoo 12	T513	Tsugaru 9
T386	Woodblock 8	T450	Kalimba 8	T514	Nay 10
T387	Soft Sax 7	T451	Electric Giutar (Clean) 3	T515	Reed Horn 6
T388	Attack Barafon 5	T452	Dulcimer 8	T516	Didgeridoo 14
T389	Barafon 6	T453	Reed Horn 5	T517	Soft Clav. 5
T390	Organ Flute 4	T454	Bodhran 5	T518	Soft Sax 13
T391	Mute Barafon 9	T455	Soft Sax 9	T519	Reed Organ 3
T392	Shanai 4	T456	Mute Barafon 14	T520	Steel Bell 3
T393	Soft Clav. 3	T457	Guitar Pinch 7	T521	Clavi 10
T394	Oct Harp 5	T458	Wind Organ 7	T522	Wind Organ 8
T395	Tron Flute 5	T459	Guitar Pinch 8	T523	Synth Harpsi. 6
T396	Bright String 3	T460	Indian Flute 9	T524	Bari & Tenor 5
T397	Jazz Organ 9	T461	Bag Pipe 9	T525	Steel Bell 4
T398	Mute Barafon 10	T462	Crystal 6	T526	Soft Sax 14
T399	Slow Violin 2	T463	Twin Bones 6	T527	Castanets 8
T400	Soft Sax 8	T464	Crystal 7	T528	Didgeridoo 15
T401	English Horn 6	T465	Soft Guitar 8	T529	Soft Sax 15
T402	Reed Horn 4	T466	Guitar Pinch 9	T530	Mute Barafon 16
T403	Indian Flute 8	T467	Attack Clav. 6	T531	Soft Guitar 10
T404	Castanets 4	T468	Bodhran 6	T532	Soft Accord 8
T405	English Horn 7	T469	Suona 7	T533	Wind Organ 9
T406	Tron Flute 6	T470	Chorus Guitar. 3	T534	Didgeridoo 16
T407	English Horn 8	T471	Slow Violin 4	T535	Electric Giutar (Clean) 5
T408	Hard Barsoon 4	T472	Clavi 9	T536	English Horn 11
T409	Dulcimer 6	T473	Castanets 6	T537	Soft Sax 16
T410	Xylophone 6	T474	Slow Violin 5	T538	Soft Guitar 11
T411	Mute Barafon 11	T475	Jazz Organ 10	T539	Hard Barsoon 8
T412	Nay 9	T476	Jazz Organ 11	T540	Kalimba 9
T413	Mute Barafon 12	T477	Electric Vraphone 8	T541	Koto 8
T414	Dual Horns 7	T478	Bodhran 7	T542	Soft Clav. 6
T415	Kawala 8	T479	Steel Bell 2	T543	Xylophone 7
T416	Soft Clav. 4	T480	Synth Harpsi. 5	T544	Soft Clav. 7
T417	Hard Barsoon 5	T481	Marimba 6	T545	Church Bells 6
T418	Dulcimer 7	T482	Marimba 7	T546	Kawala 10
T419	Soft Accord 6	T483	Attack Barafon 7	T547	Didgeridoo 17
T420	Church Bells 5	T484	Castanets 7	T548	Kalimba 10
T421	Shamisen 7	T485	Hard Vibe 9	T549	Castanets 9
T422	Synth Harpsi. 4	T486	Tron Flute 7	T550	Didgeridoo 18
T423	Crystal 5	T487	Soft Accord 7	T551	Bodhran 8
T424	Kawala 9	T488	Shanai 6	T552	English Horn 12
T425	Dual Horns 8	T489	Woodblock 9	T553	Hard Vibe 10
T426	Clavi 8	T490	Soft Sax 10	T554	Bodhran 9
T427	Electric Vraphone 7	T491	Slow Violin 6	T555	Indian Flute 10
T428	Castanets 5	T492	Soft Sax 11	T556	Dulcimer 9
T429	Tenor Sax 5	T493	Chorus Guitar. 4	T557	Soft Clav. 8
T430	Tenor Sax 6	T494	Attack Clav. 7	T558	Viola Attack 5
T431	Didgeridoo 10	T495	Reed Organ 2	T559	Attack Harp
T432	Kalimba 7	T496	Viola Attack 4	T560	Mute Barafon 17
T433	English Horn 9	T497	Koto 7	T561	Tenor Sax 8
T434	Guitar Pinch 6	T498	Tsugaru 8	T562	Twin Bones 7
T435	Hard Vibe 8	T499	Bag Pipe 10	T563	Chorus Guitar. 6
T436	Mute Barafon 13	T500	Attack Clav. 8	T564	Shanai 7
T437	Tenor Sax 7	T501	Tron Flute 8	T565	Kalimba 11
T438	Bag Pipe 8	T502	Marimba 8	T566	Jungle Bass 6

T567	Attack Barafon 8	T631	Koto 11	T695	Viola Attack 9
T568	Soft Clav. 9	T632	Kalimba 12	T696	Hard Vibe 13
T569	Tubular Bells 4	T633	Suona 10	T697	Koto 13
T570	Reed Organ 4	T634	Oct Harp 6	T698	Tenor Sax 9
T571	Guitar Pinch 10	T635	Koto 12	T699	Kawala 15
T572	Bodhran 10	T636	Shanai 8	T700	Steel Bell 6
T573	Clavi 11	T637	Electric Guitar (Clean) 8	T701	Soft Accord 11
T574	Viola Attack 6	T638	Clavi 12	T702	Organ Flute 10
T575	Synth Harpsi. 7	T639	Attack Harp 3	T703	Organ Flute 11
T576	Jungle Bass 7	T640	Attack Clav. 10	T704	Bright String 9
T577	Koto 9	T641	Bright String 6	T705	Soft Santur 11
T578	Church Bells 7	T642	Organ Flute 7	T706	Hard Barsoon 10
T579	Soft Accord 9	T643	Electric Guitar (Clean) 9	T707	Wind Organ 14
T580	Tubular Bells 5	T644	Kawala 12	T708	Synth Harpsi. 11
T581	Bag Pipe 12	T645	Bodhran 11	T709	Soft Sax 19
T582	Grow Guitar 8	T646	Shanai 9	T710	Bright String 10
T583	Mute Barafon 18	T647	Suona 11	T711	Bright String 11
T584	Soft Accord 10	T648	Synth Harpsi. 10	T712	Jungle Bass 9
T585	Electric Guitar (Clean) 6	T649	Bari & Tenor 6	T713	Soft Accord 12
T586	Viola Attack 7	T650	Kawala 13	T714	Reed Horn 8
T587	Kawala 11	T651	Bari & Tenor 7	T715	Slow Violin 10
T588	Soft Santur 7	T652	Reed Horn 7	T716	Synth Harpsi. 12
T589	Bright String 5	T653	Shamisen 10	T717	Attack Harp 6
T590	Electric Guitar (Clean) 7	T654	Soft Clav. 11	T718	Soft Santur 12
T591	Attack Barafon 9	T655	Bari & Tenor 8	T719	Hard Barsoon 11
T592	Electric Viphraphone 9	T656	Soft Santur 9	T720	English Horn 15
T593	Steel Bell 5	T657	Attack Harp 4	T721	Crystal 8
T594	Mute Barafon 19	T658	Bright String 7	T722	Bari & Tenor 10
T595	Chorus Guitar. 7	T659	Guitar Pinch 11	T723	Koto 14
T596	Soft Clav. 10	T660	Wind Organ 11	T724	Didgeridoo 20
T597	Viola Attack 8	T661	Soft Guitar 12	T725	Tenor Sax 10
T598	Church Bells 8	T662	English Horn 14	T726	Bright String 12
T599	Soft Santur 8	T663	Kawala 14	T727	Hard Vibe 14
T600	Wind Organ 10	T664	Grow Guitar 11	T728	Dual Horns 10
T601	Indian Flute 11	T665	Attack Harp 5	T729	Kawala 16
T602	Tsugaru 10	T666	Bari & Tenor 9	T730	Kawala 17
T603	Dulcimer 10	T667	Organ Flute 8	T731	Bag Pipe 13
T604	Grow Guitar 9	T668	Woodblock 10	T732	Electric Guitar (Clean) 10
T605	Tubular Bells 6	T669	Hard Vibe 11	T733	Tron Flute 10
T606	Jungle Bass 8	T670	Mute Barafon 20	T734	Kawala 18
T607	Dulcimer 11	T671	Tubular Bells 7	T735	Tron Flute 11
T608	Organ Flute 6	T672	Suona 12	T736	Tubular Bells 8
T609	Nay 11	T673	Bright String 8	T737	Synth Harpsi. 13
T610	Attack Barafon 10	T674	Hard Vibe 12	T738	Soft Santur 13
T611	English Horn 13	T675	Slow Violin 8	T739	Tubular Bells 9
T612	Suona 8	T676	Shamisen 11	T740	Attack Barafon 11
T613	Reed Organ 5	T677	Tron Flute 9	T741	Attack Barafon 12
T614	Shamisen 8	T678	Attack Clav. 11	T742	Electric Viphraphone 10
T615	Koto 10	T679	Dual Horns 9	T743	Dual Horns 11
T616	Shamisen 9	T680	Wind Organ 12	T744	Shanai 10
T617	Church Bells 9	T681	Twin Bones 8	T745	Bright String 13
T618	Nay 12	T682	Reed Organ 6	T746	Crystal 9
T619	Hard Barsoon 9	T683	Organ Flute 9	T747	Clavi 13
T620	Slow Violin 7	T684	Slow Violin 9	T748	Soft Sax 20
T621	Soft Sax 17	T685	Dulcimer 12	T749	Tron Flute 12
T622	Grow Guitar 10	T686	Tsugaru 11	T750	Dulcimer 14
T623	Attack Harp 2	T687	Wind Organ 13	T751	Slow Violin 11
T624	Suona 9	T688	Soft Santur 10	T752	Tenor Sax 11
T625	Nay 13	T689	Suona 13	T753	Nay 15
T626	Synth Harpsi. 8	T690	Soft Guitar 13	T754	Soft Guitar 15
T627	Didgeridoo 19	T691	Xylophone 8	T755	Shanai 11
T628	Nay 14	T692	Dulcimer 13	T756	Hard Barsoon 12
T629	Synth Harpsi. 9	T693	Marimba 9	T757	Synth Harpsi. 14
T630	Soft Sax 18	T694	Soft Guitar 14	T758	Soft Sax 21

T759	Suona 14	T821	Attack Barafon 14	T883	Crystal 14
T760	Kalimba 13	T822	Electric Viaphone 13	T884	Barafon 9
T761	Suona 15	T823	Soft Guitar 18	T885	Reed Horn 12
T762	Slow Violin 12	T824	Xylophone 11	T886	Dual Horns 13
T763	Reed Organ 7	T825	Tenor Sax 12	T887	Chorus Guitar. 12
T764	Kawala 19	T826	Oct Harp 8	T888	Grow Guitar 13
T765	Reed Horn 9	T827	Shamisen 12	T889	Shanai 12
T766	Attack Harp 7	T828	Reed Horn 10	T890	Twin Bones 12
T767	Oct Harp 7	T829	Marimba 12	T891	Barafon 10
T768	Kalimba 14	T830	Reed Organ 11	T892	Jungle Bass 11
T769	Twin Bones 9	T831	Attack Clav. 13	T893	Marimba 13
T770	Attack Clav. 12	T832	Hard Barsoon 15	T894	Grow Guitar 14
T771	Bari & Tenor 11	T833	Dual Horns 12	T895	Viola Attack 12
T772	Attack Harp 8	T834	Soft Clav. 13	T896	Shamisen 15
T773	English Horn 16	T835	Church Bells 12	T897	Tsugaru 12
T774	Twin Bones 10	T836	Oct Harp 9	T898	Reed Horn 13
T775	Soft Clav. 12	T837	Oct Harp 10	T899	Shanai 13
T776	Tubular Bells 10	T838	Indian Flute 13	T900	Castanets 13
T777	Slow Violin 13	T839	Viola Attack 11	T901	Reed Organ 12
T778	Synth Harpsi. 15	T840	Clavi 14	T902	Twin Bones 13
T779	Guitar Pinch 12	T841	Koto 15	T903	Chorus Guitar. 13
T780	Church Bells 10	T842	Soft Guitar 19	T904	Tron Flute 13
T781	Castanets 10	T843	Castanets 12	T905	Koto 16
T782	Twin Bones 11	T844	Jazz Organ 14	T906	Oct Harp 12
T783	Indian Flute 12	T845	Bag Pipe 14	T907	Grow Guitar 15
T784	Woodblock 11	T846	Steel Bell 8	T908	Shanai 14
T785	Attack Harp 9	T847	Church Bells 13	T909	Electric Giutar (Clean) 12
T786	Crystal 10	T848	Guitar Pinch 13	T910	Castanets 14
T787	Mute Barafon 21	T849	Soft Clav. 14	T911	Reed Organ 13
T788	Synth Harpsi. 16	T850	Tubular Bells 12	T912	Electric Giutar (Clean) 13
T789	Reed Organ 8	T851	Grow Guitar 12	T913	Soft Accord 14
T790	Steel Bell 7	T852	Steel Bell 9	T914	Twin Bones 14
T791	Chorus Guitar. 8	T853	Chorus Guitar. 10	T915	Marimba 14
T792	Reed Organ 9	T854	Crystal 13	T916	Jungle Bass 12
T793	Marimba 10	T855	Reed Horn 11	T917	Electric Giutar (Clean) 14
T794	Electric Viaphone 11	T856	Steel Bell 10	T918	Barafon 11
T795	Soft Guitar 16	T857	Kawala 21	T919	Viola Attack 13
T796	Viola Attack 10	T858	Attack Harp 10	T920	Slow Violin 14
T797	Reed Organ 10	T859	Oct Harp 11	T921	Oct Harp 13
T798	Bari & Tenor 12	T860	Kalimba 15	T922	Dulcimer 15
T799	Soft Sax 22	T861	Tubular Bells 13	T923	Bari & Tenor 13
T800	Jazz Organ 13	T862	Electric Giutar (Clean) 11	T924	Bag Pipe 15
T801	Soft Guitar 17	T863	Jazz Organ 15	T925	Attack Clav. 14
T802	Xylophone 9	T864	Attack Barafon 15	T926	Kalimba 16
T803	Xylophone 10	T865	Soft Guitar 20	T927	Hard Vibe 15
T804	Church Bells 11	T866	Soft Accord 13	T928	Organ Flute 14
T805	Suona 16	T867	Synth Harpsi. 17	T929	Jungle Bass 13
T806	Crystal 11	T868	Bodhran 12	T930	Electric Viaphone 14
T807	Chorus Guitar. 9	T869	Woodblock 12	T931	Viola Attack 14
T808	Crystal 12	T870	Attack Harp 11	T932	Bodhran 13
T809	Hard Barsoon 13	T871	Organ Flute 12	T933	Tubular Bells 15
T810	Castanets 11	T872	Jazz Organ 16	T934	Indian Flute 14
T811	Kawala 20	T873	Didgeridoo 21	T935	Tenor Sax 13
T812	Nay 16	T874	Church Bells 14	T936	Guitar Pinch 14
T813	Tubular Bells 11	T875	Synth Harpsi. 18	T937	Steel Bell 11
T814	Hard Barsoon 14	T876	Chorus Guitar. 11	T938	Tsugaru 13
T815	Barafon 8	T877	Organ Flute 13	T939	Soft Santur 14
T816	Marimba 11	T878	Shamisen 13	T940	Bright String 14
T817	Soft Sax 23	T879	Jungle Bass 10	T941	Oct Harp 14
T818	Attack Barafon 13	T880	Shamisen 14	T942	Attack Harp 12
T819	Electric Viaphone 12	T881	Tubular Bells 14	T943	Church Bells 15
T820	Wind Organ 15	T882	English Horn 17	T944	Tenor Sax 14

T945	Dual Horns 14	T964	Bag Pipe 16	T983	Attack Harp 15
T946	Barafon 12	T965	Viola Attack 15	T984	Koto 17
T947	Steel Bell 12	T966	Steel Bell 14	T985	Reed Organ 15
T948	Marimba 15	T967	Crystal 15	T986	Attack Clav. 15
T949	Electric Vraphone 15	T968	Bright String 15	T987	Clavi 15
T950	Soft Accord 15	T969	Reed Horn 14	T988	Dual Horns 15
T951	Steel Bell 13	T970	Guitar Pinch 15	T989	Steel Bell 15
T952	Tenor Sax 15	T971	Oct Harp 15	T990	Slow Violin 15
T953	Electric Gutar (Clean) 15	T972	Twin Bones 15	T991	Soft Santur 15
T954	Soft Clav. 15	T973	Chorus Guitar. 15	T992	Barafon 14
T955	Bari & Tenor 14	T974	Bari & Tenor 15	T993	Organ Flute 15
T956	Attack Harp 13	T975	Tenor Sax 16	T994	Castanets 15
T957	Chorus Guitar. 14	T976	Indian Flute 15	T995	Guitar Pinch 16
T958	Shanai 15	T977	Bodhran 15	T996	Tron Flute 15
T959	Reed Organ 14	T978	Shamisen 16	T997	Tsugaru 15
T960	Bodhran 14	T979	Attack Harp 14	T998	Reed Horn 15
T961	Jungle Bass 14	T980	Barafon 13	T999	Barafon 15
T962	Tsu aru 14	T981	Jungle Bass 15	T1000	Electric Gutar (Clean) 16
T963	Shanai 16	T982	Tron Flute 14		

22.Appendix 2 (Rhythm comparison table)

R001	8Beat 1	R040	Pop 14	R079	Shuffle 1
R002	8Beat 2	R041	Pop Bolero	R080	Shuffle 2
R003	8Beat 3	R042	Pop BossaNova	R081	Boogie 1
R004	8Beat 4	R043	Pop Waltz	R082	Boogie 2
R005	8Beat 5	R044	Pop Dance	R083	Boogie 3
R006	8Beat 6	R045	Motown	R084	Twist
R007	8Beat 7	R046	British Pop 1	R085	Ballad 1
R008	8Beat 8	R047	British Pop 2	R086	Ballad 2
R009	8Beat 9	R048	British Pop 3	R087	Ballad 3
R010	8Beat 10	R049	Guitar Pop	R088	Ballad 4
R011	8Beat 11	R050	Slow Pop	R089	Ballad 5
R012	8Beat 12	R051	50's Pop	R090	Soul Ballad
R013	8Beat 13	R052	80's Pop	R091	6/8 Ballad
R014	8Beat 14	R053	Rock 1	R092	Acoustic Ballad
R015	8Beat 15	R054	Rock 2	R093	Colour Ballad
R016	8Beat 16	R055	Rock 3	R094	Guitar Ballad
R017	8Beat 17	R056	Rock 4	R095	Piano Ballad
R018	8Beat 18	R057	50's Rock	R096	Organ Ballad
R019	16Beat 1	R058	60's Rock 1	R097	Groove 1
R020	16Beat 2	R059	60's Rock 2	R098	Groove 2
R021	16Beat 3	R060	70's Rock	R099	Groove 3
R022	16Beat 4	R061	80's Rock	R100	Groove 4
R023	16Beat 5	R062	Big Rock	R101	Groove 5
R024	16Beat 6	R063	Power Rock	R102	Groove 6
R025	16Beat 7	R064	Dark Rock	R103	Groove 7
R026	16Beat 8	R065	Jazz Rock	R104	Groove 8
R027	Pop 1	R066	Soft Rock	R105	Groove 9
R028	Pop 2	R067	Pop Rock 1	R106	Piano 1
R029	Pop 3	R068	Pop Rock 2	R107	Piano 2
R030	Pop 4	R069	Funky Rock 1	R108	Piano 3
R031	Pop 5	R070	Funky Rock 2	R109	Piano 4
R032	Pop 6	R071	Ballad Rock	R110	Piano 5
R033	Pop 7	R072	Folk Rock	R111	Piano 6
R034	Pop 8	R073	Slow Rock 1	R112	Piano 7
R035	Pop 9	R074	Slow Rock 2	R113	Piano 8
R036	Pop 10	R075	Slow Rock 3	R114	Piano 9
R037	Pop 11	R076	Slow Rock 4	R115	Piano 10
R038	Pop 12	R077	Rock&Roll 1	R116	Unplugged 1
R039	Pop 13	R078	Rock&Roll 2	R117	Unplugged 2

R118	Unplugged 3	R182	March	R246	Tango4
R119	Unplugged 4	R183	Polka	R247	Tango5
R120	Unplugged 5	R184	Classical 1	R248	Rock &Roll
R121	Unplugged 6	R185	Classical 2	R249	Rock & Roll Shfl1
R122	Unplugged 7	R186	China Folk 1	R250	Oldies R & R
R123	Unplugged 8	R187	China Folk 2	R251	Detroit Pop1
R124	Dance 1	R188	China Opera 1	R252	Detroit Pop2
R125	Dance 2	R189	China Opera 2	R253	Worship Med
R126	Disco	R190	China Ballad	R254	Worship Fast
R127	House	R191	China Pop	R255	Piano Boogie
R128	Euro Beat	R192	Xin Jiang	R256	Lovely Shuffle
R129	Funky Dance	R193	Shan Bei	R257	60's Rock & Roll
R130	80's Dance	R194	Yun Nan	R258	Kool Funk
R131	Techno	R195	He Nan	R259	Blueberry Blues
R132	Fusion	R196	An Hui	R260	Shuffle Blues
R133	Blues 1	R197	Guang Dong	R261	Mambo 4
R134	Blues 2	R198	Xi Zang	R262	Mambo 5
R135	Blues 3	R199	Mongolian	R263	Pop Classics
R136	Funky 1	R200	Korean	R264	Live 8 Beat
R137	Funky 2	R201	J-Pop Hit	R265	Power Rock2
R138	Funky 3	R202	16 Beat Ballad2	R266	Acoustic Rock2
R139	Gospel	R203	70's Pop Ballad	R267	Cool 8 Beat
R140	Rap 1	R204	EP Ballad	R268	Uptempo 8Beat
R141	Rap 2	R205	Power Ballad	R269	90's Rock Ballad
R142	Soul 1	R206	Guitar Ballad2	R270	Chart Rock Shfl2
R143	Soul 2	R207	New R&B Ballad	R271	Brit Pop
R144	Soul 3	R208	Guitar Serenade	R272	Brazilian Samba
R145	Soul 4	R209	Organ Ballad2	R273	Brit Pop Swing
R146	Country 1	R210	Joropo	R274	60's 8 Beat
R147	Country 2	R211	Reggaeton	R275	Fast Bossa
R148	Country 3	R212	French Waltz	R276	60's Guitar Pop
R149	Country 4	R213	Merengue	R277	70's 8 Beat
R150	Country 5	R214	12-8 Ballad	R278	90's Guitar Pop
R151	Jazz 1	R215	Norteno	R279	Soft Rock2
R152	Jazz 2	R216	Jig	R280	Chart Guita rPop
R153	Jazz Waltz	R217	Hawaiian	R281	Gujiira
R154	Jazz Ballad	R218	Electronica	R282	Modern Pop Bld
R155	Lounge	R219	Funky House	R283	Soul
R156	Jive	R220	Club Beat	R284	Skiffle2
R157	Ragtime	R221	Retro Club	R285	6-8Soul
R158	Charlston	R222	Mod Chart Pop	R286	Soul Brothers
R159	Big Band	R223	MOR Swing	R287	Happy Reggae
R160	Swing	R224	Retro Pop	R288	Pop Latin
R161	Caribbean	R225	Rumba Flamenco	R289	6-8Slow Rock
R162	Reggae	R226	Trance Pop	R290	6-8 Modern
R163	Cha Cha	R227	Orch Big Band2	R291	6-8 Orchestral
R164	Rumba	R228	Big Band Fast2	R292	Schlager Shuffle
R165	Samba	R229	Midnight Swing	R293	Schlager Pop
R166	BossaNova	R230	German Rock	R294	Schlager Rumba
R167	Mambo	R231	Schlager Beat	R295	Euro Pop Organ
R168	Salsa	R232	Mellow Hip Hop	R296	70's French Hit
R169	Beguine	R233	Classic Hip Hop	R297	Italian Mazurka
R170	Cumbia	R234	New Hip Hop	R298	Bohemian Waltz
R171	Latin	R235	Duranguense	R299	Schlager Samba1
R172	Baroque	R236	Laff	R300	Schlager Samba2
R173	Bolero	R237	Ober Walzer	R301	Scand Slow Rock
R174	Holly Wood	R238	Bhangra	R302	Schlager 6-8
R175	Foxtrot	R239	Zouk	R303	Schlager Fox
R176	Paso Doble	R240	German March	R304	Highland Waltz
R177	Quick Step	R241	Enka	R305	Italian Polka
R178	Bachata	R242	Bolero Lento	R306	Grupera
R179	Boston	R243	Sherif fReggae	R307	Danzon
R180	Tango	R244	Beguine2	R308	Schlager Alp
R181	Waltz	R245	Latin Disco	R309	Saeidy

R310	Bhajan	R374	Scand Country1	R438	Hoedown
R311	Hip Hop Groove	R375	Scand Country2	R439	Country Shuffle
R312	Chart Pop1	R376	Scand Shuffle	R440	Waltz2
R313	Organ Groove	R377	Worship Slow	R441	Cha Cha2
R314	Chart Pop2	R378	Disco Teens	R442	Rumba2
R315	New R&B	R379	Scand Bugg	R443	Jive2
R316	Pop R&B	R380	Rock Cha Cha	R444	Pasodoble
R317	Chart R&B	R381	Organ Swing	R445	Samba1
R318	Modern Shuffle	R382	Secret Service	R446	Samba2
R319	Blues Rock	R383	Animation Bld	R447	Schlager Rock 1
R320	Dream Dance	R384	Christmas Waltz	R448	Schlager Rock 2
R321	US Chart Hit	R385	Movie Swing	R449	Foxtrot2
R322	Soul R&B	R386	Movie Ballad	R450	Viennese Waltz
R323	R&B Soul Ballad	R387	Bubblegum Pop	R451	Tango2
R324	Euro Hip Hop	R388	Rock & Roll Shfl2	R452	Tango3
R325	Trip Hop	R389	West Coast Pop	R453	German Waltz
R326	Ibiza 2004	R390	Classic 16 Beat	R454	Carnival
R327	Mod Big Band Shfl	R391	Jazz Pop	R455	Organ Samba
R328	Modern Big Band	R392	Kool Shuffle	R456	Reel
R329	Pop Gtr Ballad	R393	8 Beat Ballad2	R457	Gay Gordons
R330	Ibiza 2002	R394	Chillout	R458	Scand Waltz
R331	Euro Trance	R395	16 Beat Ballad1	R459	60's Rock Style
R332	6-8 Trance	R396	Epic Ballad	R460	Standard Rock
R333	Latin DJ's	R397	Easy Ballad	R461	Brit Rock Pop
R334	Bomba	R398	Cuban Son	R462	60's Vintage Rock
R335	Chillout Cafe	R399	Bachata2	R463	Chart Rock Shfl
R336	70's Glam Piano	R400	Forro	R464	60's Pop Rock
R337	French House	R401	70's Chart Ballad	R465	Rock Billy
R338	English Waltz	R402	Romantic Ballad	R466	Rock Boogie
R339	8 Beat Ballad1	R403	90's Cool Ballad	R467	Latin Cha Cha
R340	Club House	R404	Alp Ballad1	R468	Rock Classical
R341	House2	R405	Alp Ballad2	R469	Rock Shuffle
R342	Jazz Gtr Club	R406	E_Ballad	R470	Rock Pop
R343	Modern Jazz	R407	Unplugged 9	R471	Rock'n Roll 1
R344	Acoustic Jazz	R408	Pop Ballad	R472	Rock'n Roll 2
R345	Cool Jazz Ballad	R409	Pop New Age	R473	Straight Rock
R346	Modern Jazz Bld	R410	8 Beat Modern	R474	Jazz Rock2
R347	Easy Listening	R411	Country Ballad1	R475	Fast Gospel
R348	Bebop	R412	Love Song	R476	Folk Rock2
R349	Orch Big Band1	R413	Modern Country Pop	R477	Skiffle
R350	Big Band Fast1	R414	Electro Pop	R478	Funk Pop Rock
R351	Orchestra Swing1	R415	Acoustic Ballad 2	R479	Contemp Rock
R352	Orchestra Swing2	R416	Piano Ballad 1	R480	Acoustic Rock
R353	70's Ranking Country	R417	R&B Ballad	R481	50's Pop2
R354	Jazz Waltz Med	R418	Rock Ballad	R482	Cool Pop
R355	Mariachi Waltz	R419	Slow & Easy	R483	Groovy Pop
R356	US March	R420	Analog Ballad	R484	60's Vintage Pop
R357	Guitar Rumba	R421	Slow Rock 5	R485	80's Pop2
R358	Slow Blues	R422	Slow Rock 6	R486	Rap Pop
R359	Jazz Waltz Fast	R423	Slow Rock 7	R487	Pop Rock 3
R360	70's Country Pop	R424	Slow Soul	R488	60's Soul
R361	Dixieland	R425	8 Beat Adria	R489	70's Soul
R362	40's Big Band	R426	Classic Piano	R490	Funk
R363	Easy Country	R427	80's EP Ballad	R491	16 Beat Shuffle
R364	Country Hits	R428	80's Boy Band	R492	Twist2
R365	Country 8 Beat	R429	Country Ballad2	R493	British Pop 4
R366	Sci-fi March	R430	Country Two Step	R494	British Pop 5
R367	Tap Dance Swing	R431	Country 6	R495	Hard Rock1
R368	Orchestral Bolero	R432	Country 7	R496	Hard Rock2
R369	Gospel Sisters	R433	Finger Pickin	R497	Fusion2
R370	Italian Waltz	R434	Country Brothers	R498	Fusion3
R371	6-8 March	R435	New Country	R499	Funk Shuffl 1
R372	Bluegrass	R436	Brisk Country	R500	Funk Shuffl 2
R373	Mod Cntry Bld1	R437	70's Chart Cntry	R501	Fusion Shuffl 1

R502	Fusion Shuffl 2	R566	Carnival2	R632	Disco Funk2
R503	Club Pop1	R567	BossaNova2	R633	Disco Samba2
R504	Club Pop2	R568	Mambo 2	R634	New Hip Hop2
R505	16 Beat Pop1	R569	Mambo 3	R635	Cat Groove2
R506	16 Beat Pop2	R570	Bolero2	R636	Laff2
R507	8 Beat Pop1	R571	Cumbia3	R637	Pop Waltz3
R508	8 Beat Pop2	R572	Latin Rock	R638	Bhangra2
R509	8 Beat Soul1	R573	Disco Latin	R639	Twist3
R510	8 Beat Soul2	R574	Tijuana	R640	German March2
R511	8 Beat Rock1	R575	Reggae2	R641	Enka2
R512	8 Beat Rock2	R576	Salsa2	R642	Bolero Lento2
R513	Classic 8Beat	R577	Calypso	R643	Midnight Swing2
R514	Vintage Gtr Pop	R578	Guad Dance	R644	French Jazz2
R515	Schlager Italia	R579	Reggae 12Beat	R645	Latin Party Pop2
R516	70's Disco1	R580	Reggae 16Beat	R646	Tango6
R517	70's Disco2	R581	Swing Fox	R647	Tango7
R518	Funky Disco	R582	Slow Fox	R648	Parranda2
R519	Saturday Night	R583	Organ Cha Cha	R649	Latin Rock2
R520	Club Latin	R584	Organ Quick Step	R650	Acoustic Rock3
R521	Disco Chocolate	R585	Cat Groove	R651	80's Pop3
R522	Disco Fox	R586	Dixie Jazz	R652	60's Soul2
R523	Disco Funk	R587	Medium Jazz	R653	Fusion Shuffl3
R524	Disco Hands	R588	Jazz Big Band	R654	Fusion Shuffl4
R525	Disco Party	R589	Jazz Club	R655	16 Beat Pop3
R526	Disco Samba	R590	Ragtime2	R656	16 Beat Pop4
R527	UK Pop	R591	Big Band Shuffle 1	R657	60's Rock 3
R528	Club Dance	R592	Big Band Shuffle 2	R658	Brit Rock Pop2
R529	Modern R&B	R593	Big Band Shuffle 3	R659	Blueberry Blues2
R530	Hip Shuffle	R594	Fast Band 1	R660	Skiffle3
R531	Charleston	R595	Fast Band 2	R661	Mambo6
R532	Disco Pop	R596	Frankly Soul	R662	Mambo7
R533	Disco Soul	R597	Jazz Funk	R663	Club Pop3
R534	Disco Trot	R598	Classic Big Band	R664	Schlager Italia2
R535	Euro Beat2	R599	French Jazz	R665	Power Rock3
R536	Rap 3	R600	Jump Jive	R666	Rock'n Roll 3
R537	Rave	R601	Standard Rock2	R667	Cool8 Beat2
R538	Techno2	R602	16 Beat Ballad3	R668	British Pop6
R539	Techno3	R603	Contemp Rock2	R669	British Pop7
R540	70's Disco Funk	R604	EP Ballad2	R670	8 Beat Soul3
R541	Disco Philly	R605	Fusion4	R671	Brit Pop2
R542	Disco House	R606	Fusion5	R672	Disco Latin2
R543	80's Disco	R607	Funk2	R673	Brit Pop Swing2
R544	Schlager Polka	R608	Guitar Serenade2	R674	Fast Gospel2
R545	Polka Pop	R609	Organ Ballad3	R675	Fast Bossa2
R546	Blue Grass 1	R610	Joropo2	R676	60's Guitar Pop2
R547	Blue Grass 2	R611	Reggaeton2	R677	90's Soul
R548	Blue Grass 3	R612	French Waltz2	R678	Funk Shuffl 3
R549	Pop Waltz2	R613	Merengue2	R679	8 Beat Rock3
R550	USA March	R614	Pop Ballad2	R680	Rock Cha Cha2
R551	Hully Gully	R615	Norteno2	R681	Guijira2
R552	Tarantella	R616	Jig2	R682	Rock Ballad2
R553	Limbo Rock	R617	Hawaiian2	R683	Soul 5
R554	Swing Waltz	R618	70's Disco3	R684	Classic 8Beat2
R555	Pub Piano	R619	70's Disco4	R685	Bolero3
R556	Jazz Waltz2	R620	Club Beat2	R686	Soul Brothers2
R557	Jazz Waltz3	R621	Rap 4	R687	Happy Reggae2
R558	Show Tune	R622	Disco House2	R688	Pop Latin2
R559	Polka2	R623	MOR Swing2	R689	6-8Slow Rock2
R560	Ober Polka	R624	Retro Pop2	R690	6-8 Modern2
R561	Party Polka	R625	Calypso2	R691	6-8 Orchestral2
R562	Pop Mambo	R626	Trance Pop2	R692	Slow Soul2
R563	Latin Party Pop	R627	Big Band Shuffle4	R693	Piano Ballad3
R564	Cumbia2	R628	Big Band Shuffle5	R694	Disco Trot2
R565	Parranda	R629	Big Band Shuffle6	R695	Disco Hands2
		R630	German Rock2	R696	British Pop8
		R631	Schlager Beat2		

R697	Italian Mazurka2	R763	Easy Country2	R830	Fast Band5
R698	Bohemian Waltz2	R764	Country Hits2	R831	Orchestra Swing5
R699	Samba3	R765	Country 8 Beat2	R832	Movie Ballad3
R700	Samba4	R766	Blue Grass4	R833	Rock & Roll Shfl4
R701	Jive3	R767	Blue Grass5	R834	Hard Rock5
R702	Foxtrot3	R768	Blue Grass6	R835	8 Beat Pop5
R703	Pasodoble2	R769	Gospel Sisters2	R836	8 Beat Pop6
R704	Highland Waltz2	R770	Italian Waltz2	R837	16 Beat Ballad5
R705	Schlager Polka2	R771	Limbo Rock2	R838	Straight Rock3
R706	Grupera2	R772	Bluegrass2	R839	Easy Ballad3
R707	Danzon2	R773	Country Brothers2	R840	Fofo3
R708	Schlager Alp2	R774	Scand Country3	R841	Fusion6
R709	Saeidy2	R775	Scand Country4	R842	Funk3
R710	Bhajan2	R776	Scand Shuffle2	R843	Viennese Waltz3
R711	Hip Hop Groove2	R777	70's Chart Cntry2	R844	Show Tune3
R712	Hip Shuffle2	R778	Pub Piano2	R845	Dixieland3
R713	Organ Groove2	R779	Polka3	R846	Big Band Shuffle7
R714	Chart Pop3	R780	Rock Cha Cha3	R847	Big Band Shuffle8
R715	Country Ballad3	R781	Schlager Rock3	R848	Big Band Shuffle9
R716	Romantic Ballad2	R782	Organ Samba2	R849	Pop Waltz4
R717	Analog Ballad2	R783	Gay Gordons2	R850	USA March3
R718	Electro Pop2	R784	Swing Waltz2	R851	Hully Gully3
R719	Blues Rock2	R785	Reel2	R852	Tarantella2
R720	Rave2	R786	Movie Ballad2	R853	Limbo Rock3
R721	US Chart Hit2	R787	Cool Pop2	R854	Swing Waltz3
R722	Alp Ballad3	R788	Rock & Roll Shfl3	R855	Pub Piano3
R723	8 Beat Modern2	R789	Hard Rock3	R856	Jazz Waltz 5
R724	Euro Hip Hop2	R790	Hard Rock4	R857	Jazz Waltz 6
R725	Disco Pop2	R791	Club Pop4	R858	Show Tune4
R726	Disco Philly2	R792	8 Beat Pop3	R859	Polka4
R727	Mod Big BandShfl2	R793	8 Beat Pop4	R860	Ober Polka3
R728	Modern Big Band2	R794	60's Rock 4	R861	Party Polka2
R729	8 Beat Adria2	R795	16 Beat Ballad4	R862	Waltz3
R730	Disco Chocolate2	R796	Straight Rock2	R863	Cha Cha3
R731	Euro Trance2	R797	Easy Ballad2	R864	Rumba4
R732	Euro Beat3	R798	Pop Mambo2	R865	Jive4
R733	Techno4	R799	BossaNova3	R866	Pasodoble3
R734	Reggae3	R800	Fofo2	R867	Samba5
R735	Chillout Cafe2	R801	Pop Classics2	R868	Samba6
R736	Love Song2	R802	Live 8 Beat2	R869	Schlager Rock5
R737	French House2	R803	Power Rock4	R870	Schlager Rock6
R738	Jazz Waltz4	R804	Acoustic Rock4	R871	Foxtrot4
R739	Classic Piano2	R805	Cool 8 Beat3	R872	Viennese Waltz4
R740	Disco Party2	R806	Uptempo 8Beat2	R873	Tango8
R741	Club Dance2	R807	90's Rock Ballad2	R874	Tango9
R742	Jazz Gtr Club2	R808	Chart Rock Shfl3	R875	Country Ballad5
R743	Modern Jazz2	R809	Brit Pop3	R876	Country Two Step2
R744	Polka Pop2	R810	Brazilian Samba2	R877	Country 8
R745	USA March2	R811	Brit Pop Swing3	R878	Country 9
R746	Ober Polka2	R812	60's 8 Beat2	R879	Finger Pickin3
R747	Easy Listening2	R813	Fast Bossa3	R880	Country Brothers3
R748	Fast Band3	R814	60's Guitar Pop3	R881	New Country2
R749	Fast Band4	R815	90's Soul2	R882	Easy Country3
R750	Big Band Fast3	R816	Gujiira3	R883	70's Chart Cntry3
R751	Orchestra Swing3	R817	Euro Hip Hop3	R884	Hoedown2
R752	Orchestra Swing4	R818	Disco Pop3	R885	Country Shuffle2
R753	Finger Pickin2	R819	Disco Philly3	R886	Schlager Polka3
R754	Hully Gully2	R820	Mod Big BandShfl3	R887	Polka Pop4
R755	Viennese Waltz2	R821	Modern Big Band3	R888	Blue Grass 7
R756	Show Tune2	R822	8 Beat Adria3	R889	Blue Grass 8
R757	Rumba3	R823	Disco Chocolate3	R890	Blue Grass 9
R758	Schlager Rock4	R824	Euro Trance3	R891	70's Disco Funk2
R759	Jazz Waltz Fast2	R825	Love Song3	R892	Disco Philly4
R760	Country Ballad4	R826	Disco Party3	R893	Disco House3
R761	Dixieland2	R827	Club Dance3	R894	80's Disco2
R762	French Jazz3	R828	Modern Jazz3	R895	Swing Fox2
		R829	Polka Pop3	R896	Slow Fox2

R897	Organ Cha Cha2	R931	90's Guitar Pop2	R965	House3
R898	Organ Quick Step2	R932	Soft Rock3	R966	Jazz Gtr Club3
R899	Cat Groove3	R933	Chart Guita rPop2	R967	Modern Jazz4
R900	Dixie Jazz2	R934	Guijira4	R968	Acoustic Jazz2
R901	Medium Jazz2	R935	Easy Listening3	R969	Cool Jazz Ballad2
R902	Jazz Big Band2	R936	Bebop2	R970	Modern Jazz Bld2
R903	Jazz Club2	R937	Orch Big Band3	R971	Modern Pop Bld2
R904	Ragtime3	R938	Big Band Fast4	R972	Soul R&B2
R905	Big Band Shuffle 10	R939	Orchestra Swing6	R973	R&B Soul Ballad2
R906	Big Band Shuffle 11	R940	Orchestra Swing7	R974	Euro Hip Hop4
R907	Big Band Shuffle 12	R941	Rock Cha Cha4	R975	Trip Hop2
R908	Fast Band 6	R942	Organ Swing2	R976	Ibiza 2002_2
R909	Fast Band 7	R943	Secret Service2	R977	Soft Rock4
R910	German Waltz2	R944	Animation Bld2	R978	Chart Guita rPop3
R911	Carnival3	R945	Christmas Waltz2	R979	Guijira5
R912	Organ Samba3	R946	Frankly Soul2	R980	Easy Listening4
R913	Reel3	R947	Jazz Funk2	R981	Bebop3
R914	Gay Gordons3	R948	Classic Big Band2	R982	Orch Big Band4
R915	Scand Waltz2	R949	French Jazz4	R983	Big Band Fast5
R916	Pop Classics3	R950	Jump Jive2	R984	Orchestra Swing8
R917	Live 8 Beat3	R951	Mod Big Band Shfl4	R985	Orchestra Swing9
R918	Power Rock5	R952	Modern Big Band4	R986	Rock Cha Cha5
R919	Acoustic Rock5	R953	Pop Gtr Ballad2	R987	Organ Swing3
R920	Cool 8 Beat4	R954	Ibiza 2002_2	R988	Secret Service3
R921	Uptempo 8Beat3	R955	Euro Trance4	R989	Animation Bld3
R922	90's Rock Ballad3	R956	6-8 Trance2	R990	Reggae4
R923	Chart Rock Shfl4	R957	Latin DJ's2	R991	Frankly Soul3
R924	Brit Pop4	R958	Bomba2	R992	Jazz Funk3
R925	Brazilian Samba3	R959	Chillout Cafe3	R993	Classic Big Band3
R926	Brit Pop Swing4	R960	70's Glam Piano2	R994	French Jazz5
R927	60's 8 Beat3	R961	French House3	R995	Jump Jive3
R928	Fast Bossa4	R962	English Waltz2	R996	Mod Big Band Shfl5
R929	60's Guitar Pop4	R963	8 Beat Ballad3	R997	Modern Big Band5
R930	70's 8 Beat2	R964	Club House2	R998-R1000	Big Band Shuffle 13-15

Appendix 3 (Demonstration Song Comparison Table)

S001	Chopin Fantasia Impromptu	S027	Schumann Frohlicher Landmann
S002	Chopin Nocturne	S028	Schumann Sicilienne
S003	Chopin Petit Chien	S029	Richard Ballade Pour Adeline
S004	Chopin Chanson De L'adieu	S030	Richard Ping Pong Sous Les Arbres
S005	Chopin Nocturne	S031	Richard A Comme Amour
S006	Chopin Black keys	S032	Richard Mariage D'amour
S007	Chopin - Valse op.64 no.2	S033	Mendelssohn Jagerlied op.19b-3
S008	Beethoven- Piano Sonate op. 13 "Pathetique" 2nd mov	S034	Mendelssohn Frühlingslied
S009	Beethoven For Elise	S035	Haydn Little Serenade
S010	Beethoven Mondschein Sonate	S036	Pachelbel Canon In D
S011	Beethoven Minuet In G	S037	Badarzewska Maiden's Prayer
S012	Beethoven Marcia Alla Turca	S038	Liszt Liebestraume
S013	Beethoven piano sonata op.49-2 1st mov	S039	Tchaikovsky- Danse des mirlitons
S014	Beethoven Ecossaise	S040	Oesten Dolly's Dreaming Awakening
S015	Mozart Twinkle Twinkle Little Star	S041	Dvorak Humoresque
S016	Mozart Turkish March	S042	Joplin The Entertainer
S017	Mozart Sonate	S043	Debussy La Fille aux Cheveux de Lin
S018	Mozart Menuett	S044	Debussy Aeabesque
S019	Bach Waltz In A Mino	S045	Dubessy Clair De lune
S020	Bach Menuett	S046	L-C.Daquin Le Coucou
S021	Bach The Well-Tempered Clavier	S047	Karl Bohm The Fountain
S022	Bach Bourree	S048	Burgmüller Pastorale
S023	Bach Invention	S049	Korsakov Bumblebee
S024	Schubert Military Marches	S050	Haydn-Sunrise
S025	Schubert Monents Musicaux	S051-S150	
S026	Schumann Traumerei		Czerny 599 No.001-Czerny 599 No.100

1 Battery



lo per favore prenditi cura spento seguendo le attenzioni
lo Fare non tentare di smontare o cortocircuitare il batteria
lo Fare non esporre o bruciare Esso In il fuoco
lo Fare non mescolare il nuovo e vecchio batteria
lo Fare non mescolare diverso tipi Di
batterie o Fare non carica IL batteria
lo IL positivo e negativo pali Di IL la batteria deve essere
installato correttamente

lo Per favore rimuovere la batteria dall'elettronica tastiera Se tu
Fare non usare per un lungo tempo ,

2 Exception



per favore fai quanto segue passi quando eccezione per l'elettronica
tastiera come fumante , troppo caldo e
COSÌ SU . 1) . energia spento

2) . tiro IL adattatore giù da IL energia PRESA SU IL parete Quando
Sono utilizzando.

3) . contatto tuo locale rivenditore In tempo .

Suo normale per adattatore ottenere caldo Quando lungo
tempo usando Corrente alternata adattatore , non indicare
Malfunzionamento

Per favore spegnere e riavviare la tastiera elettronica quando
qualche volta funzione problema ,

3 Install the battery

1) . Uscita IL vite E rimuovere IL batteria copertina

2) . Mettere IL batteria con corretto positivo + e negativo - direzione
dentro il batteria fessura con 6* AA " 1 . 5v

3) . Mettere IL batteria copertina E Serratura IL viti

Questo il prodotto contiene componenti elettronici e
Dovrebbe non
permettere liquidi A entrare O Essere usato In umido ambienti
.
Quotidiano antipolvere pulizia Dovrebbe Essere Fatto
BENE , E macchie superficiali Potere Essere cancellato
con UN morbido E pulito stoffa .

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Supporto tecnico e Certificato di garanzia
elettronica www.vevor.com/support

VEVOR®

TOUGH TOOLS, HALF PRICE

Soporte técnico y Garantía electrónica

Certificado

www.vevor.com/support

PIANO

USUARIO MANUAL

MODELO: BD-881D

Seguimos comprometidos a brindarle herramientas con competitivo precio.

"Ahorrar Mitad", "mitad de precio " o cualquier otra expresión similar utilizada por a nosotros solo representa un

Estimación de los ahorros que podría obtener al comprar ciertas herramientas con nosotros en comparación con las principales

Las mejores marcas y hace no necesariamente significa cubrir todo Categorías de herramientas ofrecidas por Nosotros. Tú

Se recuerda que se debe verificar cuidadosamente cuando se está colocando un Ordenar con a nosotros si usted son

En realidad, ahorra la mitad en comparación con el modelo superior. importante marcas.

MODELO: BD-881D



(La imagen es sólo de referencia, por favor referirse a la actual objeto)

NECESIDAD ¿AYUDA? CONTACTO ¡A NOSOTROS!

Tener producto ¿preguntas? Necesidad técnico ¿apoyo? Por favor sentir gratis a contacto a nosotros:

Soporte técnico y certificado de garantía electrónica

www.vevor.com/support

Este es el original instrucción, Por favor lea todo manual instrucciones con cuidado antes de operar. VEVOR se reserva una interpretación clara de nuestro manual de usuario. La apariencia del producto debe estar sujeta a la producto tu recibió. Por favor perdona nosotros que no lo haremos informarle nuevamente Si hay alguna tecnología o software actualizaciones sobre nuestro producto.



Accesorio

Tipo - C adaptador

* 1 fuerza cable *

1

Partitura musical pararse *

1

Música hoja acortar

* 1 Micrófono * 1

Auriculares * 1

 
piano etiqueta

engomada * 1


piano bolsa * 1

Mediodía cable * 1

sostener peda l* 1

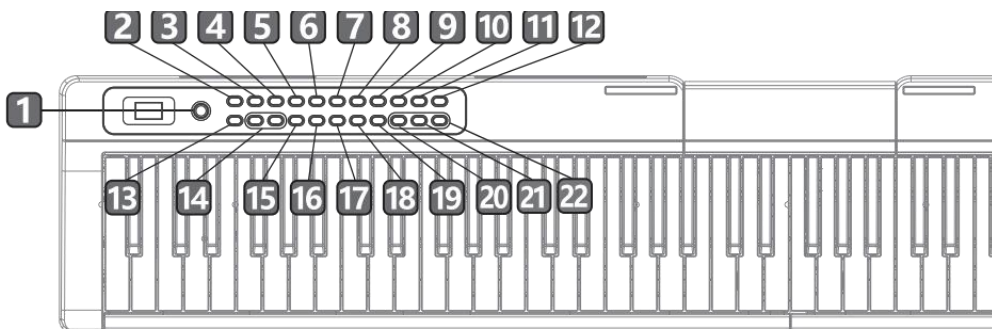

1 Power	6 Volume	11 Key drum	16 Chord	Bluetooth/MP3 mode
2 Tone	7 Rhythm vol	12 Lesson	17 Record	20 ►/⏮
3 Rhythm	8 Tempo	13 Start/stop	18 Play/LED	21 ◀/VOL-
4 Demo One	9 Transpose	14 +/-	19 Metronome	22 ►/VOL+
5 Demo All	10 Dual key	15 Sync/Vel		

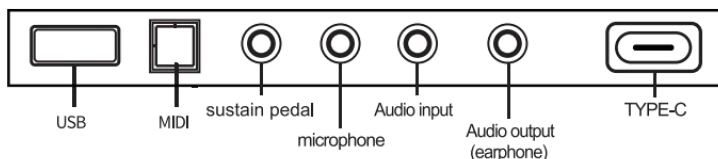 

1. Power

Turn on the [Power] button to play the keyboard and enter the performance state.

2. Tone

After pressing [Tone] button, you can use the [+/-] button to select the tone.

3. Rhythm

After pressing [Rhythm] button, you can use the [+/-] button to select the rhythm.

4. Demo One

Press the [Demo One] for the first time to enter the [Demo One] mode, and press the Demo One for the second time to exit the Demo One mode. After entering the Demo One mode, play the selected song from the next song. When the song finishes playing, the current song is played repeatedly. In the Demo One mode, press the [+/-] key to switch songs.

5. Demo All

Press the [Demo All] for the first time to enter the continuous singing mode, and press the Demo All for the second time to exit the continuous singing mode. After entering continuous singing mode, playback starts from the current song. When the song is finished, continue to play the next song and play all the songs in a loop. In continuous singing mode, press [+/-] key to switch songs.

6. Volume

After pressing the Volume, you can use the [+] and [-] keys to increase/decrease the volume. The volume control has a total of 16 segments (1~16).

7. Rhythm vol

After pressing the [Rhythm vol], you can use the [+/-] keys to increase/decrease the rhythm volume. The rhythm control has a total of 17 sections (0~16). The Rhythm volume keys can also control the volume of demo songs, chords and drums.

8. Tempo

After pressing the [Tempo], you can use the [+/-] to increase/decrease the speed continuously. The speed control has a total of 270 segments (30~300).

9. Transpose

After pressing the [Transpose] button, you can use the [+/-] button to transpose. There are 25 segments (-12~12) for the transposition control, and the preset value is in the 13th segment after power-on. Hold [+/-] button for more than 1 second, can continuously increase/decrease the transposition. The chord pitch also changes with the transposition value.

10. Dual key

Press [Dual Key] button for the first time to activate the dual keyboard function, and press [Dual Key] button for the second time to cancel the dual keyboard function. When the dual keyboard function is activated, the scales of the left keys A1 ~ B4 will be played corresponding to the scales of A2 ~ B5, and the scales of the right keys C5 ~ C9 will be played corresponding to the scales of C4 ~ C8. You can use the [+] [-] keys to select the main tone to replace the tone of the right key.

11. Key drum

Press [Key Drum] button for the first time to activate the keyboard drum function, and press [Key Drum] button for the second time to cancel the keyboard drum function. When the keyboard drum function is activated, the corresponding drum sound will be played when you play the key.

12. Lesson

Press [Lesson] button for the first time to enter the single-key mode, and press [Lesson] button for the second time to exit the single-key mode.

After entering the one-touch mode, use the current song to teach,

After the song is played, if the user presses the keys at will, it is the main melody. If the main melody does not reach the next bar, the background sound will repeat the bar until the song is played and stop after the song ends.

Press [Lesson] button for the third time to enter the ensemble mode, and press [Lesson] button for the fourth time to exit the ensemble mode.

After entering the ensemble mode, the current song is used for teaching. After the song is played, the user can play the keys at will and interrupt the main string rhythm. If not pressed the key again after 5 seconds, the main string rhythm will automatically resume playback. The background sound is played completely, and the teaching is repeated until the end of the song. After the song is over the ensemble will play a song.

Press [Lesson] button the fifth time to enter the follow-up mode, and press [Lesson] the sixth time to exit the follow-up mode.

After entering the follow-up mode, the current song is used for teaching. After the song is played, the main melody is not played, and the user must follow the notes displayed on the digital tube. Press the corresponding key to continue to play the next note, and the background sound will repeat that measure until the song ends.

Press the corresponding key to continue to play the next note, and the background sound will repeat that measure until the song ends.

In the teaching mode, [+/-] button automatically enters the song selection mode, and exits the teaching mode to return to the tone selection mode.

Press [Tone] button while playing the music will temporarily switch to the tone selection mode, and return to the song selection mode in 3 seconds.

13. Start/stop

Press the [Start/Stop] button for the first time to start playing the rhythm, and press the [Start/Stop] button for the second time to stop playing the rhythm.

Exit this mode under the mode of teaching, recording, playback, metronome, demo music, etc.

14. -/+

There are [+] and [-] sequential selection, a total of 2 keys. Can be used to select the tone, rhythm, song, volume, accompaniment volume, speed, transpose quickly.

If the number pressed exceeds the maximum number of tone, rhythms or songs, the original value will be maintained.

15. Sync/Vel

Press [Sync/Vel] for the first time to enter the sync mode, and press the Sync for the second time to exit the sync mode. When entering the sync mode, stop playing the rhythm, and then press the first 34 keys to automatically play the selected rhythm (chord). For the chord synchronization part, please refer to the single fingering accompaniment or multi-fingering accompaniment instructions.

(The default value of power on is the key strength off. Long press this key for 5 seconds to control the key strength on/off.)

16. Chord

Press [Chord] button for the first time to enter the integrated chord mode, and press [Chord] button for the second time to exit the integrated chord mode. [Chord] button only works in rhythm and normal mode. When playing the rhythm, press [Chord] button and press the fingering within the range of the keys A1 ~ F4#, and then you can hear the corresponding chord accompaniment sound. If you don't press the fingering of the fingering, the single fingering will be played. Refers to the chord of the chord fingering.

When the rhythm is not playing, press [Chord] button and press the fingering within the range of keys A1 ~ F4#, and you will hear the corresponding chord sound. If you do not press the fingering of the fingering, the single fingering will be played. Refers to the chord tone. For the detailed fingering of the integrated fingering accompaniment, please refer to the single fingered chord table and the multi-finger chord table attached. The integrated fingering can be used with rhythm/chord/synchronization.

17. Record

Press the [Recording] button the first time to enter the recording mode, and the last record will be cleared; pressing the [recording] button for the second time will exit the recording mode. In the recording mode, the metronome will be played, and you can start recording by pressing any key. The maximum number of recordings is 700. When the recording is full, the next note cannot be recorded; during recording, you can press the [Play] button at any time to play the recorded notes or drum sounds.

18. Play/LED

Press [Play/LED] for the first time to play the recorded note or drum sound, and press the Play/LED for the second time to stop playing. Press the Play to exit the recording mode. If there is no recorded value before, press Play and no action will occur. (The default value for powering on is that the keyboard light is on. Press and hold this button for 5 seconds to control the keyboard LED on/off.)

19. Metronome

Press [Metronome] button, the action function is 1/4 beat ~ 7/4 beat + stop-+ beat. 4. The preset value of tempo is 120. There are 7 variations of the metronome sound, in sequence from 1/4 beat to 7/4 beat. When recording, press [Metronome] button to switch the metronome sound.

Bluetooth/MP3 mode

20. Press [⏮/⏭] shortly (within 1 second) to play or pause the song. In pause mode, press [⏮/⏭] to continue playing the song.

21. Press [⏮/VOL-] shortly (within 1 second) to select the previous song. Press the [⏮/VOL-] for more than 1 second to decrease the volume.

22. Press [⏭/VOL+] shortly (within 1 second) to select the next song. Press [⏭/VOL+] for more than 1 second to increase the volume.

Appendix 1 (Voice Comparison Table)

T001	Acoustic Grand Piano	T055	Synth Voice	T119	Synth Drum
T002	Bright Acoustic Piano	T056	Orchestra Hit	T120	Reverse Cymbal
T003	Electric Grand Piano	T057	Trumpet	T121	Guitar Fret Noise
T004	Honky-tonk Piano	T058	Trombone	T122	Breath Noise
T005	Rhodes Piano	T059	Tuba	T123	Seashore
T006	Chorused Piano	T060	Muted Trumpet	T124	Bird Tweet
T007	Harpsichord	T061	French Horn	T125	Telephone Ring
T008	Clavichord	T062	Brass Section	T126	Helicopter
T009	Celesta	T063	Synth Brass 1	T127	Applause
T010	Glockenspiel	T064	Synth Brass 2	T128	Gunshot
T011	Music box	T065	Soprano Sax	T129	Yong Gin
T012	Vibraphone	T066	Alto Sax	T130	Zheng
T013	Marimba	T067	Tenor Sax	T131	Zhong Ruan
T014	Xylophone	T068	Baritone Sax	T132	Pi Pa
T015	Tubular Bell	T069	Oboe	T133	Big Souna
T016	Dulcimer	T070	English Horn	T134	Souna
T017	Drawbar Organ	T071	Bassoon	T135	Er Hu
T018	Percussive Organ	T072	Clarinet	T136	Yue Hu
T019	Rock Organ	T073	Piccolo	T137	Di Zi
T020	Church Organ	T074	Flute	T138	Bong Di
T021	Reed Organ	T075	Recorder	T139	Koto 2
T022	Accordion	T076	Pan Flute	T140	Qu Di
T023	Harmonica	T077	Bottle Blow	T141	Jungle Bass
T024	Tango Accordion	T078	Shakuhachi	T142	Koto 3
T025	Acoustic Guitar (nylon)	T079	Whistle	T143	Marimba 2
T026	Acoustic Guitar (steel)	T080	Ocarina	T144	Tsugaru
T027	Electric Guitar (jazz)	T081	Lead 1 (square)	T145	Kawala
T028	Electric Guitar (clean)	T082	Lead 2 (sawtooth)	T146	Attack Clav.
T029	Electric Guitar (muted)	T083	Lead 3 (calliope lead)	T147	Crystal
T030	Overdriven Guitar	T084	Lead 4 (chiff lead)	T148	Bright String
T031	Distortion Guitar	T085	Lead 5 (charang)	T149	Clavi 2
T032	Guitar Harmonics	T086	Lead 6 (voice)	T150	Chorus Guitar.
T033	Acoustic Bass	T087	Lead 7 (fifths)	T151	Barafon
T034	Electric Bass(finger)	T088	Lead 8 (bass+lead)	T152	Jazz Organ
T035	Electric Bass (pick)	T089	Pad 1 (new age)	T153	Indian Flute
T036	Fretless Bass	T090	Pad 2 (warm)	T154	Mute Barafon
T037	Slap Bass 1	T091	Pad 3 (polysynth)	T155	Dual Horns
T038	Slap Bass 2	T092	Pad 4 (choir)	T156	Electric Giutar (Clean) 2
T039	Synth Bass 1	T093	Pad 5 (bowed)	T157	Clavi 3
T040	Synth Bass 2	T094	Pad 6 (metallic)	T158	Soft Sax
T041	Violin	T095	Pad 7 (halo)	T159	Electric Vpraphone
T042	Viola	T096	Pad 8 (sweep)	T160	Didgeridoo
T043	Cello	T097	FX 1 (rain)	T161	Barafon 2
T044	Contrabass	T098	FX 2 (soundtrack)	T162	Tubular Bells 2
T045	Tremolo Strings	T099	FX 3 (crystal)	T163	Soft Accord
T046	Pizzicato Strings	T100	FX 4 (atmosphere)	T164	Barafon 3
T047	Orchestral Harp	T101	FX 5 (brightness)	T165	Clavi 4
T048	Timpani	T102	FX 6 (goblins)	T166	Nay
T049	String Ensemble 1	T103	FX 7 (echoes)	T167	Oct Harp
T050	String Ensemble 2	T104	FX 8 (sci-fi)	T168	Attack Barafon
T051	Synth Strings 1	T105	Sitar	T169	Clavi 5
T052	Synth Strings 2	T106	Banjo	T170	Kalimba 2
T053	Choir Aahs	T107	Shamisen	T171	Tsugaru 2
T054	Voice Oohs	T108	Koto	T172	Shamisen 2
		T109	Kalimba	T173	Woodblock 2
		T110	Bagpipe	T174	Crystal 2
		T111	Fiddle	T175	Shamisen 3
		T112	Shanai	T176	Synth Harpsi.
		T113	Tinkle Bell	T177	Jazz Organ 2
		T114	Agogo	T178	Viola Attack
		T115	Steel Drums	T179	Viola Attack 2
		T116	Woodblock	T180	Hard Barsoon
		T117	Taiko Drum	T181	Mute Barafon 2
		T118	Melodic Tom	T182	Bodhran

T183	Kawala 2	T247	Tsugaru 4	T311	Attack Barafon 4
T184	Didgeridoo 2	T248	Tsugaru 5	T312	Hard Barsoon 3
T185	Soft Guitar	T249	Mute Barafon 4	T313	Dulcimer 4
T186	Suona 2	T250	Dual Horns 4	T314	Twin Bones 4
T187	Twin Bones	T251	Soft Sax 3	T315	Soft Sax 5
T188	Jazz Organ 3	T252	Bodhran 3	T316	Shamisen 5
T189	Woodblock 3	T253	Guitar Pinch 3	T317	Suona 4
T190	Soft Santur	T254	Crystal 3	T318	Bodhran 4
T191	Koto 4	T255	Grow Guitar 2	T319	Shamisen 6
T192	Castanets	T256	Jazz Organ 6	T320	Electric Vraphone 6
T193	Viola Attack 3	T257	Attack Barafon 2	T321	Tsugaru 7
T194	Woodblock 4	T258	Xylophone 4	T322	Oct Harp 3
T195	Bright String 2	T259	Soft Santur 3	T323	Kalimba 4
T196	Twin Bones 2	T260	Kawala 4	T324	Soft Clav. 2
T197	Tenor Sax 2	T261	Soft Guitar 5	T325	English Horn 4
T198	Wind Organ	T262	Nay 4	T326	Didgeridoo 6
T199	Tron Flute	T263	Synth Harpsi. 3	T327	Barafon 4
T200	Bodhran 2	T264	Wind Organ 3	T328	Indian Flute 7
T201	Tron Flute 2	T265	Shanai 2	T329	Organ Flute 2
T202	Jazz Organ 4	T266	Woodblock 6	T330	Soft Santur 4
T203	Soft Santur 2	T267	Electric Vraphone 4	T331	Mute Barafon 7
T204	Woodblock 5	T268	Kawala 5	T332	Nay 7
T205	Shamisen 4	T269	Grow Guitar 3	T333	Hard Vibe 5
T206	Indian Flute 2	T270	Grow Guitar 4	T334	Bari & Tenor 4
T207	Electric Vraphone 2	T271	Steel Bell	T335	Bag Pipe 4
T208	Soft Guitar 2	T272	Wind Organ 4	T336	Tenor Sax 3
T209	Mute Barafon 3	T273	Soft Accord 2	T337	Organ Flute 3
T210	Dual Horns 2	T274	Kalimba 3	T338	Dulcimer 5
T211	Xylophone 2	T275	Twin Bones 3	T339	Twin Bones 5
T212	Didgeridoo 3	T276	Church Bells 3	T340	Grow Guitar 5
T213	Wind Organ 2	T277	Koto 6	T341	Kalimba 5
T214	Church Bells 2	T278	Attack Barafon 3	T342	Oct Harp 4
T215	Tsugaru 3	T279	Mute Barafon 5	T343	Nay 8
T216	Nay 2	T280	Nay 5	T344	Dual Horns 5
T217	Guitar Pinch 2	T281	Jungle Bass 2	T345	Didgeridoo 7
T218	Grow Guitar	T282	Soft Accord 3	T346	English Horn 5
T219	Indian Flute 3	T283	Hard Vibe 3	T347	Kawala 6
T220	Synth Harpsi. 2	T284	Soft Clav.	T348	Marimba 5
T221	Soft Sax 2	T285	Bag Pipe 2	T349	Barafon 5
T222	Xylophone 3	T286	Oct Harp 2	T350	Soft Accord 5
T223	English Horn 2	T287	Woodblock 7	T351	Mute Barafon 8
T224	Soft Guitar 3	T288	Mute Barafon 6	T352	Dual Horns 6
T225	Castanets 2	T289	Guitar Pinch 4	T353	Church Bells 4
T226	Soft Guitar 4	T290	Dulcimer 3	T354	Wind Organ 5
T227	Hard Vibe 2	T291	Soft Sax 4	T355	Attack Clav. 5
T228	Reed Horn	T292	Electric Vraphone 5	T356	Jazz Organ 7
T229	Nay 3	T293	Tsugaru 6	T357	Reed Horn 3
T230	Bari & Tenor	T294	Reed Horn 2	T358	Tenor Sax 4
T231	Kawala 3	T295	Castanets 3	T359	Chorus Guitar. 2
T232	Indian Flute 4	T296	Tron Flute 3	T360	Didgeridoo 8
T233	Didgeridoo 4	T297	Attack Clav. 3	T361	Soft Santur 5
T234	Attack Clav. 2	T298	Bari & Tenor 3	T362	Clavi 6
T235	Marimba 3	T299	Indian Flute 6	T363	Kalimba 6
T236	Bari & Tenor 2	T300	Soft Guitar 6	T364	Didgeridoo 9
T237	Slow Violin	T301	Nay 6	T365	Wind Organ 6
T238	Organ Flute	T302	Didgeridoo 5	T366	Tron Flute 4
T239	Jazz Organ 5	T303	Marimba 4	T367	Soft Sax 6
T240	Electric Vraphone 3	T304	Attack Clav. 4	T368	Suona 5
T241	Dual Horns 3	T305	Jungle Bass 3	T369	Soft Guitar 7
T242	Indian Flute 5	T306	Hard Barsoon 2	T370	Hard Vibe 6
T243	English Horn 3	T307	Suona 3	T371	Jazz Organ 8
T244	Dulcimer 2	T308	Hard Vibe 4	T372	Grow Guitar 6
T245	Koto 5	T309	Bag Pipe 3	T373	Xylophone 5
T246	Tubular Bells 3	T310	Soft Accord 4	T374	Bag Pipe 5

T375	Bag Pipe 6	T439	Shanai 5	T503	Bag Pipe 11
T376	Clavi 7	T440	English Horn 10	T504	Hard Barsoon 7
T377	Hard Vibe 7	T441	Didgeridoo 11	T505	Mute Barafon 15
T378	Kawala 7	T442	Organ Flute 5	T506	Soft Sax 12
T379	Shanai 3	T443	Attack Barafon 6	T507	Attack Clav. 9
T380	Suona 6	T444	Jungle Bass 5	T508	Jazz Organ 12
T381	Jungle Bass 4	T445	Barafon 7	T509	Soft Guitar 9
T382	Grow Guitar 7	T446	Soft Santur 6	T510	Didgeridoo 13
T383	Bag Pipe 7	T447	Slow Violin 3	T511	Bright String 4
T384	Crystal 4	T448	Hard Barsoon 6	T512	Electric Giutar (Clean) 4
T385	Guitar Pinch 5	T449	Didgeridoo 12	T513	Tsugaru 9
T386	Woodblock 8	T450	Kalimba 8	T514	Nay 10
T387	Soft Sax 7	T451	Electric Giutar (Clean) 3	T515	Reed Horn 6
T388	Attack Barafon 5	T452	Dulcimer 8	T516	Didgeridoo 14
T389	Barafon 6	T453	Reed Horn 5	T517	Soft Clav. 5
T390	Organ Flute 4	T454	Bodhran 5	T518	Soft Sax 13
T391	Mute Barafon 9	T455	Soft Sax 9	T519	Reed Organ 3
T392	Shanai 4	T456	Mute Barafon 14	T520	Steel Bell 3
T393	Soft Clav. 3	T457	Guitar Pinch 7	T521	Clavi 10
T394	Oct Harp 5	T458	Wind Organ 7	T522	Wind Organ 8
T395	Tron Flute 5	T459	Guitar Pinch 8	T523	Synth Harpsi. 6
T396	Bright String 3	T460	Indian Flute 9	T524	Bari & Tenor 5
T397	Jazz Organ 9	T461	Bag Pipe 9	T525	Steel Bell 4
T398	Mute Barafon 10	T462	Crystal 6	T526	Soft Sax 14
T399	Slow Violin 2	T463	Twin Bones 6	T527	Castanets 8
T400	Soft Sax 8	T464	Crystal 7	T528	Didgeridoo 15
T401	English Horn 6	T465	Soft Guitar 8	T529	Soft Sax 15
T402	Reed Horn 4	T466	Guitar Pinch 9	T530	Mute Barafon 16
T403	Indian Flute 8	T467	Attack Clav. 6	T531	Soft Guitar 10
T404	Castanets 4	T468	Bodhran 6	T532	Soft Accord 8
T405	English Horn 7	T469	Suona 7	T533	Wind Organ 9
T406	Tron Flute 6	T470	Chorus Guitar. 3	T534	Didgeridoo 16
T407	English Horn 8	T471	Slow Violin 4	T535	Electric Giutar (Clean) 5
T408	Hard Barsoon 4	T472	Clavi 9	T536	English Horn 11
T409	Dulcimer 6	T473	Castanets 6	T537	Soft Sax 16
T410	Xylophone 6	T474	Slow Violin 5	T538	Soft Guitar 11
T411	Mute Barafon 11	T475	Jazz Organ 10	T539	Hard Barsoon 8
T412	Nay 9	T476	Jazz Organ 11	T540	Kalimba 9
T413	Mute Barafon 12	T477	Electric Vraphone 8	T541	Koto 8
T414	Dual Horns 7	T478	Bodhran 7	T542	Soft Clav. 6
T415	Kawala 8	T479	Steel Bell 2	T543	Xylophone 7
T416	Soft Clav. 4	T480	Synth Harpsi. 5	T544	Soft Clav. 7
T417	Hard Barsoon 5	T481	Marimba 6	T545	Church Bells 6
T418	Dulcimer 7	T482	Marimba 7	T546	Kawala 10
T419	Soft Accord 6	T483	Attack Barafon 7	T547	Didgeridoo 17
T420	Church Bells 5	T484	Castanets 7	T548	Kalimba 10
T421	Shamisen 7	T485	Hard Vibe 9	T549	Castanets 9
T422	Synth Harpsi. 4	T486	Tron Flute 7	T550	Didgeridoo 18
T423	Crystal 5	T487	Soft Accord 7	T551	Bodhran 8
T424	Kawala 9	T488	Shanai 6	T552	English Horn 12
T425	Dual Horns 8	T489	Woodblock 9	T553	Hard Vibe 10
T426	Clavi 8	T490	Soft Sax 10	T554	Bodhran 9
T427	Electric Vraphone 7	T491	Slow Violin 6	T555	Indian Flute 10
T428	Castanets 5	T492	Soft Sax 11	T556	Dulcimer 9
T429	Tenor Sax 5	T493	Chorus Guitar. 4	T557	Soft Clav. 8
T430	Tenor Sax 6	T494	Attack Clav. 7	T558	Viola Attack 5
T431	Didgeridoo 10	T495	Reed Organ 2	T559	Attack Harp
T432	Kalimba 7	T496	Viola Attack 4	T560	Mute Barafon 17
T433	English Horn 9	T497	Koto 7	T561	Tenor Sax 8
T434	Guitar Pinch 6	T498	Tsugaru 8	T562	Twin Bones 7
T435	Hard Vibe 8	T499	Bag Pipe 10	T563	Chorus Guitar. 6
T436	Mute Barafon 13	T500	Attack Clav. 8	T564	Shanai 7
T437	Tenor Sax 7	T501	Tron Flute 8	T565	Kalimba 11
T438	Bag Pipe 8	T502	Marimba 8	T566	Jungle Bass 6

T567	Attack Barafon 8	T631	Koto 11	T695	Viola Attack 9
T568	Soft Clav. 9	T632	Kalimba 12	T696	Hard Vibe 13
T569	Tubular Bells 4	T633	Suona 10	T697	Koto 13
T570	Reed Organ 4	T634	Oct Harp 6	T698	Tenor Sax 9
T571	Guitar Pinch 10	T635	Koto 12	T699	Kawala 15
T572	Bodhran 10	T636	Shanai 8	T700	Steel Bell 6
T573	Clavi 11	T637	Electric Guitar (Clean) 8	T701	Soft Accord 11
T574	Viola Attack 6	T638	Clavi 12	T702	Organ Flute 10
T575	Synth Harpsi. 7	T639	Attack Harp 3	T703	Organ Flute 11
T576	Jungle Bass 7	T640	Attack Clav. 10	T704	Bright String 9
T577	Koto 9	T641	Bright String 6	T705	Soft Santur 11
T578	Church Bells 7	T642	Organ Flute 7	T706	Hard Barsoon 10
T579	Soft Accord 9	T643	Electric Guitar (Clean) 9	T707	Wind Organ 14
T580	Tubular Bells 5	T644	Kawala 12	T708	Synth Harpsi. 11
T581	Bag Pipe 12	T645	Bodhran 11	T709	Soft Sax 19
T582	Grow Guitar 8	T646	Shanai 9	T710	Bright String 10
T583	Mute Barafon 18	T647	Suona 11	T711	Bright String 11
T584	Soft Accord 10	T648	Synth Harpsi. 10	T712	Jungle Bass 9
T585	Electric Guitar (Clean) 6	T649	Bari & Tenor 6	T713	Soft Accord 12
T586	Viola Attack 7	T650	Kawala 13	T714	Reed Horn 8
T587	Kawala 11	T651	Bari & Tenor 7	T715	Slow Violin 10
T588	Soft Santur 7	T652	Reed Horn 7	T716	Synth Harpsi. 12
T589	Bright String 5	T653	Shamisen 10	T717	Attack Harp 6
T590	Electric Guitar (Clean) 7	T654	Soft Clav. 11	T718	Soft Santur 12
T591	Attack Barafon 9	T655	Bari & Tenor 8	T719	Hard Barsoon 11
T592	Electric Viphraphone 9	T656	Soft Santur 9	T720	English Horn 15
T593	Steel Bell 5	T657	Attack Harp 4	T721	Crystal 8
T594	Mute Barafon 19	T658	Bright String 7	T722	Bari & Tenor 10
T595	Chorus Guitar. 7	T659	Guitar Pinch 11	T723	Koto 14
T596	Soft Clav. 10	T660	Wind Organ 11	T724	Didgeridoo 20
T597	Viola Attack 8	T661	Soft Guitar 12	T725	Tenor Sax 10
T598	Church Bells 8	T662	English Horn 14	T726	Bright String 12
T599	Soft Santur 8	T663	Kawala 14	T727	Hard Vibe 14
T600	Wind Organ 10	T664	Grow Guitar 11	T728	Dual Horns 10
T601	Indian Flute 11	T665	Attack Harp 5	T729	Kawala 16
T602	Tsugaru 10	T666	Bari & Tenor 9	T730	Kawala 17
T603	Dulcimer 10	T667	Organ Flute 8	T731	Bag Pipe 13
T604	Grow Guitar 9	T668	Woodblock 10	T732	Electric Guitar (Clean) 10
T605	Tubular Bells 6	T669	Hard Vibe 11	T733	Tron Flute 10
T606	Jungle Bass 8	T670	Mute Barafon 20	T734	Kawala 18
T607	Dulcimer 11	T671	Tubular Bells 7	T735	Tron Flute 11
T608	Organ Flute 6	T672	Suona 12	T736	Tubular Bells 8
T609	Nay 11	T673	Bright String 8	T737	Synth Harpsi. 13
T610	Attack Barafon 10	T674	Hard Vibe 12	T738	Soft Santur 13
T611	English Horn 13	T675	Slow Violin 8	T739	Tubular Bells 9
T612	Suona 8	T676	Shamisen 11	T740	Attack Barafon 11
T613	Reed Organ 5	T677	Tron Flute 9	T741	Attack Barafon 12
T614	Shamisen 8	T678	Attack Clav. 11	T742	Electric Viphraphone 10
T615	Koto 10	T679	Dual Horns 9	T743	Dual Horns 11
T616	Shamisen 9	T680	Wind Organ 12	T744	Shanai 10
T617	Church Bells 9	T681	Twin Bones 8	T745	Bright String 13
T618	Nay 12	T682	Reed Organ 6	T746	Crystal 9
T619	Hard Barsoon 9	T683	Organ Flute 9	T747	Clavi 13
T620	Slow Violin 7	T684	Slow Violin 9	T748	Soft Sax 20
T621	Soft Sax 17	T685	Dulcimer 12	T749	Tron Flute 12
T622	Grow Guitar 10	T686	Tsugaru 11	T750	Dulcimer 14
T623	Attack Harp 2	T687	Wind Organ 13	T751	Slow Violin 11
T624	Suona 9	T688	Soft Santur 10	T752	Tenor Sax 11
T625	Nay 13	T689	Suona 13	T753	Nay 15
T626	Synth Harpsi. 8	T690	Soft Guitar 13	T754	Soft Guitar 15
T627	Didgeridoo 19	T691	Xylophone 8	T755	Shanai 11
T628	Nay 14	T692	Dulcimer 13	T756	Hard Barsoon 12
T629	Synth Harpsi. 9	T693	Marimba 9	T757	Synth Harpsi. 14
T630	Soft Sax 18	T694	Soft Guitar 14	T758	Soft Sax 21

T759	Suona 14	T821	Attack Barafon 14	T883	Crystal 14
T760	Kalimba 13	T822	Electric Viaphone 13	T884	Barafon 9
T761	Suona 15	T823	Soft Guitar 18	T885	Reed Horn 12
T762	Slow Violin 12	T824	Xylophone 11	T886	Dual Horns 13
T763	Reed Organ 7	T825	Tenor Sax 12	T887	Chorus Guitar. 12
T764	Kawala 19	T826	Oct Harp 8	T888	Grow Guitar 13
T765	Reed Horn 9	T827	Shamisen 12	T889	Shanai 12
T766	Attack Harp 7	T828	Reed Horn 10	T890	Twin Bones 12
T767	Oct Harp 7	T829	Marimba 12	T891	Barafon 10
T768	Kalimba 14	T830	Reed Organ 11	T892	Jungle Bass 11
T769	Twin Bones 9	T831	Attack Clav. 13	T893	Marimba 13
T770	Attack Clav. 12	T832	Hard Barsoon 15	T894	Grow Guitar 14
T771	Bari & Tenor 11	T833	Dual Horns 12	T895	Viola Attack 12
T772	Attack Harp 8	T834	Soft Clav. 13	T896	Shamisen 15
T773	English Horn 16	T835	Church Bells 12	T897	Tsugaru 12
T774	Twin Bones 10	T836	Oct Harp 9	T898	Reed Horn 13
T775	Soft Clav. 12	T837	Oct Harp 10	T899	Shanai 13
T776	Tubular Bells 10	T838	Indian Flute 13	T900	Castanets 13
T777	Slow Violin 13	T839	Viola Attack 11	T901	Reed Organ 12
T778	Synth Harpsi. 15	T840	Clavi 14	T902	Twin Bones 13
T779	Guitar Pinch 12	T841	Koto 15	T903	Chorus Guitar. 13
T780	Church Bells 10	T842	Soft Guitar 19	T904	Tron Flute 13
T781	Castanets 10	T843	Castanets 12	T905	Koto 16
T782	Twin Bones 11	T844	Jazz Organ 14	T906	Oct Harp 12
T783	Indian Flute 12	T845	Bag Pipe 14	T907	Grow Guitar 15
T784	Woodblock 11	T846	Steel Bell 8	T908	Shanai 14
T785	Attack Harp 9	T847	Church Bells 13	T909	Electric Giutar (Clean) 12
T786	Crystal 10	T848	Guitar Pinch 13	T910	Castanets 14
T787	Mute Barafon 21	T849	Soft Clav. 14	T911	Reed Organ 13
T788	Synth Harpsi. 16	T850	Tubular Bells 12	T912	Electric Giutar (Clean) 13
T789	Reed Organ 8	T851	Grow Guitar 12	T913	Soft Accord 14
T790	Steel Bell 7	T852	Steel Bell 9	T914	Twin Bones 14
T791	Chorus Guitar. 8	T853	Chorus Guitar. 10	T915	Marimba 14
T792	Reed Organ 9	T854	Crystal 13	T916	Jungle Bass 12
T793	Marimba 10	T855	Reed Horn 11	T917	Electric Giutar (Clean) 14
T794	Electric Viaphone 11	T856	Steel Bell 10	T918	Barafon 11
T795	Soft Guitar 16	T857	Kawala 21	T919	Viola Attack 13
T796	Viola Attack 10	T858	Attack Harp 10	T920	Slow Violin 14
T797	Reed Organ 10	T859	Oct Harp 11	T921	Oct Harp 13
T798	Bari & Tenor 12	T860	Kalimba 15	T922	Dulcimer 15
T799	Soft Sax 22	T861	Tubular Bells 13	T923	Bari & Tenor 13
T800	Jazz Organ 13	T862	Electric Giutar (Clean) 11	T924	Bag Pipe 15
T801	Soft Guitar 17	T863	Jazz Organ 15	T925	Attack Clav. 14
T802	Xylophone 9	T864	Attack Barafon 15	T926	Kalimba 16
T803	Xylophone 10	T865	Soft Guitar 20	T927	Hard Vibe 15
T804	Church Bells 11	T866	Soft Accord 13	T928	Organ Flute 14
T805	Suona 16	T867	Synth Harpsi. 17	T929	Jungle Bass 13
T806	Crystal 11	T868	Bodhran 12	T930	Electric Viaphone 14
T807	Chorus Guitar. 9	T869	Woodblock 12	T931	Viola Attack 14
T808	Crystal 12	T870	Attack Harp 11	T932	Bodhran 13
T809	Hard Barsoon 13	T871	Organ Flute 12	T933	Tubular Bells 15
T810	Castanets 11	T872	Jazz Organ 16	T934	Indian Flute 14
T811	Kawala 20	T873	Didgeridoo 21	T935	Tenor Sax 13
T812	Nay 16	T874	Church Bells 14	T936	Guitar Pinch 14
T813	Tubular Bells 11	T875	Synth Harpsi. 18	T937	Steel Bell 11
T814	Hard Barsoon 14	T876	Chorus Guitar. 11	T938	Tsugaru 13
T815	Barafon 8	T877	Organ Flute 13	T939	Soft Santur 14
T816	Marimba 11	T878	Shamisen 13	T940	Bright String 14
T817	Soft Sax 23	T879	Jungle Bass 10	T941	Oct Harp 14
T818	Attack Barafon 13	T880	Shamisen 14	T942	Attack Harp 12
T819	Electric Viaphone 12	T881	Tubular Bells 14	T943	Church Bells 15
T820	Wind Organ 15	T882	English Horn 17	T944	Tenor Sax 14

T945	Dual Horns 14	T964	Bag Pipe 16	T983	Attack Harp 15
T946	Barafon 12	T965	Viola Attack 15	T984	Koto 17
T947	Steel Bell 12	T966	Steel Bell 14	T985	Reed Organ 15
T948	Marimba 15	T967	Crystal 15	T986	Attack Clav. 15
T949	Electric Vraphone 15	T968	Bright String 15	T987	Clavi 15
T950	Soft Accord 15	T969	Reed Horn 14	T988	Dual Horns 15
T951	Steel Bell 13	T970	Guitar Pinch 15	T989	Steel Bell 15
T952	Tenor Sax 15	T971	Oct Harp 15	T990	Slow Violin 15
T953	Electric Guita (Clean) 15	T972	Twin Bones 15	T991	Soft Santur 15
T954	Soft Clav. 15	T973	Chorus Guitar. 15	T992	Barafon 14
T955	Bari & Tenor 14	T974	Bari & Tenor 15	T993	Organ Flute 15
T956	Attack Harp 13	T975	Tenor Sax 16	T994	Castanets 15
T957	Chorus Guitar. 14	T976	Indian Flute 15	T995	Guitar Pinch 16
T958	Shanai 15	T977	Bodhran 15	T996	Tron Flute 15
T959	Reed Organ 14	T978	Shamisen 16	T997	Tsugaru 15
T960	Bodhran 14	T979	Attack Harp 14	T998	Reed Horn 15
T961	Jungle Bass 14	T980	Barafon 13	T999	Barafon 15
T962	Tsu aru 14	T981	Jungle Bass 15	T1000	Electric Guita (Clean) 16
T963	Shanai 16	T982	Tron Flute 14		

22.Appendix 2 (Rhythm comparison table)

R001	8Beat 1	R040	Pop 14	R079	Shuffle 1
R002	8Beat 2	R041	Pop Bolero	R080	Shuffle 2
R003	8Beat 3	R042	Pop BossaNova	R081	Boogie 1
R004	8Beat 4	R043	Pop Waltz	R082	Boogie 2
R005	8Beat 5	R044	Pop Dance	R083	Boogie 3
R006	8Beat 6	R045	Motown	R084	Twist
R007	8Beat 7	R046	British Pop 1	R085	Ballad 1
R008	8Beat 8	R047	British Pop 2	R086	Ballad 2
R009	8Beat 9	R048	British Pop 3	R087	Ballad 3
R010	8Beat 10	R049	Guitar Pop	R088	Ballad 4
R011	8Beat 11	R050	Slow Pop	R089	Ballad 5
R012	8Beat 12	R051	50's Pop	R090	Soul Ballad
R013	8Beat 13	R052	80's Pop	R091	6/8 Ballad
R014	8Beat 14	R053	Rock 1	R092	Acoustic Ballad
R015	8Beat 15	R054	Rock 2	R093	Colour Ballad
R016	8Beat 16	R055	Rock 3	R094	Guitar Ballad
R017	8Beat 17	R056	Rock 4	R095	Piano Ballad
R018	8Beat 18	R057	50's Rock	R096	Organ Ballad
R019	16Beat 1	R058	60's Rock 1	R097	Groove 1
R020	16Beat 2	R059	60's Rock 2	R098	Groove 2
R021	16Beat 3	R060	70's Rock	R099	Groove 3
R022	16Beat 4	R061	80's Rock	R100	Groove 4
R023	16Beat 5	R062	Big Rock	R101	Groove 5
R024	16Beat 6	R063	Power Rock	R102	Groove 6
R025	16Beat 7	R064	Dark Rock	R103	Groove 7
R026	16Beat 8	R065	Jazz Rock	R104	Groove 8
R027	Pop 1	R066	Soft Rock	R105	Groove 9
R028	Pop 2	R067	Pop Rock 1	R106	Piano 1
R029	Pop 3	R068	Pop Rock 2	R107	Piano 2
R030	Pop 4	R069	Funky Rock 1	R108	Piano 3
R031	Pop 5	R070	Funky Rock 2	R109	Piano 4
R032	Pop 6	R071	Ballad Rock	R110	Piano 5
R033	Pop 7	R072	Folk Rock	R111	Piano 6
R034	Pop 8	R073	Slow Rock 1	R112	Piano 7
R035	Pop 9	R074	Slow Rock 2	R113	Piano 8
R036	Pop 10	R075	Slow Rock 3	R114	Piano 9
R037	Pop 11	R076	Slow Rock 4	R115	Piano 10
R038	Pop 12	R077	Rock&Roll 1	R116	Unplugged 1
R039	Pop 13	R078	Rock&Roll 2	R117	Unplugged 2

R118	Unplugged 3	R182	March	R246	Tango4
R119	Unplugged 4	R183	Polka	R247	Tango5
R120	Unplugged 5	R184	Classical 1	R248	Rock &Roll
R121	Unplugged 6	R185	Classical 2	R249	Rock & Roll Shfl1
R122	Unplugged 7	R186	China Folk 1	R250	Oldies R & R
R123	Unplugged 8	R187	China Folk 2	R251	Detroit Pop1
R124	Dance 1	R188	China Opera 1	R252	Detroit Pop2
R125	Dance 2	R189	China Opera 2	R253	Worship Med
R126	Disco	R190	China Ballad	R254	Worship Fast
R127	House	R191	China Pop	R255	Piano Boogie
R128	Euro Beat	R192	Xin Jiang	R256	Lovely Shuffle
R129	Funky Dance	R193	Shan Bei	R257	60's Rock & Roll
R130	80's Dance	R194	Yun Nan	R258	Kool Funk
R131	Techno	R195	He Nan	R259	Blueberry Blues
R132	Fusion	R196	An Hui	R260	Shuffle Blues
R133	Blues 1	R197	Guang Dong	R261	Mambo 4
R134	Blues 2	R198	Xi Zang	R262	Mambo 5
R135	Blues 3	R199	Mongolian	R263	Pop Classics
R136	Funky 1	R200	Korean	R264	Live 8 Beat
R137	Funky 2	R201	J-Pop Hit	R265	Power Rock2
R138	Funky 3	R202	16 Beat Ballad2	R266	Acoustic Rock2
R139	Gospel	R203	70's Pop Ballad	R267	Cool 8 Beat
R140	Rap 1	R204	EP Ballad	R268	Uptempo 8Beat
R141	Rap 2	R205	Power Ballad	R269	90's Rock Ballad
R142	Soul 1	R206	Guitar Ballad2	R270	Chart Rock Shfl2
R143	Soul 2	R207	New R&B Ballad	R271	Brit Pop
R144	Soul 3	R208	Guitar Serenade	R272	Brazilian Samba
R145	Soul 4	R209	Organ Ballad2	R273	Brit Pop Swing
R146	Country 1	R210	Joropo	R274	60's 8 Beat
R147	Country 2	R211	Reggaeton	R275	Fast Bossa
R148	Country 3	R212	French Waltz	R276	60's Guitar Pop
R149	Country 4	R213	Merengue	R277	70's 8 Beat
R150	Country 5	R214	12-8 Ballad	R278	90's Guitar Pop
R151	Jazz 1	R215	Norteno	R279	Soft Rock2
R152	Jazz 2	R216	Jig	R280	Chart Guita rPop
R153	Jazz Waltz	R217	Hawaiian	R281	Gujiira
R154	Jazz Ballad	R218	Electronica	R282	Modern Pop Bld
R155	Lounge	R219	Funky House	R283	Soul
R156	Jive	R220	Club Beat	R284	Skiffle2
R157	Ragtime	R221	Retro Club	R285	6-8Soul
R158	Charlston	R222	Mod Chart Pop	R286	Soul Brothers
R159	Big Band	R223	MOR Swing	R287	Happy Reggae
R160	Swing	R224	Retro Pop	R288	Pop Latin
R161	Caribbean	R225	Rumba Flamenco	R289	6-8Slow Rock
R162	Reggae	R226	Trance Pop	R290	6-8 Modern
R163	Cha Cha	R227	Orch Big Band2	R291	6-8 Orchestral
R164	Rumba	R228	Big Band Fast2	R292	Schlager Shuffle
R165	Samba	R229	Midnight Swing	R293	Schlager Pop
R166	BossaNova	R230	German Rock	R294	Schlager Rumba
R167	Mambo	R231	Schlager Beat	R295	Euro Pop Organ
R168	Salsa	R232	Mellow Hip Hop	R296	70's French Hit
R169	Beguine	R233	Classic Hip Hop	R297	Italian Mazurka
R170	Cumbia	R234	New Hip Hop	R298	Bohemian Waltz
R171	Latin	R235	Duranguense	R299	Schlager Samba1
R172	Baroque	R236	Laff	R300	Schlager Samba2
R173	Bolero	R237	Ober Walzer	R301	Scand Slow Rock
R174	Holly Wood	R238	Bhangra	R302	Schlager 6-8
R175	Foxtrot	R239	Zouk	R303	Schlager Fox
R176	Paso Doble	R240	German March	R304	Highland Waltz
R177	Quick Step	R241	Enka	R305	Italian Polka
R178	Bachata	R242	Bolero Lento	R306	Grupera
R179	Boston	R243	Sherif fReggae	R307	Danzon
R180	Tango	R244	Beguine2	R308	Schlager Alp
R181	Waltz	R245	Latin Disco	R309	Saeidy

R310	Bhajan	R374	Scand Country1	R438	Hoedown
R311	Hip Hop Groove	R375	Scand Country2	R439	Country Shuffle
R312	Chart Pop1	R376	Scand Shuffle	R440	Waltz2
R313	Organ Groove	R377	Worship Slow	R441	Cha Cha2
R314	Chart Pop2	R378	Disco Teens	R442	Rumba2
R315	New R&B	R379	Scand Bugg	R443	Jive2
R316	Pop R&B	R380	Rock Cha Cha	R444	Pasodoble
R317	Chart R&B	R381	Organ Swing	R445	Samba1
R318	Modern Shuffle	R382	Secret Service	R446	Samba2
R319	Blues Rock	R383	Animation Bld	R447	Schlager Rock 1
R320	Dream Dance	R384	Christmas Waltz	R448	Schlager Rock 2
R321	US Chart Hit	R385	Movie Swing	R449	Foxtrot2
R322	Soul R&B	R386	Movie Ballad	R450	Viennese Waltz
R323	R&B Soul Ballad	R387	Bubblegum Pop	R451	Tango2
R324	Euro Hip Hop	R388	Rock & Roll Shfl2	R452	Tango3
R325	Trip Hop	R389	West Coast Pop	R453	German Waltz
R326	Ibiza 2004	R390	Classic 16 Beat	R454	Carnival
R327	Mod Big Band Shfl	R391	Jazz Pop	R455	Organ Samba
R328	Modern Big Band	R392	Kool Shuffle	R456	Reel
R329	Pop Gtr Ballad	R393	8 Beat Ballad2	R457	Gay Gordons
R330	Ibiza 2002	R394	Chillout	R458	Scand Waltz
R331	Euro Trance	R395	16 Beat Ballad1	R459	60's Rock Style
R332	6-8 Trance	R396	Epic Ballad	R460	Standard Rock
R333	Latin DJ's	R397	Easy Ballad	R461	Brit Rock Pop
R334	Bomba	R398	Cuban Son	R462	60's Vintage Rock
R335	Chillout Cafe	R399	Bachata2	R463	Chart Rock Shfl
R336	70's Glam Piano	R400	Forro	R464	60's Pop Rock
R337	French House	R401	70's Chart Ballad	R465	Rock Billy
R338	English Waltz	R402	Romantic Ballad	R466	Rock Boogie
R339	8 Beat Ballad1	R403	90's Cool Ballad	R467	Latin Cha Cha
R340	Club House	R404	Alp Ballad1	R468	Rock Classical
R341	House2	R405	Alp Ballad2	R469	Rock Shuffle
R342	Jazz Gtr Club	R406	E_Ballad	R470	Rock Pop
R343	Modern Jazz	R407	Unplugged 9	R471	Rock'n Roll 1
R344	Acoustic Jazz	R408	Pop Ballad	R472	Rock'n Roll 2
R345	Cool Jazz Ballad	R409	Pop New Age	R473	Straight Rock
R346	Modern Jazz Bld	R410	8 Beat Modern	R474	Jazz Rock2
R347	Easy Listening	R411	Country Ballad1	R475	Fast Gospel
R348	Bebop	R412	Love Song	R476	Folk Rock2
R349	Orch Big Band1	R413	Modern Country Pop	R477	Skiffle
R350	Big Band Fast1	R414	Electro Pop	R478	Funk Pop Rock
R351	Orchestra Swing1	R415	Acoustic Ballad 2	R479	Contemp Rock
R352	Orchestra Swing2	R416	Piano Ballad 1	R480	Acoustic Rock
R353	70's Ranking Country	R417	R&B Ballad	R481	50's Pop2
R354	Jazz Waltz Med	R418	Rock Ballad	R482	Cool Pop
R355	Mariachi Waltz	R419	Slow & Easy	R483	Groovy Pop
R356	US March	R420	Analog Ballad	R484	60's Vintage Pop
R357	Guitar Rumba	R421	Slow Rock 5	R485	80's Pop2
R358	Slow Blues	R422	Slow Rock 6	R486	Rap Pop
R359	Jazz Waltz Fast	R423	Slow Rock 7	R487	Pop Rock 3
R360	70's Country Pop	R424	Slow Soul	R488	60's Soul
R361	Dixieland	R425	8 Beat Adria	R489	70's Soul
R362	40's Big Band	R426	Classic Piano	R490	Funk
R363	Easy Country	R427	80's EP Ballad	R491	16 Beat Shuffle
R364	Country Hits	R428	80's Boy Band	R492	Twist2
R365	Country 8 Beat	R429	Country Ballad2	R493	British Pop 4
R366	Sci-fi March	R430	Country Two Step	R494	British Pop 5
R367	Tap Dance Swing	R431	Country 6	R495	Hard Rock1
R368	Orchestral Bolero	R432	Country 7	R496	Hard Rock2
R369	Gospel Sisters	R433	Finger Pickin	R497	Fusion2
R370	Italian Waltz	R434	Country Brothers	R498	Fusion3
R371	6-8 March	R435	New Country	R499	Funk Shuffl 1
R372	Bluegrass	R436	Brisk Country	R500	Funk Shuffl 2
R373	Mod Cntry Bld1	R437	70's Chart Cntry	R501	Fusion Shuffl 1

R502	Fusion Shuffl 2	R566	Carnival2	R632	Disco Funk2
R503	Club Pop1	R567	BossaNova2	R633	Disco Samba2
R504	Club Pop2	R568	Mambo 2	R634	New Hip Hop2
R505	16 Beat Pop1	R569	Mambo 3	R635	Cat Groove2
R506	16 Beat Pop2	R570	Bolero2	R636	Laff2
R507	8 Beat Pop1	R571	Cumbia3	R637	Pop Waltz3
R508	8 Beat Pop2	R572	Latin Rock	R638	Bhangra2
R509	8 Beat Soul1	R573	Disco Latin	R639	Twist3
R510	8 Beat Soul2	R574	Tijuana	R640	German March2
R511	8 Beat Rock1	R575	Reggae2	R641	Enka2
R512	8 Beat Rock2	R576	Salsa2	R642	Bolero Lento2
R513	Classic 8Beat	R577	Calypso	R643	Midnight Swing2
R514	Vintage Gtr Pop	R578	Guad Dance	R644	French Jazz2
R515	Schlager Italia	R579	Reggae 12Beat	R645	Latin Party Pop2
R516	70's Disco1	R580	Reggae 16Beat	R646	Tango6
R517	70's Disco2	R581	Swing Fox	R647	Tango7
R518	Funky Disco	R582	Slow Fox	R648	Parranda2
R519	Saturday Night	R583	Organ Cha Cha	R649	Latin Rock2
R520	Club Latin	R584	Organ Quick Step	R650	Acoustic Rock3
R521	Disco Chocolate	R585	Cat Groove	R651	80's Pop3
R522	Disco Fox	R586	Dixie Jazz	R652	60's Soul2
R523	Disco Funk	R587	Medium Jazz	R653	Fusion Shuffl3
R524	Disco Hands	R588	Jazz Big Band	R654	Fusion Shuffl4
R525	Disco Party	R589	Jazz Club	R655	16 Beat Pop3
R526	Disco Samba	R590	Ragtime2	R656	16 Beat Pop4
R527	UK Pop	R591	Big Band Shuffle 1	R657	60's Rock 3
R528	Club Dance	R592	Big Band Shuffle 2	R658	Brit Rock Pop2
R529	Modern R&B	R593	Big Band Shuffle 3	R659	Blueberry Blues2
R530	Hip Shuffle	R594	Fast Band 1	R660	Skiffle3
R531	Charleston	R595	Fast Band 2	R661	Mambo6
R532	Disco Pop	R596	Frankly Soul	R662	Mambo7
R533	Disco Soul	R597	Jazz Funk	R663	Club Pop3
R534	Disco Trot	R598	Classic Big Band	R664	Schlager Italia2
R535	Euro Beat2	R599	French Jazz	R665	Power Rock3
R536	Rap 3	R600	Jump Jive	R666	Rock'n Roll 3
R537	Rave	R601	Standard Rock2	R667	Cool8 Beat2
R538	Techno2	R602	16 Beat Ballad3	R668	British Pop6
R539	Techno3	R603	Contemp Rock2	R669	British Pop7
R540	70's Disco Funk	R604	EP Ballad2	R670	8 Beat Soul3
R541	Disco Philly	R605	Fusion4	R671	Brit Pop2
R542	Disco House	R606	Fusion5	R672	Disco Latin2
R543	80's Disco	R607	Funk2	R673	Brit Pop Swing2
R544	Schlager Polka	R608	Guitar Serenade2	R674	Fast Gospel2
R545	Polka Pop	R609	Organ Ballad3	R675	Fast Bossa2
R546	Blue Grass 1	R610	Joropo2	R676	60's Guitar Pop2
R547	Blue Grass 2	R611	Reggaeton2	R677	90's Soul
R548	Blue Grass 3	R612	French Waltz2	R678	Funk Shuffl 3
R549	Pop Waltz2	R613	Merengue2	R679	8 Beat Rock3
R550	USA March	R614	Pop Ballad2	R680	Rock Cha Cha2
R551	Hully Gully	R615	Norteno2	R681	Gujiira2
R552	Tarantella	R616	Jig2	R682	Rock Ballad2
R553	Limbo Rock	R617	Hawaiian2	R683	Soul 5
R554	Swing Waltz	R618	70's Disco3	R684	Classic 8Beat2
R555	Pub Piano	R619	70's Disco4	R685	Bolero3
R556	Jazz Waltz2	R620	Club Beat2	R686	Soul Brothers2
R557	Jazz Waltz3	R621	Rap 4	R687	Happy Reggae2
R558	Show Tune	R622	Disco House2	R688	Pop Latin2
R559	Polka2	R623	MOR Swing2	R689	6-8Slow Rock2
R560	Ober Polka	R624	Retro Pop2	R690	6-8 Modern2
R561	Party Polka	R625	Calypso2	R691	6-8 Orchestral2
R562	Pop Mambo	R626	Trance Pop2	R692	Slow Soul2
R563	Latin Party Pop	R627	Big Band Shuffle4	R693	Piano Ballad3
R564	Cumbia2	R628	Big Band Shuffle5	R694	Disco Trot2
R565	Parranda	R629	Big Band Shuffle6	R695	Disco Hands2
		R630	German Rock2	R696	British Pop8
		R631	Schlager Beat2		

R697	Italian Mazurka2	R763	Easy Country2	R830	Fast Band5
R698	Bohemian Waltz2	R764	Country Hits2	R831	Orchestra Swing5
R699	Samba3	R765	Country 8 Beat2	R832	Movie Ballad3
R700	Samba4	R766	Blue Grass4	R833	Rock & Roll Shfl4
R701	Jive3	R767	Blue Grass5	R834	Hard Rock5
R702	Foxtrot3	R768	Blue Grass6	R835	8 Beat Pop5
R703	Pasodoble2	R769	Gospel Sisters2	R836	8 Beat Pop6
R704	Highland Waltz2	R770	Italian Waltz2	R837	16 Beat Ballad5
R705	Schlager Polka2	R771	Limbo Rock2	R838	Straight Rock3
R706	Grupera2	R772	Bluegrass2	R839	Easy Ballad3
R707	Danzon2	R773	Country Brothers2	R840	Fofo3
R708	Schlager Alp2	R774	Scand Country3	R841	Fusion6
R709	Saeidy2	R775	Scand Country4	R842	Funk3
R710	Bhajan2	R776	Scand Shuffle2	R843	Viennese Waltz3
R711	Hip Hop Groove2	R777	70's Chart Cntry2	R844	Show Tune3
R712	Hip Shuffle2	R778	Pub Piano2	R845	Dixieland3
R713	Organ Groove2	R779	Polka3	R846	Big Band Shuffle7
R714	Chart Pop3	R780	Rock Cha Cha3	R847	Big Band Shuffle8
R715	Country Ballad3	R781	Schlager Rock3	R848	Big Band Shuffle9
R716	Romantic Ballad2	R782	Organ Samba2	R849	Pop Waltz4
R717	Analog Ballad2	R783	Gay Gordons2	R850	USA March3
R718	Electro Pop2	R784	Swing Waltz2	R851	Hully Gully3
R719	Blues Rock2	R785	Reel2	R852	Tarantella2
R720	Rave2	R786	Movie Ballad2	R853	Limbo Rock3
R721	US Chart Hit2	R787	Cool Pop2	R854	Swing Waltz3
R722	Alp Ballad3	R788	Rock & Roll Shfl3	R855	Pub Piano3
R723	8 Beat Modern2	R789	Hard Rock3	R856	Jazz Waltz 5
R724	Euro Hip Hop2	R790	Hard Rock4	R857	Jazz Waltz 6
R725	Disco Pop2	R791	Club Pop4	R858	Show Tune4
R726	Disco Philly2	R792	8 Beat Pop3	R859	Polka4
R727	Mod Big BandShfl2	R793	8 Beat Pop4	R860	Ober Polka3
R728	Modern Big Band2	R794	60's Rock 4	R861	Party Polka2
R729	8 Beat Adria2	R795	16 Beat Ballad4	R862	Waltz3
R730	Disco Chocolate2	R796	Straight Rock2	R863	Cha Cha3
R731	Euro Trance2	R797	Easy Ballad2	R864	Rumba4
R732	Euro Beat3	R798	Pop Mambo2	R865	Jive4
R733	Techno4	R799	BossaNova3	R866	Pasodoble3
R734	Reggae3	R800	Fofo2	R867	Samba5
R735	Chillout Cafe2	R801	Pop Classics2	R868	Samba6
R736	Love Song2	R802	Live 8 Beat2	R869	Schlager Rock5
R737	French House2	R803	Power Rock4	R870	Schlager Rock6
R738	Jazz Waltz4	R804	Acoustic Rock4	R871	Foxtrot4
R739	Classic Piano2	R805	Cool 8 Beat3	R872	Viennese Waltz4
R740	Disco Party2	R806	Uptempo 8Beat2	R873	Tango8
R741	Club Dance2	R807	90's Rock Ballad2	R874	Tango9
R742	Jazz Gtr Club2	R808	Chart Rock Shfl3	R875	Country Ballad5
R743	Modern Jazz2	R809	Brit Pop3	R876	Country Two Step2
R744	Polka Pop2	R810	Brazilian Samba2	R877	Country 8
R745	USA March2	R811	Brit Pop Swing3	R878	Country 9
R746	Ober Polka2	R812	60's 8 Beat2	R879	Finger Pickin3
R747	Easy Listening2	R813	Fast Bossa3	R880	Country Brothers3
R748	Fast Band3	R814	60's Guitar Pop3	R881	New Country2
R749	Fast Band4	R815	90's Soul2	R882	Easy Country3
R750	Big Band Fast3	R816	Gujiira3	R883	70's Chart Cntry3
R751	Orchestra Swing3	R817	Euro Hip Hop3	R884	Hoedown2
R752	Orchestra Swing4	R818	Disco Pop3	R885	Country Shuffle2
R753	Finger Pickin2	R819	Disco Philly3	R886	Schlager Polka3
R754	Hully Gully2	R820	Mod Big BandShfl3	R887	Polka Pop4
R755	Viennese Waltz2	R821	Modern Big Band3	R888	Blue Grass 7
R756	Show Tune2	R822	8 Beat Adria3	R889	Blue Grass 8
R757	Rumba3	R823	Disco Chocolate3	R890	Blue Grass 9
R758	Schlager Rock4	R824	Euro Trance3	R891	70's Disco Funk2
R759	Jazz Waltz Fast2	R825	Love Song3	R892	Disco Philly4
R760	Country Ballad4	R826	Disco Party3	R893	Disco House3
R761	Dixieland2	R827	Club Dance3	R894	80's Disco2
R762	French Jazz3	R828	Modern Jazz3	R895	Swing Fox2
		R829	Polka Pop3	R896	Slow Fox2

R897	Organ Cha Cha2	R931	90's Guitar Pop2	R965	House3
R898	Organ Quick Step2	R932	Soft Rock3	R966	Jazz Gtr Club3
R899	Cat Groove3	R933	Chart Guita rPop2	R967	Modern Jazz4
R900	Dixie Jazz2	R934	Guijira4	R968	Acoustic Jazz2
R901	Medium Jazz2	R935	Easy Listening3	R969	Cool Jazz Ballad2
R902	Jazz Big Band2	R936	Bebop2	R970	Modern Jazz Bld2
R903	Jazz Club2	R937	Orch Big Band3	R971	Modern Pop Bld2
R904	Ragtime3	R938	Big Band Fast4	R972	Soul R&B2
R905	Big Band Shuffle 10	R939	Orchestra Swing6	R973	R&B Soul Ballad2
R906	Big Band Shuffle 11	R940	Orchestra Swing7	R974	Euro Hip Hop4
R907	Big Band Shuffle 12	R941	Rock Cha Cha4	R975	Trip Hop2
R908	Fast Band 6	R942	Organ Swing2	R976	Ibiza 2002_2
R909	Fast Band 7	R943	Secret Service2	R977	Soft Rock4
R910	German Waltz2	R944	Animation Bld2	R978	Chart Guita rPop3
R911	Carnival3	R945	Christmas Waltz2	R979	Guijira5
R912	Organ Samba3	R946	Frankly Soul2	R980	Easy Listening4
R913	Reel3	R947	Jazz Funk2	R981	Bebop3
R914	Gay Gordons3	R948	Classic Big Band2	R982	Orch Big Band4
R915	Scand Waltz2	R949	French Jazz4	R983	Big Band Fast5
R916	Pop Classics3	R950	Jump Jive2	R984	Orchestra Swing8
R917	Live 8 Beat3	R951	Mod Big Band Shfl4	R985	Orchestra Swing9
R918	Power Rock5	R952	Modern Big Band4	R986	Rock Cha Cha5
R919	Acoustic Rock5	R953	Pop Gtr Ballad2	R987	Organ Swing3
R920	Cool 8 Beat4	R954	Ibiza 2002_2	R988	Secret Service3
R921	Uptempo 8Beat3	R955	Euro Trance4	R989	Animation Bld3
R922	90's Rock Ballad3	R956	6-8 Trance2	R990	Reggae4
R923	Chart Rock Shfl4	R957	Latin DJ's2	R991	Frankly Soul3
R924	Brit Pop4	R958	Bomba2	R992	Jazz Funk3
R925	Brazilian Samba3	R959	Chillout Cafe3	R993	Classic Big Band3
R926	Brit Pop Swing4	R960	70's Glam Piano2	R994	French Jazz5
R927	60's 8 Beat3	R961	French House3	R995	Jump Jive3
R928	Fast Bossa4	R962	English Waltz2	R996	Mod Big Band Shfl5
R929	60's Guitar Pop4	R963	8 Beat Ballad3	R997	Modern Big Band5
R930	70's 8 Beat2	R964	Club House2	R998-R1000	Big Band Shuffle 13-15

Appendix 3 (Demonstration Song Comparison Table)

S001	Chopin Fantasia Impromptu	S027	Schumann Frohlicher Landmann
S002	Chopin Nocturne	S028	Schumann Sicilienne
S003	Chopin Petit Chien	S029	Richard Ballade Pour Adeline
S004	Chopin Chanson De L'adieu	S030	Richard Ping Pong Sous Les Arbres
S005	Chopin Nocturne	S031	Richard A Comme Amour
S006	Chopin Black keys	S032	Richard Mariage D'amour
S007	Chopin - Valse op.64 no.2	S033	Mendelssohn Jagerlied op.19b-3
S008	Beethoven- Piano Sonate op. 13 "Pathetique" 2nd mov	S034	Mendelssohn Frühlingslied
S009	Beethoven For Elise	S035	Haydn Little Serenade
S010	Beethoven Mondschein Sonate	S036	Pachelbel Canon In D
S011	Beethoven Minuet In G	S037	Badarzewska Maiden's Prayer
S012	Beethoven Marcia Alla Turca	S038	Liszt Liebestraume
S013	Beethoven piano sonata op.49-2 1st mov	S039	Tchaikovsky- Danse des mirlitons
S014	Beethoven Ecossaise	S040	Oesten Dolly's Dreaming Awakening
S015	Mozart Twinkle Twinkle Little Star	S041	Dvorak Humoresque
S016	Mozart Turkish March	S042	Joplin The Entertainer
S017	Mozart Sonate	S043	Debussy La Fille aux Cheveux de Lin
S018	Mozart Menuett	S044	Debussy Aeabesque
S019	Bach Waltz In A Mino	S045	Dubessy Clair De lune
S020	Bach Menuett	S046	L-C.Daquin Le Coucou
S021	Bach The Well-Tempered Clavier	S047	Karl Bohm The Fountain
S022	Bach Bourree	S048	Burgmüller Pastorale
S023	Bach Invention	S049	Korsakov Bumblebee
S024	Schubert Military Marches	S050	Haydn-Sunrise
S025	Schubert Monents Musicaux	S051-S150	
S026	Schumann Traumerei		Czerny 599 No.001-Czerny 599 No.100

1 Battery



WARNING

- o Por favor, ten cuidado apagado siguientes atenciones
 - o Hacer No intente desmontarlo o cortocircuitar el batería
 - o Hacer no exponer o quemar él en El fuego
 - o Hacer No mezclar el nuevo y viejo batería
 - o Hacer no mezcla diferente tipos de baterías o Hacer no cargar el batería
 - o El positivo y negativo polos de el La batería debe estar correctamente instalado
- o por favor Retire la batería del dispositivo electrónico. teclado Si usted hacer no usar Para un largo tiempo ,

2 Exception



WARNING

Por favor haga lo siguiente pasos cuando excepción Para la electrónica teclado como si estuviera echando humo , demasiado caliente y Entonces en . 1) . fuerza apagado

2) . jalar el adaptador abajo de el fuerza enchufe en el muro cuando son usando.

3) . contacto su local distribuidor en tiempo .

Es normal para adaptador conseguir caliente cuando largo tiempo usando C.A. adaptador , no indicar Funcionamiento defectuoso

por favor Apagar y reiniciar el teclado electrónico cuando función en algún momento problema ,

3 Install the battery

- 1) . Salida el tornillo y eliminar el batería cubrir
- 2) . poner el batería con correcto positivo + y negativo - dirección dentro del batería ranura con 6" AA " 1 .5v
- 3) . poner el batería cubrir y Cerrar el tornillos

Este El producto contiene componentes electrónicos y debería no permitir líquidos a ingresar o ser usado en húmedo entornos . A diario A prueba de polvo limpieza debería ser hecho Bueno , y manchas superficiales poder ser borrado con a suave y limpio paño .

VEVOR[®]

TOUGH TOOLS, HALF PRICE

**Soporte técnico y Certificado de garantía
electrónica www.vevor.com/support**

VEVOR®

TOUGH TOOLS, HALF PRICE

Wsparcie techniczne i E-gwarancja Certyfikat
www.vevor.com/support

FORTEPIAN

UŻYTKOWNIK PODRĘCZNIK

MODEL: BD-881D

Nadal staramy się dostarczać Ci narzędzia z konkurencyjny cena.

"Ratować „Połowa”, „Połowa ceny ” lub jakiegokolwiek inne podobne wyrażenia przez nas tylko reprezentuje jakiś

Szacunkowe oszczędności, jakie możesz uzyskać kupując u nas niektóre narzędzia w porównaniu z innymi najlepszymi markami i robi nie konieczne oznaczać pokrycie Wszystko kategorie oferowanych narzędzi przez nas. Ty

uprzejmie przypominamy o konieczności dokładnego sprawdzenia samochodu, gdy umieszczanie zamówień z nas jeśli ty Czy

 
faktycznie oszczędzając połowę w porównaniu z najlepszymi markami.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Piano

MODEL: BD-881D

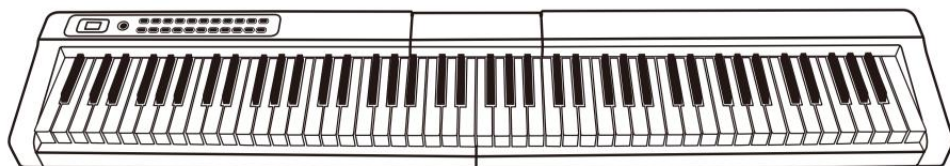

(Zdjęcie ma charakter poglądowy, Proszę odnieść się do rzeczywisty obiekt)

POTRZEBOWAĆ POMOCY? KONTAKT NAS!

Mieć produkt pytania? Potrzebować techniczny wsparcie? Proszę czuć bezpłatny Do kontakt nas:

Wsparcie techniczne i certyfikat e-gwarancji
www.vevor.com/support

To jest oryginał instrukcja, proszę przeczytać wszystko podręcznik instrukcje

ostrożnie przed uruchomieniem. VEVOR zastrzega sobie prawo do jednoznacznej interpretacji naszej instrukcji obsługi. Wygląd produktu powinien podlegać produkt ty otrzymane. Proszę wybaczyć nas, że nie będziemy

poinformuję cię ponownie jeśli istnieje jakaś technologia lub oprogramowanie Aktualizacje na naszym produkt.

 


Akcesorium


Typ - C adapter *
 1 moc sznur * 1
 Nuty podstawka * 1

Muzyka arkusz klips
 * 1 Mikrofon * 1
 Słuchawki * 1

fortepian
 naklejka * 1
 fortepian torba *
 1
 Midi sznur * 1
 podtrzymywać pies !* 1

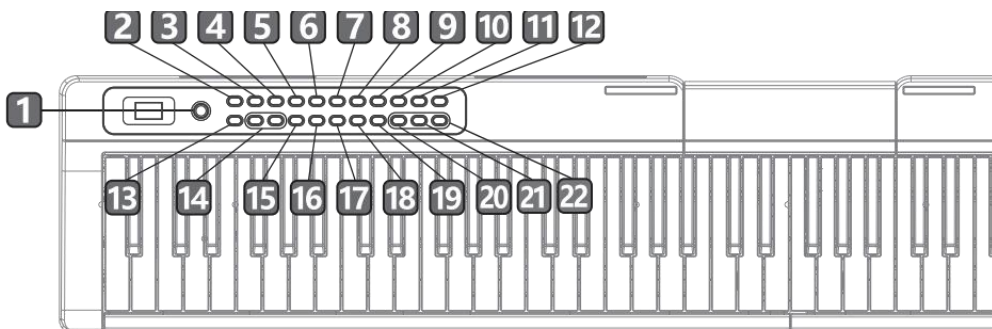

1 Power	6 Volume	11 Key drum	16 Chord	Bluetooth/MP3 mode
2 Tone	7 Rhythm vol	12 Lesson	17 Record	20 ►/⏮
3 Rhythm	8 Tempo	13 Start/stop	18 Play/LED	21 ◀/VOL-
4 Demo One	9 Transpose	14 +/-	19 Metronome	22 ▶/VOL+
5 Demo All	10 Dual key	15 Sync/Vel		

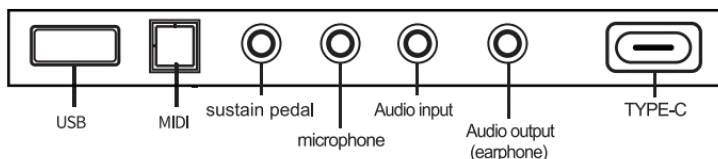 

1. Power

Turn on the [Power] button to play the keyboard and enter the performance state.

2. Tone

After pressing [Tone] button, you can use the [+/-] button to select the tone.

3. Rhythm

After pressing [Rhythm] button, you can use the [+/-] button to select the rhythm.

4. Demo One

Press the [Demo One] for the first time to enter the [Demo One] mode, and press the Demo One for the second time to exit the Demo One mode. After entering the Demo One mode, play the selected song from the next song. When the song finishes playing, the current song is played repeatedly. In the Demo One mode, press the [+/-] key to switch songs.

5. Demo All

Press the [Demo All] for the first time to enter the continuous singing mode, and press the Demo All for the second time to exit the continuous singing mode. After entering continuous singing mode, playback starts from the current song.

When the song is finished, continue to play the next song and play all the songs in a loop. In continuous singing mode, press [+/-] key to switch songs.

6. Volume

After pressing the Volume, you can use the [+] and [-] keys to increase/decrease the volume. The volume control has a total of 16 segments (1~16).

7. Rhythm vol

After pressing the [Rhythm vol], you can use the [+/-] keys to increase/decrease the rhythm volume. The rhythm control has a total of 17 sections (0~16). The Rhythm volume keys can also control the volume of demo songs, chords and drums.

8. Tempo

After pressing the [Tempo], you can use the [+/-] to increase/decrease the speed continuously. The speed control has a total of 270 segments (30~300).

9. Transpose

After pressing the [Transpose] button, you can use the [+/-] button to transpose. There are 25 segments (-12~12) for the transposition control, and the preset value is in the 13th segment after power-on. Hold [+/-] button for more than 1 second, can continuously increase/decrease the transposition. The chord pitch also changes with the transposition value.

10. Dual key

Press [Dual Key] button for the first time to activate the dual keyboard function, and press [Dual Key] button for the second time to cancel the dual keyboard function. When the dual keyboard function is activated, the scales of the left keys A1 ~ B4 will be played corresponding to the scales of A2 ~ B5, and the scales of the right keys C5 ~ C9 will be played corresponding to the scales of C4 ~ C8. You can use the [+] [-] keys to select the main tone to replace the tone of the right key.

11. Key drum

Press [Key Drum] button for the first time to activate the keyboard drum function, and press [Key Drum] button for the second time to cancel the keyboard drum function. When the keyboard drum function is activated, the corresponding drum sound will be played when you play the key.

12. Lesson

Press [Lesson] button for the first time to enter the single-key mode, and press [Lesson] button for the second time to exit the single-key mode.

After entering the one-touch mode, use the current song to teach,

After the song is played, if the user presses the keys at will, it is the main melody. If the main melody does not reach the next bar, the background sound will repeat the bar until the song is played and stop after the song ends.

Press [Lesson] button for the third time to enter the ensemble mode, and press [Lesson] button for the fourth time to exit the ensemble mode.

After entering the ensemble mode, the current song is used for teaching. After the song is played, the user can play the keys at will and interrupt the main string rhythm. If not pressed the key again after 5 seconds, the main string rhythm will automatically resume playback. The background sound is played completely, and the teaching is repeated until the end of the song. After the song is over the ensemble will play a song.

Press [Lesson] button the fifth time to enter the follow-up mode, and press [Lesson] the sixth time to exit the follow-up mode.

After entering the follow-up mode, the current song is used for teaching. After the song is played, the main melody is not played, and the user must follow the notes displayed on the digital tube. Press the corresponding key to continue to play the next note, and the background sound will repeat that measure until the song ends.

Press the corresponding key to continue to play the next note, and the background sound will repeat that measure until the song ends.

In the teaching mode, [+/-] button automatically enters the song selection mode, and exits the teaching mode to return to the tone selection mode.

Press [Tone] button while playing the music will temporarily switch to the tone selection mode, and return to the song selection mode in 3 seconds.

13. Start/stop

Press the [Start/Stop] button for the first time to start playing the rhythm, and press the [Start/Stop] button for the second time to stop playing the rhythm.

Exit this mode under the mode of teaching, recording, playback, metronome, demo music, etc.

14. -/+

There are [+] and [-] sequential selection, a total of 2 keys. Can be used to select the tone, rhythm, song, volume, accompaniment volume, speed, transpose quickly.

If the number pressed exceeds the maximum number of tone, rhythms or songs, the original value will be maintained.

15. Sync/Vel

Press [Sync/Vel] for the first time to enter the sync mode, and press the Sync for the second time to exit the sync mode. When entering the sync mode, stop playing the rhythm, and then press the first 34 keys to automatically play the selected rhythm (chord). For the chord synchronization part, please refer to the single fingering accompaniment or multi-fingering accompaniment instructions.

(The default value of power on is the key strength off. Long press this key for 5 seconds to control the key strength on/off.)

16. Chord

Press [Chord] button for the first time to enter the integrated chord mode, and press [Chord] button for the second time to exit the integrated chord mode. [Chord] button only works in rhythm and normal mode. When playing the rhythm, press [Chord] button and press the fingering within the range of the keys A1 ~ F4#, and then you can hear the corresponding chord accompaniment sound. If you don't press the fingering of the fingering, the single fingering will be played. Refers to the chord of the chord fingering.

When the rhythm is not playing, press [Chord] button and press the fingering within the range of keys A1 ~ F4#, and you will hear the corresponding chord sound. If you do not press the fingering of the fingering, the single fingering will be played. Refers to the chord tone. For the detailed fingering of the integrated fingering accompaniment, please refer to the single fingered chord table and the multi-finger chord table attached. The integrated fingering can be used with rhythm/chord/synchronization.

17. Record

Press the [Recording] button the first time to enter the recording mode, and the last record will be cleared; pressing the [recording] button for the second time will exit the recording mode. In the recording mode, the metronome will be played, and you can start recording by pressing any key. The maximum number of recordings is 700. When the recording is full, the next note cannot be recorded; during recording, you can press the [Play] button at any time to play the recorded notes or drum sounds.

18. Play/LED

Press [Play/LED] for the first time to play the recorded note or drum sound, and press the Play/LED for the second time to stop playing. Press the Play to exit the recording mode. If there is no recorded value before, press Play and no action will occur. (The default value for powering on is that the keyboard light is on. Press and hold this button for 5 seconds to control the keyboard LED on/off.)

19. Metronome

Press [Metronome] button, the action function is 1/4 beat ~ 7/4 beat + stop-+ beat. 4. The preset value of tempo is 120. There are 7 variations of the metronome sound, in sequence from 1/4 beat to 7/4 beat. When recording, press [Metronome] button to switch the metronome sound.

Bluetooth/MP3 mode

20. Press [⏮/⏭] shortly (within 1 second) to play or pause the song. In pause mode, press [⏮/⏭] to continue playing the song.

21. Press [⏮/VOL-] shortly (within 1 second) to select the previous song. Press the [⏮/VOL-] for more than 1 second to decrease the volume.

22. Press [⏭/VOL+] shortly (within 1 second) to select the next song. Press [⏭/VOL+] for more than 1 second to increase the volume.

Appendix 1 (Voice Comparison Table)

T001	Acoustic Grand Piano	T055	Synth Voice	T119	Synth Drum
T002	Bright Acoustic Piano	T056	Orchestra Hit	T120	Reverse Cymbal
T003	Electric Grand Piano	T057	Trumpet	T121	Guitar Fret Noise
T004	Honky-tonk Piano	T058	Trombone	T122	Breath Noise
T005	Rhodes Piano	T059	Tuba	T123	Seashore
T006	Chorused Piano	T060	Muted Trumpet	T124	Bird Tweet
T007	Harpsichord	T061	French Horn	T125	Telephone Ring
T008	Clavichord	T062	Brass Section	T126	Helicopter
T009	Celesta	T063	Synth Brass 1	T127	Applause
T010	Glockenspiel	T064	Synth Brass 2	T128	Gunshot
T011	Music box	T065	Soprano Sax	T129	Yong Gin
T012	Vibraphone	T066	Alto Sax	T130	Zheng
T013	Marimba	T067	Tenor Sax	T131	Zhong Ruan
T014	Xylophone	T068	Baritone Sax	T132	Pi Pa
T015	Tubular Bell	T069	Oboe	T133	Big Souna
T016	Dulcimer	T070	English Horn	T134	Souna
T017	Drawbar Organ	T071	Bassoon	T135	Er Hu
T018	Percussive Organ	T072	Clarinet	T136	Yue Hu
T019	Rock Organ	T073	Piccolo	T137	Di Zi
T020	Church Organ	T074	Flute	T138	Bong Di
T021	Reed Organ	T075	Recorder	T139	Koto 2
T022	Accordion	T076	Pan Flute	T140	Qu Di
T023	Harmonica	T077	Bottle Blow	T141	Jungle Bass
T024	Tango Accordion	T078	Shakuhachi	T142	Koto 3
T025	Acoustic Guitar (nylon)	T079	Whistle	T143	Marimba 2
T026	Acoustic Guitar (steel)	T080	Ocarina	T144	Tsugaru
T027	Electric Guitar (jazz)	T081	Lead 1 (square)	T145	Kawala
T028	Electric Guitar (clean)	T082	Lead 2 (sawtooth)	T146	Attack Clav.
T029	Electric Guitar (muted)	T083	Lead 3 (calliope lead)	T147	Crystal
T030	Overdriven Guitar	T084	Lead 4 (chiff lead)	T148	Bright String
T031	Distortion Guitar	T085	Lead 5 (charang)	T149	Clavi 2
T032	Guitar Harmonics	T086	Lead 6 (voice)	T150	Chorus Guitar.
T033	Acoustic Bass	T087	Lead 7 (fifths)	T151	Barafon
T034	Electric Bass(finger)	T088	Lead 8 (bass+lead)	T152	Jazz Organ
T035	Electric Bass (pick)	T089	Pad 1 (new age)	T153	Indian Flute
T036	Fretless Bass	T090	Pad 2 (warm)	T154	Mute Barafon
T037	Slap Bass 1	T091	Pad 3 (polysynth)	T155	Dual Horns
T038	Slap Bass 2	T092	Pad 4 (choir)	T156	Electric Giutar (Clean) 2
T039	Synth Bass 1	T093	Pad 5 (bowed)	T157	Clavi 3
T040	Synth Bass 2	T094	Pad 6 (metallic)	T158	Soft Sax
T041	Violin	T095	Pad 7 (halo)	T159	Electric Vipraphone
T042	Viola	T096	Pad 8 (sweep)	T160	Didgeridoo
T043	Cello	T097	FX 1 (rain)	T161	Barafon 2
T044	Contrabass	T098	FX 2 (soundtrack)	T162	Tubular Bells 2
T045	Tremolo Strings	T099	FX 3 (crystal)	T163	Soft Accord
T046	Pizzicato Strings	T100	FX 4 (atmosphere)	T164	Barafon 3
T047	Orchestral Harp	T101	FX 5 (brightness)	T165	Clavi 4
T048	Timpani	T102	FX 6 (goblins)	T166	Nay
T049	String Ensemble 1	T103	FX 7 (echoes)	T167	Oct Harp
T050	String Ensemble 2	T104	FX 8 (sci-fi)	T168	Attack Barafon
T051	Synth Strings 1	T105	Sitar	T169	Clavi 5
T052	Synth Strings 2	T106	Banjo	T170	Kalimba 2
T053	Choir Aahs	T107	Shamisen	T171	Tsugaru 2
T054	Voice Oohs	T108	Koto	T172	Shamisen 2
		T109	Kalimba	T173	Woodblock 2
		T110	Bagpipe	T174	Crystal 2
		T111	Fiddle	T175	Shamisen 3
		T112	Shanai	T176	Synth Harpsi.
		T113	Tinkle Bell	T177	Jazz Organ 2
		T114	Agogo	T178	Viola Attack
		T115	Steel Drums	T179	Viola Attack 2
		T116	Woodblock	T180	Hard Barsoon
		T117	Taiko Drum	T181	Mute Barafon 2
		T118	Melodic Tom	T182	Bodhran

T183	Kawala 2	T247	Tsugaru 4	T311	Attack Barafon 4
T184	Didgeridoo 2	T248	Tsugaru 5	T312	Hard Barsoon 3
T185	Soft Guitar	T249	Mute Barafon 4	T313	Dulcimer 4
T186	Suona 2	T250	Dual Horns 4	T314	Twin Bones 4
T187	Twin Bones	T251	Soft Sax 3	T315	Soft Sax 5
T188	Jazz Organ 3	T252	Bodhran 3	T316	Shamisen 5
T189	Woodblock 3	T253	Guitar Pinch 3	T317	Suona 4
T190	Soft Santur	T254	Crystal 3	T318	Bodhran 4
T191	Koto 4	T255	Grow Guitar 2	T319	Shamisen 6
T192	Castanets	T256	Jazz Organ 6	T320	Electric Vraphone 6
T193	Viola Attack 3	T257	Attack Barafon 2	T321	Tsugaru 7
T194	Woodblock 4	T258	Xylophone 4	T322	Oct Harp 3
T195	Bright String 2	T259	Soft Santur 3	T323	Kalimba 4
T196	Twin Bones 2	T260	Kawala 4	T324	Soft Clav. 2
T197	Tenor Sax 2	T261	Soft Guitar 5	T325	English Horn 4
T198	Wind Organ	T262	Nay 4	T326	Didgeridoo 6
T199	Tron Flute	T263	Synth Harpsi. 3	T327	Barafon 4
T200	Bodhran 2	T264	Wind Organ 3	T328	Indian Flute 7
T201	Tron Flute 2	T265	Shanai 2	T329	Organ Flute 2
T202	Jazz Organ 4	T266	Woodblock 6	T330	Soft Santur 4
T203	Soft Santur 2	T267	Electric Vraphone 4	T331	Mute Barafon 7
T204	Woodblock 5	T268	Kawala 5	T332	Nay 7
T205	Shamisen 4	T269	Grow Guitar 3	T333	Hard Vibe 5
T206	Indian Flute 2	T270	Grow Guitar 4	T334	Bari & Tenor 4
T207	Electric Vraphone 2	T271	Steel Bell	T335	Bag Pipe 4
T208	Soft Guitar 2	T272	Wind Organ 4	T336	Tenor Sax 3
T209	Mute Barafon 3	T273	Soft Accord 2	T337	Organ Flute 3
T210	Dual Horns 2	T274	Kalimba 3	T338	Dulcimer 5
T211	Xylophone 2	T275	Twin Bones 3	T339	Twin Bones 5
T212	Didgeridoo 3	T276	Church Bells 3	T340	Grow Guitar 5
T213	Wind Organ 2	T277	Koto 6	T341	Kalimba 5
T214	Church Bells 2	T278	Attack Barafon 3	T342	Oct Harp 4
T215	Tsugaru 3	T279	Mute Barafon 5	T343	Nay 8
T216	Nay 2	T280	Nay 5	T344	Dual Horns 5
T217	Guitar Pinch 2	T281	Jungle Bass 2	T345	Didgeridoo 7
T218	Grow Guitar	T282	Soft Accord 3	T346	English Horn 5
T219	Indian Flute 3	T283	Hard Vibe 3	T347	Kawala 6
T220	Synth Harpsi. 2	T284	Soft Clav.	T348	Marimba 5
T221	Soft Sax 2	T285	Bag Pipe 2	T349	Barafon 5
T222	Xylophone 3	T286	Oct Harp 2	T350	Soft Accord 5
T223	English Horn 2	T287	Woodblock 7	T351	Mute Barafon 8
T224	Soft Guitar 3	T288	Mute Barafon 6	T352	Dual Horns 6
T225	Castanets 2	T289	Guitar Pinch 4	T353	Church Bells 4
T226	Soft Guitar 4	T290	Dulcimer 3	T354	Wind Organ 5
T227	Hard Vibe 2	T291	Soft Sax 4	T355	Attack Clav. 5
T228	Reed Horn	T292	Electric Vraphone 5	T356	Jazz Organ 7
T229	Nay 3	T293	Tsugaru 6	T357	Reed Horn 3
T230	Bari & Tenor	T294	Reed Horn 2	T358	Tenor Sax 4
T231	Kawala 3	T295	Castanets 3	T359	Chorus Guitar. 2
T232	Indian Flute 4	T296	Tron Flute 3	T360	Didgeridoo 8
T233	Didgeridoo 4	T297	Attack Clav. 3	T361	Soft Santur 5
T234	Attack Clav. 2	T298	Bari & Tenor 3	T362	Clavi 6
T235	Marimba 3	T299	Indian Flute 6	T363	Kalimba 6
T236	Bari & Tenor 2	T300	Soft Guitar 6	T364	Didgeridoo 9
T237	Slow Violin	T301	Nay 6	T365	Wind Organ 6
T238	Organ Flute	T302	Didgeridoo 5	T366	Tron Flute 4
T239	Jazz Organ 5	T303	Marimba 4	T367	Soft Sax 6
T240	Electric Vraphone 3	T304	Attack Clav. 4	T368	Suona 5
T241	Dual Horns 3	T305	Jungle Bass 3	T369	Soft Guitar 7
T242	Indian Flute 5	T306	Hard Barsoon 2	T370	Hard Vibe 6
T243	English Horn 3	T307	Suona 3	T371	Jazz Organ 8
T244	Dulcimer 2	T308	Hard Vibe 4	T372	Grow Guitar 6
T245	Koto 5	T309	Bag Pipe 3	T373	Xylophone 5
T246	Tubular Bells 3	T310	Soft Accord 4	T374	Bag Pipe 5

T375	Bag Pipe 6	T439	Shanai 5	T503	Bag Pipe 11
T376	Clavi 7	T440	English Horn 10	T504	Hard Barsoon 7
T377	Hard Vibe 7	T441	Didgeridoo 11	T505	Mute Barafon 15
T378	Kawala 7	T442	Organ Flute 5	T506	Soft Sax 12
T379	Shanai 3	T443	Attack Barafon 6	T507	Attack Clav. 9
T380	Suona 6	T444	Jungle Bass 5	T508	Jazz Organ 12
T381	Jungle Bass 4	T445	Barafon 7	T509	Soft Guitar 9
T382	Grow Guitar 7	T446	Soft Santur 6	T510	Didgeridoo 13
T383	Bag Pipe 7	T447	Slow Violin 3	T511	Bright String 4
T384	Crystal 4	T448	Hard Barsoon 6	T512	Electric Giutar (Clean) 4
T385	Guitar Pinch 5	T449	Didgeridoo 12	T513	Tsugaru 9
T386	Woodblock 8	T450	Kalimba 8	T514	Nay 10
T387	Soft Sax 7	T451	Electric Giutar (Clean) 3	T515	Reed Horn 6
T388	Attack Barafon 5	T452	Dulcimer 8	T516	Didgeridoo 14
T389	Barafon 6	T453	Reed Horn 5	T517	Soft Clav. 5
T390	Organ Flute 4	T454	Bodhran 5	T518	Soft Sax 13
T391	Mute Barafon 9	T455	Soft Sax 9	T519	Reed Organ 3
T392	Shanai 4	T456	Mute Barafon 14	T520	Steel Bell 3
T393	Soft Clav. 3	T457	Guitar Pinch 7	T521	Clavi 10
T394	Oct Harp 5	T458	Wind Organ 7	T522	Wind Organ 8
T395	Tron Flute 5	T459	Guitar Pinch 8	T523	Synth Harpsi. 6
T396	Bright String 3	T460	Indian Flute 9	T524	Bari & Tenor 5
T397	Jazz Organ 9	T461	Bag Pipe 9	T525	Steel Bell 4
T398	Mute Barafon 10	T462	Crystal 6	T526	Soft Sax 14
T399	Slow Violin 2	T463	Twin Bones 6	T527	Castanets 8
T400	Soft Sax 8	T464	Crystal 7	T528	Didgeridoo 15
T401	English Horn 6	T465	Soft Guitar 8	T529	Soft Sax 15
T402	Reed Horn 4	T466	Guitar Pinch 9	T530	Mute Barafon 16
T403	Indian Flute 8	T467	Attack Clav. 6	T531	Soft Guitar 10
T404	Castanets 4	T468	Bodhran 6	T532	Soft Accord 8
T405	English Horn 7	T469	Suona 7	T533	Wind Organ 9
T406	Tron Flute 6	T470	Chorus Guitar. 3	T534	Didgeridoo 16
T407	English Horn 8	T471	Slow Violin 4	T535	Electric Giutar (Clean) 5
T408	Hard Barsoon 4	T472	Clavi 9	T536	English Horn 11
T409	Dulcimer 6	T473	Castanets 6	T537	Soft Sax 16
T410	Xylophone 6	T474	Slow Violin 5	T538	Soft Guitar 11
T411	Mute Barafon 11	T475	Jazz Organ 10	T539	Hard Barsoon 8
T412	Nay 9	T476	Jazz Organ 11	T540	Kalimba 9
T413	Mute Barafon 12	T477	Electric Vraphone 8	T541	Koto 8
T414	Dual Horns 7	T478	Bodhran 7	T542	Soft Clav. 6
T415	Kawala 8	T479	Steel Bell 2	T543	Xylophone 7
T416	Soft Clav. 4	T480	Synth Harpsi. 5	T544	Soft Clav. 7
T417	Hard Barsoon 5	T481	Marimba 6	T545	Church Bells 6
T418	Dulcimer 7	T482	Marimba 7	T546	Kawala 10
T419	Soft Accord 6	T483	Attack Barafon 7	T547	Didgeridoo 17
T420	Church Bells 5	T484	Castanets 7	T548	Kalimba 10
T421	Shamisen 7	T485	Hard Vibe 9	T549	Castanets 9
T422	Synth Harpsi. 4	T486	Tron Flute 7	T550	Didgeridoo 18
T423	Crystal 5	T487	Soft Accord 7	T551	Bodhran 8
T424	Kawala 9	T488	Shanai 6	T552	English Horn 12
T425	Dual Horns 8	T489	Woodblock 9	T553	Hard Vibe 10
T426	Clavi 8	T490	Soft Sax 10	T554	Bodhran 9
T427	Electric Vraphone 7	T491	Slow Violin 6	T555	Indian Flute 10
T428	Castanets 5	T492	Soft Sax 11	T556	Dulcimer 9
T429	Tenor Sax 5	T493	Chorus Guitar. 4	T557	Soft Clav. 8
T430	Tenor Sax 6	T494	Attack Clav. 7	T558	Viola Attack 5
T431	Didgeridoo 10	T495	Reed Organ 2	T559	Attack Harp
T432	Kalimba 7	T496	Viola Attack 4	T560	Mute Barafon 17
T433	English Horn 9	T497	Koto 7	T561	Tenor Sax 8
T434	Guitar Pinch 6	T498	Tsugaru 8	T562	Twin Bones 7
T435	Hard Vibe 8	T499	Bag Pipe 10	T563	Chorus Guitar. 6
T436	Mute Barafon 13	T500	Attack Clav. 8	T564	Shanai 7
T437	Tenor Sax 7	T501	Tron Flute 8	T565	Kalimba 11
T438	Bag Pipe 8	T502	Marimba 8	T566	Jungle Bass 6

T567	Attack Barafon 8	T631	Koto 11	T695	Viola Attack 9
T568	Soft Clav. 9	T632	Kalimba 12	T696	Hard Vibe 13
T569	Tubular Bells 4	T633	Suona 10	T697	Koto 13
T570	Reed Organ 4	T634	Oct Harp 6	T698	Tenor Sax 9
T571	Guitar Pinch 10	T635	Koto 12	T699	Kawala 15
T572	Bodhran 10	T636	Shanai 8	T700	Steel Bell 6
T573	Clavi 11	T637	Electric Guitar (Clean) 8	T701	Soft Accord 11
T574	Viola Attack 6	T638	Clavi 12	T702	Organ Flute 10
T575	Synth Harpsi. 7	T639	Attack Harp 3	T703	Organ Flute 11
T576	Jungle Bass 7	T640	Attack Clav. 10	T704	Bright String 9
T577	Koto 9	T641	Bright String 6	T705	Soft Santur 11
T578	Church Bells 7	T642	Organ Flute 7	T706	Hard Barsoon 10
T579	Soft Accord 9	T643	Electric Guitar (Clean) 9	T707	Wind Organ 14
T580	Tubular Bells 5	T644	Kawala 12	T708	Synth Harpsi. 11
T581	Bag Pipe 12	T645	Bodhran 11	T709	Soft Sax 19
T582	Grow Guitar 8	T646	Shanai 9	T710	Bright String 10
T583	Mute Barafon 18	T647	Suona 11	T711	Bright String 11
T584	Soft Accord 10	T648	Synth Harpsi. 10	T712	Jungle Bass 9
T585	Electric Guitar (Clean) 6	T649	Bari & Tenor 6	T713	Soft Accord 12
T586	Viola Attack 7	T650	Kawala 13	T714	Reed Horn 8
T587	Kawala 11	T651	Bari & Tenor 7	T715	Slow Violin 10
T588	Soft Santur 7	T652	Reed Horn 7	T716	Synth Harpsi. 12
T589	Bright String 5	T653	Shamisen 10	T717	Attack Harp 6
T590	Electric Guitar (Clean) 7	T654	Soft Clav. 11	T718	Soft Santur 12
T591	Attack Barafon 9	T655	Bari & Tenor 8	T719	Hard Barsoon 11
T592	Electric Viphraphone 9	T656	Soft Santur 9	T720	English Horn 15
T593	Steel Bell 5	T657	Attack Harp 4	T721	Crystal 8
T594	Mute Barafon 19	T658	Bright String 7	T722	Bari & Tenor 10
T595	Chorus Guitar. 7	T659	Guitar Pinch 11	T723	Koto 14
T596	Soft Clav. 10	T660	Wind Organ 11	T724	Didgeridoo 20
T597	Viola Attack 8	T661	Soft Guitar 12	T725	Tenor Sax 10
T598	Church Bells 8	T662	English Horn 14	T726	Bright String 12
T599	Soft Santur 8	T663	Kawala 14	T727	Hard Vibe 14
T600	Wind Organ 10	T664	Grow Guitar 11	T728	Dual Horns 10
T601	Indian Flute 11	T665	Attack Harp 5	T729	Kawala 16
T602	Tsugaru 10	T666	Bari & Tenor 9	T730	Kawala 17
T603	Dulcimer 10	T667	Organ Flute 8	T731	Bag Pipe 13
T604	Grow Guitar 9	T668	Woodblock 10	T732	Electric Guitar (Clean) 10
T605	Tubular Bells 6	T669	Hard Vibe 11	T733	Tron Flute 10
T606	Jungle Bass 8	T670	Mute Barafon 20	T734	Kawala 18
T607	Dulcimer 11	T671	Tubular Bells 7	T735	Tron Flute 11
T608	Organ Flute 6	T672	Suona 12	T736	Tubular Bells 8
T609	Nay 11	T673	Bright String 8	T737	Synth Harpsi. 13
T610	Attack Barafon 10	T674	Hard Vibe 12	T738	Soft Santur 13
T611	English Horn 13	T675	Slow Violin 8	T739	Tubular Bells 9
T612	Suona 8	T676	Shamisen 11	T740	Attack Barafon 11
T613	Reed Organ 5	T677	Tron Flute 9	T741	Attack Barafon 12
T614	Shamisen 8	T678	Attack Clav. 11	T742	Electric Viphraphone 10
T615	Koto 10	T679	Dual Horns 9	T743	Dual Horns 11
T616	Shamisen 9	T680	Wind Organ 12	T744	Shanai 10
T617	Church Bells 9	T681	Twin Bones 8	T745	Bright String 13
T618	Nay 12	T682	Reed Organ 6	T746	Crystal 9
T619	Hard Barsoon 9	T683	Organ Flute 9	T747	Clavi 13
T620	Slow Violin 7	T684	Slow Violin 9	T748	Soft Sax 20
T621	Soft Sax 17	T685	Dulcimer 12	T749	Tron Flute 12
T622	Grow Guitar 10	T686	Tsugaru 11	T750	Dulcimer 14
T623	Attack Harp 2	T687	Wind Organ 13	T751	Slow Violin 11
T624	Suona 9	T688	Soft Santur 10	T752	Tenor Sax 11
T625	Nay 13	T689	Suona 13	T753	Nay 15
T626	Synth Harpsi. 8	T690	Soft Guitar 13	T754	Soft Guitar 15
T627	Didgeridoo 19	T691	Xylophone 8	T755	Shanai 11
T628	Nay 14	T692	Dulcimer 13	T756	Hard Barsoon 12
T629	Synth Harpsi. 9	T693	Marimba 9	T757	Synth Harpsi. 14
T630	Soft Sax 18	T694	Soft Guitar 14	T758	Soft Sax 21

T759	Suona 14	T821	Attack Barafon 14	T883	Crystal 14
T760	Kalimba 13	T822	Electric Vraphone 13	T884	Barafon 9
T761	Suona 15	T823	Soft Guitar 18	T885	Reed Horn 12
T762	Slow Violin 12	T824	Xylophone 11	T886	Dual Horns 13
T763	Reed Organ 7	T825	Tenor Sax 12	T887	Chorus Guitar. 12
T764	Kawala 19	T826	Oct Harp 8	T888	Grow Guitar 13
T765	Reed Horn 9	T827	Shamisen 12	T889	Shanai 12
T766	Attack Harp 7	T828	Reed Horn 10	T890	Twin Bones 12
T767	Oct Harp 7	T829	Marimba 12	T891	Barafon 10
T768	Kalimba 14	T830	Reed Organ 11	T892	Jungle Bass 11
T769	Twin Bones 9	T831	Attack Clav. 13	T893	Marimba 13
T770	Attack Clav. 12	T832	Hard Barsoon 15	T894	Grow Guitar 14
T771	Bari & Tenor 11	T833	Dual Horns 12	T895	Viola Attack 12
T772	Attack Harp 8	T834	Soft Clav. 13	T896	Shamisen 15
T773	English Horn 16	T835	Church Bells 12	T897	Tsugaru 12
T774	Twin Bones 10	T836	Oct Harp 9	T898	Reed Horn 13
T775	Soft Clav. 12	T837	Oct Harp 10	T899	Shanai 13
T776	Tubular Bells 10	T838	Indian Flute 13	T900	Castanets 13
T777	Slow Violin 13	T839	Viola Attack 11	T901	Reed Organ 12
T778	Synth Harpsi. 15	T840	Clavi 14	T902	Twin Bones 13
T779	Guitar Pinch 12	T841	Koto 15	T903	Chorus Guitar. 13
T780	Church Bells 10	T842	Soft Guitar 19	T904	Tron Flute 13
T781	Castanets 10	T843	Castanets 12	T905	Koto 16
T782	Twin Bones 11	T844	Jazz Organ 14	T906	Oct Harp 12
T783	Indian Flute 12	T845	Bag Pipe 14	T907	Grow Guitar 15
T784	Woodblock 11	T846	Steel Bell 8	T908	Shanai 14
T785	Attack Harp 9	T847	Church Bells 13	T909	Electric Giutar (Clean) 12
T786	Crystal 10	T848	Guitar Pinch 13	T910	Castanets 14
T787	Mute Barafon 21	T849	Soft Clav. 14	T911	Reed Organ 13
T788	Synth Harpsi. 16	T850	Tubular Bells 12	T912	Electric Giutar (Clean) 13
T789	Reed Organ 8	T851	Grow Guitar 12	T913	Soft Accord 14
T790	Steel Bell 7	T852	Steel Bell 9	T914	Twin Bones 14
T791	Chorus Guitar. 8	T853	Chorus Guitar. 10	T915	Marimba 14
T792	Reed Organ 9	T854	Crystal 13	T916	Jungle Bass 12
T793	Marimba 10	T855	Reed Horn 11	T917	Electric Giutar (Clean) 14
T794	Electric Vraphone 11	T856	Steel Bell 10	T918	Barafon 11
T795	Soft Guitar 16	T857	Kawala 21	T919	Viola Attack 13
T796	Viola Attack 10	T858	Attack Harp 10	T920	Slow Violin 14
T797	Reed Organ 10	T859	Oct Harp 11	T921	Oct Harp 13
T798	Bari & Tenor 12	T860	Kalimba 15	T922	Dulcimer 15
T799	Soft Sax 22	T861	Tubular Bells 13	T923	Bari & Tenor 13
T800	Jazz Organ 13	T862	Electric Giutar (Clean) 11	T924	Bag Pipe 15
T801	Soft Guitar 17	T863	Jazz Organ 15	T925	Attack Clav. 14
T802	Xylophone 9	T864	Attack Barafon 15	T926	Kalimba 16
T803	Xylophone 10	T865	Soft Guitar 20	T927	Hard Vibe 15
T804	Church Bells 11	T866	Soft Accord 13	T928	Organ Flute 14
T805	Suona 16	T867	Synth Harpsi. 17	T929	Jungle Bass 13
T806	Crystal 11	T868	Bodhran 12	T930	Electric Vraphone 14
T807	Chorus Guitar. 9	T869	Woodblock 12	T931	Viola Attack 14
T808	Crystal 12	T870	Attack Harp 11	T932	Bodhran 13
T809	Hard Barsoon 13	T871	Organ Flute 12	T933	Tubular Bells 15
T810	Castanets 11	T872	Jazz Organ 16	T934	Indian Flute 14
T811	Kawala 20	T873	Didgeridoo 21	T935	Tenor Sax 13
T812	Nay 16	T874	Church Bells 14	T936	Guitar Pinch 14
T813	Tubular Bells 11	T875	Synth Harpsi. 18	T937	Steel Bell 11
T814	Hard Barsoon 14	T876	Chorus Guitar. 11	T938	Tsugaru 13
T815	Barafon 8	T877	Organ Flute 13	T939	Soft Santur 14
T816	Marimba 11	T878	Shamisen 13	T940	Bright String 14
T817	Soft Sax 23	T879	Jungle Bass 10	T941	Oct Harp 14
T818	Attack Barafon 13	T880	Shamisen 14	T942	Attack Harp 12
T819	Electric Vraphone 12	T881	Tubular Bells 14	T943	Church Bells 15
T820	Wind Organ 15	T882	English Horn 17	T944	Tenor Sax 14

T945	Dual Horns 14	T964	Bag Pipe 16	T983	Attack Harp 15
T946	Barafon 12	T965	Viola Attack 15	T984	Koto 17
T947	Steel Bell 12	T966	Steel Bell 14	T985	Reed Organ 15
T948	Marimba 15	T967	Crystal 15	T986	Attack Clav. 15
T949	Electric Vraphone 15	T968	Bright String 15	T987	Clavi 15
T950	Soft Accord 15	T969	Reed Horn 14	T988	Dual Horns 15
T951	Steel Bell 13	T970	Guitar Pinch 15	T989	Steel Bell 15
T952	Tenor Sax 15	T971	Oct Harp 15	T990	Slow Violin 15
T953	Electric Guita (Clean) 15	T972	Twin Bones 15	T991	Soft Santur 15
T954	Soft Clav. 15	T973	Chorus Guitar. 15	T992	Barafon 14
T955	Bari & Tenor 14	T974	Bari & Tenor 15	T993	Organ Flute 15
T956	Attack Harp 13	T975	Tenor Sax 16	T994	Castanets 15
T957	Chorus Guitar. 14	T976	Indian Flute 15	T995	Guitar Pinch 16
T958	Shanai 15	T977	Bodhran 15	T996	Tron Flute 15
T959	Reed Organ 14	T978	Shamisen 16	T997	Tsugaru 15
T960	Bodhran 14	T979	Attack Harp 14	T998	Reed Horn 15
T961	Jungle Bass 14	T980	Barafon 13	T999	Barafon 15
T962	Tsu aru 14	T981	Jungle Bass 15	T1000	Electric Guita (Clean) 16
T963	Shanai 16	T982	Tron Flute 14		

22.Appendix 2 (Rhythm comparison table)

R001	8Beat 1	R040	Pop 14	R079	Shuffle 1
R002	8Beat 2	R041	Pop Bolero	R080	Shuffle 2
R003	8Beat 3	R042	Pop BossaNova	R081	Boogie 1
R004	8Beat 4	R043	Pop Waltz	R082	Boogie 2
R005	8Beat 5	R044	Pop Dance	R083	Boogie 3
R006	8Beat 6	R045	Motown	R084	Twist
R007	8Beat 7	R046	British Pop 1	R085	Ballad 1
R008	8Beat 8	R047	British Pop 2	R086	Ballad 2
R009	8Beat 9	R048	British Pop 3	R087	Ballad 3
R010	8Beat 10	R049	Guitar Pop	R088	Ballad 4
R011	8Beat 11	R050	Slow Pop	R089	Ballad 5
R012	8Beat 12	R051	50's Pop	R090	Soul Ballad
R013	8Beat 13	R052	80's Pop	R091	6/8 Ballad
R014	8Beat 14	R053	Rock 1	R092	Acoustic Ballad
R015	8Beat 15	R054	Rock 2	R093	Colour Ballad
R016	8Beat 16	R055	Rock 3	R094	Guitar Ballad
R017	8Beat 17	R056	Rock 4	R095	Piano Ballad
R018	8Beat 18	R057	50's Rock	R096	Organ Ballad
R019	16Beat 1	R058	60's Rock 1	R097	Groove 1
R020	16Beat 2	R059	60's Rock 2	R098	Groove 2
R021	16Beat 3	R060	70's Rock	R099	Groove 3
R022	16Beat 4	R061	80's Rock	R100	Groove 4
R023	16Beat 5	R062	Big Rock	R101	Groove 5
R024	16Beat 6	R063	Power Rock	R102	Groove 6
R025	16Beat 7	R064	Dark Rock	R103	Groove 7
R026	16Beat 8	R065	Jazz Rock	R104	Groove 8
R027	Pop 1	R066	Soft Rock	R105	Groove 9
R028	Pop 2	R067	Pop Rock 1	R106	Piano 1
R029	Pop 3	R068	Pop Rock 2	R107	Piano 2
R030	Pop 4	R069	Funky Rock 1	R108	Piano 3
R031	Pop 5	R070	Funky Rock 2	R109	Piano 4
R032	Pop 6	R071	Ballad Rock	R110	Piano 5
R033	Pop 7	R072	Folk Rock	R111	Piano 6
R034	Pop 8	R073	Slow Rock 1	R112	Piano 7
R035	Pop 9	R074	Slow Rock 2	R113	Piano 8
R036	Pop 10	R075	Slow Rock 3	R114	Piano 9
R037	Pop 11	R076	Slow Rock 4	R115	Piano 10
R038	Pop 12	R077	Rock&Roll 1	R116	Unplugged 1
R039	Pop 13	R078	Rock&Roll 2	R117	Unplugged 2

R118	Unplugged 3	R182	March	R246	Tango4
R119	Unplugged 4	R183	Polka	R247	Tango5
R120	Unplugged 5	R184	Classical 1	R248	Rock &Roll
R121	Unplugged 6	R185	Classical 2	R249	Rock & Roll Shfl1
R122	Unplugged 7	R186	China Folk 1	R250	Oldies R & R
R123	Unplugged 8	R187	China Folk 2	R251	Detroit Pop1
R124	Dance 1	R188	China Opera 1	R252	Detroit Pop2
R125	Dance 2	R189	China Opera 2	R253	Worship Med
R126	Disco	R190	China Ballad	R254	Worship Fast
R127	House	R191	China Pop	R255	Piano Boogie
R128	Euro Beat	R192	Xin Jiang	R256	Lovely Shuffle
R129	Funky Dance	R193	Shan Bei	R257	60's Rock & Roll
R130	80's Dance	R194	Yun Nan	R258	Kool Funk
R131	Techno	R195	He Nan	R259	Blueberry Blues
R132	Fusion	R196	An Hui	R260	Shuffle Blues
R133	Blues 1	R197	Guang Dong	R261	Mambo 4
R134	Blues 2	R198	Xi Zang	R262	Mambo 5
R135	Blues 3	R199	Mongolian	R263	Pop Classics
R136	Funky 1	R200	Korean	R264	Live 8 Beat
R137	Funky 2	R201	J-Pop Hit	R265	Power Rock2
R138	Funky 3	R202	16 Beat Ballad2	R266	Acoustic Rock2
R139	Gospel	R203	70's Pop Ballad	R267	Cool 8 Beat
R140	Rap 1	R204	EP Ballad	R268	Uptempo 8Beat
R141	Rap 2	R205	Power Ballad	R269	90's Rock Ballad
R142	Soul 1	R206	Guitar Ballad2	R270	Chart Rock Shfl2
R143	Soul 2	R207	New R&B Ballad	R271	Brit Pop
R144	Soul 3	R208	Guitar Serenade	R272	Brazilian Samba
R145	Soul 4	R209	Organ Ballad2	R273	Brit Pop Swing
R146	Country 1	R210	Joropo	R274	60's 8 Beat
R147	Country 2	R211	Reggaeton	R275	Fast Bossa
R148	Country 3	R212	French Waltz	R276	60's Guitar Pop
R149	Country 4	R213	Merengue	R277	70's 8 Beat
R150	Country 5	R214	12-8 Ballad	R278	90's Guitar Pop
R151	Jazz 1	R215	Norteno	R279	Soft Rock2
R152	Jazz 2	R216	Jig	R280	Chart Guita rPop
R153	Jazz Waltz	R217	Hawaiian	R281	Gujiira
R154	Jazz Ballad	R218	Electronica	R282	Modern Pop Bld
R155	Lounge	R219	Funky House	R283	Soul
R156	Jive	R220	Club Beat	R284	Skiffle2
R157	Ragtime	R221	Retro Club	R285	6-8Soul
R158	Charlston	R222	Mod Chart Pop	R286	Soul Brothers
R159	Big Band	R223	MOR Swing	R287	Happy Reggae
R160	Swing	R224	Retro Pop	R288	Pop Latin
R161	Caribbean	R225	Rumba Flamenco	R289	6-8Slow Rock
R162	Reggae	R226	Trance Pop	R290	6-8 Modern
R163	Cha Cha	R227	Orch Big Band2	R291	6-8 Orchestral
R164	Rumba	R228	Big Band Fast2	R292	Schlager Shuffle
R165	Samba	R229	Midnight Swing	R293	Schlager Pop
R166	BossaNova	R230	German Rock	R294	Schlager Rumba
R167	Mambo	R231	Schlager Beat	R295	Euro Pop Organ
R168	Salsa	R232	Mellow Hip Hop	R296	70's French Hit
R169	Beguine	R233	Classic Hip Hop	R297	Italian Mazurka
R170	Cumbia	R234	New Hip Hop	R298	Bohemian Waltz
R171	Latin	R235	Duranguense	R299	Schlager Samba1
R172	Baroque	R236	Laff	R300	Schlager Samba2
R173	Bolero	R237	Ober Walzer	R301	Scand Slow Rock
R174	Holly Wood	R238	Bhangra	R302	Schlager 6-8
R175	Foxtrot	R239	Zouk	R303	Schlager Fox
R176	Paso Doble	R240	German March	R304	Highland Waltz
R177	Quick Step	R241	Enka	R305	Italian Polka
R178	Bachata	R242	Bolero Lento	R306	Grupera
R179	Boston	R243	Sherif fReggae	R307	Danzon
R180	Tango	R244	Beguine2	R308	Schlager Alp
R181	Waltz	R245	Latin Disco	R309	Saeidy

R310	Bhajan	R374	Scand Country1	R438	Hoedown
R311	Hip Hop Groove	R375	Scand Country2	R439	Country Shuffle
R312	Chart Pop1	R376	Scand Shuffle	R440	Waltz2
R313	Organ Groove	R377	Worship Slow	R441	Cha Cha2
R314	Chart Pop2	R378	Disco Teens	R442	Rumba2
R315	New R&B	R379	Scand Bugg	R443	Jive2
R316	Pop R&B	R380	Rock Cha Cha	R444	Pasodoble
R317	Chart R&B	R381	Organ Swing	R445	Samba1
R318	Modern Shuffle	R382	Secret Service	R446	Samba2
R319	Blues Rock	R383	Animation Bld	R447	Schlager Rock 1
R320	Dream Dance	R384	Christmas Waltz	R448	Schlager Rock 2
R321	US Chart Hit	R385	Movie Swing	R449	Foxtrot2
R322	Soul R&B	R386	Movie Ballad	R450	Viennese Waltz
R323	R&B Soul Ballad	R387	Bubblegum Pop	R451	Tango2
R324	Euro Hip Hop	R388	Rock & Roll Shfl2	R452	Tango3
R325	Trip Hop	R389	West Coast Pop	R453	German Waltz
R326	Ibiza 2004	R390	Classic 16 Beat	R454	Carnival
R327	Mod Big Band Shfl	R391	Jazz Pop	R455	Organ Samba
R328	Modern Big Band	R392	Kool Shuffle	R456	Reel
R329	Pop Gtr Ballad	R393	8 Beat Ballad2	R457	Gay Gordons
R330	Ibiza 2002	R394	Chillout	R458	Scand Waltz
R331	Euro Trance	R395	16 Beat Ballad1	R459	60's Rock Style
R332	6-8 Trance	R396	Epic Ballad	R460	Standard Rock
R333	Latin DJ's	R397	Easy Ballad	R461	Brit Rock Pop
R334	Bomba	R398	Cuban Son	R462	60's Vintage Rock
R335	Chillout Cafe	R399	Bachata2	R463	Chart Rock Shfl
R336	70's Glam Piano	R400	Forro	R464	60's Pop Rock
R337	French House	R401	70's Chart Ballad	R465	Rock Billy
R338	English Waltz	R402	Romantic Ballad	R466	Rock Boogie
R339	8 Beat Ballad1	R403	90's Cool Ballad	R467	Latin Cha Cha
R340	Club House	R404	Alp Ballad1	R468	Rock Classical
R341	House2	R405	Alp Ballad2	R469	Rock Shuffle
R342	Jazz Gtr Club	R406	E_Ballad	R470	Rock Pop
R343	Modern Jazz	R407	Unplugged 9	R471	Rock'n Roll 1
R344	Acoustic Jazz	R408	Pop Ballad	R472	Rock'n Roll 2
R345	Cool Jazz Ballad	R409	Pop New Age	R473	Straight Rock
R346	Modern Jazz Bld	R410	8 Beat Modern	R474	Jazz Rock2
R347	Easy Listening	R411	Country Ballad1	R475	Fast Gospel
R348	Bebop	R412	Love Song	R476	Folk Rock2
R349	Orch Big Band1	R413	Modern Country Pop	R477	Skiffle
R350	Big Band Fast1	R414	Electro Pop	R478	Funk Pop Rock
R351	Orchestra Swing1	R415	Acoustic Ballad 2	R479	Contemp Rock
R352	Orchestra Swing2	R416	Piano Ballad 1	R480	Acoustic Rock
R353	70's Ranking Country	R417	R&B Ballad	R481	50's Pop2
R354	Jazz Waltz Med	R418	Rock Ballad	R482	Cool Pop
R355	Mariachi Waltz	R419	Slow & Easy	R483	Groovy Pop
R356	US March	R420	Analog Ballad	R484	60's Vintage Pop
R357	Guitar Rumba	R421	Slow Rock 5	R485	80's Pop2
R358	Slow Blues	R422	Slow Rock 6	R486	Rap Pop
R359	Jazz Waltz Fast	R423	Slow Rock 7	R487	Pop Rock 3
R360	70's Country Pop	R424	Slow Soul	R488	60's Soul
R361	Dixieland	R425	8 Beat Adria	R489	70's Soul
R362	40's Big Band	R426	Classic Piano	R490	Funk
R363	Easy Country	R427	80's EP Ballad	R491	16 Beat Shuffle
R364	Country Hits	R428	80's Boy Band	R492	Twist2
R365	Country 8 Beat	R429	Country Ballad2	R493	British Pop 4
R366	Sci-fi March	R430	Country Two Step	R494	British Pop 5
R367	Tap Dance Swing	R431	Country 6	R495	Hard Rock1
R368	Orchestral Bolero	R432	Country 7	R496	Hard Rock2
R369	Gospel Sisters	R433	Finger Pickin	R497	Fusion2
R370	Italian Waltz	R434	Country Brothers	R498	Fusion3
R371	6-8 March	R435	New Country	R499	Funk Shuffl 1
R372	Bluegrass	R436	Brisk Country	R500	Funk Shuffl 2
R373	Mod Cntry Bld1	R437	70's Chart Cntry	R501	Fusion Shuffl 1

R502	Fusion Shuffl 2	R566	Carnival2	R632	Disco Funk2
R503	Club Pop1	R567	BossaNova2	R633	Disco Samba2
R504	Club Pop2	R568	Mambo 2	R634	New Hip Hop2
R505	16 Beat Pop1	R569	Mambo 3	R635	Cat Groove2
R506	16 Beat Pop2	R570	Bolero2	R636	Laff2
R507	8 Beat Pop1	R571	Cumbia3	R637	Pop Waltz3
R508	8 Beat Pop2	R572	Latin Rock	R638	Bhangra2
R509	8 Beat Soul1	R573	Disco Latin	R639	Twist3
R510	8 Beat Soul2	R574	Tijuana	R640	German March2
R511	8 Beat Rock1	R575	Reggae2	R641	Enka2
R512	8 Beat Rock2	R576	Salsa2	R642	Bolero Lento2
R513	Classic 8Beat	R577	Calypso	R643	Midnight Swing2
R514	Vintage Gtr Pop	R578	Guad Dance	R644	French Jazz2
R515	Schlager Italia	R579	Reggae 12Beat	R645	Latin Party Pop2
R516	70's Disco1	R580	Reggae 16Beat	R646	Tango6
R517	70's Disco2	R581	Swing Fox	R647	Tango7
R518	Funky Disco	R582	Slow Fox	R648	Parranda2
R519	Saturday Night	R583	Organ Cha Cha	R649	Latin Rock2
R520	Club Latin	R584	Organ Quick Step	R650	Acoustic Rock3
R521	Disco Chocolate	R585	Cat Groove	R651	80's Pop3
R522	Disco Fox	R586	Dixie Jazz	R652	60's Soul2
R523	Disco Funk	R587	Medium Jazz	R653	Fusion Shuffl3
R524	Disco Hands	R588	Jazz Big Band	R654	Fusion Shuffl4
R525	Disco Party	R589	Jazz Club	R655	16 Beat Pop3
R526	Disco Samba	R590	Ragtime2	R656	16 Beat Pop4
R527	UK Pop	R591	Big Band Shuffle 1	R657	60's Rock 3
R528	Club Dance	R592	Big Band Shuffle 2	R658	Brit Rock Pop2
R529	Modern R&B	R593	Big Band Shuffle 3	R659	Blueberry Blues2
R530	Hip Shuffle	R594	Fast Band 1	R660	Skiffle3
R531	Charleston	R595	Fast Band 2	R661	Mambo6
R532	Disco Pop	R596	Frankly Soul	R662	Mambo7
R533	Disco Soul	R597	Jazz Funk	R663	Club Pop3
R534	Disco Trot	R598	Classic Big Band	R664	Schlager Italia2
R535	Euro Beat2	R599	French Jazz	R665	Power Rock3
R536	Rap 3	R600	Jump Jive	R666	Rock'n Roll 3
R537	Rave	R601	Standard Rock2	R667	Cool8 Beat2
R538	Techno2	R602	16 Beat Ballad3	R668	British Pop6
R539	Techno3	R603	Contemp Rock2	R669	British Pop7
R540	70's Disco Funk	R604	EP Ballad2	R670	8 Beat Soul3
R541	Disco Philly	R605	Fusion4	R671	Brit Pop2
R542	Disco House	R606	Fusion5	R672	Disco Latin2
R543	80's Disco	R607	Funk2	R673	Brit Pop Swing2
R544	Schlager Polka	R608	Guitar Serenade2	R674	Fast Gospel2
R545	Polka Pop	R609	Organ Ballad3	R675	Fast Bossa2
R546	Blue Grass 1	R610	Joropo2	R676	60's Guitar Pop2
R547	Blue Grass 2	R611	Reggaeton2	R677	90's Soul
R548	Blue Grass 3	R612	French Waltz2	R678	Funk Shuffl 3
R549	Pop Waltz2	R613	Merengue2	R679	8 Beat Rock3
R550	USA March	R614	Pop Ballad2	R680	Rock Cha Cha2
R551	Hully Gully	R615	Norteno2	R681	Gujiira2
R552	Tarantella	R616	Jig2	R682	Rock Ballad2
R553	Limbo Rock	R617	Hawaiian2	R683	Soul 5
R554	Swing Waltz	R618	70's Disco3	R684	Classic 8Beat2
R555	Pub Piano	R619	70's Disco4	R685	Bolero3
R556	Jazz Waltz2	R620	Club Beat2	R686	Soul Brothers2
R557	Jazz Waltz3	R621	Rap 4	R687	Happy Reggae2
R558	Show Tune	R622	Disco House2	R688	Pop Latin2
R559	Polka2	R623	MOR Swing2	R689	6-8Slow Rock2
R560	Ober Polka	R624	Retro Pop2	R690	6-8 Modern2
R561	Party Polka	R625	Calypso2	R691	6-8 Orchestral2
R562	Pop Mambo	R626	Trance Pop2	R692	Slow Soul2
R563	Latin Party Pop	R627	Big Band Shuffle4	R693	Piano Ballad3
R564	Cumbia2	R628	Big Band Shuffle5	R694	Disco Trot2
R565	Parranda	R629	Big Band Shuffle6	R695	Disco Hands2
		R630	German Rock2	R696	British Pop8
		R631	Schlager Beat2		

R697	Italian Mazurka2	R763	Easy Country2	R830	Fast Band5
R698	Bohemian Waltz2	R764	Country Hits2	R831	Orchestra Swing5
R699	Samba3	R765	Country 8 Beat2	R832	Movie Ballad3
R700	Samba4	R766	Blue Grass4	R833	Rock & Roll Shfl4
R701	Jive3	R767	Blue Grass5	R834	Hard Rock5
R702	Foxtrot3	R768	Blue Grass6	R835	8 Beat Pop5
R703	Pasodoble2	R769	Gospel Sisters2	R836	8 Beat Pop6
R704	Highland Waltz2	R770	Italian Waltz2	R837	16 Beat Ballad5
R705	Schlager Polka2	R771	Limbo Rock2	R838	Straight Rock3
R706	Grupera2	R772	Bluegrass2	R839	Easy Ballad3
R707	Danzon2	R773	Country Brothers2	R840	Fofo3
R708	Schlager Alp2	R774	Scand Country3	R841	Fusion6
R709	Saeidy2	R775	Scand Country4	R842	Funk3
R710	Bhajan2	R776	Scand Shuffle2	R843	Viennese Waltz3
R711	Hip Hop Groove2	R777	70's Chart Cntry2	R844	Show Tune3
R712	Hip Shuffle2	R778	Pub Piano2	R845	Dixieland3
R713	Organ Groove2	R779	Polka3	R846	Big Band Shuffle7
R714	Chart Pop3	R780	Rock Cha Cha3	R847	Big Band Shuffle8
R715	Country Ballad3	R781	Schlager Rock3	R848	Big Band Shuffle9
R716	Romantic Ballad2	R782	Organ Samba2	R849	Pop Waltz4
R717	Analog Ballad2	R783	Gay Gordons2	R850	USA March3
R718	Electro Pop2	R784	Swing Waltz2	R851	Hully Gully3
R719	Blues Rock2	R785	Reel2	R852	Tarantella2
R720	Rave2	R786	Movie Ballad2	R853	Limbo Rock3
R721	US Chart Hit2	R787	Cool Pop2	R854	Swing Waltz3
R722	Alp Ballad3	R788	Rock & Roll Shfl3	R855	Pub Piano3
R723	8 Beat Modern2	R789	Hard Rock3	R856	Jazz Waltz 5
R724	Euro Hip Hop2	R790	Hard Rock4	R857	Jazz Waltz 6
R725	Disco Pop2	R791	Club Pop4	R858	Show Tune4
R726	Disco Philly2	R792	8 Beat Pop3	R859	Polka4
R727	Mod Big BandShfl2	R793	8 Beat Pop4	R860	Ober Polka3
R728	Modern Big Band2	R794	60's Rock 4	R861	Party Polka2
R729	8 Beat Adria2	R795	16 Beat Ballad4	R862	Waltz3
R730	Disco Chocolate2	R796	Straight Rock2	R863	Cha Cha3
R731	Euro Trance2	R797	Easy Ballad2	R864	Rumba4
R732	Euro Beat3	R798	Pop Mambo2	R865	Jive4
R733	Techno4	R799	BossaNova3	R866	Pasodoble3
R734	Reggae3	R800	Fofo2	R867	Samba5
R735	Chillout Cafe2	R801	Pop Classics2	R868	Samba6
R736	Love Song2	R802	Live 8 Beat2	R869	Schlager Rock5
R737	French House2	R803	Power Rock4	R870	Schlager Rock6
R738	Jazz Waltz4	R804	Acoustic Rock4	R871	Foxtrot4
R739	Classic Piano2	R805	Cool 8 Beat3	R872	Viennese Waltz4
R740	Disco Party2	R806	Uptempo 8Beat2	R873	Tango8
R741	Club Dance2	R807	90's Rock Ballad2	R874	Tango9
R742	Jazz Gtr Club2	R808	Chart Rock Shfl3	R875	Country Ballad5
R743	Modern Jazz2	R809	Brit Pop3	R876	Country Two Step2
R744	Polka Pop2	R810	Brazilian Samba2	R877	Country 8
R745	USA March2	R811	Brit Pop Swing3	R878	Country 9
R746	Ober Polka2	R812	60's 8 Beat2	R879	Finger Pickin3
R747	Easy Listening2	R813	Fast Bossa3	R880	Country Brothers3
R748	Fast Band3	R814	60's Guitar Pop3	R881	New Country2
R749	Fast Band4	R815	90's Soul2	R882	Easy Country3
R750	Big Band Fast3	R816	Gujiira3	R883	70's Chart Cntry3
R751	Orchestra Swing3	R817	Euro Hip Hop3	R884	Hoedown2
R752	Orchestra Swing4	R818	Disco Pop3	R885	Country Shuffle2
R753	Finger Pickin2	R819	Disco Philly3	R886	Schlager Polka3
R754	Hully Gully2	R820	Mod Big BandShfl3	R887	Polka Pop4
R755	Viennese Waltz2	R821	Modern Big Band3	R888	Blue Grass 7
R756	Show Tune2	R822	8 Beat Adria3	R889	Blue Grass 8
R757	Rumba3	R823	Disco Chocolate3	R890	Blue Grass 9
R758	Schlager Rock4	R824	Euro Trance3	R891	70's Disco Funk2
R759	Jazz Waltz Fast2	R825	Love Song3	R892	Disco Philly4
R760	Country Ballad4	R826	Disco Party3	R893	Disco House3
R761	Dixieland2	R827	Club Dance3	R894	80's Disco2
R762	French Jazz3	R828	Modern Jazz3	R895	Swing Fox2
		R829	Polka Pop3	R896	Slow Fox2

R897	Organ Cha Cha2	R931	90's Guitar Pop2	R965	House3
R898	Organ Quick Step2	R932	Soft Rock3	R966	Jazz Gtr Club3
R899	Cat Groove3	R933	Chart Guita rPop2	R967	Modern Jazz4
R900	Dixie Jazz2	R934	Guijira4	R968	Acoustic Jazz2
R901	Medium Jazz2	R935	Easy Listening3	R969	Cool Jazz Ballad2
R902	Jazz Big Band2	R936	Bebop2	R970	Modern Jazz Bld2
R903	Jazz Club2	R937	Orch Big Band3	R971	Modern Pop Bld2
R904	Ragtime3	R938	Big Band Fast4	R972	Soul R&B2
R905	Big Band Shuffle 10	R939	Orchestra Swing6	R973	R&B Soul Ballad2
R906	Big Band Shuffle 11	R940	Orchestra Swing7	R974	Euro Hip Hop4
R907	Big Band Shuffle 12	R941	Rock Cha Cha4	R975	Trip Hop2
R908	Fast Band 6	R942	Organ Swing2	R976	Ibiza 2002_2
R909	Fast Band 7	R943	Secret Service2	R977	Soft Rock4
R910	German Waltz2	R944	Animation Bld2	R978	Chart Guita rPop3
R911	Carnival3	R945	Christmas Waltz2	R979	Guijira5
R912	Organ Samba3	R946	Frankly Soul2	R980	Easy Listening4
R913	Reel3	R947	Jazz Funk2	R981	Bebop3
R914	Gay Gordons3	R948	Classic Big Band2	R982	Orch Big Band4
R915	Scand Waltz2	R949	French Jazz4	R983	Big Band Fast5
R916	Pop Classics3	R950	Jump Jive2	R984	Orchestra Swing8
R917	Live 8 Beat3	R951	Mod Big Band Shfl4	R985	Orchestra Swing9
R918	Power Rock5	R952	Modern Big Band4	R986	Rock Cha Cha5
R919	Acoustic Rock5	R953	Pop Gtr Ballad2	R987	Organ Swing3
R920	Cool 8 Beat4	R954	Ibiza 2002_2	R988	Secret Service3
R921	Uptempo 8Beat3	R955	Euro Trance4	R989	Animation Bld3
R922	90's Rock Ballad3	R956	6-8 Trance2	R990	Reggae4
R923	Chart Rock Shfl4	R957	Latin DJ's2	R991	Frankly Soul3
R924	Brit Pop4	R958	Bomba2	R992	Jazz Funk3
R925	Brazilian Samba3	R959	Chillout Cafe3	R993	Classic Big Band3
R926	Brit Pop Swing4	R960	70's Glam Piano2	R994	French Jazz5
R927	60's 8 Beat3	R961	French House3	R995	Jump Jive3
R928	Fast Bossa4	R962	English Waltz2	R996	Mod Big Band Shfl5
R929	60's Guitar Pop4	R963	8 Beat Ballad3	R997	Modern Big Band5
R930	70's 8 Beat2	R964	Club House2	R998-R1000	Big Band Shuffle 13-15

Appendix 3 (Demonstration Song Comparison Table)

S001	Chopin Fantasia Impromptu	S027	Schumann Frohlicher Landmann
S002	Chopin Nocturne	S028	Schumann Sicilienne
S003	Chopin Petit Chien	S029	Richard Ballade Pour Adeline
S004	Chopin Chanson De L'adieu	S030	Richard Ping Pong Sous Les Arbres
S005	Chopin Nocturne	S031	Richard A Comme Amour
S006	Chopin Black keys	S032	Richard Mariage D'amour
S007	Chopin - Valse op.64 no.2	S033	Mendelssohn Jagerlied op.19b-3
S008	Beethoven- Piano Sonate op. 13 "Pathetique" 2nd mov	S034	Mendelssohn Frühlingslied
S009	Beethoven For Elise	S035	Haydn Little Serenade
S010	Beethoven Mondschein Sonate	S036	Pachelbel Canon In D
S011	Beethoven Minuet In G	S037	Badarzewska Maiden's Prayer
S012	Beethoven Marcia Alla Turca	S038	Liszt Liebestraume
S013	Beethoven piano sonata op.49-2 1st mov	S039	Tchaikovsky- Danse des mirlitons
S014	Beethoven Ecossaise	S040	Oesten Dolly's Dreaming Awakening
S015	Mozart Twinkle Twinkle Little Star	S041	Dvorak Humoresque
S016	Mozart Turkish March	S042	Joplin The Entertainer
S017	Mozart Sonate	S043	Debussy La Fille aux Cheveux de Lin
S018	Mozart Menuett	S044	Debussy Aeabesque
S019	Bach Waltz In A Mino	S045	Dubessy Clair De lune
S020	Bach Menuett	S046	L-C.Daquin Le Coucou
S021	Bach The Well-Tempered Clavier	S047	Karl Bohm The Fountain
S022	Bach Bourree	S048	Burgmüller Pastorale
S023	Bach Invention	S049	Korsakov Bumblebee
S024	Schubert Military Marches	S050	Haydn-Sunrise
S025	Schubert Monents Musicaux	S051-S150	
S026	Schumann Traumerei		Czerny 599 No.001-Czerny 599 No.100

1 Battery



WARNING

- o proszę o opiekę wyłączony następujące uwagi
- o Do nie próbuj demontować lub spowodować zwarcie
- bateria o Do nie wystawiać lub spalić To W Ogień
- o Do nie mieszać nowy i stary bateria
- o Do nie mieszać różny typy z baterie
- o Do nie opłata ten bateria
- o Ten pozytywne i negatywny bieguny z ten bateria musi być prawidłowo zainstalowany
- o Proszę wyjmij baterię z urządzenia elektronicznego klawiatura
- Jeśli ty Do nie używać dla długi czas ,

2 Exception



WARNING

proszę wykonać następujące czynności kroki kiedy wyjątek dla wersji elektronicznej

klawiatura jak wściekły , na gorąco i Więc

NA . 1) . moc wyłączony

2) . ciągnąć ten adapter w dół z ten moc gniazdo NA ten ściana Kiedy Czy używając .

3) . kontakt twój lokalny kupiec W czas .

Jego normalna Do adapter dostawanie gorący Kiedy długi czas używając klimatyzacja adapter , nie wskazywać Awaria

Proszę wyłącz i zrestartuj klawiaturę elektroniczną, gdy funkcja czasami problem ,

3 Install the battery

- 1) . Wyjście ten śruba I usunąć ten bateria okładka
- 2) . umieścić ten bateria z prawidłowy pozytywny + i negatywny - kierunek do bateria szczelina z 6* AA " 1 .5V
- 3) . umieścić ten bateria okładka I Zamek ten śruby

Ten produkt zawiera elementy elektroniczne i powinien nie umożliwić płynny Do Wchodzić Lub Być używany W wilgoć środowiska .

Codziennie pyłoszczelny czyszczenie powinien Być zrobione Dobrze , I plamy powierzchniowe Móc Być wytarty z A miękki I czysty tkanina .

VEVOR[®]

TOUGH TOOLS, HALF PRICE

**Wsparcie techniczne i Certyfikat gwarancji
elektronicznej www.vevor.com/support**

VEVOR®

TOUGH TOOLS, HALF PRICE

Technische ondersteuning en E-Garantie

Certificaat www.vevor.com/support

PIANO GEBRUIKER HANDMATIG

MODEL: BD-881D

Wij blijven ons inzetten om u de tools te bieden die u nodig hebt tegen een competitieve prijs. "Redden Half", "Halve prijs" of andere soortgelijke uitdrukkingen die worden gebruikt door ons alleen vertegenwoordigen een schatting van de besparingen die u kunt behalen door bepaalde gereedschappen bij ons te kopen in vergelijking met de belangrijkste topmerken en doet niet noodzakelijkerwijs betekenissen bedekken alle categorieën van aangeboden hulpmiddelen door wij. Jij

Wij herinneren u eraan om uw auto zorgvuldig te controleren wanneer u een plaats bestelt met ons als je Zijn

feitelijk de helft besparen in vergelijking met de top belangrijke merken.

MODEL: BD-881D



(De afbeelding is alleen ter referentie, Alsjeblieft verwijzen naar de actueel voorwerp)

BEHOEFTE HULP? CONTACT ONS!

Hebben product vragen? Behoeftte technisch steun? Alsjeblieft gevoel vrij naar contact ons:

Technische ondersteuning en e-garantiecertificaat
www.vevor.com/support

Dit is het origineel instructie, lees alles alstublieft handmatig instructies voorzichtig voor gebruik. VEVOR behoudt zich een duidelijke interpretatie van onze gebruikershandleiding voor. Het uiterlijk van het product moet onderworpen zijn aan de product jij ontvangen. Vergeef me alsjeblieft ons dat we niet zullen u opnieuw informeren als er technologie of software is updates over onze product.



Accessoire

Type - C adapter *

1 stroom koord *

1

Muziekblad stellage * 1

Muziek laken klem *

1 Microfoon * 1

 
Oordopjes * 1

piano sticker * 1


piano tas * 1

Midi koord * 1

aanhouden fiets !* 1

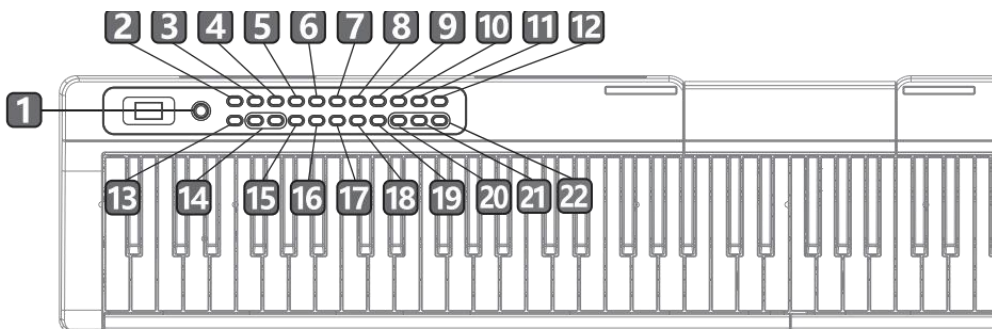

1 Power	6 Volume	11 Key drum	16 Chord	Bluetooth/MP3 mode
2 Tone	7 Rhythm vol	12 Lesson	17 Record	20 ►/⏮
3 Rhythm	8 Tempo	13 Start/stop	18 Play/LED	21 ◀/VOL-
4 Demo One	9 Transpose	14 +/-	19 Metronome	22 ▶/VOL+
5 Demo All	10 Dual key	15 Sync/Vel		

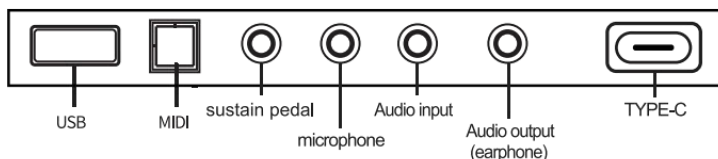 

1. Power

Turn on the [Power] button to play the keyboard and enter the performance state.

2. Tone

After pressing [Tone] button, you can use the [+/-] button to select the tone.

3. Rhythm

After pressing [Rhythm] button, you can use the [+/-] button to select the rhythm.

4. Demo One

Press the [Demo One] for the first time to enter the [Demo One] mode, and press the Demo One for the second time to exit the Demo One mode. After entering the Demo One mode, play the selected song from the next song. When the song finishes playing, the current song is played repeatedly. In the Demo One mode, press the [+/-] key to switch songs.

5. Demo All

Press the [Demo All] for the first time to enter the continuous singing mode, and press the Demo All for the second time to exit the continuous singing mode. After entering continuous singing mode, playback starts from the current song. When the song is finished, continue to play the next song and play all the songs in a loop. In continuous singing mode, press [+/-] key to switch songs.

6. Volume

After pressing the Volume, you can use the [+] and [-] keys to increase/decrease the volume. The volume control has a total of 16 segments (1~16).

7. Rhythm vol

After pressing the [Rhythm vol], you can use the [+/-] keys to increase/decrease the rhythm volume. The rhythm control has a total of 17 sections (0~16). The Rhythm volume keys can also control the volume of demo songs, chords and drums.

8. Tempo

After pressing the [Tempo], you can use the [+/-] to increase/decrease the speed continuously. The speed control has a total of 270 segments (30~300).

9. Transpose

After pressing the [Transpose] button, you can use the [+/-] button to transpose. There are 25 segments (-12~12) for the transposition control, and the preset value is in the 13th segment after power-on. Hold [+/-] button for more than 1 second, can continuously increase/decrease the transposition. The chord pitch also changes with the transposition value.

10. Dual key

Press [Dual Key] button for the first time to activate the dual keyboard function, and press [Dual Key] button for the second time to cancel the dual keyboard function. When the dual keyboard function is activated, the scales of the left keys A1 ~ B4 will be played corresponding to the scales of A2 ~ B5, and the scales of the right keys C5 ~ C9 will be played corresponding to the scales of C4 ~ C8. You can use the [+] [-] keys to select the main tone to replace the tone of the right key.

11. Key drum

Press [Key Drum] button for the first time to activate the keyboard drum function, and press [Key Drum] button for the second time to cancel the keyboard drum function. When the keyboard drum function is activated, the corresponding drum sound will be played when you play the key.

12. Lesson

Press [Lesson] button for the first time to enter the single-key mode, and press [Lesson] button for the second time to exit the single-key mode.

After entering the one-touch mode, use the current song to teach,

After the song is played, if the user presses the keys at will, it is the main melody. If the main melody does not reach the next bar, the background sound will repeat the bar until the song is played and stop after the song ends.

Press [Lesson] button for the third time to enter the ensemble mode, and press [Lesson] button for the fourth time to exit the ensemble mode.

After entering the ensemble mode, the current song is used for teaching. After the song is played, the user can play the keys at will and interrupt the main string rhythm. If not pressed the key again after 5 seconds, the main string rhythm will automatically resume playback. The background sound is played completely, and the teaching is repeated until the end of the song. After the song is over the ensemble will play a song.

Press [Lesson] button the fifth time to enter the follow-up mode, and press [Lesson] the sixth time to exit the follow-up mode.

After entering the follow-up mode, the current song is used for teaching. After the song is played, the main melody is not played, and the user must follow the notes displayed on the digital tube. Press the corresponding key to continue to play the next note, and the background sound will repeat that measure until the song ends.

Press the corresponding key to continue to play the next note, and the background sound will repeat that measure until the song ends.

In the teaching mode, [+/-] button automatically enters the song selection mode, and exits the teaching mode to return to the tone selection mode.

Press [Tone] button while playing the music will temporarily switch to the tone selection mode, and return to the song selection mode in 3 seconds.

13. Start/stop

Press the [Start/Stop] button for the first time to start playing the rhythm, and press the [Start/Stop] button for the second time to stop playing the rhythm.

Exit this mode under the mode of teaching, recording, playback, metronome, demo music, etc.

14. -/+

There are [+] and [-] sequential selection, a total of 2 keys. Can be used to select the tone, rhythm, song, volume, accompaniment volume, speed, transpose quickly.

If the number pressed exceeds the maximum number of tone, rhythms or songs, the original value will be maintained.

15. Sync/Vel

Press [Sync/Vel] for the first time to enter the sync mode, and press the Sync for the second time to exit the sync mode. When entering the sync mode, stop playing the rhythm, and then press the first 34 keys to automatically play the selected rhythm (chord). For the chord synchronization part, please refer to the single fingering accompaniment or multi-fingering accompaniment instructions.

(The default value of power on is the key strength off. Long press this key for 5 seconds to control the key strength on/off.)

16. Chord

Press [Chord] button for the first time to enter the integrated chord mode, and press [Chord] button for the second time to exit the integrated chord mode. [Chord] button only works in rhythm and normal mode. When playing the rhythm, press [Chord] button and press the fingering within the range of the keys A1 ~ F4#, and then you can hear the corresponding chord accompaniment sound. If you don't press the fingering of the fingering, the single fingering will be played. Refers to the chord of the chord fingering.

When the rhythm is not playing, press [Chord] button and press the fingering within the range of keys A1 ~ F4#, and you will hear the corresponding chord sound. If you do not press the fingering of the fingering, the single fingering will be played. Refers to the chord tone. For the detailed fingering of the integrated fingering accompaniment, please refer to the single fingered chord table and the multi-finger chord table attached. The integrated fingering can be used with rhythm/chord/synchronization.

17. Record

Press the [Recording] button the first time to enter the recording mode, and the last record will be cleared; pressing the [recording] button for the second time will exit the recording mode. In the recording mode, the metronome will be played, and you can start recording by pressing any key. The maximum number of recordings is 700. When the recording is full, the next note cannot be recorded; during recording, you can press the [Play] button at any time to play the recorded notes or drum sounds.

18. Play/LED

Press [Play/LED] for the first time to play the recorded note or drum sound, and press the Play/LED for the second time to stop playing. Press the Play to exit the recording mode. If there is no recorded value before, press Play and no action will occur. (The default value for powering on is that the keyboard light is on. Press and hold this button for 5 seconds to control the keyboard LED on/off.)

19. Metronome

Press [Metronome] button, the action function is 1/4 beat ~ 7/4 beat + stop-+ beat. 4. The preset value of tempo is 120. There are 7 variations of the metronome sound, in sequence from 1/4 beat to 7/4 beat. When recording, press [Metronome] button to switch the metronome sound.

Bluetooth/MP3 mode

20. Press [⏮/⏭] shortly (within 1 second) to play or pause the song. In pause mode, press [⏮/⏭] to continue playing the song.

21. Press [⏮/VOL-] shortly (within 1 second) to select the previous song. Press the [⏮/VOL-] for more than 1 second to decrease the volume.

22. Press [⏭/VOL+] shortly (within 1 second) to select the next song. Press [⏭/VOL+] for more than 1 second to increase the volume.

Appendix 1 (Voice Comparison Table)

T001	Acoustic Grand Piano	T055	Synth Voice	T119	Synth Drum
T002	Bright Acoustic Piano	T056	Orchestra Hit	T120	Reverse Cymbal
T003	Electric Grand Piano	T057	Trumpet	T121	Guitar Fret Noise
T004	Honky-tonk Piano	T058	Trombone	T122	Breath Noise
T005	Rhodes Piano	T059	Tuba	T123	Seashore
T006	Chorused Piano	T060	Muted Trumpet	T124	Bird Tweet
T007	Harpsichord	T061	French Horn	T125	Telephone Ring
T008	Clavichord	T062	Brass Section	T126	Helicopter
T009	Celesta	T063	Synth Brass 1	T127	Applause
T010	Glockenspiel	T064	Synth Brass 2	T128	Gunshot
T011	Music box	T065	Soprano Sax	T129	Yong Gin
T012	Vibraphone	T066	Alto Sax	T130	Zheng
T013	Marimba	T067	Tenor Sax	T131	Zhong Ruan
T014	Xylophone	T068	Baritone Sax	T132	Pi Pa
T015	Tubular Bell	T069	Oboe	T133	Big Souna
T016	Dulcimer	T070	English Horn	T134	Souna
T017	Drawbar Organ	T071	Bassoon	T135	Er Hu
T018	Percussive Organ	T072	Clarinet	T136	Yue Hu
T019	Rock Organ	T073	Piccolo	T137	Di Zi
T020	Church Organ	T074	Flute	T138	Bong Di
T021	Reed Organ	T075	Recorder	T139	Koto 2
T022	Accordion	T076	Pan Flute	T140	Qu Di
T023	Harmonica	T077	Bottle Blow	T141	Jungle Bass
T024	Tango Accordion	T078	Shakuhachi	T142	Koto 3
T025	Acoustic Guitar (nylon)	T079	Whistle	T143	Marimba 2
T026	Acoustic Guitar (steel)	T080	Ocarina	T144	Tsugaru
T027	Electric Guitar (jazz)	T081	Lead 1 (square)	T145	Kawala
T028	Electric Guitar (clean)	T082	Lead 2 (sawtooth)	T146	Attack Clav.
T029	Electric Guitar (muted)	T083	Lead 3 (calliope lead)	T147	Crystal
T030	Overdriven Guitar	T084	Lead 4 (chiff lead)	T148	Bright String
T031	Distortion Guitar	T085	Lead 5 (charang)	T149	Clavi 2
T032	Guitar Harmonics	T086	Lead 6 (voice)	T150	Chorus Guitar.
T033	Acoustic Bass	T087	Lead 7 (fifths)	T151	Barafon
T034	Electric Bass(finger)	T088	Lead 8 (bass+lead)	T152	Jazz Organ
T035	Electric Bass (pick)	T089	Pad 1 (new age)	T153	Indian Flute
T036	Fretless Bass	T090	Pad 2 (warm)	T154	Mute Barafon
T037	Slap Bass 1	T091	Pad 3 (polysynth)	T155	Dual Horns
T038	Slap Bass 2	T092	Pad 4 (choir)	T156	Electric Giutar (Clean) 2
T039	Synth Bass 1	T093	Pad 5 (bowed)	T157	Clavi 3
T040	Synth Bass 2	T094	Pad 6 (metallic)	T158	Soft Sax
T041	Violin	T095	Pad 7 (halo)	T159	Electric Vpraphone
T042	Viola	T096	Pad 8 (sweep)	T160	Didgeridoo
T043	Cello	T097	FX 1 (rain)	T161	Barafon 2
T044	Contrabass	T098	FX 2 (soundtrack)	T162	Tubular Bells 2
T045	Tremolo Strings	T099	FX 3 (crystal)	T163	Soft Accord
T046	Pizzicato Strings	T100	FX 4 (atmosphere)	T164	Barafon 3
T047	Orchestral Harp	T101	FX 5 (brightness)	T165	Clavi 4
T048	Timpani	T102	FX 6 (goblins)	T166	Nay
T049	String Ensemble 1	T103	FX 7 (echoes)	T167	Oct Harp
T050	String Ensemble 2	T104	FX 8 (sci-fi)	T168	Attack Barafon
T051	Synth Strings 1	T105	Sitar	T169	Clavi 5
T052	Synth Strings 2	T106	Banjo	T170	Kalimba 2
T053	Choir Aahs	T107	Shamisen	T171	Tsugaru 2
T054	Voice Oohs	T108	Koto	T172	Shamisen 2
		T109	Kalimba	T173	Woodblock 2
		T110	Bagpipe	T174	Crystal 2
		T111	Fiddle	T175	Shamisen 3
		T112	Shanai	T176	Synth Harpsi.
		T113	Tinkle Bell	T177	Jazz Organ 2
		T114	Agogo	T178	Viola Attack
		T115	Steel Drums	T179	Viola Attack 2
		T116	Woodblock	T180	Hard Barsoon
		T117	Taiko Drum	T181	Mute Barafon 2
		T118	Melodic Tom	T182	Bodhran

T183	Kawala 2	T247	Tsugaru 4	T311	Attack Barafon 4
T184	Didgeridoo 2	T248	Tsugaru 5	T312	Hard Barsoon 3
T185	Soft Guitar	T249	Mute Barafon 4	T313	Dulcimer 4
T186	Suona 2	T250	Dual Horns 4	T314	Twin Bones 4
T187	Twin Bones	T251	Soft Sax 3	T315	Soft Sax 5
T188	Jazz Organ 3	T252	Bodhran 3	T316	Shamisen 5
T189	Woodblock 3	T253	Guitar Pinch 3	T317	Suona 4
T190	Soft Santur	T254	Crystal 3	T318	Bodhran 4
T191	Koto 4	T255	Grow Guitar 2	T319	Shamisen 6
T192	Castanets	T256	Jazz Organ 6	T320	Electric Vraphone 6
T193	Viola Attack 3	T257	Attack Barafon 2	T321	Tsugaru 7
T194	Woodblock 4	T258	Xylophone 4	T322	Oct Harp 3
T195	Bright String 2	T259	Soft Santur 3	T323	Kalimba 4
T196	Twin Bones 2	T260	Kawala 4	T324	Soft Clav. 2
T197	Tenor Sax 2	T261	Soft Guitar 5	T325	English Horn 4
T198	Wind Organ	T262	Nay 4	T326	Didgeridoo 6
T199	Tron Flute	T263	Synth Harpsi. 3	T327	Barafon 4
T200	Bodhran 2	T264	Wind Organ 3	T328	Indian Flute 7
T201	Tron Flute 2	T265	Shanai 2	T329	Organ Flute 2
T202	Jazz Organ 4	T266	Woodblock 6	T330	Soft Santur 4
T203	Soft Santur 2	T267	Electric Vraphone 4	T331	Mute Barafon 7
T204	Woodblock 5	T268	Kawala 5	T332	Nay 7
T205	Shamisen 4	T269	Grow Guitar 3	T333	Hard Vibe 5
T206	Indian Flute 2	T270	Grow Guitar 4	T334	Bari & Tenor 4
T207	Electric Vraphone 2	T271	Steel Bell	T335	Bag Pipe 4
T208	Soft Guitar 2	T272	Wind Organ 4	T336	Tenor Sax 3
T209	Mute Barafon 3	T273	Soft Accord 2	T337	Organ Flute 3
T210	Dual Horns 2	T274	Kalimba 3	T338	Dulcimer 5
T211	Xylophone 2	T275	Twin Bones 3	T339	Twin Bones 5
T212	Didgeridoo 3	T276	Church Bells 3	T340	Grow Guitar 5
T213	Wind Organ 2	T277	Koto 6	T341	Kalimba 5
T214	Church Bells 2	T278	Attack Barafon 3	T342	Oct Harp 4
T215	Tsugaru 3	T279	Mute Barafon 5	T343	Nay 8
T216	Nay 2	T280	Nay 5	T344	Dual Horns 5
T217	Guitar Pinch 2	T281	Jungle Bass 2	T345	Didgeridoo 7
T218	Grow Guitar	T282	Soft Accord 3	T346	English Horn 5
T219	Indian Flute 3	T283	Hard Vibe 3	T347	Kawala 6
T220	Synth Harpsi. 2	T284	Soft Clav.	T348	Marimba 5
T221	Soft Sax 2	T285	Bag Pipe 2	T349	Barafon 5
T222	Xylophone 3	T286	Oct Harp 2	T350	Soft Accord 5
T223	English Horn 2	T287	Woodblock 7	T351	Mute Barafon 8
T224	Soft Guitar 3	T288	Mute Barafon 6	T352	Dual Horns 6
T225	Castanets 2	T289	Guitar Pinch 4	T353	Church Bells 4
T226	Soft Guitar 4	T290	Dulcimer 3	T354	Wind Organ 5
T227	Hard Vibe 2	T291	Soft Sax 4	T355	Attack Clav. 5
T228	Reed Horn	T292	Electric Vraphone 5	T356	Jazz Organ 7
T229	Nay 3	T293	Tsugaru 6	T357	Reed Horn 3
T230	Bari & Tenor	T294	Reed Horn 2	T358	Tenor Sax 4
T231	Kawala 3	T295	Castanets 3	T359	Chorus Guitar. 2
T232	Indian Flute 4	T296	Tron Flute 3	T360	Didgeridoo 8
T233	Didgeridoo 4	T297	Attack Clav. 3	T361	Soft Santur 5
T234	Attack Clav. 2	T298	Bari & Tenor 3	T362	Clavi 6
T235	Marimba 3	T299	Indian Flute 6	T363	Kalimba 6
T236	Bari & Tenor 2	T300	Soft Guitar 6	T364	Didgeridoo 9
T237	Slow Violin	T301	Nay 6	T365	Wind Organ 6
T238	Organ Flute	T302	Didgeridoo 5	T366	Tron Flute 4
T239	Jazz Organ 5	T303	Marimba 4	T367	Soft Sax 6
T240	Electric Vraphone 3	T304	Attack Clav. 4	T368	Suona 5
T241	Dual Horns 3	T305	Jungle Bass 3	T369	Soft Guitar 7
T242	Indian Flute 5	T306	Hard Barsoon 2	T370	Hard Vibe 6
T243	English Horn 3	T307	Suona 3	T371	Jazz Organ 8
T244	Dulcimer 2	T308	Hard Vibe 4	T372	Grow Guitar 6
T245	Koto 5	T309	Bag Pipe 3	T373	Xylophone 5
T246	Tubular Bells 3	T310	Soft Accord 4	T374	Bag Pipe 5

T375	Bag Pipe 6	T439	Shanai 5	T503	Bag Pipe 11
T376	Clavi 7	T440	English Horn 10	T504	Hard Barsoon 7
T377	Hard Vibe 7	T441	Didgeridoo 11	T505	Mute Barafon 15
T378	Kawala 7	T442	Organ Flute 5	T506	Soft Sax 12
T379	Shanai 3	T443	Attack Barafon 6	T507	Attack Clav. 9
T380	Suona 6	T444	Jungle Bass 5	T508	Jazz Organ 12
T381	Jungle Bass 4	T445	Barafon 7	T509	Soft Guitar 9
T382	Grow Guitar 7	T446	Soft Santur 6	T510	Didgeridoo 13
T383	Bag Pipe 7	T447	Slow Violin 3	T511	Bright String 4
T384	Crystal 4	T448	Hard Barsoon 6	T512	Electric Giutar (Clean) 4
T385	Guitar Pinch 5	T449	Didgeridoo 12	T513	Tsugaru 9
T386	Woodblock 8	T450	Kalimba 8	T514	Nay 10
T387	Soft Sax 7	T451	Electric Giutar (Clean) 3	T515	Reed Horn 6
T388	Attack Barafon 5	T452	Dulcimer 8	T516	Didgeridoo 14
T389	Barafon 6	T453	Reed Horn 5	T517	Soft Clav. 5
T390	Organ Flute 4	T454	Bodhran 5	T518	Soft Sax 13
T391	Mute Barafon 9	T455	Soft Sax 9	T519	Reed Organ 3
T392	Shanai 4	T456	Mute Barafon 14	T520	Steel Bell 3
T393	Soft Clav. 3	T457	Guitar Pinch 7	T521	Clavi 10
T394	Oct Harp 5	T458	Wind Organ 7	T522	Wind Organ 8
T395	Tron Flute 5	T459	Guitar Pinch 8	T523	Synth Harpsi. 6
T396	Bright String 3	T460	Indian Flute 9	T524	Bari & Tenor 5
T397	Jazz Organ 9	T461	Bag Pipe 9	T525	Steel Bell 4
T398	Mute Barafon 10	T462	Crystal 6	T526	Soft Sax 14
T399	Slow Violin 2	T463	Twin Bones 6	T527	Castanets 8
T400	Soft Sax 8	T464	Crystal 7	T528	Didgeridoo 15
T401	English Horn 6	T465	Soft Guitar 8	T529	Soft Sax 15
T402	Reed Horn 4	T466	Guitar Pinch 9	T530	Mute Barafon 16
T403	Indian Flute 8	T467	Attack Clav. 6	T531	Soft Guitar 10
T404	Castanets 4	T468	Bodhran 6	T532	Soft Accord 8
T405	English Horn 7	T469	Suona 7	T533	Wind Organ 9
T406	Tron Flute 6	T470	Chorus Guitar. 3	T534	Didgeridoo 16
T407	English Horn 8	T471	Slow Violin 4	T535	Electric Giutar (Clean) 5
T408	Hard Barsoon 4	T472	Clavi 9	T536	English Horn 11
T409	Dulcimer 6	T473	Castanets 6	T537	Soft Sax 16
T410	Xylophone 6	T474	Slow Violin 5	T538	Soft Guitar 11
T411	Mute Barafon 11	T475	Jazz Organ 10	T539	Hard Barsoon 8
T412	Nay 9	T476	Jazz Organ 11	T540	Kalimba 9
T413	Mute Barafon 12	T477	Electric Vraphone 8	T541	Koto 8
T414	Dual Horns 7	T478	Bodhran 7	T542	Soft Clav. 6
T415	Kawala 8	T479	Steel Bell 2	T543	Xylophone 7
T416	Soft Clav. 4	T480	Synth Harpsi. 5	T544	Soft Clav. 7
T417	Hard Barsoon 5	T481	Marimba 6	T545	Church Bells 6
T418	Dulcimer 7	T482	Marimba 7	T546	Kawala 10
T419	Soft Accord 6	T483	Attack Barafon 7	T547	Didgeridoo 17
T420	Church Bells 5	T484	Castanets 7	T548	Kalimba 10
T421	Shamisen 7	T485	Hard Vibe 9	T549	Castanets 9
T422	Synth Harpsi. 4	T486	Tron Flute 7	T550	Didgeridoo 18
T423	Crystal 5	T487	Soft Accord 7	T551	Bodhran 8
T424	Kawala 9	T488	Shanai 6	T552	English Horn 12
T425	Dual Horns 8	T489	Woodblock 9	T553	Hard Vibe 10
T426	Clavi 8	T490	Soft Sax 10	T554	Bodhran 9
T427	Electric Vraphone 7	T491	Slow Violin 6	T555	Indian Flute 10
T428	Castanets 5	T492	Soft Sax 11	T556	Dulcimer 9
T429	Tenor Sax 5	T493	Chorus Guitar. 4	T557	Soft Clav. 8
T430	Tenor Sax 6	T494	Attack Clav. 7	T558	Viola Attack 5
T431	Didgeridoo 10	T495	Reed Organ 2	T559	Attack Harp
T432	Kalimba 7	T496	Viola Attack 4	T560	Mute Barafon 17
T433	English Horn 9	T497	Koto 7	T561	Tenor Sax 8
T434	Guitar Pinch 6	T498	Tsugaru 8	T562	Twin Bones 7
T435	Hard Vibe 8	T499	Bag Pipe 10	T563	Chorus Guitar. 6
T436	Mute Barafon 13	T500	Attack Clav. 8	T564	Shanai 7
T437	Tenor Sax 7	T501	Tron Flute 8	T565	Kalimba 11
T438	Bag Pipe 8	T502	Marimba 8	T566	Jungle Bass 6

T567	Attack Barafon 8	T631	Koto 11	T695	Viola Attack 9
T568	Soft Clav. 9	T632	Kalimba 12	T696	Hard Vibe 13
T569	Tubular Bells 4	T633	Suona 10	T697	Koto 13
T570	Reed Organ 4	T634	Oct Harp 6	T698	Tenor Sax 9
T571	Guitar Pinch 10	T635	Koto 12	T699	Kawala 15
T572	Bodhran 10	T636	Shanai 8	T700	Steel Bell 6
T573	Clavi 11	T637	Electric Guitar (Clean) 8	T701	Soft Accord 11
T574	Viola Attack 6	T638	Clavi 12	T702	Organ Flute 10
T575	Synth Harpsi. 7	T639	Attack Harp 3	T703	Organ Flute 11
T576	Jungle Bass 7	T640	Attack Clav. 10	T704	Bright String 9
T577	Koto 9	T641	Bright String 6	T705	Soft Santur 11
T578	Church Bells 7	T642	Organ Flute 7	T706	Hard Barsoon 10
T579	Soft Accord 9	T643	Electric Guitar (Clean) 9	T707	Wind Organ 14
T580	Tubular Bells 5	T644	Kawala 12	T708	Synth Harpsi. 11
T581	Bag Pipe 12	T645	Bodhran 11	T709	Soft Sax 19
T582	Grow Guitar 8	T646	Shanai 9	T710	Bright String 10
T583	Mute Barafon 18	T647	Suona 11	T711	Bright String 11
T584	Soft Accord 10	T648	Synth Harpsi. 10	T712	Jungle Bass 9
T585	Electric Guitar (Clean) 6	T649	Bari & Tenor 6	T713	Soft Accord 12
T586	Viola Attack 7	T650	Kawala 13	T714	Reed Horn 8
T587	Kawala 11	T651	Bari & Tenor 7	T715	Slow Violin 10
T588	Soft Santur 7	T652	Reed Horn 7	T716	Synth Harpsi. 12
T589	Bright String 5	T653	Shamisen 10	T717	Attack Harp 6
T590	Electric Guitar (Clean) 7	T654	Soft Clav. 11	T718	Soft Santur 12
T591	Attack Barafon 9	T655	Bari & Tenor 8	T719	Hard Barsoon 11
T592	Electric Viphraphone 9	T656	Soft Santur 9	T720	English Horn 15
T593	Steel Bell 5	T657	Attack Harp 4	T721	Crystal 8
T594	Mute Barafon 19	T658	Bright String 7	T722	Bari & Tenor 10
T595	Chorus Guitar. 7	T659	Guitar Pinch 11	T723	Koto 14
T596	Soft Clav. 10	T660	Wind Organ 11	T724	Didgeridoo 20
T597	Viola Attack 8	T661	Soft Guitar 12	T725	Tenor Sax 10
T598	Church Bells 8	T662	English Horn 14	T726	Bright String 12
T599	Soft Santur 8	T663	Kawala 14	T727	Hard Vibe 14
T600	Wind Organ 10	T664	Grow Guitar 11	T728	Dual Horns 10
T601	Indian Flute 11	T665	Attack Harp 5	T729	Kawala 16
T602	Tsugaru 10	T666	Bari & Tenor 9	T730	Kawala 17
T603	Dulcimer 10	T667	Organ Flute 8	T731	Bag Pipe 13
T604	Grow Guitar 9	T668	Woodblock 10	T732	Electric Guitar (Clean) 10
T605	Tubular Bells 6	T669	Hard Vibe 11	T733	Tron Flute 10
T606	Jungle Bass 8	T670	Mute Barafon 20	T734	Kawala 18
T607	Dulcimer 11	T671	Tubular Bells 7	T735	Tron Flute 11
T608	Organ Flute 6	T672	Suona 12	T736	Tubular Bells 8
T609	Nay 11	T673	Bright String 8	T737	Synth Harpsi. 13
T610	Attack Barafon 10	T674	Hard Vibe 12	T738	Soft Santur 13
T611	English Horn 13	T675	Slow Violin 8	T739	Tubular Bells 9
T612	Suona 8	T676	Shamisen 11	T740	Attack Barafon 11
T613	Reed Organ 5	T677	Tron Flute 9	T741	Attack Barafon 12
T614	Shamisen 8	T678	Attack Clav. 11	T742	Electric Viphraphone 10
T615	Koto 10	T679	Dual Horns 9	T743	Dual Horns 11
T616	Shamisen 9	T680	Wind Organ 12	T744	Shanai 10
T617	Church Bells 9	T681	Twin Bones 8	T745	Bright String 13
T618	Nay 12	T682	Reed Organ 6	T746	Crystal 9
T619	Hard Barsoon 9	T683	Organ Flute 9	T747	Clavi 13
T620	Slow Violin 7	T684	Slow Violin 9	T748	Soft Sax 20
T621	Soft Sax 17	T685	Dulcimer 12	T749	Tron Flute 12
T622	Grow Guitar 10	T686	Tsugaru 11	T750	Dulcimer 14
T623	Attack Harp 2	T687	Wind Organ 13	T751	Slow Violin 11
T624	Suona 9	T688	Soft Santur 10	T752	Tenor Sax 11
T625	Nay 13	T689	Suona 13	T753	Nay 15
T626	Synth Harpsi. 8	T690	Soft Guitar 13	T754	Soft Guitar 15
T627	Didgeridoo 19	T691	Xylophone 8	T755	Shanai 11
T628	Nay 14	T692	Dulcimer 13	T756	Hard Barsoon 12
T629	Synth Harpsi. 9	T693	Marimba 9	T757	Synth Harpsi. 14
T630	Soft Sax 18	T694	Soft Guitar 14	T758	Soft Sax 21

T759	Suona 14	T821	Attack Barafon 14	T883	Crystal 14
T760	Kalimba 13	T822	Electric Viaphone 13	T884	Barafon 9
T761	Suona 15	T823	Soft Guitar 18	T885	Reed Horn 12
T762	Slow Violin 12	T824	Xylophone 11	T886	Dual Horns 13
T763	Reed Organ 7	T825	Tenor Sax 12	T887	Chorus Guitar. 12
T764	Kawala 19	T826	Oct Harp 8	T888	Grow Guitar 13
T765	Reed Horn 9	T827	Shamisen 12	T889	Shanai 12
T766	Attack Harp 7	T828	Reed Horn 10	T890	Twin Bones 12
T767	Oct Harp 7	T829	Marimba 12	T891	Barafon 10
T768	Kalimba 14	T830	Reed Organ 11	T892	Jungle Bass 11
T769	Twin Bones 9	T831	Attack Clav. 13	T893	Marimba 13
T770	Attack Clav. 12	T832	Hard Barsoon 15	T894	Grow Guitar 14
T771	Bari & Tenor 11	T833	Dual Horns 12	T895	Viola Attack 12
T772	Attack Harp 8	T834	Soft Clav. 13	T896	Shamisen 15
T773	English Horn 16	T835	Church Bells 12	T897	Tsugaru 12
T774	Twin Bones 10	T836	Oct Harp 9	T898	Reed Horn 13
T775	Soft Clav. 12	T837	Oct Harp 10	T899	Shanai 13
T776	Tubular Bells 10	T838	Indian Flute 13	T900	Castanets 13
T777	Slow Violin 13	T839	Viola Attack 11	T901	Reed Organ 12
T778	Synth Harpsi. 15	T840	Clavi 14	T902	Twin Bones 13
T779	Guitar Pinch 12	T841	Koto 15	T903	Chorus Guitar. 13
T780	Church Bells 10	T842	Soft Guitar 19	T904	Tron Flute 13
T781	Castanets 10	T843	Castanets 12	T905	Koto 16
T782	Twin Bones 11	T844	Jazz Organ 14	T906	Oct Harp 12
T783	Indian Flute 12	T845	Bag Pipe 14	T907	Grow Guitar 15
T784	Woodblock 11	T846	Steel Bell 8	T908	Shanai 14
T785	Attack Harp 9	T847	Church Bells 13	T909	Electric Giutar (Clean) 12
T786	Crystal 10	T848	Guitar Pinch 13	T910	Castanets 14
T787	Mute Barafon 21	T849	Soft Clav. 14	T911	Reed Organ 13
T788	Synth Harpsi. 16	T850	Tubular Bells 12	T912	Electric Giutar (Clean) 13
T789	Reed Organ 8	T851	Grow Guitar 12	T913	Soft Accord 14
T790	Steel Bell 7	T852	Steel Bell 9	T914	Twin Bones 14
T791	Chorus Guitar. 8	T853	Chorus Guitar. 10	T915	Marimba 14
T792	Reed Organ 9	T854	Crystal 13	T916	Jungle Bass 12
T793	Marimba 10	T855	Reed Horn 11	T917	Electric Giutar (Clean) 14
T794	Electric Viaphone 11	T856	Steel Bell 10	T918	Barafon 11
T795	Soft Guitar 16	T857	Kawala 21	T919	Viola Attack 13
T796	Viola Attack 10	T858	Attack Harp 10	T920	Slow Violin 14
T797	Reed Organ 10	T859	Oct Harp 11	T921	Oct Harp 13
T798	Bari & Tenor 12	T860	Kalimba 15	T922	Dulcimer 15
T799	Soft Sax 22	T861	Tubular Bells 13	T923	Bari & Tenor 13
T800	Jazz Organ 13	T862	Electric Giutar (Clean) 11	T924	Bag Pipe 15
T801	Soft Guitar 17	T863	Jazz Organ 15	T925	Attack Clav. 14
T802	Xylophone 9	T864	Attack Barafon 15	T926	Kalimba 16
T803	Xylophone 10	T865	Soft Guitar 20	T927	Hard Vibe 15
T804	Church Bells 11	T866	Soft Accord 13	T928	Organ Flute 14
T805	Suona 16	T867	Synth Harpsi. 17	T929	Jungle Bass 13
T806	Crystal 11	T868	Bodhran 12	T930	Electric Viaphone 14
T807	Chorus Guitar. 9	T869	Woodblock 12	T931	Viola Attack 14
T808	Crystal 12	T870	Attack Harp 11	T932	Bodhran 13
T809	Hard Barsoon 13	T871	Organ Flute 12	T933	Tubular Bells 15
T810	Castanets 11	T872	Jazz Organ 16	T934	Indian Flute 14
T811	Kawala 20	T873	Didgeridoo 21	T935	Tenor Sax 13
T812	Nay 16	T874	Church Bells 14	T936	Guitar Pinch 14
T813	Tubular Bells 11	T875	Synth Harpsi. 18	T937	Steel Bell 11
T814	Hard Barsoon 14	T876	Chorus Guitar. 11	T938	Tsugaru 13
T815	Barafon 8	T877	Organ Flute 13	T939	Soft Santur 14
T816	Marimba 11	T878	Shamisen 13	T940	Bright String 14
T817	Soft Sax 23	T879	Jungle Bass 10	T941	Oct Harp 14
T818	Attack Barafon 13	T880	Shamisen 14	T942	Attack Harp 12
T819	Electric Viaphone 12	T881	Tubular Bells 14	T943	Church Bells 15
T820	Wind Organ 15	T882	English Horn 17	T944	Tenor Sax 14

T945	Dual Horns 14	T964	Bag Pipe 16	T983	Attack Harp 15
T946	Barafon 12	T965	Viola Attack 15	T984	Koto 17
T947	Steel Bell 12	T966	Steel Bell 14	T985	Reed Organ 15
T948	Marimba 15	T967	Crystal 15	T986	Attack Clav. 15
T949	Electric Vraphone 15	T968	Bright String 15	T987	Clavi 15
T950	Soft Accord 15	T969	Reed Horn 14	T988	Dual Horns 15
T951	Steel Bell 13	T970	Guitar Pinch 15	T989	Steel Bell 15
T952	Tenor Sax 15	T971	Oct Harp 15	T990	Slow Violin 15
T953	Electric Gutar (Clean) 15	T972	Twin Bones 15	T991	Soft Santur 15
T954	Soft Clav. 15	T973	Chorus Guitar. 15	T992	Barafon 14
T955	Bari & Tenor 14	T974	Bari & Tenor 15	T993	Organ Flute 15
T956	Attack Harp 13	T975	Tenor Sax 16	T994	Castanets 15
T957	Chorus Guitar. 14	T976	Indian Flute 15	T995	Guitar Pinch 16
T958	Shanai 15	T977	Bodhran 15	T996	Tron Flute 15
T959	Reed Organ 14	T978	Shamisen 16	T997	Tsugaru 15
T960	Bodhran 14	T979	Attack Harp 14	T998	Reed Horn 15
T961	Jungle Bass 14	T980	Barafon 13	T999	Barafon 15
T962	Tsu aru 14	T981	Jungle Bass 15	T1000	Electric Gutar (Clean) 16
T963	Shanai 16	T982	Tron Flute 14		

22.Appendix 2 (Rhythm comparison table)

R001	8Beat 1	R040	Pop 14	R079	Shuffle 1
R002	8Beat 2	R041	Pop Bolero	R080	Shuffle 2
R003	8Beat 3	R042	Pop BossaNova	R081	Boogie 1
R004	8Beat 4	R043	Pop Waltz	R082	Boogie 2
R005	8Beat 5	R044	Pop Dance	R083	Boogie 3
R006	8Beat 6	R045	Motown	R084	Twist
R007	8Beat 7	R046	British Pop 1	R085	Ballad 1
R008	8Beat 8	R047	British Pop 2	R086	Ballad 2
R009	8Beat 9	R048	British Pop 3	R087	Ballad 3
R010	8Beat 10	R049	Guitar Pop	R088	Ballad 4
R011	8Beat 11	R050	Slow Pop	R089	Ballad 5
R012	8Beat 12	R051	50's Pop	R090	Soul Ballad
R013	8Beat 13	R052	80's Pop	R091	6/8 Ballad
R014	8Beat 14	R053	Rock 1	R092	Acoustic Ballad
R015	8Beat 15	R054	Rock 2	R093	Colour Ballad
R016	8Beat 16	R055	Rock 3	R094	Guitar Ballad
R017	8Beat 17	R056	Rock 4	R095	Piano Ballad
R018	8Beat 18	R057	50's Rock	R096	Organ Ballad
R019	16Beat 1	R058	60's Rock 1	R097	Groove 1
R020	16Beat 2	R059	60's Rock 2	R098	Groove 2
R021	16Beat 3	R060	70's Rock	R099	Groove 3
R022	16Beat 4	R061	80's Rock	R100	Groove 4
R023	16Beat 5	R062	Big Rock	R101	Groove 5
R024	16Beat 6	R063	Power Rock	R102	Groove 6
R025	16Beat 7	R064	Dark Rock	R103	Groove 7
R026	16Beat 8	R065	Jazz Rock	R104	Groove 8
R027	Pop 1	R066	Soft Rock	R105	Groove 9
R028	Pop 2	R067	Pop Rock 1	R106	Piano 1
R029	Pop 3	R068	Pop Rock 2	R107	Piano 2
R030	Pop 4	R069	Funky Rock 1	R108	Piano 3
R031	Pop 5	R070	Funky Rock 2	R109	Piano 4
R032	Pop 6	R071	Ballad Rock	R110	Piano 5
R033	Pop 7	R072	Folk Rock	R111	Piano 6
R034	Pop 8	R073	Slow Rock 1	R112	Piano 7
R035	Pop 9	R074	Slow Rock 2	R113	Piano 8
R036	Pop 10	R075	Slow Rock 3	R114	Piano 9
R037	Pop 11	R076	Slow Rock 4	R115	Piano 10
R038	Pop 12	R077	Rock&Roll 1	R116	Unplugged 1
R039	Pop 13	R078	Rock&Roll 2	R117	Unplugged 2

R118	Unplugged 3	R182	March	R246	Tango4
R119	Unplugged 4	R183	Polka	R247	Tango5
R120	Unplugged 5	R184	Classical 1	R248	Rock &Roll
R121	Unplugged 6	R185	Classical 2	R249	Rock & Roll Shfl1
R122	Unplugged 7	R186	China Folk 1	R250	Oldies R & R
R123	Unplugged 8	R187	China Folk 2	R251	Detroit Pop1
R124	Dance 1	R188	China Opera 1	R252	Detroit Pop2
R125	Dance 2	R189	China Opera 2	R253	Worship Med
R126	Disco	R190	China Ballad	R254	Worship Fast
R127	House	R191	China Pop	R255	Piano Boogie
R128	Euro Beat	R192	Xin Jiang	R256	Lovely Shuffle
R129	Funky Dance	R193	Shan Bei	R257	60's Rock & Roll
R130	80's Dance	R194	Yun Nan	R258	Kool Funk
R131	Techno	R195	He Nan	R259	Blueberry Blues
R132	Fusion	R196	An Hui	R260	Shuffle Blues
R133	Blues 1	R197	Guang Dong	R261	Mambo 4
R134	Blues 2	R198	Xi Zang	R262	Mambo 5
R135	Blues 3	R199	Mongolian	R263	Pop Classics
R136	Funky 1	R200	Korean	R264	Live 8 Beat
R137	Funky 2	R201	J-Pop Hit	R265	Power Rock2
R138	Funky 3	R202	16 Beat Ballad2	R266	Acoustic Rock2
R139	Gospel	R203	70's Pop Ballad	R267	Cool 8 Beat
R140	Rap 1	R204	EP Ballad	R268	Uptempo 8Beat
R141	Rap 2	R205	Power Ballad	R269	90's Rock Ballad
R142	Soul 1	R206	Guitar Ballad2	R270	Chart Rock Shfl2
R143	Soul 2	R207	New R&B Ballad	R271	Brit Pop
R144	Soul 3	R208	Guitar Serenade	R272	Brazilian Samba
R145	Soul 4	R209	Organ Ballad2	R273	Brit Pop Swing
R146	Country 1	R210	Joropo	R274	60's 8 Beat
R147	Country 2	R211	Reggaeton	R275	Fast Bossa
R148	Country 3	R212	French Waltz	R276	60's Guitar Pop
R149	Country 4	R213	Merengue	R277	70's 8 Beat
R150	Country 5	R214	12-8 Ballad	R278	90's Guitar Pop
R151	Jazz 1	R215	Norteno	R279	Soft Rock2
R152	Jazz 2	R216	Jig	R280	Chart Guita rPop
R153	Jazz Waltz	R217	Hawaiian	R281	Gujiira
R154	Jazz Ballad	R218	Electronica	R282	Modern Pop Bld
R155	Lounge	R219	Funky House	R283	Soul
R156	Jive	R220	Club Beat	R284	Skiffle2
R157	Ragtime	R221	Retro Club	R285	6-8Soul
R158	Charlston	R222	Mod Chart Pop	R286	Soul Brothers
R159	Big Band	R223	MOR Swing	R287	Happy Reggae
R160	Swing	R224	Retro Pop	R288	Pop Latin
R161	Caribbean	R225	Rumba Flamenco	R289	6-8Slow Rock
R162	Reggae	R226	Trance Pop	R290	6-8 Modern
R163	Cha Cha	R227	Orch Big Band2	R291	6-8 Orchestral
R164	Rumba	R228	Big Band Fast2	R292	Schlager Shuffle
R165	Samba	R229	Midnight Swing	R293	Schlager Pop
R166	BossaNova	R230	German Rock	R294	Schlager Rumba
R167	Mambo	R231	Schlager Beat	R295	Euro Pop Organ
R168	Salsa	R232	Mellow Hip Hop	R296	70's French Hit
R169	Beguine	R233	Classic Hip Hop	R297	Italian Mazurka
R170	Cumbia	R234	New Hip Hop	R298	Bohemian Waltz
R171	Latin	R235	Duranguense	R299	Schlager Samba1
R172	Baroque	R236	Laff	R300	Schlager Samba2
R173	Bolero	R237	Ober Walzer	R301	Scand Slow Rock
R174	Holly Wood	R238	Bhangra	R302	Schlager 6-8
R175	Foxtrot	R239	Zouk	R303	Schlager Fox
R176	Paso Doble	R240	German March	R304	Highland Waltz
R177	Quick Step	R241	Enka	R305	Italian Polka
R178	Bachata	R242	Bolero Lento	R306	Grupera
R179	Boston	R243	Sherif fReggae	R307	Danzon
R180	Tango	R244	Beguine2	R308	Schlager Alp
R181	Waltz	R245	Latin Disco	R309	Saeidy

R310	Bhajan	R374	Scand Country1	R438	Hoedown
R311	Hip Hop Groove	R375	Scand Country2	R439	Country Shuffle
R312	Chart Pop1	R376	Scand Shuffle	R440	Waltz2
R313	Organ Groove	R377	Worship Slow	R441	Cha Cha2
R314	Chart Pop2	R378	Disco Teens	R442	Rumba2
R315	New R&B	R379	Scand Bugg	R443	Jive2
R316	Pop R&B	R380	Rock Cha Cha	R444	Pasodoble
R317	Chart R&B	R381	Organ Swing	R445	Samba1
R318	Modern Shuffle	R382	Secret Service	R446	Samba2
R319	Blues Rock	R383	Animation Bld	R447	Schlager Rock 1
R320	Dream Dance	R384	Christmas Waltz	R448	Schlager Rock 2
R321	US Chart Hit	R385	Movie Swing	R449	Foxtrot2
R322	Soul R&B	R386	Movie Ballad	R450	Viennese Waltz
R323	R&B Soul Ballad	R387	Bubblegum Pop	R451	Tango2
R324	Euro Hip Hop	R388	Rock & Roll Shfl2	R452	Tango3
R325	Trip Hop	R389	West Coast Pop	R453	German Waltz
R326	Ibiza 2004	R390	Classic 16 Beat	R454	Carnival
R327	Mod Big Band Shfl	R391	Jazz Pop	R455	Organ Samba
R328	Modern Big Band	R392	Kool Shuffle	R456	Reel
R329	Pop Gtr Ballad	R393	8 Beat Ballad2	R457	Gay Gordons
R330	Ibiza 2002	R394	Chillout	R458	Scand Waltz
R331	Euro Trance	R395	16 Beat Ballad1	R459	60's Rock Style
R332	6-8 Trance	R396	Epic Ballad	R460	Standard Rock
R333	Latin DJ's	R397	Easy Ballad	R461	Brit Rock Pop
R334	Bomba	R398	Cuban Son	R462	60's Vintage Rock
R335	Chillout Cafe	R399	Bachata2	R463	Chart Rock Shfl
R336	70's Glam Piano	R400	Forro	R464	60's Pop Rock
R337	French House	R401	70's Chart Ballad	R465	Rock Billy
R338	English Waltz	R402	Romantic Ballad	R466	Rock Boogie
R339	8 Beat Ballad1	R403	90's Cool Ballad	R467	Latin Cha Cha
R340	Club House	R404	Alp Ballad1	R468	Rock Classical
R341	House2	R405	Alp Ballad2	R469	Rock Shuffle
R342	Jazz Gtr Club	R406	E_Ballad	R470	Rock Pop
R343	Modern Jazz	R407	Unplugged 9	R471	Rock'n Roll 1
R344	Acoustic Jazz	R408	Pop Ballad	R472	Rock'n Roll 2
R345	Cool Jazz Ballad	R409	Pop New Age	R473	Straight Rock
R346	Modern Jazz Bld	R410	8 Beat Modern	R474	Jazz Rock2
R347	Easy Listening	R411	Country Ballad1	R475	Fast Gospel
R348	Bebop	R412	Love Song	R476	Folk Rock2
R349	Orch Big Band1	R413	Modern Country Pop	R477	Skiffle
R350	Big Band Fast1	R414	Electro Pop	R478	Funk Pop Rock
R351	Orchestra Swing1	R415	Acoustic Ballad 2	R479	Contemp Rock
R352	Orchestra Swing2	R416	Piano Ballad 1	R480	Acoustic Rock
R353	70's Ranking Country	R417	R&B Ballad	R481	50's Pop2
R354	Jazz Waltz Med	R418	Rock Ballad	R482	Cool Pop
R355	Mariachi Waltz	R419	Slow & Easy	R483	Groovy Pop
R356	US March	R420	Analog Ballad	R484	60's Vintage Pop
R357	Guitar Rumba	R421	Slow Rock 5	R485	80's Pop2
R358	Slow Blues	R422	Slow Rock 6	R486	Rap Pop
R359	Jazz Waltz Fast	R423	Slow Rock 7	R487	Pop Rock 3
R360	70's Country Pop	R424	Slow Soul	R488	60's Soul
R361	Dixieland	R425	8 Beat Adria	R489	70's Soul
R362	40's Big Band	R426	Classic Piano	R490	Funk
R363	Easy Country	R427	80's EP Ballad	R491	16 Beat Shuffle
R364	Country Hits	R428	80's Boy Band	R492	Twist2
R365	Country 8 Beat	R429	Country Ballad2	R493	British Pop 4
R366	Sci-fi March	R430	Country Two Step	R494	British Pop 5
R367	Tap Dance Swing	R431	Country 6	R495	Hard Rock1
R368	Orchestral Bolero	R432	Country 7	R496	Hard Rock2
R369	Gospel Sisters	R433	Finger Pickin	R497	Fusion2
R370	Italian Waltz	R434	Country Brothers	R498	Fusion3
R371	6-8 March	R435	New Country	R499	Funk Shuffl 1
R372	Bluegrass	R436	Brisk Country	R500	Funk Shuffl 2
R373	Mod Cntry Bld1	R437	70's Chart Cntry	R501	Fusion Shuffl 1

R502	Fusion Shuffl 2	R566	Carnival2	R632	Disco Funk2
R503	Club Pop1	R567	BossaNova2	R633	Disco Samba2
R504	Club Pop2	R568	Mambo 2	R634	New Hip Hop2
R505	16 Beat Pop1	R569	Mambo 3	R635	Cat Groove2
R506	16 Beat Pop2	R570	Bolero2	R636	Laff2
R507	8 Beat Pop1	R571	Cumbia3	R637	Pop Waltz3
R508	8 Beat Pop2	R572	Latin Rock	R638	Bhangra2
R509	8 Beat Soul1	R573	Disco Latin	R639	Twist3
R510	8 Beat Soul2	R574	Tijuana	R640	German March2
R511	8 Beat Rock1	R575	Reggae2	R641	Enka2
R512	8 Beat Rock2	R576	Salsa2	R642	Bolero Lento2
R513	Classic 8Beat	R577	Calypso	R643	Midnight Swing2
R514	Vintage Gtr Pop	R578	Guad Dance	R644	French Jazz2
R515	Schlager Italia	R579	Reggae 12Beat	R645	Latin Party Pop2
R516	70's Disco1	R580	Reggae 16Beat	R646	Tango6
R517	70's Disco2	R581	Swing Fox	R647	Tango7
R518	Funky Disco	R582	Slow Fox	R648	Parranda2
R519	Saturday Night	R583	Organ Cha Cha	R649	Latin Rock2
R520	Club Latin	R584	Organ Quick Step	R650	Acoustic Rock3
R521	Disco Chocolate	R585	Cat Groove	R651	80's Pop3
R522	Disco Fox	R586	Dixie Jazz	R652	60's Soul2
R523	Disco Funk	R587	Medium Jazz	R653	Fusion Shuffl3
R524	Disco Hands	R588	Jazz Big Band	R654	Fusion Shuffl4
R525	Disco Party	R589	Jazz Club	R655	16 Beat Pop3
R526	Disco Samba	R590	Ragtime2	R656	16 Beat Pop4
R527	UK Pop	R591	Big Band Shuffle 1	R657	60's Rock 3
R528	Club Dance	R592	Big Band Shuffle 2	R658	Brit Rock Pop2
R529	Modern R&B	R593	Big Band Shuffle 3	R659	Blueberry Blues2
R530	Hip Shuffle	R594	Fast Band 1	R660	Skiffle3
R531	Charleston	R595	Fast Band 2	R661	Mambo6
R532	Disco Pop	R596	Frankly Soul	R662	Mambo7
R533	Disco Soul	R597	Jazz Funk	R663	Club Pop3
R534	Disco Trot	R598	Classic Big Band	R664	Schlager Italia2
R535	Euro Beat2	R599	French Jazz	R665	Power Rock3
R536	Rap 3	R600	Jump Jive	R666	Rock'n Roll 3
R537	Rave	R601	Standard Rock2	R667	Cool8 Beat2
R538	Techno2	R602	16 Beat Ballad3	R668	British Pop6
R539	Techno3	R603	Contemp Rock2	R669	British Pop7
R540	70's Disco Funk	R604	EP Ballad2	R670	8 Beat Soul3
R541	Disco Philly	R605	Fusion4	R671	Brit Pop2
R542	Disco House	R606	Fusion5	R672	Disco Latin2
R543	80's Disco	R607	Funk2	R673	Brit Pop Swing2
R544	Schlager Polka	R608	Guitar Serenade2	R674	Fast Gospel2
R545	Polka Pop	R609	Organ Ballad3	R675	Fast Bossa2
R546	Blue Grass 1	R610	Joropo2	R676	60's Guitar Pop2
R547	Blue Grass 2	R611	Reggaeton2	R677	90's Soul
R548	Blue Grass 3	R612	French Waltz2	R678	Funk Shuffl 3
R549	Pop Waltz2	R613	Merengue2	R679	8 Beat Rock3
R550	USA March	R614	Pop Ballad2	R680	Rock Cha Cha2
R551	Hully Gully	R615	Norteno2	R681	Gujiira2
R552	Tarantella	R616	Jig2	R682	Rock Ballad2
R553	Limbo Rock	R617	Hawaiian2	R683	Soul 5
R554	Swing Waltz	R618	70's Disco3	R684	Classic 8Beat2
R555	Pub Piano	R619	70's Disco4	R685	Bolero3
R556	Jazz Waltz2	R620	Club Beat2	R686	Soul Brothers2
R557	Jazz Waltz3	R621	Rap 4	R687	Happy Reggae2
R558	Show Tune	R622	Disco House2	R688	Pop Latin2
R559	Polka2	R623	MOR Swing2	R689	6-8Slow Rock2
R560	Ober Polka	R624	Retro Pop2	R690	6-8 Modern2
R561	Party Polka	R625	Calypso2	R691	6-8 Orchestral2
R562	Pop Mambo	R626	Trance Pop2	R692	Slow Soul2
R563	Latin Party Pop	R627	Big Band Shuffle4	R693	Piano Ballad3
R564	Cumbia2	R628	Big Band Shuffle5	R694	Disco Trot2
R565	Parranda	R629	Big Band Shuffle6	R695	Disco Hands2
		R630	German Rock2	R696	British Pop8
		R631	Schlager Beat2		

R697	Italian Mazurka2	R763	Easy Country2	R830	Fast Band5
R698	Bohemian Waltz2	R764	Country Hits2	R831	Orchestra Swing5
R699	Samba3	R765	Country 8 Beat2	R832	Movie Ballad3
R700	Samba4	R766	Blue Grass4	R833	Rock & Roll Shfl4
R701	Jive3	R767	Blue Grass5	R834	Hard Rock5
R702	Foxtrot3	R768	Blue Grass6	R835	8 Beat Pop5
R703	Pasodoble2	R769	Gospel Sisters2	R836	8 Beat Pop6
R704	Highland Waltz2	R770	Italian Waltz2	R837	16 Beat Ballad5
R705	Schlager Polka2	R771	Limbo Rock2	R838	Straight Rock3
R706	Grupera2	R772	Bluegrass2	R839	Easy Ballad3
R707	Danzon2	R773	Country Brothers2	R840	Fofo3
R708	Schlager Alp2	R774	Scand Country3	R841	Fusion6
R709	Saeidy2	R775	Scand Country4	R842	Funk3
R710	Bhajan2	R776	Scand Shuffle2	R843	Viennese Waltz3
R711	Hip Hop Groove2	R777	70's Chart Cntry2	R844	Show Tune3
R712	Hip Shuffle2	R778	Pub Piano2	R845	Dixieland3
R713	Organ Groove2	R779	Polka3	R846	Big Band Shuffle7
R714	Chart Pop3	R780	Rock Cha Cha3	R847	Big Band Shuffle8
R715	Country Ballad3	R781	Schlager Rock3	R848	Big Band Shuffle9
R716	Romantic Ballad2	R782	Organ Samba2	R849	Pop Waltz4
R717	Analog Ballad2	R783	Gay Gordons2	R850	USA March3
R718	Electro Pop2	R784	Swing Waltz2	R851	Hully Gully3
R719	Blues Rock2	R785	Reel2	R852	Tarantella2
R720	Rave2	R786	Movie Ballad2	R853	Limbo Rock3
R721	US Chart Hit2	R787	Cool Pop2	R854	Swing Waltz3
R722	Alp Ballad3	R788	Rock & Roll Shfl3	R855	Pub Piano3
R723	8 Beat Modern2	R789	Hard Rock3	R856	Jazz Waltz 5
R724	Euro Hip Hop2	R790	Hard Rock4	R857	Jazz Waltz 6
R725	Disco Pop2	R791	Club Pop4	R858	Show Tune4
R726	Disco Philly2	R792	8 Beat Pop3	R859	Polka4
R727	Mod Big BandShfl2	R793	8 Beat Pop4	R860	Ober Polka3
R728	Modern Big Band2	R794	60's Rock 4	R861	Party Polka2
R729	8 Beat Adria2	R795	16 Beat Ballad4	R862	Waltz3
R730	Disco Chocolate2	R796	Straight Rock2	R863	Cha Cha3
R731	Euro Trance2	R797	Easy Ballad2	R864	Rumba4
R732	Euro Beat3	R798	Pop Mambo2	R865	Jive4
R733	Techno4	R799	BossaNova3	R866	Pasodoble3
R734	Reggae3	R800	Fofo2	R867	Samba5
R735	Chillout Cafe2	R801	Pop Classics2	R868	Samba6
R736	Love Song2	R802	Live 8 Beat2	R869	Schlager Rock5
R737	French House2	R803	Power Rock4	R870	Schlager Rock6
R738	Jazz Waltz4	R804	Acoustic Rock4	R871	Foxtrot4
R739	Classic Piano2	R805	Cool 8 Beat3	R872	Viennese Waltz4
R740	Disco Party2	R806	Uptempo 8Beat2	R873	Tango8
R741	Club Dance2	R807	90's Rock Ballad2	R874	Tango9
R742	Jazz Gtr Club2	R808	Chart Rock Shfl3	R875	Country Ballad5
R743	Modern Jazz2	R809	Brit Pop3	R876	Country Two Step2
R744	Polka Pop2	R810	Brazilian Samba2	R877	Country 8
R745	USA March2	R811	Brit Pop Swing3	R878	Country 9
R746	Ober Polka2	R812	60's 8 Beat2	R879	Finger Pickin3
R747	Easy Listening2	R813	Fast Bossa3	R880	Country Brothers3
R748	Fast Band3	R814	60's Guitar Pop3	R881	New Country2
R749	Fast Band4	R815	90's Soul2	R882	Easy Country3
R750	Big Band Fast3	R816	Gujiira3	R883	70's Chart Cntry3
R751	Orchestra Swing3	R817	Euro Hip Hop3	R884	Hoedown2
R752	Orchestra Swing4	R818	Disco Pop3	R885	Country Shuffle2
R753	Finger Pickin2	R819	Disco Philly3	R886	Schlager Polka3
R754	Hully Gully2	R820	Mod Big BandShfl3	R887	Polka Pop4
R755	Viennese Waltz2	R821	Modern Big Band3	R888	Blue Grass 7
R756	Show Tune2	R822	8 Beat Adria3	R889	Blue Grass 8
R757	Rumba3	R823	Disco Chocolate3	R890	Blue Grass 9
R758	Schlager Rock4	R824	Euro Trance3	R891	70's Disco Funk2
R759	Jazz Waltz Fast2	R825	Love Song3	R892	Disco Philly4
R760	Country Ballad4	R826	Disco Party3	R893	Disco House3
R761	Dixieland2	R827	Club Dance3	R894	80's Disco2
R762	French Jazz3	R828	Modern Jazz3	R895	Swing Fox2
		R829	Polka Pop3	R896	Slow Fox2

R897	Organ Cha Cha2	R931	90's Guitar Pop2	R965	House3
R898	Organ Quick Step2	R932	Soft Rock3	R966	Jazz Gtr Club3
R899	Cat Groove3	R933	Chart Guita rPop2	R967	Modern Jazz4
R900	Dixie Jazz2	R934	Guijira4	R968	Acoustic Jazz2
R901	Medium Jazz2	R935	Easy Listening3	R969	Cool Jazz Ballad2
R902	Jazz Big Band2	R936	Bebop2	R970	Modern Jazz Bld2
R903	Jazz Club2	R937	Orch Big Band3	R971	Modern Pop Bld2
R904	Ragtime3	R938	Big Band Fast4	R972	Soul R&B2
R905	Big Band Shuffle 10	R939	Orchestra Swing6	R973	R&B Soul Ballad2
R906	Big Band Shuffle 11	R940	Orchestra Swing7	R974	Euro Hip Hop4
R907	Big Band Shuffle 12	R941	Rock Cha Cha4	R975	Trip Hop2
R908	Fast Band 6	R942	Organ Swing2	R976	Ibiza 2002_2
R909	Fast Band 7	R943	Secret Service2	R977	Soft Rock4
R910	German Waltz2	R944	Animation Bld2	R978	Chart Guita rPop3
R911	Carnival3	R945	Christmas Waltz2	R979	Guijira5
R912	Organ Samba3	R946	Frankly Soul2	R980	Easy Listening4
R913	Reel3	R947	Jazz Funk2	R981	Bebop3
R914	Gay Gordons3	R948	Classic Big Band2	R982	Orch Big Band4
R915	Scand Waltz2	R949	French Jazz4	R983	Big Band Fast5
R916	Pop Classics3	R950	Jump Jive2	R984	Orchestra Swing8
R917	Live 8 Beat3	R951	Mod Big Band Shfl4	R985	Orchestra Swing9
R918	Power Rock5	R952	Modern Big Band4	R986	Rock Cha Cha5
R919	Acoustic Rock5	R953	Pop Gtr Ballad2	R987	Organ Swing3
R920	Cool 8 Beat4	R954	Ibiza 2002_2	R988	Secret Service3
R921	Uptempo 8Beat3	R955	Euro Trance4	R989	Animation Bld3
R922	90's Rock Ballad3	R956	6-8 Trance2	R990	Reggae4
R923	Chart Rock Shfl4	R957	Latin DJ's2	R991	Frankly Soul3
R924	Brit Pop4	R958	Bomba2	R992	Jazz Funk3
R925	Brazilian Samba3	R959	Chillout Cafe3	R993	Classic Big Band3
R926	Brit Pop Swing4	R960	70's Glam Piano2	R994	French Jazz5
R927	60's 8 Beat3	R961	French House3	R995	Jump Jive3
R928	Fast Bossa4	R962	English Waltz2	R996	Mod Big Band Shfl5
R929	60's Guitar Pop4	R963	8 Beat Ballad3	R997	Modern Big Band5
R930	70's 8 Beat2	R964	Club House2	R998-R1000	Big Band Shuffle 13-15

Appendix 3 (Demonstration Song Comparison Table)

S001	Chopin Fantasia Impromptu	S027	Schumann Frohlicher Landmann
S002	Chopin Nocturne	S028	Schumann Sicilienne
S003	Chopin Petit Chien	S029	Richard Ballade Pour Adeline
S004	Chopin Chanson De L'adieu	S030	Richard Ping Pong Sous Les Arbres
S005	Chopin Nocturne	S031	Richard A Comme Amour
S006	Chopin Black keys	S032	Richard Mariage D'amour
S007	Chopin - Valse op.64 no.2	S033	Mendelssohn Jagerlied op.19b-3
S008	Beethoven- Piano Sonate op. 13 "Pathetique" 2nd mov	S034	Mendelssohn Frühlingslied
S009	Beethoven For Elise	S035	Haydn Little Serenade
S010	Beethoven Mondschein Sonate	S036	Pachelbel Canon In D
S011	Beethoven Minuet In G	S037	Badarzewska Maiden's Prayer
S012	Beethoven Marcia Alla Turca	S038	Liszt Liebestraume
S013	Beethoven piano sonata op.49-2 1st mov	S039	Tchaikovsky- Danse des mirlitons
S014	Beethoven Ecossaise	S040	Oesten Dolly's Dreaming Awakening
S015	Mozart Twinkle Twinkle Little Star	S041	Dvorak Humoresque
S016	Mozart Turkish March	S042	Joplin The Entertainer
S017	Mozart Sonate	S043	Debussy La Fille aux Cheveux de Lin
S018	Mozart Menuett	S044	Debussy Aeabesque
S019	Bach Waltz In A Mino	S045	Dubessy Clair De lune
S020	Bach Menuett	S046	L-C.Daquin Le Coucou
S021	Bach The Well-Tempered Clavier	S047	Karl Bohm The Fountain
S022	Bach Bourree	S048	Burgmüller Pastorale
S023	Bach Invention	S049	Korsakov Bumblebee
S024	Schubert Military Marches	S050	Haydn-Sunrise
S025	Schubert Monents Musicaux	S051-S150	
S026	Schumann Traumerei		Czerny 599 No.001-Czerny 599 No.100

1 Battery



- O pas goed op jezelf uit volgende aandacht
- O Doen niet proberen te demonteren of kortsluiting veroorzaken batterij
- O Doen niet blootstellen of verbranden Het in het vuur
- O Doen niet mengen de nieuw en oud batterij
- O Doen niet mengen verschillend typen van batterijen
- O Doen niet aanval de batterij
- O De positief en negatief palen van de batterij moet zijn correct geïnstalleerd
- O Alsjeblieft verwijder de batterij uit de elektronische toetsenbord
- Als je Doen niet gebruiken voor een lang tijd ,

2 Exception



doe het volgende stappen wanneer uitzondering voor de elektronische toetsenbord als roken , over heet en Dus op . 1) . stroom uit
2) . trekken de adapter omlaag van de stroom stopcontact op de muur wanneer Zijn gebruiken.
3) . contact jouw lokaal handelaar in tijd .
Zijn normaal voor adapter krijgen heet wanneer lang tijd gebruik makend van Wisselstroom adapter , niet aangeven Storing
Alsjeblieft uitschakelen en start het elektronische toetsenbord opnieuw op wanneer soms functie probleem ,

3 Install the battery

- 1) . Uitgang de schroef En verwijderen de batterij omslag
- 2) . neerzetten de batterij met juist positief + en negatief - richting in de batterij sleuf met 6* " AA " 1 .5v
- 3) . neerzetten de batterij omslag En Slot de schroeven

Dit product bevat elektronische componenten en zou moeten niet

toestaan vloeistoffen naar binnenkomen of zijn gebruikt in vochtig omgevingen .

Dagelijks stofdicht schoonmaak zou moeten zijn klaar Goed , En oppervlaktevlekken kan zijn afgeveegd met A zacht En schoon lap .

VEVOR[®]

TOUGH TOOLS, HALF PRICE

**Technische ondersteuning en E-garantie
certificaat ate www.vevor.com/support**

VEVOR®

TOUGH TOOLS, HALF PRICE

Teknisk support och E-garanti Certifikat

 
www.vevor.com/support

PIANO ANVÄNDARE MANUELL

MODELL: BD-881D

Vi fortsätter att vara engagerade i att förse dig med verktyg konkurrenskraftig pris.
"Spara Halva, "Halva priset " eller andra liknande uttryck som används av oss endast
representerar en
uppskattning av besparingar du kan dra nytta av att köpa vissa verktyg hos oss jämfört med
de stora
toppmärken och gör inte nödvändigtvis innebära att täcka alla kategorier verktyg som
erbjuds av oss. Du
påminns om att kontrollera bilen noggrant när du är det placera en beställa med oss om
du är
sparar faktiskt hälften i jämförelse med toppen större varumärken.

MODELL: BD-881D

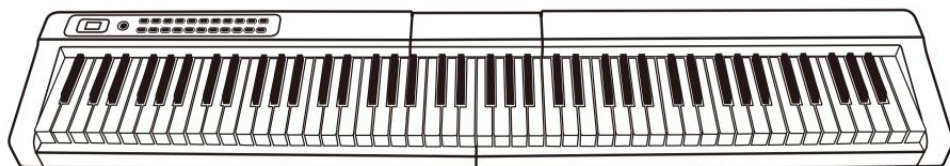

(Bilden är endast för referens, behaga hänvisa till faktisk objekt)

BEHOV HJÄLP? KONTAKTA USA!

Ha produkt frågor? Behov tekniskt stöd? Behaga känsla gratis till kontakta oss:

Teknisk support och e-garanticertifikat
www.vevor.com/support

Detta är originalet instruktion, snälla läs allt manuell instruktioner försiktigt före drift. VEVOR reserverar sig för en tydlig tolkning av vår användarmanual. Produktens utseende ska vara föremål för produkt dig mottagen. Snälla förlåt oss att vi inte gör det informera dig igen om det finns någon teknik eller programvara uppdateringar på vår produkt.

 


Åtföljande


Typ - C adapter *
1 driva sladd * 1
Musikblad stå * 1

Musik ark klämma *
1 Mikrofon * 1
Hörlurar * 1

piano
klistermärke * 1
piano väska * 1
Midi sladd * 1
upprätthålla peda l * 1

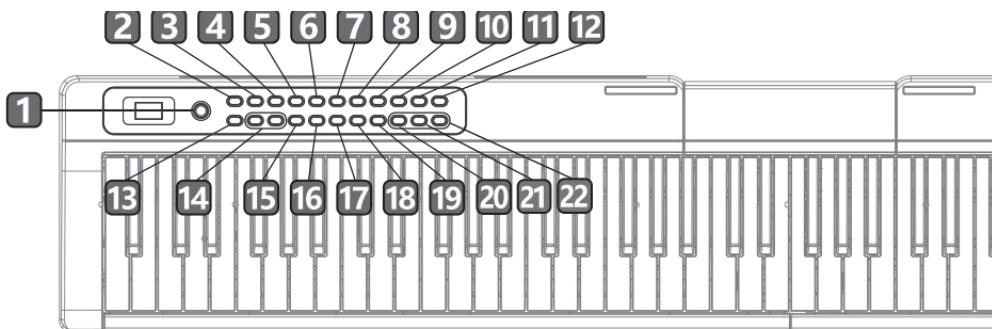

1 Power	6 Volume	11 Key drum	16 Chord	Bluetooth/MP3 mode
2 Tone	7 Rhythm vol	12 Lesson	17 Record	20 ►/⏮
3 Rhythm	8 Tempo	13 Start/stop	18 Play/LED	21 ◀/VOL-
4 Demo One	9 Transpose	14 +/-	19 Metronome	22 ▶/VOL+
5 Demo All	10 Dual key	15 Sync/Vel		

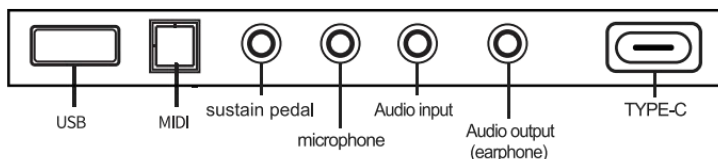 

1. Power

Turn on the [Power] button to play the keyboard and enter the performance state.

2. Tone

After pressing [Tone] button, you can use the [+/-] button to select the tone.

3. Rhythm

After pressing [Rhythm] button, you can use the [+/-] button to select the rhythm.

4. Demo One

Press the [Demo One] for the first time to enter the [Demo One] mode, and press the Demo One for the second time to exit the Demo One mode. After entering the Demo One mode, play the selected song from the next song. When the song finishes playing, the current song is played repeatedly. In the Demo One mode, press the [+/-] key to switch songs.

5. Demo All

Press the [Demo All] for the first time to enter the continuous singing mode, and press the Demo All for the second time to exit the continuous singing mode. After entering continuous singing mode, playback starts from the current song.

When the song is finished, continue to play the next song and play all the songs in a loop. In continuous singing mode, press [+/-] key to switch songs.

6. Volume

After pressing the Volume, you can use the [+] and [-] keys to increase/decrease the volume. The volume control has a total of 16 segments (1~16).

7. Rhythm vol

After pressing the [Rhythm vol], you can use the [+/-] keys to increase/decrease the rhythm volume. The rhythm control has a total of 17 sections (0~16). The Rhythm volume keys can also control the volume of demo songs, chords and drums.

8. Tempo

After pressing the [Tempo], you can use the [+/-] to increase/decrease the speed continuously. The speed control has a total of 270 segments (30~300).

9. Transpose

After pressing the [Transpose] button, you can use the [+/-] button to transpose. There are 25 segments (-12~12) for the transposition control, and the preset value is in the 13th segment after power-on. Hold [+/-] button for more than 1 second, can continuously increase/decrease the transposition. The chord pitch also changes with the transposition value.

10. Dual key

Press [Dual Key] button for the first time to activate the dual keyboard function, and press [Dual Key] button for the second time to cancel the dual keyboard function. When the dual keyboard function is activated, the scales of the left keys A1 ~ B4 will be played corresponding to the scales of A2 ~ B5, and the scales of the right keys C5 ~ C9 will be played corresponding to the scales of C4 ~ C8. You can use the [+/-] keys to select the main tone to replace the tone of the right key.

11. Key drum

Press [Key Drum] button for the first time to activate the keyboard drum function, and press [Key Drum] button for the second time to cancel the keyboard drum function. When the keyboard drum function is activated, the corresponding drum sound will be played when you play the key.

12. Lesson

Press [Lesson] button for the first time to enter the single-key mode, and press [Lesson] button for the second time to exit the single-key mode.

After entering the one-touch mode, use the current song to teach,

After the song is played, if the user presses the keys at will, it is the main melody. If the main melody does not reach the next bar, the background sound will repeat the bar until the song is played and stop after the song ends.

Press [Lesson] button for the third time to enter the ensemble mode, and press [Lesson] button for the fourth time to exit the ensemble mode.

After entering the ensemble mode, the current song is used for teaching. After the song is played, the user can play the keys at will and interrupt the main string rhythm. If not pressed the key again after 5 seconds, the main string rhythm will automatically resume playback. The background sound is played completely, and the teaching is repeated until the end of the song. After the song is over the ensemble will play a song.

Press [Lesson] button the fifth time to enter the follow-up mode, and press [Lesson] the sixth time to exit the follow-up mode.

After entering the follow-up mode, the current song is used for teaching. After the song is played, the main melody is not played, and the user must follow the notes displayed on the digital tube. Press the corresponding key to continue to play the next note, and the background sound will repeat that measure until the song ends.

Press the corresponding key to continue to play the next note, and the background sound will repeat that measure until the song ends.

In the teaching mode, [+/-] button automatically enters the song selection mode, and exits the teaching mode to return to the tone selection mode.

Press [Tone] button while playing the music will temporarily switch to the tone selection mode, and return to the song selection mode in 3 seconds.

13. Start/stop

Press the [Start/Stop] button for the first time to start playing the rhythm, and press the [Start/Stop] button for the second time to stop playing the rhythm.

Exit this mode under the mode of teaching, recording, playback, metronome, demo music, etc.

14. -/+

There are [+] and [-] sequential selection, a total of 2 keys. Can be used to select the tone, rhythm, song, volume, accompaniment volume, speed, transpose quickly.

If the number pressed exceeds the maximum number of tone, rhythms or songs, the original value will be maintained.

15. Sync/Vel

Press [Sync/Vel] for the first time to enter the sync mode, and press the Sync for the second time to exit the sync mode. When entering the sync mode, stop playing the rhythm, and then press the first 34 keys to automatically play the selected rhythm (chord). For the chord synchronization part, please refer to the single fingering accompaniment or multi-fingering accompaniment instructions.

(The default value of power on is the key strength off. Long press this key for 5 seconds to control the key strength on/off.)

16. Chord

Press [Chord] button for the first time to enter the integrated chord mode, and press [Chord] button for the second time to exit the integrated chord mode. [Chord] button only works in rhythm and normal mode. When playing the rhythm, press [Chord] button and press the fingering within the range of the keys A1 ~ F4#, and then you can hear the corresponding chord accompaniment sound. If you don't press the fingering of the fingering, the single fingering will be played. Refers to the chord of the chord fingering.

When the rhythm is not playing, press [Chord] button and press the fingering within the range of keys A1 ~ F4#, and you will hear the corresponding chord sound. If you do not press the fingering of the fingering, the single fingering will be played. Refers to the chord tone. For the detailed fingering of the integrated fingering accompaniment, please refer to the single fingered chord table and the multi-finger chord table attached. The integrated fingering can be used with rhythm/chord/synchronization.

17. Record

Press the [Recording] button the first time to enter the recording mode, and the last record will be cleared; pressing the [recording] button for the second time will exit the recording mode. In the recording mode, the metronome will be played, and you can start recording by pressing any key. The maximum number of recordings is 700. When the recording is full, the next note cannot be recorded; during recording, you can press the [Play] button at any time to play the recorded notes or drum sounds.

18. Play/LED

Press [Play/LED] for the first time to play the recorded note or drum sound, and press the Play/LED for the second time to stop playing. Press the Play to exit the recording mode. If there is no recorded value before, press Play and no action will occur. (The default value for powering on is that the keyboard light is on. Press and hold this button for 5 seconds to control the keyboard LED on/off.)

19. Metronome

Press [Metronome] button, the action function is 1/4 beat ~ 7/4 beat + stop-+ beat. 4. The preset value of tempo is 120. There are 7 variations of the metronome sound, in sequence from 1/4 beat to 7/4 beat. When recording, press [Metronome] button to switch the metronome sound.

Bluetooth/MP3 mode

20. Press [⏮/⏭] shortly (within 1 second) to play or pause the song. In pause mode, press [⏮/⏭] to continue playing the song.

21. Press [⏮/VOL-] shortly (within 1 second) to select the previous song. Press the [⏮/VOL-] for more than 1 second to decrease the volume.

22. Press [⏭/VOL+] shortly (within 1 second) to select the next song. Press [⏭/VOL+] for more than 1 second to increase the volume.

Appendix 1 (Voice Comparison Table)

T001	Acoustic Grand Piano	T055	Synth Voice	T119	Synth Drum
T002	Bright Acoustic Piano	T056	Orchestra Hit	T120	Reverse Cymbal
T003	Electric Grand Piano	T057	Trumpet	T121	Guitar Fret Noise
T004	Honky-tonk Piano	T058	Trombone	T122	Breath Noise
T005	Rhodes Piano	T059	Tuba	T123	Seashore
T006	Chorused Piano	T060	Muted Trumpet	T124	Bird Tweet
T007	Harpsichord	T061	French Horn	T125	Telephone Ring
T008	Clavichord	T062	Brass Section	T126	Helicopter
T009	Celesta	T063	Synth Brass 1	T127	Applause
T010	Glockenspiel	T064	Synth Brass 2	T128	Gunshot
T011	Music box	T065	Soprano Sax	T129	Yong Gin
T012	Vibraphone	T066	Alto Sax	T130	Zheng
T013	Marimba	T067	Tenor Sax	T131	Zhong Ruan
T014	Xylophone	T068	Baritone Sax	T132	Pi Pa
T015	Tubular Bell	T069	Oboe	T133	Big Souna
T016	Dulcimer	T070	English Horn	T134	Souna
T017	Drawbar Organ	T071	Bassoon	T135	Er Hu
T018	Percussive Organ	T072	Clarinet	T136	Yue Hu
T019	Rock Organ	T073	Piccolo	T137	Di Zi
T020	Church Organ	T074	Flute	T138	Bong Di
T021	Reed Organ	T075	Recorder	T139	Koto 2
T022	Accordion	T076	Pan Flute	T140	Qu Di
T023	Harmonica	T077	Bottle Blow	T141	Jungle Bass
T024	Tango Accordion	T078	Shakuhachi	T142	Koto 3
T025	Acoustic Guitar (nylon)	T079	Whistle	T143	Marimba 2
T026	Acoustic Guitar (steel)	T080	Ocarina	T144	Tsugaru
T027	Electric Guitar (jazz)	T081	Lead 1 (square)	T145	Kawala
T028	Electric Guitar (clean)	T082	Lead 2 (sawtooth)	T146	Attack Clav.
T029	Electric Guitar (muted)	T083	Lead 3 (calliope lead)	T147	Crystal
T030	Overdriven Guitar	T084	Lead 4 (chiff lead)	T148	Bright String
T031	Distortion Guitar	T085	Lead 5 (charang)	T149	Clavi 2
T032	Guitar Harmonics	T086	Lead 6 (voice)	T150	Chorus Guitar.
T033	Acoustic Bass	T087	Lead 7 (fifths)	T151	Barafon
T034	Electric Bass(finger)	T088	Lead 8 (bass+lead)	T152	Jazz Organ
T035	Electric Bass (pick)	T089	Pad 1 (new age)	T153	Indian Flute
T036	Fretless Bass	T090	Pad 2 (warm)	T154	Mute Barafon
T037	Slap Bass 1	T091	Pad 3 (polysynth)	T155	Dual Horns
T038	Slap Bass 2	T092	Pad 4 (choir)	T156	Electric Giutar (Clean) 2
T039	Synth Bass 1	T093	Pad 5 (bowed)	T157	Clavi 3
T040	Synth Bass 2	T094	Pad 6 (metallic)	T158	Soft Sax
T041	Violin	T095	Pad 7 (halo)	T159	Electric Vpraphone
T042	Viola	T096	Pad 8 (sweep)	T160	Didgeridoo
T043	Cello	T097	FX 1 (rain)	T161	Barafon 2
T044	Contrabass	T098	FX 2 (soundtrack)	T162	Tubular Bells 2
T045	Tremolo Strings	T099	FX 3 (crystal)	T163	Soft Accord
T046	Pizzicato Strings	T100	FX 4 (atmosphere)	T164	Barafon 3
T047	Orchestral Harp	T101	FX 5 (brightness)	T165	Clavi 4
T048	Timpani	T102	FX 6 (goblins)	T166	Nay
T049	String Ensemble 1	T103	FX 7 (echoes)	T167	Oct Harp
T050	String Ensemble 2	T104	FX 8 (sci-fi)	T168	Attack Barafon
T051	Synth Strings 1	T105	Sitar	T169	Clavi 5
T052	Synth Strings 2	T106	Banjo	T170	Kalimba 2
T053	Choir Aahs	T107	Shamisen	T171	Tsugaru 2
T054	Voice Oohs	T108	Koto	T172	Shamisen 2
		T109	Kalimba	T173	Woodblock 2
		T110	Bagpipe	T174	Crystal 2
		T111	Fiddle	T175	Shamisen 3
		T112	Shanai	T176	Synth Harpsi.
		T113	Tinkle Bell	T177	Jazz Organ 2
		T114	Agogo	T178	Viola Attack
		T115	Steel Drums	T179	Viola Attack 2
		T116	Woodblock	T180	Hard Barsoon
		T117	Taiko Drum	T181	Mute Barafon 2
		T118	Melodic Tom	T182	Bodhran

T183	Kawala 2	T247	Tsugaru 4	T311	Attack Barafon 4
T184	Didgeridoo 2	T248	Tsugaru 5	T312	Hard Barsoon 3
T185	Soft Guitar	T249	Mute Barafon 4	T313	Dulcimer 4
T186	Suona 2	T250	Dual Horns 4	T314	Twin Bones 4
T187	Twin Bones	T251	Soft Sax 3	T315	Soft Sax 5
T188	Jazz Organ 3	T252	Bodhran 3	T316	Shamisen 5
T189	Woodblock 3	T253	Guitar Pinch 3	T317	Suona 4
T190	Soft Santur	T254	Crystal 3	T318	Bodhran 4
T191	Koto 4	T255	Grow Guitar 2	T319	Shamisen 6
T192	Castanets	T256	Jazz Organ 6	T320	Electric Vraphone 6
T193	Viola Attack 3	T257	Attack Barafon 2	T321	Tsugaru 7
T194	Woodblock 4	T258	Xylophone 4	T322	Oct Harp 3
T195	Bright String 2	T259	Soft Santur 3	T323	Kalimba 4
T196	Twin Bones 2	T260	Kawala 4	T324	Soft Clav. 2
T197	Tenor Sax 2	T261	Soft Guitar 5	T325	English Horn 4
T198	Wind Organ	T262	Nay 4	T326	Didgeridoo 6
T199	Tron Flute	T263	Synth Harpsi. 3	T327	Barafon 4
T200	Bodhran 2	T264	Wind Organ 3	T328	Indian Flute 7
T201	Tron Flute 2	T265	Shanai 2	T329	Organ Flute 2
T202	Jazz Organ 4	T266	Woodblock 6	T330	Soft Santur 4
T203	Soft Santur 2	T267	Electric Vraphone 4	T331	Mute Barafon 7
T204	Woodblock 5	T268	Kawala 5	T332	Nay 7
T205	Shamisen 4	T269	Grow Guitar 3	T333	Hard Vibe 5
T206	Indian Flute 2	T270	Grow Guitar 4	T334	Bari & Tenor 4
T207	Electric Vraphone 2	T271	Steel Bell	T335	Bag Pipe 4
T208	Soft Guitar 2	T272	Wind Organ 4	T336	Tenor Sax 3
T209	Mute Barafon 3	T273	Soft Accord 2	T337	Organ Flute 3
T210	Dual Horns 2	T274	Kalimba 3	T338	Dulcimer 5
T211	Xylophone 2	T275	Twin Bones 3	T339	Twin Bones 5
T212	Didgeridoo 3	T276	Church Bells 3	T340	Grow Guitar 5
T213	Wind Organ 2	T277	Koto 6	T341	Kalimba 5
T214	Church Bells 2	T278	Attack Barafon 3	T342	Oct Harp 4
T215	Tsugaru 3	T279	Mute Barafon 5	T343	Nay 8
T216	Nay 2	T280	Nay 5	T344	Dual Horns 5
T217	Guitar Pinch 2	T281	Jungle Bass 2	T345	Didgeridoo 7
T218	Grow Guitar	T282	Soft Accord 3	T346	English Horn 5
T219	Indian Flute 3	T283	Hard Vibe 3	T347	Kawala 6
T220	Synth Harpsi. 2	T284	Soft Clav.	T348	Marimba 5
T221	Soft Sax 2	T285	Bag Pipe 2	T349	Barafon 5
T222	Xylophone 3	T286	Oct Harp 2	T350	Soft Accord 5
T223	English Horn 2	T287	Woodblock 7	T351	Mute Barafon 8
T224	Soft Guitar 3	T288	Mute Barafon 6	T352	Dual Horns 6
T225	Castanets 2	T289	Guitar Pinch 4	T353	Church Bells 4
T226	Soft Guitar 4	T290	Dulcimer 3	T354	Wind Organ 5
T227	Hard Vibe 2	T291	Soft Sax 4	T355	Attack Clav. 5
T228	Reed Horn	T292	Electric Vraphone 5	T356	Jazz Organ 7
T229	Nay 3	T293	Tsugaru 6	T357	Reed Horn 3
T230	Bari & Tenor	T294	Reed Horn 2	T358	Tenor Sax 4
T231	Kawala 3	T295	Castanets 3	T359	Chorus Guitar. 2
T232	Indian Flute 4	T296	Tron Flute 3	T360	Didgeridoo 8
T233	Didgeridoo 4	T297	Attack Clav. 3	T361	Soft Santur 5
T234	Attack Clav. 2	T298	Bari & Tenor 3	T362	Clavi 6
T235	Marimba 3	T299	Indian Flute 6	T363	Kalimba 6
T236	Bari & Tenor 2	T300	Soft Guitar 6	T364	Didgeridoo 9
T237	Slow Violin	T301	Nay 6	T365	Wind Organ 6
T238	Organ Flute	T302	Didgeridoo 5	T366	Tron Flute 4
T239	Jazz Organ 5	T303	Marimba 4	T367	Soft Sax 6
T240	Electric Vraphone 3	T304	Attack Clav. 4	T368	Suona 5
T241	Dual Horns 3	T305	Jungle Bass 3	T369	Soft Guitar 7
T242	Indian Flute 5	T306	Hard Barsoon 2	T370	Hard Vibe 6
T243	English Horn 3	T307	Suona 3	T371	Jazz Organ 8
T244	Dulcimer 2	T308	Hard Vibe 4	T372	Grow Guitar 6
T245	Koto 5	T309	Bag Pipe 3	T373	Xylophone 5
T246	Tubular Bells 3	T310	Soft Accord 4	T374	Bag Pipe 5

T375	Bag Pipe 6	T439	Shanai 5	T503	Bag Pipe 11
T376	Clavi 7	T440	English Horn 10	T504	Hard Barsoon 7
T377	Hard Vibe 7	T441	Didgeridoo 11	T505	Mute Barafon 15
T378	Kawala 7	T442	Organ Flute 5	T506	Soft Sax 12
T379	Shanai 3	T443	Attack Barafon 6	T507	Attack Clav. 9
T380	Suona 6	T444	Jungle Bass 5	T508	Jazz Organ 12
T381	Jungle Bass 4	T445	Barafon 7	T509	Soft Guitar 9
T382	Grow Guitar 7	T446	Soft Santur 6	T510	Didgeridoo 13
T383	Bag Pipe 7	T447	Slow Violin 3	T511	Bright String 4
T384	Crystal 4	T448	Hard Barsoon 6	T512	Electric Giutar (Clean) 4
T385	Guitar Pinch 5	T449	Didgeridoo 12	T513	Tsugaru 9
T386	Woodblock 8	T450	Kalimba 8	T514	Nay 10
T387	Soft Sax 7	T451	Electric Giutar (Clean) 3	T515	Reed Horn 6
T388	Attack Barafon 5	T452	Dulcimer 8	T516	Didgeridoo 14
T389	Barafon 6	T453	Reed Horn 5	T517	Soft Clav. 5
T390	Organ Flute 4	T454	Bodhran 5	T518	Soft Sax 13
T391	Mute Barafon 9	T455	Soft Sax 9	T519	Reed Organ 3
T392	Shanai 4	T456	Mute Barafon 14	T520	Steel Bell 3
T393	Soft Clav. 3	T457	Guitar Pinch 7	T521	Clavi 10
T394	Oct Harp 5	T458	Wind Organ 7	T522	Wind Organ 8
T395	Tron Flute 5	T459	Guitar Pinch 8	T523	Synth Harpsi. 6
T396	Bright String 3	T460	Indian Flute 9	T524	Bari & Tenor 5
T397	Jazz Organ 9	T461	Bag Pipe 9	T525	Steel Bell 4
T398	Mute Barafon 10	T462	Crystal 6	T526	Soft Sax 14
T399	Slow Violin 2	T463	Twin Bones 6	T527	Castanets 8
T400	Soft Sax 8	T464	Crystal 7	T528	Didgeridoo 15
T401	English Horn 6	T465	Soft Guitar 8	T529	Soft Sax 15
T402	Reed Horn 4	T466	Guitar Pinch 9	T530	Mute Barafon 16
T403	Indian Flute 8	T467	Attack Clav. 6	T531	Soft Guitar 10
T404	Castanets 4	T468	Bodhran 6	T532	Soft Accord 8
T405	English Horn 7	T469	Suona 7	T533	Wind Organ 9
T406	Tron Flute 6	T470	Chorus Guitar. 3	T534	Didgeridoo 16
T407	English Horn 8	T471	Slow Violin 4	T535	Electric Giutar (Clean) 5
T408	Hard Barsoon 4	T472	Clavi 9	T536	English Horn 11
T409	Dulcimer 6	T473	Castanets 6	T537	Soft Sax 16
T410	Xylophone 6	T474	Slow Violin 5	T538	Soft Guitar 11
T411	Mute Barafon 11	T475	Jazz Organ 10	T539	Hard Barsoon 8
T412	Nay 9	T476	Jazz Organ 11	T540	Kalimba 9
T413	Mute Barafon 12	T477	Electric Vraphone 8	T541	Koto 8
T414	Dual Horns 7	T478	Bodhran 7	T542	Soft Clav. 6
T415	Kawala 8	T479	Steel Bell 2	T543	Xylophone 7
T416	Soft Clav. 4	T480	Synth Harpsi. 5	T544	Soft Clav. 7
T417	Hard Barsoon 5	T481	Marimba 6	T545	Church Bells 6
T418	Dulcimer 7	T482	Marimba 7	T546	Kawala 10
T419	Soft Accord 6	T483	Attack Barafon 7	T547	Didgeridoo 17
T420	Church Bells 5	T484	Castanets 7	T548	Kalimba 10
T421	Shamisen 7	T485	Hard Vibe 9	T549	Castanets 9
T422	Synth Harpsi. 4	T486	Tron Flute 7	T550	Didgeridoo 18
T423	Crystal 5	T487	Soft Accord 7	T551	Bodhran 8
T424	Kawala 9	T488	Shanai 6	T552	English Horn 12
T425	Dual Horns 8	T489	Woodblock 9	T553	Hard Vibe 10
T426	Clavi 8	T490	Soft Sax 10	T554	Bodhran 9
T427	Electric Vraphone 7	T491	Slow Violin 6	T555	Indian Flute 10
T428	Castanets 5	T492	Soft Sax 11	T556	Dulcimer 9
T429	Tenor Sax 5	T493	Chorus Guitar. 4	T557	Soft Clav. 8
T430	Tenor Sax 6	T494	Attack Clav. 7	T558	Viola Attack 5
T431	Didgeridoo 10	T495	Reed Organ 2	T559	Attack Harp
T432	Kalimba 7	T496	Viola Attack 4	T560	Mute Barafon 17
T433	English Horn 9	T497	Koto 7	T561	Tenor Sax 8
T434	Guitar Pinch 6	T498	Tsugaru 8	T562	Twin Bones 7
T435	Hard Vibe 8	T499	Bag Pipe 10	T563	Chorus Guitar. 6
T436	Mute Barafon 13	T500	Attack Clav. 8	T564	Shanai 7
T437	Tenor Sax 7	T501	Tron Flute 8	T565	Kalimba 11
T438	Bag Pipe 8	T502	Marimba 8	T566	Jungle Bass 6

T567	Attack Barafon 8	T631	Koto 11	T695	Viola Attack 9
T568	Soft Clav. 9	T632	Kalimba 12	T696	Hard Vibe 13
T569	Tubular Bells 4	T633	Suona 10	T697	Koto 13
T570	Reed Organ 4	T634	Oct Harp 6	T698	Tenor Sax 9
T571	Guitar Pinch 10	T635	Koto 12	T699	Kawala 15
T572	Bodhran 10	T636	Shanai 8	T700	Steel Bell 6
T573	Clavi 11	T637	Electric Guitar (Clean) 8	T701	Soft Accord 11
T574	Viola Attack 6	T638	Clavi 12	T702	Organ Flute 10
T575	Synth Harpsi. 7	T639	Attack Harp 3	T703	Organ Flute 11
T576	Jungle Bass 7	T640	Attack Clav. 10	T704	Bright String 9
T577	Koto 9	T641	Bright String 6	T705	Soft Santur 11
T578	Church Bells 7	T642	Organ Flute 7	T706	Hard Barsoon 10
T579	Soft Accord 9	T643	Electric Guitar (Clean) 9	T707	Wind Organ 14
T580	Tubular Bells 5	T644	Kawala 12	T708	Synth Harpsi. 11
T581	Bag Pipe 12	T645	Bodhran 11	T709	Soft Sax 19
T582	Grow Guitar 8	T646	Shanai 9	T710	Bright String 10
T583	Mute Barafon 18	T647	Suona 11	T711	Bright String 11
T584	Soft Accord 10	T648	Synth Harpsi. 10	T712	Jungle Bass 9
T585	Electric Guitar (Clean) 6	T649	Bari & Tenor 6	T713	Soft Accord 12
T586	Viola Attack 7	T650	Kawala 13	T714	Reed Horn 8
T587	Kawala 11	T651	Bari & Tenor 7	T715	Slow Violin 10
T588	Soft Santur 7	T652	Reed Horn 7	T716	Synth Harpsi. 12
T589	Bright String 5	T653	Shamisen 10	T717	Attack Harp 6
T590	Electric Guitar (Clean) 7	T654	Soft Clav. 11	T718	Soft Santur 12
T591	Attack Barafon 9	T655	Bari & Tenor 8	T719	Hard Barsoon 11
T592	Electric Viphraphone 9	T656	Soft Santur 9	T720	English Horn 15
T593	Steel Bell 5	T657	Attack Harp 4	T721	Crystal 8
T594	Mute Barafon 19	T658	Bright String 7	T722	Bari & Tenor 10
T595	Chorus Guitar. 7	T659	Guitar Pinch 11	T723	Koto 14
T596	Soft Clav. 10	T660	Wind Organ 11	T724	Didgeridoo 20
T597	Viola Attack 8	T661	Soft Guitar 12	T725	Tenor Sax 10
T598	Church Bells 8	T662	English Horn 14	T726	Bright String 12
T599	Soft Santur 8	T663	Kawala 14	T727	Hard Vibe 14
T600	Wind Organ 10	T664	Grow Guitar 11	T728	Dual Horns 10
T601	Indian Flute 11	T665	Attack Harp 5	T729	Kawala 16
T602	Tsugaru 10	T666	Bari & Tenor 9	T730	Kawala 17
T603	Dulcimer 10	T667	Organ Flute 8	T731	Bag Pipe 13
T604	Grow Guitar 9	T668	Woodblock 10	T732	Electric Guitar (Clean) 10
T605	Tubular Bells 6	T669	Hard Vibe 11	T733	Tron Flute 10
T606	Jungle Bass 8	T670	Mute Barafon 20	T734	Kawala 18
T607	Dulcimer 11	T671	Tubular Bells 7	T735	Tron Flute 11
T608	Organ Flute 6	T672	Suona 12	T736	Tubular Bells 8
T609	Nay 11	T673	Bright String 8	T737	Synth Harpsi. 13
T610	Attack Barafon 10	T674	Hard Vibe 12	T738	Soft Santur 13
T611	English Horn 13	T675	Slow Violin 8	T739	Tubular Bells 9
T612	Suona 8	T676	Shamisen 11	T740	Attack Barafon 11
T613	Reed Organ 5	T677	Tron Flute 9	T741	Attack Barafon 12
T614	Shamisen 8	T678	Attack Clav. 11	T742	Electric Viphraphone 10
T615	Koto 10	T679	Dual Horns 9	T743	Dual Horns 11
T616	Shamisen 9	T680	Wind Organ 12	T744	Shanai 10
T617	Church Bells 9	T681	Twin Bones 8	T745	Bright String 13
T618	Nay 12	T682	Reed Organ 6	T746	Crystal 9
T619	Hard Barsoon 9	T683	Organ Flute 9	T747	Clavi 13
T620	Slow Violin 7	T684	Slow Violin 9	T748	Soft Sax 20
T621	Soft Sax 17	T685	Dulcimer 12	T749	Tron Flute 12
T622	Grow Guitar 10	T686	Tsugaru 11	T750	Dulcimer 14
T623	Attack Harp 2	T687	Wind Organ 13	T751	Slow Violin 11
T624	Suona 9	T688	Soft Santur 10	T752	Tenor Sax 11
T625	Nay 13	T689	Suona 13	T753	Nay 15
T626	Synth Harpsi. 8	T690	Soft Guitar 13	T754	Soft Guitar 15
T627	Didgeridoo 19	T691	Xylophone 8	T755	Shanai 11
T628	Nay 14	T692	Dulcimer 13	T756	Hard Barsoon 12
T629	Synth Harpsi. 9	T693	Marimba 9	T757	Synth Harpsi. 14
T630	Soft Sax 18	T694	Soft Guitar 14	T758	Soft Sax 21

T759	Suona 14	T821	Attack Barafon 14	T883	Crystal 14
T760	Kalimba 13	T822	Electric Viaphone 13	T884	Barafon 9
T761	Suona 15	T823	Soft Guitar 18	T885	Reed Horn 12
T762	Slow Violin 12	T824	Xylophone 11	T886	Dual Horns 13
T763	Reed Organ 7	T825	Tenor Sax 12	T887	Chorus Guitar. 12
T764	Kawala 19	T826	Oct Harp 8	T888	Grow Guitar 13
T765	Reed Horn 9	T827	Shamisen 12	T889	Shanai 12
T766	Attack Harp 7	T828	Reed Horn 10	T890	Twin Bones 12
T767	Oct Harp 7	T829	Marimba 12	T891	Barafon 10
T768	Kalimba 14	T830	Reed Organ 11	T892	Jungle Bass 11
T769	Twin Bones 9	T831	Attack Clav. 13	T893	Marimba 13
T770	Attack Clav. 12	T832	Hard Barsoon 15	T894	Grow Guitar 14
T771	Bari & Tenor 11	T833	Dual Horns 12	T895	Viola Attack 12
T772	Attack Harp 8	T834	Soft Clav. 13	T896	Shamisen 15
T773	English Horn 16	T835	Church Bells 12	T897	Tsugaru 12
T774	Twin Bones 10	T836	Oct Harp 9	T898	Reed Horn 13
T775	Soft Clav. 12	T837	Oct Harp 10	T899	Shanai 13
T776	Tubular Bells 10	T838	Indian Flute 13	T900	Castanets 13
T777	Slow Violin 13	T839	Viola Attack 11	T901	Reed Organ 12
T778	Synth Harpsi. 15	T840	Clavi 14	T902	Twin Bones 13
T779	Guitar Pinch 12	T841	Koto 15	T903	Chorus Guitar. 13
T780	Church Bells 10	T842	Soft Guitar 19	T904	Tron Flute 13
T781	Castanets 10	T843	Castanets 12	T905	Koto 16
T782	Twin Bones 11	T844	Jazz Organ 14	T906	Oct Harp 12
T783	Indian Flute 12	T845	Bag Pipe 14	T907	Grow Guitar 15
T784	Woodblock 11	T846	Steel Bell 8	T908	Shanai 14
T785	Attack Harp 9	T847	Church Bells 13	T909	Electric Giutar (Clean) 12
T786	Crystal 10	T848	Guitar Pinch 13	T910	Castanets 14
T787	Mute Barafon 21	T849	Soft Clav. 14	T911	Reed Organ 13
T788	Synth Harpsi. 16	T850	Tubular Bells 12	T912	Electric Giutar (Clean) 13
T789	Reed Organ 8	T851	Grow Guitar 12	T913	Soft Accord 14
T790	Steel Bell 7	T852	Steel Bell 9	T914	Twin Bones 14
T791	Chorus Guitar. 8	T853	Chorus Guitar. 10	T915	Marimba 14
T792	Reed Organ 9	T854	Crystal 13	T916	Jungle Bass 12
T793	Marimba 10	T855	Reed Horn 11	T917	Electric Giutar (Clean) 14
T794	Electric Viaphone 11	T856	Steel Bell 10	T918	Barafon 11
T795	Soft Guitar 16	T857	Kawala 21	T919	Viola Attack 13
T796	Viola Attack 10	T858	Attack Harp 10	T920	Slow Violin 14
T797	Reed Organ 10	T859	Oct Harp 11	T921	Oct Harp 13
T798	Bari & Tenor 12	T860	Kalimba 15	T922	Dulcimer 15
T799	Soft Sax 22	T861	Tubular Bells 13	T923	Bari & Tenor 13
T800	Jazz Organ 13	T862	Electric Giutar (Clean) 11	T924	Bag Pipe 15
T801	Soft Guitar 17	T863	Jazz Organ 15	T925	Attack Clav. 14
T802	Xylophone 9	T864	Attack Barafon 15	T926	Kalimba 16
T803	Xylophone 10	T865	Soft Guitar 20	T927	Hard Vibe 15
T804	Church Bells 11	T866	Soft Accord 13	T928	Organ Flute 14
T805	Suona 16	T867	Synth Harpsi. 17	T929	Jungle Bass 13
T806	Crystal 11	T868	Bodhran 12	T930	Electric Viaphone 14
T807	Chorus Guitar. 9	T869	Woodblock 12	T931	Viola Attack 14
T808	Crystal 12	T870	Attack Harp 11	T932	Bodhran 13
T809	Hard Barsoon 13	T871	Organ Flute 12	T933	Tubular Bells 15
T810	Castanets 11	T872	Jazz Organ 16	T934	Indian Flute 14
T811	Kawala 20	T873	Didgeridoo 21	T935	Tenor Sax 13
T812	Nay 16	T874	Church Bells 14	T936	Guitar Pinch 14
T813	Tubular Bells 11	T875	Synth Harpsi. 18	T937	Steel Bell 11
T814	Hard Barsoon 14	T876	Chorus Guitar. 11	T938	Tsugaru 13
T815	Barafon 8	T877	Organ Flute 13	T939	Soft Santur 14
T816	Marimba 11	T878	Shamisen 13	T940	Bright String 14
T817	Soft Sax 23	T879	Jungle Bass 10	T941	Oct Harp 14
T818	Attack Barafon 13	T880	Shamisen 14	T942	Attack Harp 12
T819	Electric Viaphone 12	T881	Tubular Bells 14	T943	Church Bells 15
T820	Wind Organ 15	T882	English Horn 17	T944	Tenor Sax 14

T945	Dual Horns 14	T964	Bag Pipe 16	T983	Attack Harp 15
T946	Barafon 12	T965	Viola Attack 15	T984	Koto 17
T947	Steel Bell 12	T966	Steel Bell 14	T985	Reed Organ 15
T948	Marimba 15	T967	Crystal 15	T986	Attack Clav. 15
T949	Electric Vraphone 15	T968	Bright String 15	T987	Clavi 15
T950	Soft Accord 15	T969	Reed Horn 14	T988	Dual Horns 15
T951	Steel Bell 13	T970	Guitar Pinch 15	T989	Steel Bell 15
T952	Tenor Sax 15	T971	Oct Harp 15	T990	Slow Violin 15
T953	Electric Guita (Clean) 15	T972	Twin Bones 15	T991	Soft Santur 15
T954	Soft Clav. 15	T973	Chorus Guitar. 15	T992	Barafon 14
T955	Bari & Tenor 14	T974	Bari & Tenor 15	T993	Organ Flute 15
T956	Attack Harp 13	T975	Tenor Sax 16	T994	Castanets 15
T957	Chorus Guitar. 14	T976	Indian Flute 15	T995	Guitar Pinch 16
T958	Shanai 15	T977	Bodhran 15	T996	Tron Flute 15
T959	Reed Organ 14	T978	Shamisen 16	T997	Tsugaru 15
T960	Bodhran 14	T979	Attack Harp 14	T998	Reed Horn 15
T961	Jungle Bass 14	T980	Barafon 13	T999	Barafon 15
T962	Tsu aru 14	T981	Jungle Bass 15	T1000	Electric Guita (Clean) 16
T963	Shanai 16	T982	Tron Flute 14		

22.Appendix 2 (Rhythm comparison table)

R001	8Beat 1	R040	Pop 14	R079	Shuffle 1
R002	8Beat 2	R041	Pop Bolero	R080	Shuffle 2
R003	8Beat 3	R042	Pop BossaNova	R081	Boogie 1
R004	8Beat 4	R043	Pop Waltz	R082	Boogie 2
R005	8Beat 5	R044	Pop Dance	R083	Boogie 3
R006	8Beat 6	R045	Motown	R084	Twist
R007	8Beat 7	R046	British Pop 1	R085	Ballad 1
R008	8Beat 8	R047	British Pop 2	R086	Ballad 2
R009	8Beat 9	R048	British Pop 3	R087	Ballad 3
R010	8Beat 10	R049	Guitar Pop	R088	Ballad 4
R011	8Beat 11	R050	Slow Pop	R089	Ballad 5
R012	8Beat 12	R051	50's Pop	R090	Soul Ballad
R013	8Beat 13	R052	80's Pop	R091	6/8 Ballad
R014	8Beat 14	R053	Rock 1	R092	Acoustic Ballad
R015	8Beat 15	R054	Rock 2	R093	Colour Ballad
R016	8Beat 16	R055	Rock 3	R094	Guitar Ballad
R017	8Beat 17	R056	Rock 4	R095	Piano Ballad
R018	8Beat 18	R057	50's Rock	R096	Organ Ballad
R019	16Beat 1	R058	60's Rock 1	R097	Groove 1
R020	16Beat 2	R059	60's Rock 2	R098	Groove 2
R021	16Beat 3	R060	70's Rock	R099	Groove 3
R022	16Beat 4	R061	80's Rock	R100	Groove 4
R023	16Beat 5	R062	Big Rock	R101	Groove 5
R024	16Beat 6	R063	Power Rock	R102	Groove 6
R025	16Beat 7	R064	Dark Rock	R103	Groove 7
R026	16Beat 8	R065	Jazz Rock	R104	Groove 8
R027	Pop 1	R066	Soft Rock	R105	Groove 9
R028	Pop 2	R067	Pop Rock 1	R106	Piano 1
R029	Pop 3	R068	Pop Rock 2	R107	Piano 2
R030	Pop 4	R069	Funky Rock 1	R108	Piano 3
R031	Pop 5	R070	Funky Rock 2	R109	Piano 4
R032	Pop 6	R071	Ballad Rock	R110	Piano 5
R033	Pop 7	R072	Folk Rock	R111	Piano 6
R034	Pop 8	R073	Slow Rock 1	R112	Piano 7
R035	Pop 9	R074	Slow Rock 2	R113	Piano 8
R036	Pop 10	R075	Slow Rock 3	R114	Piano 9
R037	Pop 11	R076	Slow Rock 4	R115	Piano 10
R038	Pop 12	R077	Rock&Roll 1	R116	Unplugged 1
R039	Pop 13	R078	Rock&Roll 2	R117	Unplugged 2

R118	Unplugged 3	R182	March	R246	Tango4
R119	Unplugged 4	R183	Polka	R247	Tango5
R120	Unplugged 5	R184	Classical 1	R248	Rock &Roll
R121	Unplugged 6	R185	Classical 2	R249	Rock & Roll Shfl1
R122	Unplugged 7	R186	China Folk 1	R250	Oldies R & R
R123	Unplugged 8	R187	China Folk 2	R251	Detroit Pop1
R124	Dance 1	R188	China Opera 1	R252	Detroit Pop2
R125	Dance 2	R189	China Opera 2	R253	Worship Med
R126	Disco	R190	China Ballad	R254	Worship Fast
R127	House	R191	China Pop	R255	Piano Boogie
R128	Euro Beat	R192	Xin Jiang	R256	Lovely Shuffle
R129	Funky Dance	R193	Shan Bei	R257	60's Rock & Roll
R130	80's Dance	R194	Yun Nan	R258	Kool Funk
R131	Techno	R195	He Nan	R259	Blueberry Blues
R132	Fusion	R196	An Hui	R260	Shuffle Blues
R133	Blues 1	R197	Guang Dong	R261	Mambo 4
R134	Blues 2	R198	Xi Zang	R262	Mambo 5
R135	Blues 3	R199	Mongolian	R263	Pop Classics
R136	Funky 1	R200	Korean	R264	Live 8 Beat
R137	Funky 2	R201	J-Pop Hit	R265	Power Rock2
R138	Funky 3	R202	16 Beat Ballad2	R266	Acoustic Rock2
R139	Gospel	R203	70's Pop Ballad	R267	Cool 8 Beat
R140	Rap 1	R204	EP Ballad	R268	Uptempo 8Beat
R141	Rap 2	R205	Power Ballad	R269	90's Rock Ballad
R142	Soul 1	R206	Guitar Ballad2	R270	Chart Rock Shfl2
R143	Soul 2	R207	New R&B Ballad	R271	Brit Pop
R144	Soul 3	R208	Guitar Serenade	R272	Brazilian Samba
R145	Soul 4	R209	Organ Ballad2	R273	Brit Pop Swing
R146	Country 1	R210	Joropo	R274	60's 8 Beat
R147	Country 2	R211	Reggaeton	R275	Fast Bossa
R148	Country 3	R212	French Waltz	R276	60's Guitar Pop
R149	Country 4	R213	Merengue	R277	70's 8 Beat
R150	Country 5	R214	12-8 Ballad	R278	90's Guitar Pop
R151	Jazz 1	R215	Norteno	R279	Soft Rock2
R152	Jazz 2	R216	Jig	R280	Chart Guita rPop
R153	Jazz Waltz	R217	Hawaiian	R281	Gujiira
R154	Jazz Ballad	R218	Electronica	R282	Modern Pop Bld
R155	Lounge	R219	Funky House	R283	Soul
R156	Jive	R220	Club Beat	R284	Skiffle2
R157	Ragtime	R221	Retro Club	R285	6-8Soul
R158	Charlston	R222	Mod Chart Pop	R286	Soul Brothers
R159	Big Band	R223	MOR Swing	R287	Happy Reggae
R160	Swing	R224	Retro Pop	R288	Pop Latin
R161	Caribbean	R225	Rumba Flamenco	R289	6-8Slow Rock
R162	Reggae	R226	Trance Pop	R290	6-8 Modern
R163	Cha Cha	R227	Orch Big Band2	R291	6-8 Orchestral
R164	Rumba	R228	Big Band Fast2	R292	Schlager Shuffle
R165	Samba	R229	Midnight Swing	R293	Schlager Pop
R166	BossaNova	R230	German Rock	R294	Schlager Rumba
R167	Mambo	R231	Schlager Beat	R295	Euro Pop Organ
R168	Salsa	R232	Mellow Hip Hop	R296	70's French Hit
R169	Beguine	R233	Classic Hip Hop	R297	Italian Mazurka
R170	Cumbia	R234	New Hip Hop	R298	Bohemian Waltz
R171	Latin	R235	Duranguense	R299	Schlager Samba1
R172	Baroque	R236	Laff	R300	Schlager Samba2
R173	Bolero	R237	Ober Walzer	R301	Scand Slow Rock
R174	Holly Wood	R238	Bhangra	R302	Schlager 6-8
R175	Foxtrot	R239	Zouk	R303	Schlager Fox
R176	Paso Doble	R240	German March	R304	Highland Waltz
R177	Quick Step	R241	Enka	R305	Italian Polka
R178	Bachata	R242	Bolero Lento	R306	Grupera
R179	Boston	R243	Sherif fReggae	R307	Danzon
R180	Tango	R244	Beguine2	R308	Schlager Alp
R181	Waltz	R245	Latin Disco	R309	Saeidy

R310	Bhajan	R374	Scand Country1	R438	Hoedown
R311	Hip Hop Groove	R375	Scand Country2	R439	Country Shuffle
R312	Chart Pop1	R376	Scand Shuffle	R440	Waltz2
R313	Organ Groove	R377	Worship Slow	R441	Cha Cha2
R314	Chart Pop2	R378	Disco Teens	R442	Rumba2
R315	New R&B	R379	Scand Bugg	R443	Jive2
R316	Pop R&B	R380	Rock Cha Cha	R444	Pasodoble
R317	Chart R&B	R381	Organ Swing	R445	Samba1
R318	Modern Shuffle	R382	Secret Service	R446	Samba2
R319	Blues Rock	R383	Animation Bld	R447	Schlager Rock 1
R320	Dream Dance	R384	Christmas Waltz	R448	Schlager Rock 2
R321	US Chart Hit	R385	Movie Swing	R449	Foxtrot2
R322	Soul R&B	R386	Movie Ballad	R450	Viennese Waltz
R323	R&B Soul Ballad	R387	Bubblegum Pop	R451	Tango2
R324	Euro Hip Hop	R388	Rock & Roll Shfl2	R452	Tango3
R325	Trip Hop	R389	West Coast Pop	R453	German Waltz
R326	Ibiza 2004	R390	Classic 16 Beat	R454	Carnival
R327	Mod Big Band Shfl	R391	Jazz Pop	R455	Organ Samba
R328	Modern Big Band	R392	Kool Shuffle	R456	Reel
R329	Pop Gtr Ballad	R393	8 Beat Ballad2	R457	Gay Gordons
R330	Ibiza 2002	R394	Chillout	R458	Scand Waltz
R331	Euro Trance	R395	16 Beat Ballad1	R459	60's Rock Style
R332	6-8 Trance	R396	Epic Ballad	R460	Standard Rock
R333	Latin DJ's	R397	Easy Ballad	R461	Brit Rock Pop
R334	Bomba	R398	Cuban Son	R462	60's Vintage Rock
R335	Chillout Cafe	R399	Bachata2	R463	Chart Rock Shfl
R336	70's Glam Piano	R400	Forro	R464	60's Pop Rock
R337	French House	R401	70's Chart Ballad	R465	Rock Billy
R338	English Waltz	R402	Romantic Ballad	R466	Rock Boogie
R339	8 Beat Ballad1	R403	90's Cool Ballad	R467	Latin Cha Cha
R340	Club House	R404	Alp Ballad1	R468	Rock Classical
R341	House2	R405	Alp Ballad2	R469	Rock Shuffle
R342	Jazz Gtr Club	R406	E_Ballad	R470	Rock Pop
R343	Modern Jazz	R407	Unplugged 9	R471	Rock'n Roll 1
R344	Acoustic Jazz	R408	Pop Ballad	R472	Rock'n Roll 2
R345	Cool Jazz Ballad	R409	Pop New Age	R473	Straight Rock
R346	Modern Jazz Bld	R410	8 Beat Modern	R474	Jazz Rock2
R347	Easy Listening	R411	Country Ballad1	R475	Fast Gospel
R348	Bebop	R412	Love Song	R476	Folk Rock2
R349	Orch Big Band1	R413	Modern Country Pop	R477	Skiffle
R350	Big Band Fast1	R414	Electro Pop	R478	Funk Pop Rock
R351	Orchestra Swing1	R415	Acoustic Ballad 2	R479	Contemp Rock
R352	Orchestra Swing2	R416	Piano Ballad 1	R480	Acoustic Rock
R353	70's Ranking Country	R417	R&B Ballad	R481	50's Pop2
R354	Jazz Waltz Med	R418	Rock Ballad	R482	Cool Pop
R355	Mariachi Waltz	R419	Slow & Easy	R483	Groovy Pop
R356	US March	R420	Analog Ballad	R484	60's Vintage Pop
R357	Guitar Rumba	R421	Slow Rock 5	R485	80's Pop2
R358	Slow Blues	R422	Slow Rock 6	R486	Rap Pop
R359	Jazz Waltz Fast	R423	Slow Rock 7	R487	Pop Rock 3
R360	70's Country Pop	R424	Slow Soul	R488	60's Soul
R361	Dixieland	R425	8 Beat Adria	R489	70's Soul
R362	40's Big Band	R426	Classic Piano	R490	Funk
R363	Easy Country	R427	80's EP Ballad	R491	16 Beat Shuffle
R364	Country Hits	R428	80's Boy Band	R492	Twist2
R365	Country 8 Beat	R429	Country Ballad2	R493	British Pop 4
R366	Sci-fi March	R430	Country Two Step	R494	British Pop 5
R367	Tap Dance Swing	R431	Country 6	R495	Hard Rock1
R368	Orchestral Bolero	R432	Country 7	R496	Hard Rock2
R369	Gospel Sisters	R433	Finger Pickin	R497	Fusion2
R370	Italian Waltz	R434	Country Brothers	R498	Fusion3
R371	6-8 March	R435	New Country	R499	Funk Shuffl 1
R372	Bluegrass	R436	Brisk Country	R500	Funk Shuffl 2
R373	Mod Cntry Bld1	R437	70's Chart Cntry	R501	Fusion Shuffl 1

R502	Fusion Shuffl 2	R566	Carnival2	R632	Disco Funk2
R503	Club Pop1	R567	BossaNova2	R633	Disco Samba2
R504	Club Pop2	R568	Mambo 2	R634	New Hip Hop2
R505	16 Beat Pop1	R569	Mambo 3	R635	Cat Groove2
R506	16 Beat Pop2	R570	Bolero2	R636	Laff2
R507	8 Beat Pop1	R571	Cumbia3	R637	Pop Waltz3
R508	8 Beat Pop2	R572	Latin Rock	R638	Bhangra2
R509	8 Beat Soul1	R573	Disco Latin	R639	Twist3
R510	8 Beat Soul2	R574	Tijuana	R640	German March2
R511	8 Beat Rock1	R575	Reggae2	R641	Enka2
R512	8 Beat Rock2	R576	Salsa2	R642	Bolero Lento2
R513	Classic 8Beat	R577	Calypso	R643	Midnight Swing2
R514	Vintage Gtr Pop	R578	Guad Dance	R644	French Jazz2
R515	Schlager Italia	R579	Reggae 12Beat	R645	Latin Party Pop2
R516	70's Disco1	R580	Reggae 16Beat	R646	Tango6
R517	70's Disco2	R581	Swing Fox	R647	Tango7
R518	Funky Disco	R582	Slow Fox	R648	Parranda2
R519	Saturday Night	R583	Organ Cha Cha	R649	Latin Rock2
R520	Club Latin	R584	Organ Quick Step	R650	Acoustic Rock3
R521	Disco Chocolate	R585	Cat Groove	R651	80's Pop3
R522	Disco Fox	R586	Dixie Jazz	R652	60's Soul2
R523	Disco Funk	R587	Medium Jazz	R653	Fusion Shuffl3
R524	Disco Hands	R588	Jazz Big Band	R654	Fusion Shuffl4
R525	Disco Party	R589	Jazz Club	R655	16 Beat Pop3
R526	Disco Samba	R590	Ragtime2	R656	16 Beat Pop4
R527	UK Pop	R591	Big Band Shuffle 1	R657	60's Rock 3
R528	Club Dance	R592	Big Band Shuffle 2	R658	Brit Rock Pop2
R529	Modern R&B	R593	Big Band Shuffle 3	R659	Blueberry Blues2
R530	Hip Shuffle	R594	Fast Band 1	R660	Skiffle3
R531	Charleston	R595	Fast Band 2	R661	Mambo6
R532	Disco Pop	R596	Frankly Soul	R662	Mambo7
R533	Disco Soul	R597	Jazz Funk	R663	Club Pop3
R534	Disco Trot	R598	Classic Big Band	R664	Schlager Italia2
R535	Euro Beat2	R599	French Jazz	R665	Power Rock3
R536	Rap 3	R600	Jump Jive	R666	Rock'n Roll 3
R537	Rave	R601	Standard Rock2	R667	Cool8 Beat2
R538	Techno2	R602	16 Beat Ballad3	R668	British Pop6
R539	Techno3	R603	Contemp Rock2	R669	British Pop7
R540	70's Disco Funk	R604	EP Ballad2	R670	8 Beat Soul3
R541	Disco Philly	R605	Fusion4	R671	Brit Pop2
R542	Disco House	R606	Fusion5	R672	Disco Latin2
R543	80's Disco	R607	Funk2	R673	Brit Pop Swing2
R544	Schlager Polka	R608	Guitar Serenade2	R674	Fast Gospel2
R545	Polka Pop	R609	Organ Ballad3	R675	Fast Bossa2
R546	Blue Grass 1	R610	Joropo2	R676	60's Guitar Pop2
R547	Blue Grass 2	R611	Reggaeton2	R677	90's Soul
R548	Blue Grass 3	R612	French Waltz2	R678	Funk Shuffl 3
R549	Pop Waltz2	R613	Merengue2	R679	8 Beat Rock3
R550	USA March	R614	Pop Ballad2	R680	Rock Cha Cha2
R551	Hully Gully	R615	Norteno2	R681	Gujiira2
R552	Tarantella	R616	Jig2	R682	Rock Ballad2
R553	Limbo Rock	R617	Hawaiian2	R683	Soul 5
R554	Swing Waltz	R618	70's Disco3	R684	Classic 8Beat2
R555	Pub Piano	R619	70's Disco4	R685	Bolero3
R556	Jazz Waltz2	R620	Club Beat2	R686	Soul Brothers2
R557	Jazz Waltz3	R621	Rap 4	R687	Happy Reggae2
R558	Show Tune	R622	Disco House2	R688	Pop Latin2
R559	Polka2	R623	MOR Swing2	R689	6-8Slow Rock2
R560	Ober Polka	R624	Retro Pop2	R690	6-8 Modern2
R561	Party Polka	R625	Calypso2	R691	6-8 Orchestral2
R562	Pop Mambo	R626	Trance Pop2	R692	Slow Soul2
R563	Latin Party Pop	R627	Big Band Shuffle4	R693	Piano Ballad3
R564	Cumbia2	R628	Big Band Shuffle5	R694	Disco Trot2
R565	Parranda	R629	Big Band Shuffle6	R695	Disco Hands2
		R630	German Rock2	R696	British Pop8
		R631	Schlager Beat2		

R697	Italian Mazurka2	R763	Easy Country2	R830	Fast Band5
R698	Bohemian Waltz2	R764	Country Hits2	R831	Orchestra Swing5
R699	Samba3	R765	Country 8 Beat2	R832	Movie Ballad3
R700	Samba4	R766	Blue Grass4	R833	Rock & Roll Shfl4
R701	Jive3	R767	Blue Grass5	R834	Hard Rock5
R702	Foxtrot3	R768	Blue Grass6	R835	8 Beat Pop5
R703	Pasodoble2	R769	Gospel Sisters2	R836	8 Beat Pop6
R704	Highland Waltz2	R770	Italian Waltz2	R837	16 Beat Ballad5
R705	Schlager Polka2	R771	Limbo Rock2	R838	Straight Rock3
R706	Grupera2	R772	Bluegrass2	R839	Easy Ballad3
R707	Danzon2	R773	Country Brothers2	R840	Fofo3
R708	Schlager Alp2	R774	Scand Country3	R841	Fusion6
R709	Saeidy2	R775	Scand Country4	R842	Funk3
R710	Bhajan2	R776	Scand Shuffle2	R843	Viennese Waltz3
R711	Hip Hop Groove2	R777	70's Chart Cntry2	R844	Show Tune3
R712	Hip Shuffle2	R778	Pub Piano2	R845	Dixieland3
R713	Organ Groove2	R779	Polka3	R846	Big Band Shuffle7
R714	Chart Pop3	R780	Rock Cha Cha3	R847	Big Band Shuffle8
R715	Country Ballad3	R781	Schlager Rock3	R848	Big Band Shuffle9
R716	Romantic Ballad2	R782	Organ Samba2	R849	Pop Waltz4
R717	Analog Ballad2	R783	Gay Gordons2	R850	USA March3
R718	Electro Pop2	R784	Swing Waltz2	R851	Hully Gully3
R719	Blues Rock2	R785	Reel2	R852	Tarantella2
R720	Rave2	R786	Movie Ballad2	R853	Limbo Rock3
R721	US Chart Hit2	R787	Cool Pop2	R854	Swing Waltz3
R722	Alp Ballad3	R788	Rock & Roll Shfl3	R855	Pub Piano3
R723	8 Beat Modern2	R789	Hard Rock3	R856	Jazz Waltz 5
R724	Euro Hip Hop2	R790	Hard Rock4	R857	Jazz Waltz 6
R725	Disco Pop2	R791	Club Pop4	R858	Show Tune4
R726	Disco Philly2	R792	8 Beat Pop3	R859	Polka4
R727	Mod Big BandShfl2	R793	8 Beat Pop4	R860	Ober Polka3
R728	Modern Big Band2	R794	60's Rock 4	R861	Party Polka2
R729	8 Beat Adria2	R795	16 Beat Ballad4	R862	Waltz3
R730	Disco Chocolate2	R796	Straight Rock2	R863	Cha Cha3
R731	Euro Trance2	R797	Easy Ballad2	R864	Rumba4
R732	Euro Beat3	R798	Pop Mambo2	R865	Jive4
R733	Techno4	R799	BossaNova3	R866	Pasodoble3
R734	Reggae3	R800	Fofo2	R867	Samba5
R735	Chillout Cafe2	R801	Pop Classics2	R868	Samba6
R736	Love Song2	R802	Live 8 Beat2	R869	Schlager Rock5
R737	French House2	R803	Power Rock4	R870	Schlager Rock6
R738	Jazz Waltz4	R804	Acoustic Rock4	R871	Foxtrot4
R739	Classic Piano2	R805	Cool 8 Beat3	R872	Viennese Waltz4
R740	Disco Party2	R806	Uptempo 8Beat2	R873	Tango8
R741	Club Dance2	R807	90's Rock Ballad2	R874	Tango9
R742	Jazz Gtr Club2	R808	Chart Rock Shfl3	R875	Country Ballad5
R743	Modern Jazz2	R809	Brit Pop3	R876	Country Two Step2
R744	Polka Pop2	R810	Brazilian Samba2	R877	Country 8
R745	USA March2	R811	Brit Pop Swing3	R878	Country 9
R746	Ober Polka2	R812	60's 8 Beat2	R879	Finger Pickin3
R747	Easy Listening2	R813	Fast Bossa3	R880	Country Brothers3
R748	Fast Band3	R814	60's Guitar Pop3	R881	New Country2
R749	Fast Band4	R815	90's Soul2	R882	Easy Country3
R750	Big Band Fast3	R816	Gujiira3	R883	70's Chart Cntry3
R751	Orchestra Swing3	R817	Euro Hip Hop3	R884	Hoedown2
R752	Orchestra Swing4	R818	Disco Pop3	R885	Country Shuffle2
R753	Finger Pickin2	R819	Disco Philly3	R886	Schlager Polka3
R754	Hully Gully2	R820	Mod Big BandShfl3	R887	Polka Pop4
R755	Viennese Waltz2	R821	Modern Big Band3	R888	Blue Grass 7
R756	Show Tune2	R822	8 Beat Adria3	R889	Blue Grass 8
R757	Rumba3	R823	Disco Chocolate3	R890	Blue Grass 9
R758	Schlager Rock4	R824	Euro Trance3	R891	70's Disco Funk2
R759	Jazz Waltz Fast2	R825	Love Song3	R892	Disco Philly4
R760	Country Ballad4	R826	Disco Party3	R893	Disco House3
R761	Dixieland2	R827	Club Dance3	R894	80's Disco2
R762	French Jazz3	R828	Modern Jazz3	R895	Swing Fox2
		R829	Polka Pop3	R896	Slow Fox2

R897	Organ Cha Cha2	R931	90's Guitar Pop2	R965	House3
R898	Organ Quick Step2	R932	Soft Rock3	R966	Jazz Gtr Club3
R899	Cat Groove3	R933	Chart Guita rPop2	R967	Modern Jazz4
R900	Dixie Jazz2	R934	Guijira4	R968	Acoustic Jazz2
R901	Medium Jazz2	R935	Easy Listening3	R969	Cool Jazz Ballad2
R902	Jazz Big Band2	R936	Bebop2	R970	Modern Jazz Bld2
R903	Jazz Club2	R937	Orch Big Band3	R971	Modern Pop Bld2
R904	Ragtime3	R938	Big Band Fast4	R972	Soul R&B2
R905	Big Band Shuffle 10	R939	Orchestra Swing6	R973	R&B Soul Ballad2
R906	Big Band Shuffle 11	R940	Orchestra Swing7	R974	Euro Hip Hop4
R907	Big Band Shuffle 12	R941	Rock Cha Cha4	R975	Trip Hop2
R908	Fast Band 6	R942	Organ Swing2	R976	Ibiza 2002_2
R909	Fast Band 7	R943	Secret Service2	R977	Soft Rock4
R910	German Waltz2	R944	Animation Bld2	R978	Chart Guita rPop3
R911	Carnival3	R945	Christmas Waltz2	R979	Guijira5
R912	Organ Samba3	R946	Frankly Soul2	R980	Easy Listening4
R913	Reel3	R947	Jazz Funk2	R981	Bebop3
R914	Gay Gordons3	R948	Classic Big Band2	R982	Orch Big Band4
R915	Scand Waltz2	R949	French Jazz4	R983	Big Band Fast5
R916	Pop Classics3	R950	Jump Jive2	R984	Orchestra Swing8
R917	Live 8 Beat3	R951	Mod Big Band Shfl4	R985	Orchestra Swing9
R918	Power Rock5	R952	Modern Big Band4	R986	Rock Cha Cha5
R919	Acoustic Rock5	R953	Pop Gtr Ballad2	R987	Organ Swing3
R920	Cool 8 Beat4	R954	Ibiza 2002_2	R988	Secret Service3
R921	Uptempo 8Beat3	R955	Euro Trance4	R989	Animation Bld3
R922	90's Rock Ballad3	R956	6-8 Trance2	R990	Reggae4
R923	Chart Rock Shfl4	R957	Latin DJ's2	R991	Frankly Soul3
R924	Brit Pop4	R958	Bomba2	R992	Jazz Funk3
R925	Brazilian Samba3	R959	Chillout Cafe3	R993	Classic Big Band3
R926	Brit Pop Swing4	R960	70's Glam Piano2	R994	French Jazz5
R927	60's 8 Beat3	R961	French House3	R995	Jump Jive3
R928	Fast Bossa4	R962	English Waltz2	R996	Mod Big Band Shfl5
R929	60's Guitar Pop4	R963	8 Beat Ballad3	R997	Modern Big Band5
R930	70's 8 Beat2	R964	Club House2	R998-R1000	Big Band Shuffle 13-15

Appendix 3 (Demonstration Song Comparison Table)

S001	Chopin Fantasia Impromptu	S027	Schumann Frohlicher Landmann
S002	Chopin Nocturne	S028	Schumann Sicilienne
S003	Chopin Petit Chien	S029	Richard Ballade Pour Adeline
S004	Chopin Chanson De L'adieu	S030	Richard Ping Pong Sous Les Arbres
S005	Chopin Nocturne	S031	Richard A Comme Amour
S006	Chopin Black keys	S032	Richard Mariage D'amour
S007	Chopin - Valse op.64 no.2	S033	Mendelssohn Jagerlied op.19b-3
S008	Beethoven- Piano Sonate op. 13 "Pathetique" 2nd mov	S034	Mendelssohn Frühlingslied
S009	Beethoven For Elise	S035	Haydn Little Serenade
S010	Beethoven Mondschein Sonate	S036	Pachelbel Canon In D
S011	Beethoven Minuet In G	S037	Badarzewska Maiden's Prayer
S012	Beethoven Marcia Alla Turca	S038	Liszt Liebestraume
S013	Beethoven piano sonata op.49-2 1st mov	S039	Tchaikovsky- Danse des mirlitons
S014	Beethoven Ecossaise	S040	Oesten Dolly's Dreaming Awakening
S015	Mozart Twinkle Twinkle Little Star	S041	Dvorak Humoresque
S016	Mozart Turkish March	S042	Joplin The Entertainer
S017	Mozart Sonate	S043	Debussy La Fille aux Cheveux de Lin
S018	Mozart Menuett	S044	Debussy Aeabesque
S019	Bach Waltz In A Mino	S045	Dubessy Clair De lune
S020	Bach Menuett	S046	L-C.Daquin Le Coucou
S021	Bach The Well-Tempered Clavier	S047	Karl Bohm The Fountain
S022	Bach Bourree	S048	Burgmüller Pastorale
S023	Bach Invention	S049	Korsakov Bumblebee
S024	Schubert Military Marches	S050	Haydn-Sunrise
S025	Schubert Monents Musicaux	S051-S150	
S026	Schumann Traumerei		Czerny 599 No.001-Czerny 599 No.100

1 Battery



WARNING

- o snälla ta hand om dig av följande uppmärksamhet
- o Do inte försök att demontera eller kortsluta batteri o Do inte avslöja eller bränna det i elden
- o Do blanda inte nya och gammal batteri
- o Do inte blanda olika typer av batterier
- o Do inte avgift de batteri
- o De positiv och negativ stolpar av de batteri måste vara p korrekt installerad
- o behaga ta bort batteriet från den elektroniska tangentbord Om du do inte använda för en lång tid ,

2 Exception



WARNING

- vänligen gör följande steg när undantag för det elektroniska tangentbord som rykande , för varmt och
- Så på . 1) . driva av
- 2) . dra de adapter ner från de driva uttag på de vägg när är använder.
- 3) . kontakta din lokal -handlare i tid .
- Det är normal för adapter få varm när lång tid använder AC adapter , inte ange Felfunktion
- behaga ström av och starta om det elektroniska tangentbordet när någon gång funktion problem ,

3 Install the battery

- 1) . Utgång de skruva och ta bort de batteri täcka
- 2) . sätta de batteri med rätta positiv + och negativ - riktning in i batteri spår med 6* AA " 1 .5v
- 3) . sätta de batteri täcka och Låsa de skruvar

Detta produkten innehåller elektroniska komponenter och borde uld inte tillåta vätskor till skriva in eller vara begagnad i fuktig miljöer . Dagligen dammsäker rengöring skall vara gjort väl , och ytfläckar burk vara torkas med a mjuk och rena tyg .

VEVOR[®]

TOUGH TOOLS, HALF PRICE

**Teknisk support och E-garanticertifikat åt
www.vevor.com/support**