



GD-2015S Series FM Transmitter User Guide

WARNING!

The transmitter can not ON AIR without the antenna!

It maybe damaged the amplifier.


Service and support

Email:chinabroadcast@outlook.com


TEL:+8618704005266

Whats App:+8618704005266

Wechat App:+8618704005266

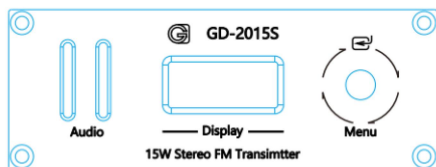

- 1 Left channel volume display
- 2 Right channel volume display
- 3 Display screen
- 4 Control button

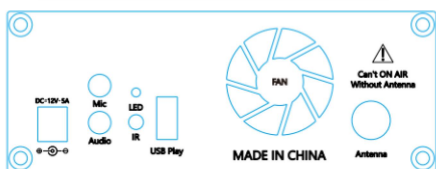

- 5 DC12V input port
- 6 Microphone jack
- 7 Audio input jack
- 8 USB working indicator
- 9 Infrared reception
- 10 USB2.0 port
- 11 Fan
- 12 Output power Connector

Standby page

P:Power

F: Frequency

- Menu1.Po Set:Output Power Settings
- Menu2.Fr Set:Frequency Settings
- Menu3.Mo Set::MONO/Stereo Settings
- Menu4.Pe Set:r-emphasis Settings
- Menu5.Vo Set:Audio Volume settings
- Menu6.Mc Set:Microphone Volume Settings
- Menu7.Au Set:Audio Input settings
- Menu8.Rf Set:RF Power ON/OFF settings
- Menu9.Tem & Swr:Temperature and SWR
- Menu10.Data and time settings

Status display

Standby Page Display

P: 15.0W
F: 098.0M

When the DC12V Input,the transmitter is on air and the picture is the standby page.60 seconds later it will close the screen and touch the button will turn on the screen.
(Factory settings usually P: 2.0W F:98MHz).

Alarm Display

Swr Over
Rf Off

If the transmitter display SWR over Rf Off,that means the SWR is large than 2.0,So the transmitter turn off the power output.Please cut the DC12V and adjust the antenna and connecting wire.Then reboot the transmitter.

Temperature and SWR(Voltage Standing Wave Ratio)
Display

Tem: 33C
Swr: 1.0

Tem display the amplifier temperature

SWR display the antenna SWR

operation

Output Power Settings

Range:0-15W

1. Po Set
15.0 W

On the standby page

- 1 Turn the button when it display menu1.Po Set
- 2 Press the button when the XX.XW is flashing
- 3 Turn the button left or right to change the power
- 4 Press the button to Save the settings and return to the standby page.

Frequency Settings

Range:87.8-108MHz(76-96MHz)

2. Fr Set
098.0MHz

On the standby page

- 1 Turn the button when it display menu2.Fr Set
- 2 Press the button when the XXX.XMHz is flashing
- 3 Turn the button left or right to change the frequency
- 4 Press the button to Save the settings and return to the standby page.

MONO/Stereo Settings

Options: MONO/Stereo

3. MO Set Stereo

On the standby page

- 1 Turn the button when it display menu3.Mo Set
- 2 Press the button when the MONO/Stereo is flashing
- 3 Turn the button left or right to change the Mode
- 4 Press the button to Save the settings and return to the standby page.

Pr-emphasis Settings

Options: 0uS/25uS/50uS/75uS

4. Pe Set 50uS

On the standby page

- 1 Turn the button when it display menu4.Pe Set
- 2 Press the button when the 0uS/25uS/50uS/75uS is flashing
- 3 Turn the button left or right to change the Pr-emphasis
- 4 Press the button to Save the settings and return to the standby page.

Audio Volume settings

Range:17-99%

5. Vo Set 50%

On the standby page

- 1 Turn the button when it display menu5.Vo Set
- 2 Press the button when the XX% is flashing

3 Turn the button left or right to change the Audio volume

4 Press the button to Save the settings and return to the standby page.

Microphone Volume Settings

Range:17-99%

6. Mc Set 60%

On the standby page

- 1 Turn the button when it display menu6.Mc Set
- 2 Press the button when the XX% is flashing
- 3 Turn the button left or right to change the Microphone Volume
- 4 Press the button to Save the settings and return to the standby page.

Audio Input settings

Options: Line/USB

7. Au Set Line

On the standby page

- 1 Turn the button when it display menu7.Au Set
- 2 Press the button when the Line/USB is flashing
- 3 Turn the button left or right to change the Audio Input
- 4 Press the button to Save the settings and return to the standby page.

RF Power ON/OFF settings

Options: Line/USB

8. Rf Set ON

On the standby page

- 1 Turn the button when it display menu8.Rf Set
- 2 Press the button when the ON/OFF is flashing
- 3 Turn the button left or right to change the RF Power ON/OFF
- 4 Press the button to Save the settings and return to the standby page.

Data and time settings

23-09-22
16-20-58

On the standby page

- 1 Turn the button when it display Time
- 2 Press the button when the characters are flashing
- 3 Turn the button left or right to change the data and time
- 4 Press the button to Save the settings and return to the standby page
- 5 Time is not saved after reboot.

Suitable Model:

GD-2015S 15W FM Transmitter

GD-2025S 25W FM Transmitter

GD-2015S-ALL FM Kits

GD-2025S-ALL FM Kits

