项目:智能充气泵


版本: V1.0


材质: 书纸 印刷:单色印刷


厚度: 80g

尺寸: 70x100mm 方式: 风琴折

封面

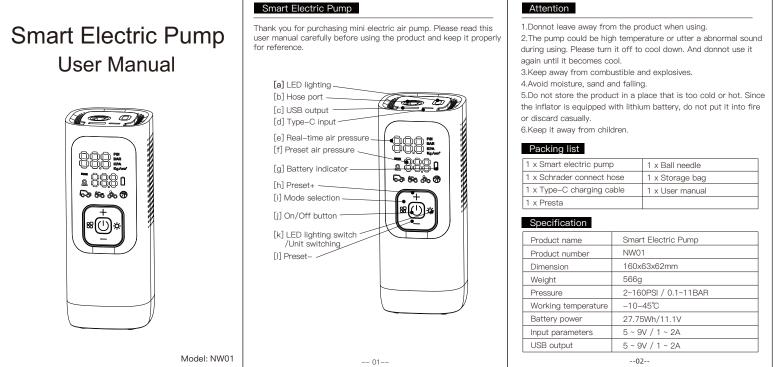

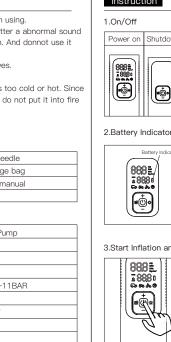

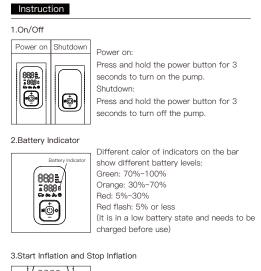



In the power-on state, short press the

ir pressure value is reached.

start-stop button to start the inflation and


automatically stop inflation when the preset

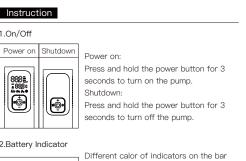


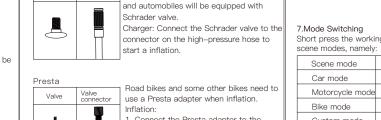

5.Connect Valve to Hose

  4.Charging





Type-C charging input 5V:::2A.

ump and the power adapter

charging.
When the indicator bar is solid green:

fully charged.
Tips: The pump cannot be used during

and automobiles will be equipped with

ot included) to the pump for charging.

 
nen the indicator bar is flashing green:

Use the charging cable to connect the

Valve valve connector The bicycles, electric bicycles, motorcycles,

Short press [(*)] to switch the air pressure display unit.

Unit conversion formula: 1BAR = 14.5PSI



need to be filled with a ball needle. Inflation: After pressing the ball needle and the Schrader connector firmly, insert the needle into the filling hole of the ball

6. Check The Air Pressure
Real-time pressure
to Inflate.

Real-time pressure
the pump is power-on, the gas
the charging the pump display Half of the figures are measured air pressure values.

Short press the working mode button [88] to select 5 inflating

ic modes, namely.					
Scene mode	Suggested value	Adjustable range			
Car mode	2.4BAR	0.1-4.4BAR			
Motorcycle mode	2.7BAR	0.1-3.7BAR			
Bike mode	38PSI	2-150PSI			
Custom mode	100PSI	2-160PSI			
Ball mode	8PSI	2-15PSI			

9.LED Lighting Valve Valve Balls, such as basketballs and footballs, After a long press [🕸], the LED lighting is turned on, and a long

> [k]LED light, switch LED lighting - See 260 Ø9/ | 3



10.Preset Pressure Short press ☐: Adjust the preset air pressure value +/-0.5PSI.

press again will turn it off.

Long press : You can quickly adjust the preset air pressure Note: The scene switching and the preset air pressure value

 
software will be automatically saved, and the next time you use in you only need to switch the scene, and the preset air pressure value will be automatically set. 11.Calibration

After the power is turned on, the hose is not connected to the charging object. When the measured pressure value is not 0.0, press the key for 2 seconds at the same time, and the display wi return to normal after it is fully illuminated. Note: This product is reset at the factory. Due to altitude or sense


differences, when the measured air pressure value is not zero. manual reset can improve the air pressure accuracy. Calibration is not recommended at high temperature.

12.Checking the Suggested Pressure

In order to ensure safety, before charging, please check the needs of the charged items by reading the instructions and other means, to avoid any injury due to explosion caused by overcharging.



 load weight. For more detailed air pressure recommendations, please refer to the manual Air Pl of the relevant vehicle.





The filling pressure of balls such as balls, basketballs, and volleyballs is marked around the filling holes. The charging pressure is related to the load weight. For more detailed air pressure recommendations, please refer to the manual of the relevant ball.

Safety Precautions

When unscrewing the hose, the hose and joint will generate high temperature due to long-term work. Please do not keep in contact



Pressure Value of Common Products					
Category	Туре	Pressure Range			
	Stroller	18~30PSI			
	10~16inch tire	30~45PSI			
Bicycle	20~30inch tire	38~55PSI			
	Road bike	100~120PSI			
	Scooter/Wheelchairl/Moped	30~45PSI			
Motorcycle	Motorcycle	1.8~3.0BAR			
Car	Car	2.2~2.8BAR			
	Toy ball for kids	3~6PSI			
	Basketball	7~9PSI			
Balls	Football	10~12PSI			
	Volleyball	4~6PSI			

Rugby

--08--

10~14PSI

Slow inflation	Check whether the battery is fully charged. Check the air pipe for leaks. Check whether the connection parts at both ends of the air pipe are tightened. Check whether the inflated items are leaking.
Can't inflate on boot	Check whether the battery is fully charged. Check whether the current tire pressure is higher than the preset value.
The preset pressure	Check if you choose the incorrect mode, select the Custom Mode to adjust the preset value in the range of 2, 160PSI

	higher than the preset value.
The preset pressure cannot be adjusted.	Check if you choose the incorrect mode, selt the Custom Mode to adjust the preset value the range of 2–160PSI.
Can do inflate but the air pressure display does not change	Low-pressure products such as balloons a not within the measurable range of the devic 2. In the case of an empty tire, the tire press value can be displayed after a short period o inflation.
The inflator automatically shut down after connecting hose	The pump will shutdown automatically after 3 minutes with no operation, long press the sta button to restart.
There is leakage when connecting the hose	Tighten the hose
The color of the power indicators in charging state is different from that in standby state.	The power lithium battery has a significant volume during the discharge process, which cau the color of the indicator light in the charging and the standby state to be inconsistent. This phenomenon is not a malfunction.
The power indicator does not light up after charging	Replace with a safe and compliant charging c and adapter to recharge.

FECE PER SE

封底

SN: 500201 V1