



 
KODAK MEMO SHOT ERA MS100

User Guide Guide de l'utilisateur Kasutusjuhend Podręcznik użytkownika Benutzerhandbuch ユーザーガイド
guía del usuario Uživatelská příručka 사용자 설명서 Naudojtojo gidas Användarguide 单色热敏即时相机
Guida dell'utente Uživatelská příručka Käyttöohjeet Lietotāja rokasgrāmata Brugervejledning 用户指南

www.kodakphotoprinter.com



APP ↓

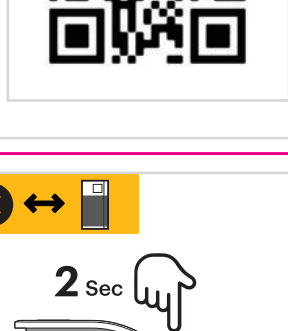

KODAK MEMO

 


Available on the App Store


ANDROID APP ON Google play




2 Sec

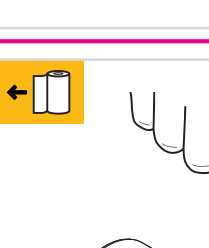


Android

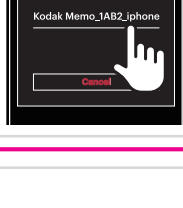 



iOS

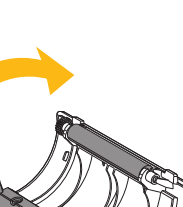 


1

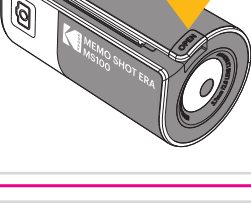 

2

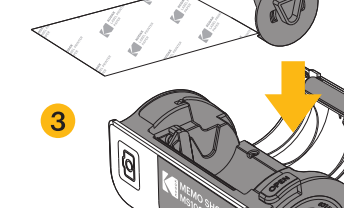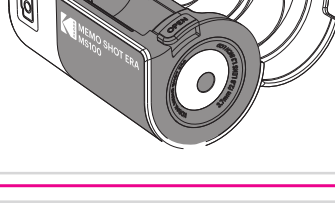  


3

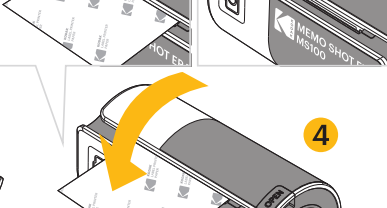 

4



 
1

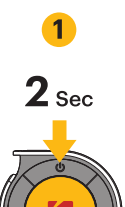

2 Sec



 
2

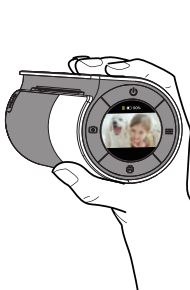

3



 
1

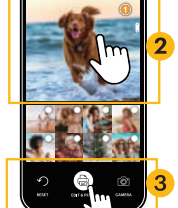

2



 3

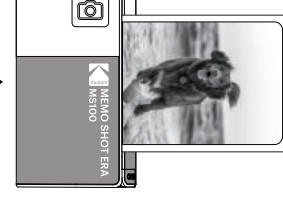



1




2



  
3

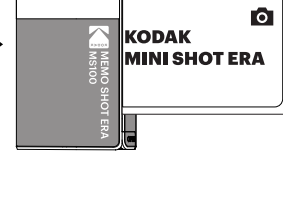

1

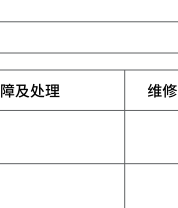 

2

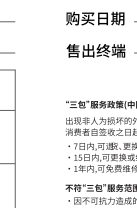 

3



产品保修卡 (主卡)

厂家留存联

产品SN码

客户姓名

联系方式

购买日期

售出终端

报修日期 故障及处理 维修员

产品保修卡 (副卡)

用户留存联

产品SN码

客户姓名

联系方式

购买日期

售出终端

"三包"服务政策(中国大陆地区)
出现非人为损坏的外观问题或性能故障,享有国家规定的三包服务。
消费者自签收之日起:
• 7日内,可退货,退货费自理;
• 15日内,可免费维修;
• 一年内,可免费修理。
本行"三包"服务期限:
• 因不可抗力造成的损坏,未经授权的维修,所保等;
• 长期(约3个月)未充电可能导致电池自然损耗,无法激活充电的。



120 MIN



- 1



- 2



- 3



 
- 4






- 5






- 1





- 2

   

- 3

   





- 4

  

- 5



    - 6



- 7



- 8



- 9



- 10

- 11

- 12

- 13

- 14

- 15

- 16

- 17

- 18

- 19

- 20

- 21

- 22

- 23

- 24

