Remoska® Tria

Návod k použití / Instruction booklet







Area

Rem	oska® Tria 3	
	Obsah balení	
	Kombinace výrobku	4
	Sklenÿná poklice	5
	Soft-tlakové víko 5	
	Peÿicí víko s topným tÿlesem and stator 5	
	Hrnec Remoska® Tria	6
	Bezpeÿnostní uzornÿní6	
	Teplotní odolnost výrobku 6	
Vaÿe	eni 7	
	Bezpeÿnostní uzornÿní8	
	Návod k použití	9
	Údržba (mytí a ÿištÿní)	
Peÿe	əní11	
	Bezpeÿnostní uzornÿní11	
	Návod k použití14	
	Údržba (mytí a ÿištỳní)	15
Duše	eni16	
	Bezpeÿnostní uzornÿní	16
	Návod k použití	
	Údržba (mvtí a ÿištÿní)	19

Remoska®Trios

We would like to thank you for the fact that we have purchased traditional Czech products REMOSKA®, which has been used in Czech cuisine since 1957 and is constantly available. Pro své široké použití si našla REMOSKA® oblibu nejen nejen v Czech republice, ale iv zahraniÿí.

The Remoska® Tria multicooker is a multifunctional kitchen, which is combined with different kitchen functions/pomocníky.



The area of the ball



Combinations of production



The sloping wall



Sklenÿná poklice is vyrobena z vrzeného bezpeÿnostního skla, which is eaten after opatÿeno silicone tÿsnÿním. Speciální profi l okraje poklice is šetrný k okrajÿm hrnce and zá-roveÿ pÿirozenÿ regulates multiple different aspects of hrnce. The society regulates the health and safety of people in general.

Soft-touch screen



Soft-tlakové víko víným s omjemným hrncem it ideálním pomocníkem pro malý zpÿsob šetrného vaÿení under the mírným tlakem, které v pÿipravovaném pokrmu zachovává všechny minerály a vitamins. Sklenÿná poklice is vyrobena z vrzeného bezpeÿnostního skla, which is covered with silicone.

Patentovaný zpÿsob uchycení víka umožÿuje ovládání (otevÿení a zavÿení víka) pomocí one rule. It has a regulated vent with a silicone cover and a solid vent.







Peÿicí víko s topným tÿlesem and stator

Horní ÿást víka je vyrobena z nerezového plechu. Dolní ÿást víka je z hliníku and je potažena nepÿilnavým povrchem. Teplo z víka, kde je umístýno topné tÿleso, je pÿenášeno stÿnami hrnce až na dno hrnce a potravina je ted ohÿívána ze všech stran.

Uvnitý hrnce is optimální teplota pro peÿení potravin 160–180 °C. Pÿebyteÿná pára, vznik-kající pÿi peÿení, je odvádýna ÿtyÿmi dutými šrouby ve víku, upravované potraviny se tedy nevysušují, zÿstávají mÿkké, šÿavnaté and keep it safe.

Peÿicí víko má sklenÿné okénko. Pÿívodní cable with euro connector and zástrÿkou dle žadavkÿ zákazníka nebo bÿratele it odnímatelný from držadla. It should be adjusted to the highest level, so that the control of the **zap/vyp** rate can be achieved in any position. Umístýní vypínaÿe on horní ÿásti držadla usnadÿuje ovládání pro praváky and leváky.

This is how it is done so that it can be položeno on the work floor and the time it takes to get there. Souÿástí balení is a practical stojan under the hrnec, which is vyroben with a thermal insulation layer.

4 H

Hrnec Remoska® Tria



Základem eats a large portion, which is eaten with vnitÿní and vnÿjší ÿásti potažen vícevrstevným nepÿilnavým povrchem. K hrnci jsou pÿipevnÿny dva úchyty. It is made of high- quality material, temperaturecontrolled up to 220 °C and therefore easy to handle. Díky nerezovým teplotním mÿstkÿm zÿstávají úchyty pÿi vaÿení vždy studené.

Safety precautions



GUISE!!!

V pÿípadÿ poškození elektrické ÿásti pÿístroje (pÿívodní kabel, topné tÿleso, vypínaÿ) VŽDY vyhledejte odborný servis. Pÿístroj after opravÿ MUSÍ projít elektrickými tests! To ensure that the electric power supply is not damaged, there is no need for any electrical wiring. Peÿicí hrnec s nepÿil-navým povrchem lze používat to teploty max. 220°C.

Výrobce neodpovídá za škody a zranÿní zpÿsobené nesprávným používáním spotÿebiÿe (napÿ. znehodnocení potravin, poranÿní, popálení, opaÿení, požár) a není odpovýdný ze záruky za spo-tÿebiÿ v pÿípadÿ nedodržení výše uvedených bezpeÿnostních uzornÿní. Výrobek po dobÿ ukonÿení jeho životnosti neumis- ÿujte to bÿžného waste!

Thermal efficiency of production

Temperature to °C	Trouba
220°C	✓
220°C	✓
80 °C	×
80 °C	×
	220°C 220°C 80°C

Pÿed použitím Remoska® Multicooker Tria si peÿlivÿ pÿeÿtÿte návod k použití.

Vareni







Vhodné i pro pomalé vaÿení, pro pÿípravu polévek, pÿíloh, omáÿek apod.

Rovnomÿrný and rychlý disvod tepla takes 8 mm to the bottom of the hrnce. The bottom of it is to use it for the first time on different wooden boards.







induction





electric telepho

El. Canvas

Nepÿilnavá vrstva hrnce it is free from harmful substances PFOA. Hliníková slitina is opatýená vícevrstevným nepÿilnavým povrchem, it is odolnost it zvýšena vyztužením slídami oxidý titanium. Takto vyztužená nepÿilnavá povrchová úprava je výrazný odolnýjší proti otýru nebo mechanickému poškození.

First name first name	28cm
Highlander	13 cm
Doporuÿená maximální výška pokrmu pro peÿení	6–8 cm
Doporuÿená maximální výška pokrmu pro vaÿení	9.5 cm
Využitelný objem pro peÿení	3 liters
Využitelný objem pro vaÿení	5.5 liters

Safety precautions

- Pÿed prvním použitím umyjte ÿásti, které pÿijdou s potravinami, v horké vodÿ s pÿídavkem saponátu, dÿkladnÿ opláchnÿte ÿistou vodou and vytÿete to dry.
- Vnitýní plochu nádoby vytýete tukem nebo oil (buýto prstem nebo help ubrousk).
- 3. It takes about 3 minutes (liquid, electric sponge, sklokeramická board) and about 1 minute (inductive spore), after taking the time to apply the papírovým ubrouskem.

<u>\</u>

GUISE!!!

Nepoužívejte maximální výkon sporáku delší dobu u prázdné nádoby (hlavnÿ u indukÿního vaÿiÿe), mohlo by dojít k pÿepálení nádoby a tím k znehodnocení antiadhezního povlaku (napÿ.: pÿi použití max. výkonu u plynového a elektrického sporáku a sklokeramické boardy po dobu nad 8-10 minut au indukÿního vaÿiÿe po dobu nad 2-3 minut se mÿže teplota nádoby vyšplhat až na 300–350 °C!!!

The maximum temperature is 250 °C!!!

Pÿi vyšších teplotách mÿžou plastové ÿásti odor.

 Let it cook for 1-3 minutes at 150-180 °C dle vaÿiÿe friend. Watch out for visa advice. bod ÿ. 3.

DOPORUÿENÍ: Pro ovÿÿení optimální teploty nádoby doporuÿujeme provést "zkoušku vodou" so that it is nádoby stÿíknÿte pár kapek vody, which will be pÿi správné teplotÿ rozprsknou, zaÿnou perlit a it will disappear guickly. Teprve tehdy má nádoba op-timální teplotu.

After provenení "zkoušky vodou" and then vložte suroviny to nádoby, which you want to vaÿit, vou can smear it.



Bÿhem používání se nedotýkejte nádoby (vyjma plastových držadel), protože je HORKÁ!

Nádobí LZE užívat v troubÿ (napÿ. elektrické/plynové/horko-vzdušné). GUISE!!! V tomto pÿípadÿ budou plastové úchyty HORKÉ!

Please make sure that people are not affected by it!

DOPORUŸENÍ: Let's take a closer look at the electrical connections and the electrical connections, as well as the connections to the top of the spirály. Zejména u starších trouby mÿže docházet k pÿehÿátí vrchní ÿásti trouby (280–320 °C), which is why it is necessary to povolené teploty (max. 220 °C).

There is no need to take care of any damage to the plastic parts or to remove any damages .

To use

In the case of fluids, **we need to** use liquid materials to dissolve them. After warming up, set the temperature to 150-180 °C (for 1-3 minutes for a second time) and then mix it up. pokrm to nádoby, nechejte chvíli zatáhnout a poté pokraÿujte v úpravÿ už na stÿedním nebo nižším stupni teploty.

-8

Velkou výhodou tÿchto nádob je, že neabsorbují pachy, so v one nádobÿ lze vaÿit, smažit i péct.



V našem nádobí se negosíte uÿit vaÿit. Vaÿite, as jste zvyklí, pouze se nauÿite ovládat tepelný zdroj. Nádobí alboeÿnÿ ne- pÿehÿívejte – šetÿite energy and vlastní peníze!

Údržba (mytí and ÿištÿní)

- Hrnec umyjte ve vlažné vodý s pýídavkem saponátu, opláchnýte her a vysušte.
- On my part, I have no idea what to do with it, and I don't know what to do with it.
- It's possible to think about it, I think about it, it's NEDOPORU-WE FEEL.
- Používejte pouze dÿevÿné and umÿlohmotné kuchyÿské náÿiní.
- Nepoužívejte kovové náÿiní!
- Prázdné nadoby will never be disposed of.



There is no need for storage, no need for storage, no need for storage.

Pÿi skladování kyselých nebo zásaditých pokrmỹ (jako je napÿ. leÿo, rajská omáÿka, kysané zelí, feferonkového guláše apod.) in nádobí, mÿže dojít k loupání povlaku.

Neskladujte nádobí s potravinami v lednici ani v mrazáku.

Minor deviations from the purpose of the work, the way it works, the way it works, the way it works, the way it works, no need to pay attention to the costs.

Peÿeni









Vhodné pro peÿení masa, domácího bread, buchet, dinners, pizza and more.

Elektrické peÿicí víko zn. Remoska® udÿlá z hrnce starou známou elektrickou peÿicí mísu zn. Remoska®. Mÿžete v ní pÿipravit všechny druhy mass, zeleninu, slané and sladké food.

Nejvhodnýjší použití je pro peÿení and zapékání, ale využít také pro ohÿívání and rozmra-zování. Pÿíprava jídel odpovídá zdravé výživÿ and diet.

Safety precautions

If they are connected to the cable, they must be equipped with a service, a service technician, and a similar person to take care of the situation.



HORKY POVRCH

Díly takto oznaÿené jsou velmi horké (víko, opÿrka, stator).



SAFE!!!

Ve víku je umístýno topné týleso. Víko je býhem pýípravy po-krmý **VELMI HORKÉ** and zÿstává horké i po vypnutí hlavního vy- pínaÿe. **NEDOTÝKEJTE** se býhem pýípravy pokrmý povrchu víka nor ostatních kovových ÿi sklenýných ÿástí. Pro manipulation s víkem používejte jen plastové držadlo.

Spotÿebiÿ není urÿen pro zapojení prostÿednictvím vnÿjšího ÿasového spínaÿe nebo dál-kového ovládání.

Tento spotýebiý mohou používat dýti ve výku 8 let a starší. People with mental health and mental health issues should be informed about their safety and security under the supervision of a understandable, nebezpeýím. Dýti si se spotýebiýem nesmýjí hrát. ýištýní a údržbu provádýnou uživatelem nesmýjí provádýt dýti, pokud nejsou oldší 8 let a jen under supervision. Dýti mladší 8 let se must držet despite the dosah spotýebiýe a jeho pýívodu.

Spotÿebiÿ v ÿinnosti must bet vždy umístÿn on a given basis.



GUISE!!!

In this way, you will need to work on it, but it will work fine in the future. **OBRÁCENÿ** (see: Pro tuto polohu je navrženo držadlo a opÿrka. After completing the process, **take a closer look** at the electronics. Nechte vše vychladnout.





ŠPATNÿ

CORRECTLY

Pÿed ÿištÿním, údržbou nebo after ukonÿení práce, spotÿebiÿ vypnÿte and odpojte od elektrické sítÿ vy-tažením vidlice z elektrické zásuvky!





Odnímatelný cable must be disconnected in order to disconnect it from elektrické zásuvky.



SAFE!!!

Pÿístroj **NEPOUŽÍVEJTE** ve vlhkém prostÿedí ani na pÿímém desti!

Pÿístroj umístÿte despite the dosah dÿtí and domácích mazlíÿkÿ!

Chovatelým domácích zvíýat/ptactva pÿipomínáme obec- nou zásadu: Umístýní a pýitomnost domácích zvíýat in the kitchen je nežádoucí.

Pÿístroj neumisÿujte to blízkosti plastových and hoÿlavých pÿedmÿtÿ.

On the right side of the page, on the right side of the page . uÿrkou apod.

GUISE!!!

- Víko nesmí být ponoÿeno do vody!
- Víko neomývejte pod tekoucí vodou!
- Proto pro mytí víka NEPOUŽÍVEJTE automatickou myÿku!





To use

Pÿed prvním použitím umyjte ÿásti, které pÿijdou do sku s potravinami, v horké vodÿ s pÿí- davkem saponátu and dÿkladnÿ them vysušte. It is necessary to fill it up to 2/3 of the size of the bowl (max. 6–8 cm) so that it can be combined with the top and bottom of the bowl.

Remoska® Tria není vybavena regulací, protože work stejnomýrný and negosíte se tedy obávat, že pÿipravovaný pokrm pÿipálíte. Teplota uvnitý hrnce je 160–180 °C (teplota je závislá na množství a druhu potravin).

NEPŸEDEHŸÍVAT TOPNÉ VÍKO NEBO CELOU REMOSKU WITHOUT POTRAVIN!!!

At the end of the day, there is no need for any soft tissue, just for the time being, there will be no need for help, so to speak. "dry" is the way to go after the next step. Pokud potÿebujete hrnec pÿedehÿát, pak do nÿj nalijte malé množství vody and tu po zahÿátí hrnce vylijte a hrnec vysušte. Do-poruÿujeme zvedat víko bÿhem pÿípravy pokrmÿ jen v nejnutnÿjších pÿípadech, pokrm se ÿastým otevíráním vysušuje.

Peÿicí víko Remoska® Tria is vyrábÿno se ÿtyÿmi šrouby dutými. Díky tomu jsou zachovány optimální podmínky pro peÿení. It's important to control your situation and sometimes get blinded by neÿistotami/ pÿipeÿenins.

First of all, there is a lot of information about it, there is no information about it, there is no information about it; pÿebyteÿná pára je odvádÿna ventily ve víku. Pÿipravené pokrmy zÿstávají šÿavnaté, vláÿné and nevysušují se dlouhým peÿením as in classic troubÿ.



GUISE!!!

Let's take a closer look at it, let's take a closer look at it, and then we'll take a closer look at it.

Pro míchání and uvolÿování pokrmÿ from stÿn nebo dna **NEPOU-ŽÍVEJTE** ostré and kovové nástroje. Mohlo by dojít k poškození nepÿilnavého povrchu! **POUŽÍVEJTE** vždy jen dÿevÿné nebo plastové nástroje. **Never neporcujte pokrm v hrnci!**

Mezi víko a nádobu nevkládejte alobal, peÿicí papír ani cokoli jiného!

Doporuÿené ÿasy pÿípravy pokrmÿ viz. Kuchaÿka RECIPES from Remosky mohou být ovlivnÿny nestable elektrickou sítí.

Vždy odpojte spotÿebiÿ with elektrické sitÿ, pokud her necháváte without supervision.

There is a connection between the cable and the power supply, and then it is disconnected from the electric power supply and it is still not in use.

Údržba (mytí and ÿištÿní)

Peÿicí víko mÿže být ÿištÿno až after úplném vychladnutí and odpojení from elektrické sítÿ.



GUISE!!!

- Víko nesmí být ponoÿeno do vody!
- Víko neomývejte pod tekoucí vodou!
- Proto pro mytí víka NEPOUŽÍVEJTE automatickou myÿku!





Spodní ÿást víka otÿete vlhkou houbiÿkou (nepoužívejte její drsnou plochu) namoÿenou v teplé vodÿ se saponátem.

Horní ÿást is vyrobena z leštÿného nerezového materiálu. Ani v tomto pÿípadÿ **NO ONE** nepoužívejte ÿistící prášky s abrazivními ÿásticemi nebo drsnou plochu mycí houbiÿky. Mohlo by dojít k jeho poškrábání!

Please take a moment to ask questions, please take a moment to ask questions. Díky kvalitnímu nepÿilnavému povrchu is mytí velmi snadné – aid of the saponátu and mÿkké strany houbiÿky washed bÿžným with pÿsobem.

Suffocating







Vhodné pro pÿípravu dušeného mass, guláše, ragÿ, zeleniny apod.

Soft-tlakové víko is speciálný funkýný navrženo pro malý zpýsob šetrného vaýení under the mírným tlakem, které v pýipravovaném pokrmu zachovává všechny minerály a vitamíny. Soft-tlakové víko v combinaci s objemným hrncem it ideální pro pýípravu masitých po-krmý and vývarý.

- Speciální víko simulující slowly zpÿsob šetrného vaÿení under mírným tlakem.
- Víko mýžete kdykoliv býhem vaýení sejmout z hrnce.
- It comes from a different silicone container.
- It has a regulated vent with a silicone cover and a solid vent.
- Jednoschý mechanismus otevírání/zavírání víka pomocí jedné ruky.
- Díky šetrnému vaÿení pod mírným tlakem jsou zachovány všechny vitamíny a živiny.

Safety precautions

- Pÿed použitím soft-tlakového víka peÿlivÿ prostujte návod k použití.
- Pÿi výskytu poruchy nepokraÿujte v používání soft-tlakového víka a kontaktite svého prodejce nebo servisní odÿlení Remoska sro
- Soft-tlakové víko nesmí být otevíráno a zavíráno silou.
- Hrnec se soft-tlakovým víkem nezahÿívejte prázdný, došlo k jeho poškození.
- Nepoužívejte hrnec v kombinaci se soft-tlakovým víkem ke smažení.

- Please note that this is the way to go in order to make it better (pokud ne u sym-bolu zámku se objeví ÿervený bod).
- Open to the question, despite the service requirements.



On the side of the soft-tlakového víka se sráží kapky vody. Pÿi otevÿení víka mohou stékat, hrozí opaÿení.

GUISE!!!

- nepÿehÿívejte prázdný hrnec
- pro úsporu energie nepoužívejte vetší rozmÿr plotýnky
- díky vynikající vodivosti and rozložení tepla je možné hrnec použít and on menších plotýnkách
- používejte dÿevÿné nebo silicone kuchyÿské náÿiní
- take care of your safety and health

To use







správná poloha

– ÿerný bod u symbolu

- 1. Put the ingredients into the saucepan
- Umístÿte soft-tlakové víko on hrnec do správné polohy (zasunutí kovových táhel softtlakového víka to pÿíslušných úchytÿ on hrnci)







správná poloha ventilu – lehký odvod páry

3. After using the soft-tlakovou poklicí, you will have to take care of the time – ventilate it to the maximum polohy/výše, avoid it with a lot of pressure. Stáhnÿte teplotu vaÿiÿe/ zdroje tepla, tím snížíte tlak v hrnci, množství páry a ventil bude vytlaÿen do správné polohy (cca ½ maximální výšky ventilu).



GUISE!!!

V pÿípadÿ nesprávného uložení víka na hrnec (bod u symbolu uzamÿení zámku víka je ÿervený viz. dobre ÿ. 5) pÿitlaÿte plastové kraj víka viz. rev. ÿ. 6 táhla se zasunou na pÿíslušná místa do držadel.







GUISE!!!

From the bottom of the head to the bottom of the soft-tlakové víko to the right polohy (see: ÿ. 2 výše) from the bottom to the bottom of the head and to the end of the screw.





Údržba (mytí and ÿištÿní)

Pÿed prvním použitím otÿete víko vlhkým hadÿíkem.

DOPORUŸENÍ: Pokud je to možné ihned po ukonÿení pÿípravy jídla vyÿistÿte soft-tlakové víko a všechny díly, to pÿípadné neÿistoty na víku nezaschly.

Hrnec a soft-tlakové víko nedoporuÿujeme mýt v myÿce.

Postup detailed demolition and soft-tlakového víka available at www.remoska.eu.

Remoska® Tria

Návod k použití / Instruction booklet







Contents

Remo	oska® Tria23	
	Package contents	
	Product combination	
	Glass lid	
	Soft-pressure lid	
	Baking lid with removable cable and stand	
	Remoska® Tria Sweat	26
	Safety Warning	
	Temperature guide	
Cook	king27	
	Safety Warning	
	Instructions for use	
	Care and Cleaning	
Bakir	ng31	
	Safety Warning	
	Instructions for use	
	Care and Cleaning	35
Stewi	ring	
		24
	Safety Warning	36
	Instructions for use	
	0	

Remoska® Tria

We thank you for purchasing our product, made by the traditional Czech Brand, REMOSKA®, which has been used in Czech kitchens since 1957 and is still popular today. REMOSKA® has gained popularity not only in the Czech Republic, but also internationally thanks to its versatility.

The Multicooker Remoska® Tria is a multi-functional kitchen appliance with three different lids, turning one cooking pot into three varied kitchen appliances.



Package contents



Product combination







The glass lid is made from hardened safety glass, and has a silicone seal around the edge. The soft silicone edge helps regulate the amount of steam released from the pot. Together with the steam vent, you can cook healthy meals using only a small amount of water.

Soft-pressure lid



The soft-pressure lid, combined with the large cooking pot, is ideal for slow cooking under moderate pressure, keeping all the minerals and vitamins you want and need in the food. The glass lid, made from hardened safety glass, has a silicone seal around the outer edge.

The patented lid allows you to easily open and close the lid with one hand. A regulation valve is located on the lid with a silicone covering and safety valve.





Baking lid with removable cable and stand

The upper part of the lid is made from stainless steel. The lower part of the lid is made from aluminum and has been coated in a non-stick surface. The heat from the lid, where the heating unit is located, heats the sides of the cooking pot through to the bottom of the pot, allowing the food to cook from all sides.

160–180 °C is the optimal temperature range for baking food inside the cooking pot. The lid helps to keep food from drying out and keeps in all the important flavours, whilst four steam vents releases excess steam and regulates the temperature inside the pot.

The heated lid has a small glass window, and by popular request, we have made the lead removable. To make the **on/off** switch easily accessible, we have put this on the handle to accommodate both left and right-handed people.

When taking the lid off the sweat, rest the lid on the worktop heat side up using the built in thermal resistant stand to avoid damage to your worktop.



Remoska® Tria Sweat



The base is a cast aluminum alloy cooking pot coated with a multi-layered, non-stick surface on both the inside and outside, reinforced to resist scratches from everyday use and is PFOA free. The bottom of the cooking pot is 8 mm thick and heats quickly and evenly on all hobs, including induction.

Safety Warning



ATTENTION!!!

ALWAYS find an expert service provider in the event of damage to any of the electrical parts of the machine (supply cable, heating unit, switch). The machine **MUST** pass electrical test -ing after it has been repaired. In order to not injure or be injured by the electrical current, **NEVER** perform any repairs or make any changes to the supply cable yourself.

The manufacture is not responsible for any damages or injuries caused by the incorrect use of the appliance (ex. food spoilage, injuries, burns, scalding burns, fi res). The manufacture is also not responsible to uphold the guarantee in an event where the safety notices stated above have not been kept. Do not throw the product away in the common waste after its life span has ended.

Temperature guide

	Heat resistant up to °C	Ovenproof
Sweat	220°C	✓
Glass lid	220°C	✓
Baking lid	80 °C	×
Soft-pressure lid	80 °C	×

Carefully read the instructions for use before using the Remoska® Tria Multicooker.

Cooking







The cooking pot is ideal for cooking soups, sauces, etc.

The base is a cast aluminum alloy cooking pot coated with a multi-layered, non-stick surface on both the inside and outside, reinforced to resist scratches from everyday use and is PFOA free. The bottom of the cooking pot is 8 mm thick and heats quickly and evenly on all hobs, including induction.



ceramic



induction





radiant

electric

The handles on the cooking pot are made from a high-quality thermal insulated material and heat resistant up to 220 °C, allowing for safe handling. The handles always stay cool during cooking on the hob thanks to their thermal, stainless steel connecting fl ame guards.

Diameter of the pot	28cm
Height of the pot	13 cm
Recommended max. height of food for baking with the heated lid	6–8 cm
Recommended max. height of food for cooking with the glass lid & soft-pressure lid	9.5cm
Max. baking with the heated lid capacity	3 liters
Max. cooking with the glass lid & soft-pressure lid capacity	5.5 liters

Safety Warning

- Before the pot's first use, wash the sections that will come in contact with food in hot water and detergent. Thoroughly rinse the sweat with clean water then wipe until dry.
- 2. Wipe or spray the inside surface of the cooking pot with oil.
- 3. Heat up the cooking pot over a medium heat for about 3 minutes on either a gas, electric stove, glass-ceramic hob, or for approx. 1 minute on an induction hob.
 Leave the pot to fully cool down. Then wipe the cooking pot again with a dry cloth.



ATTENTION!!!

Do not heat the cooking pot over a high heat when empty. Doing this will burn the cooking pot, causing the coating to deteriorate. Eg.: Pre-heating on the highest temperature on a gas, electric or glass-ceramic hob for longer than 8–10 minutes or for longer than 2–3 minutes on an induction cooker could cause the temperature to rise to 300–350 $^{\circ}$ C

The maximum recommended temperature for the non-stick coating is 220 $^{\circ}\text{C}.$

The plastic parts may start to smell at high temperatures.

 Always pre-heat the cooking pot for 1–3 minutes on a heat between 150–180 °C (timing depending on the type of cooker) before every use.

RECOMMENDATION: We recommend doing a 'water test' in order to check if the cooking pot has heated to the optimal temperature. Drop a few drops of water into the cooking pot, which should burst at the optimal temperature and start to fizzle and quickly vaporize.

5. Immediately place your ingredients that you want to cook, bake or fry into the cooking pot after having performed the "water test".



Do not touch the cooking pot while it is in use on the hob (except by the plastic handles). The cooking pot will be HOT!

The cooking pot can be used in the oven (ex. electric/gas/convection). The plastic handles will get **HOT** if in the oven.

Take special care that children and unauthorized persons do not touch the cooking pot.

RECOMMENDATION: When using the cooking pot in a gas or electric oven with upper heating, we recommend placing the cooking pot as far away as possible from the heating coils to avoid overheating above recommended temperature of 220 °C.

Overheating may cause an unpleasant odor to come from the plastic or non-stick coating, and will cause damage to the cooking pot.

Instructions for use

Upon heating up the cooking pot to the correct temperature, 150-180 °C (which takes approximately 1-3 minutes, based on the type of stove – you can check the correct temperature-perature using the water test, see point no. 5 above), place your meat or other food items into the cooking pot, leave them for a short while at this temperature and then continue to adjust the temperature to either a medium heat.



You don't have to learn how to cook to use our cookware. You can cook just as you are accustomed. You will only need to learn how to control the heat source. Do not overheat the cookware – you will save both energy and money!

Care and Cleaning

- Wash the cooking pot in warm soapy water, rinse and dry thoroughly.
- The cooking pot is dishwasher safe, however WE RECOMMEND YOU hand wash to protect the non-stick coating.
- Do not use abrasive cleaners, or steel wool on any part of the heated lid or cooking sweat.
- Do not use metal utensils.
- Use only wooden and plastic kitchen utensils



Do not use to store food. The cooking pot is for cooking, not for storing.

The coating may start to peel if you store acidic or alkaline food (e.g. pepper stew, tomato sauce, chilli con carne, etc.) in the cooking pot.

Do not store the cooking pot with food in the refrigerator or freezer

Over time, there will be general wear and tear on the appearance of the cooking pot. The better care you give to the cooking pot and its non-stick coating, the longer the cooking pot will last

Baking









Suitable for roasting meat, baking home-made bread, cakes, tarts, pizzas, etc.

The REMOSKA® electric baking lid will turn the cooking pot into the well-known REMOSKA® electric cooking pot. Proven most suitable for cooking as well as warming and thawing food, the Remoska is great for cooking all types of meat, vegetables, savory and sweet dishes in a healthy and nutritious way.

Safety Warning

Do not use this appliance if the lead is damaged. It must be replaced with a special lead by the manufacturer.



HOT SURFACE

Surfaces marked with this symbol are very hot (lid, support, stand)



DANGER!!!

The lid contains the heating element. While cooking, the lid is **VERY HOT** and remains hot after the main switch has been turned off . **DO NOT TOUCH** the lid surface or other metal parts while cooking. Use the plastic handle for handling the lid.

The appliance should not be used with an external timer or remote control system.

This appliance can be used by children aged from 8 years and above, and persons with reduced physical and mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance.

Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Children younger than 8 years of age must stay out of reach of the appliance and its power supply.

The appliance must only be used on the stand provided on a dry, level, heat resistant surface.



CAUTION!!!

Do not put the lid down on the heated side of the lid. Always place it in the REVERSE position (see Fig.). The handle and support have been designed for this position. When you have fi finished cooking, switch off the appliance, TURN OFF the main switch and REMOVE THE PLUG from the mains socket. Leave everything to cool down before cleaning and maintenance.





WRONG

RIGHT

Switch off the appliance and disconnect it from the power supply by removing the plug from the electrical socket before cleaning, maintenance or after finishing w





The removable lead must only be disconnected from the appli- ance once it has been disconnected from the mains socket.



DANGER!!!

DO NOT use the appliance in a humid or damp environment.

Place the appliance out of reach of children and pets.

When using non-stick cookware or electric appliances with non-stick coatings, keep your pet birds out of the room. Birds have respiratory systems that are sensitive to many kinds of fumes, including fumes from overheated non-stick coating.

Do not place the appliance near plastic or infl ammable objects.

Do not place any objects on the appliance and do not cover the appliance.

CAUTION!!!

- Do not immerse the lid in water.
- Do not wash the lid under running water.
- . NEVER wash the lid in a dishwasher.





Instructions for use

Before using for the fi rst time, wash the pot & pot stand in hot, soapy water. Do not emerge the heated lid in water. Wipe clean with a clean damp cloth. Make sure all parts are clean and dry before assembling the product. We recommend filling the pan up to 2/3 of its height (6–8 cm max.) in order to avoid contact between the food and the heating lid.

The heated lid has one temperature setting in order to cook food evenly. The temperature inside the pan is 160–180 °C (the temperature depends on the amount and type of food in the pan).

DO NOT PREHEAT THE HEATED LID OR THE COOKING PAN WHEN EMPTY!!!

Pre-heating the cooking pot without any food inside, i.e. "dry heating" can result in damage to the non-stick coating on the heated lid and cooking pot. If you need to pre-heat the pot then pour a small amount of water or oil into the pot before applying the lid.

We recommend you lift the lid as little as possible during cooking as this will let heat and steam escape and cause food to dry out. Keeping the lid closed will keep your food succulent and meat shouldn't need basting.

The heated lid has four (screw) vents. They help to regulate the temperature and steam inside the cooking pot, unlike a standard oven. Check the screws after every few uses to ensure they are clear as over time they can become blocked.



WARNING!!!

Lifting the lid will reduce the temperature inside the cooking pot and therefore increase the cooking time. Always check your meat is cooked thoroughly.

DO NOT use sharp or metal utensils inside the cooking pot as this will damage the non-stick surface. **ALWAYS USE** wooden, plastic or silicone utensils. **Never cut up food in the pot!**

Do not line the pot with aluminum foil, baking paper or anything else between the lid and pan.

Always disconnect the appliance from the mains socket if leaving it without super-pervision.

If the power cable is damaged, immediately disconnect the appliance from the mains socket and discontinue

Care and Cleaning

Ensure that the lid has completely cooled and that the power is disconnected before cleaning.



CAUTION!!!

- Do not immerse the lid in water.
- Do not wash the lid under running water.
- NEVER wash the lid in a dishwasher.





Wipe the base of the lid with a clean damp cloth that has been soaked in warm soapy water, and dry thoroughly.

DO NOT use abrasive cleaners, or steel wool on any part of the heated lid or cooking pot.

The non-stick coating makes the cooking pot very easy to clean. If food sticks to the cooking pot, then leave to soak in warm soapy water, then wipe, rinse and dry thoroughly.

Stewing







Suitable for cooking stews, gou-lash, casseroles, vegetables, etc.

The soft-pressure lid is perfect for slow cooking under moderate pressure, to keep all the minerals and vitamins you want and need in the food. The soft-pressure lid combined with the large cooking pot is ideal for preparing stews and casseroles.

- · Special lid simulating the slow method of carefully cooking under moderate pressure
- You can remove the lid from the cooking pot at any time when cooking
- The lid is made from hardened safety glass with a silicone seal
- A regulation valve is located on the lid with a silicon covering, along with a safety valve as well
- Simple mechanism for opening/closing the lid only requiring the use of one hand
- All vitamins and nutrients are well preserved thanks to the method of slow cooking with moderate pressure.

Safety Warning

- Carefully study the directions for use before using the soft-pressure lid.
- If the soft-pressure lid stops working, do not continue to use and contact your seller or the service department at Remoska sro
- Do not open or close the soft-pressure lid by force.
- Do not pre-heat the cooking pot with the soft-pressure lid in place. This will damage the appliance.
- Do not use the cooking pot with the soft-pressure lid for frying food.

- Ensure that the lid handles are properly inserted into the pan handles (unless a red dot appears on the lock symbol).
- Aim the opening for releasing steam away from the area where you are working.



Condensation will build up on the soft-pressure lid inside the cooking pot. Take care when lifting the lid as drops of water may roll down and scald. Wear oven gloves to protect.

NOTICE:

- · do not heat up the cooking pot while empty
- to save energy, do not use a largesized hotplate the
- cooking pot can even be used on smallersized hotplates thanks to its excellent conductivity and heat distribution
- use wooden or silicon kitchen utensils
- ensure that the connecting rods are correctly inserted into the pot handles

Instruction for use







the circle next to the lock symbol is black when in correct position

- 1. Put ingredients in the pot
- 2. Place the soft-pressure lid on the pot in the right position (by sliding the metal rods of the soft-pressure lid to the relevant brackets on the pot)





3. Once the pot is sealed with the soft-pressure lid pressure develops inside the pot – the valve is pushed to the maximum position/height, a great amount of steam escapes from it. Lower the temperature of the cooker/heat source thereby reducing the pressure in the pot, the amount of steam and the valve will be pushed to the right position (approx. ½ of the maximum height of the valve).



WARNING!!!

If the lid is placed on the pot incorrectly (the circle next to the lock symbol is red, see Fig. No. 5) press down the plastic edges of the lid, see Fig. No. 6 and the rods will slide into the relevant place in the handles.







WARNING!!!

If the handles on the pot become loose, place the soft-pressure lid in the right position (see Fig No. 2 above) insert the rods through the lid and loosened handles and tighten the screws.





Care and Cleaning

Wash the softpressure lid in warm soapy water, rinse and dry thoroughly.

RECOMMENDATION: If possible, clean the softpressure lid and all other parts imme-diately after cooking to avoid food sticking to the lid.

We do not recommend washing the cooking pot or the softpressure lid in the dishwasher.

Access to a detailed disassembly and cleaning of the softpressure lid can be found at www.remoska.eu.



REMOSKA sro

Markova 1768, Frenštát p. R., 744 01, Czech Republic tel.: +420 556 802 601, e-mail: info@remoska.eu

www.remoska.eu