

4. Common Settings

- Language Settings Select Settings -> Language Settings in the main interface. Available languages are: Chinese, English, Japanese, Korean, Russian, French, German, Spanish, Portuguese
- Backlight Brightness Select Settings -> Backlight Brightness in the main interface. There are 5 levels of backlight brightness.
- Backlight Time

Select Settings -> Backlight Time in the main interface. There are 1 minutes, 2 minutes, 5 minutes, 10 minutes, and always on. The screen backlight will be turned off after the set time has elapsed.

Key Customization Button Custom: Select Settings -> Button Custom in the main interface. You can customize the button mapping of the body buttons or the gamepad.

Joystick light 16 million color RGB joystick lighting, support constant light, breath, rainbow, marquee, chasing, gaming and other light effects, support customize the color and adjust the brightness.

5.Game Settings

Game quality

divided into high-definition, scan line, fast, dot matrix. Different options will present different screen filter display effects.

Game streaming

First, make sure that the game console and the computer are under the same WIFI. Select Settings -> moonlight in the main interface. Enter the IP address of the computer to start pairing. Enter the PIN code to pair successfully and select Connect. During streaming, press menu+START to exit streaming.

Bluetooth Settings

First, select Settings->Bluetooth Settings in the main interface, select Enable Bluetooth, and press the X key to scan for devices in the Search device. Finally, select the controller you want to connect according to the device name.

6.Indicator light and charging function

The machine packaging matches 5V/1.5A four-line charging data cable.Plug in the charging cable and the machine will start charging.

The status of the device indicators is as follows:Red light on when charging, Green light on when fully charged, Red light twinkling when battery is low.

•Green light	Working
 Red light 	Low power
•Yellow light	Charging

7.RA Emulator Shortcuts

Menu	Menu
Menu+R2	Fast Forward
Menu+L2	Slow Motion
Menu+R1	Save State
Menu+L1	Load State
Menu+Y	Display Frame Rate
Menu+B	Screenshot
Menu+X	Pause
Menu+START	Quit
Menu+ -VOL+	Adjust Brightness
Menu+Left/Right Direction	Select Save State Slot

3.Game Import

OTG/USB

Insert a FAT32 formatted memory card into the external card slot of the game console, and a new folder for each platform will be created. Just put the game in the folder and select the game in the game rooms.

Supported platform are: ported games, PSP, PS1, SS, DC,NDS,N64,ARCADE,GBA,GBC,GB,SFC,FC,MAME, MD,GG,PCE,NGPC,SMS,WSC



Left shoulder button(L1)

Left shoulde button(L2)

F1/INT

12





- Note down the IP addresses of the two consoles by going to NETWORK SETTINGS -> IP ADDRESS In the RetroArch, enter the same game and call out the menu through the menu • Set it up with the following steps:
- Game console A (host)
- Select Netplay->Host->Start Netplay Host
- Game console B (slave)
- Select Netplay->Connect to Netplay Host, enter the IP address and press the START button to connect successfully

Get technical support services

https://win.anbernic.com

1. Main interface operation

Main Interface Menu:

2. Game Buttons and Ports

Indicator light HD

VOI

MENI D-Pad

SELECT

1 2

3

Δ

5

6 7

8

° (+ (૿ૡૼ	
1	Game Rooms	After entering, you can choose "Internal Card" or "External Card". And select the game platform to play the game.
2	RA Game	After entering, you can choose "Internal Card" or "External Card". And select the game platform to play the game.
3	App Center	Including video player, music player, e-book, file manager, expert mode.

Main interface operation

Game Buttons and Ports

Indicator light and charging function

Game Import

Game Settings

Online Play

Common Settings

RA Emulator Shortcuts

4	Favorites	Press the START button in the game center to collect the game, and the game will appear in this section.
5	History	The run game will appear in this section. History can be cleared in settings.
6	Search	Quickly search games from memory cards. The X key deletes the keyword and the Y key confirms the search result.
7	Settings	Contains all settings for the RG 40XXV. Including language settings, backlight settings, background settings, etc.

Power key

Right shoulder button(R2)

TF2/EX

RESET Right shoulder button(R1

START