


0-10V voltage input, connect the inverter



Hand wheel interface

12-24V input

GND
IN1
IN2
IN3
IN4
IN5

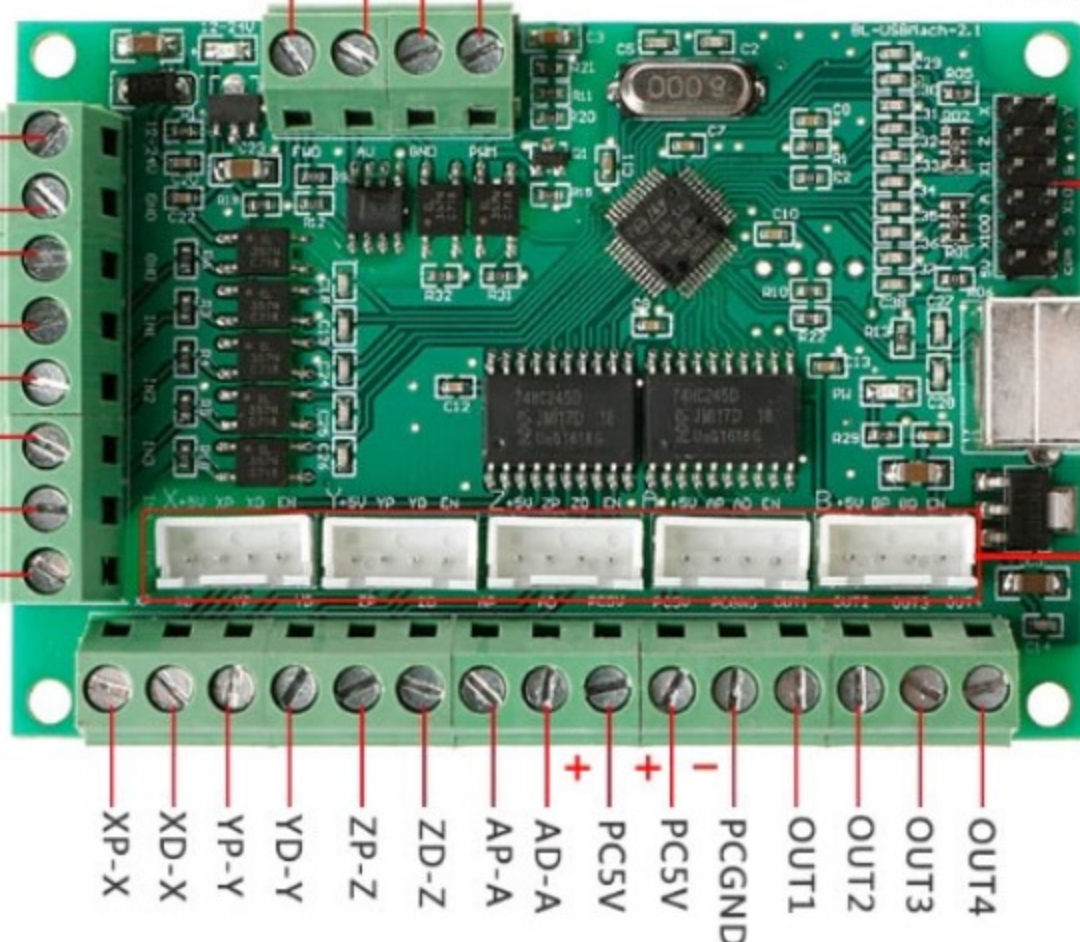

5-axis common cathode interface, stepper motor driver

12-24V
GND
GND
IN1
IN2
IN3
IN4
IN5

XP
XD
YP
YD
ZP
ZD
AP
AD
PC5V
PC5V
PCGND
OUT1
OUT2
OUT3
OUT4

FWD
AV
GND
PWM

Hand Wheel Interface

