 


4. User Codes (Monitor bit codes) Setup

- Every room station must have an ID, set through the bit codes(list below).
- Bit-1 to Bit-5 are used to configure the room ID.
- Bit-6 is the line-terminal switch, set the LAST monitor to ON, otherwise set OFF.
- You can have a Max of 4 monitor per button/code.




Bit state	User Code	Bit state	User Code	Bit state	User Code
	Code=1		Code=12		Code=23
	Code=2		Code=13		Code=24
	Code=3		Code=14		Code=25
	Code=4		Code=15		Code=26
	Code=5		Code=16		Code=27
	Code=6		Code=17		Code=28
	Code=7		Code=18		Code=29
	Code=8		Code=19		Code=30
	Code=9		Code=20		Code=31
	Code=10		Code=21		Code=32
	Code=11		Code=22		

5. Specification

- Power supply:
 - Power Consumption:
 - Wiring: :
 - Dimension:
- DC 24V (supplied by adaptor)
standby 2.1mA,working 75.9mA
2 wires, non-polarity
180(H)X80(W)X53(D)mm



AUDIO DOOR PHONE

USER MANUAL

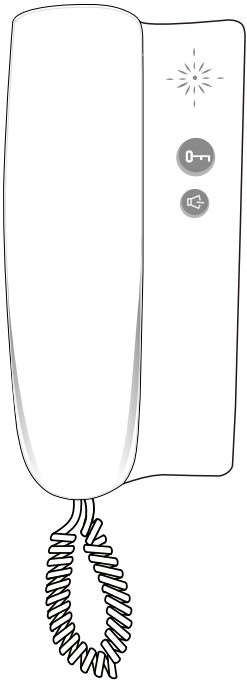

Please read this manual carefully before using the product .

1. Parts and Functions

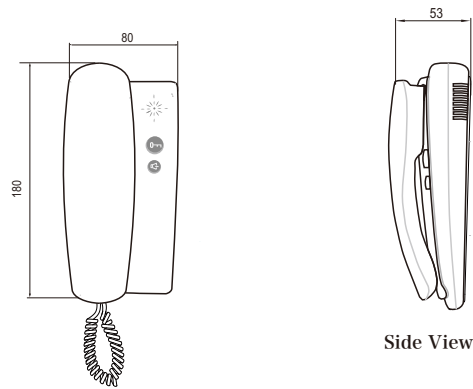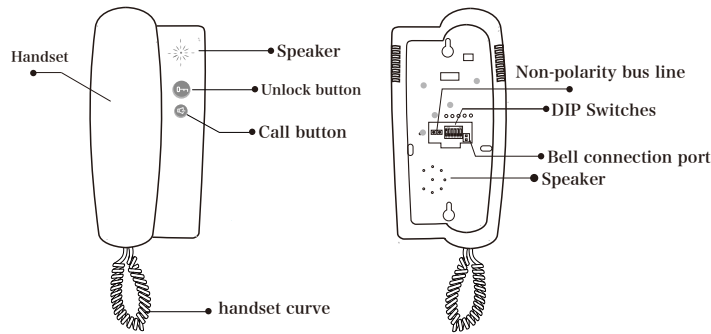

Side View

[1] **Handset**: Pick up to communicate with visitor.


[2] **Handset curve**: Connect handset with the phone

[3] **Unlock button**: Press to release the door.

[4] **Call button**: In standby mode, press Call button to activate the inner call.

[5] **Speaker**: Send out a bell

2. Monitor Mounting

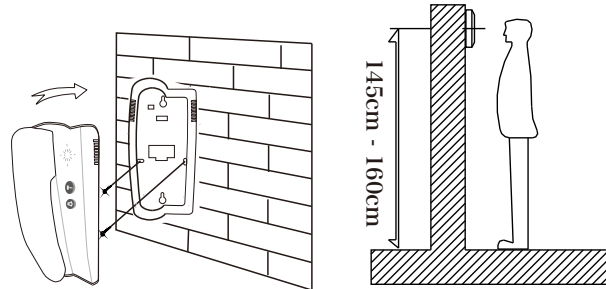

Using the screws to fix the Mounting Bracket on the wall.
Connecting the system correctly, then hang the Monitor on the mounting bracket firmly.

3. Operation Instructions

Door release function:

When visitor calls from outdoor station, the phone rings, pick up handset to talk with the visitor, then press the **UNLOCK** button to open the door.

Inner call:

Pick up handset, then press **CALL** button to activate the inner call, all monitors connected to the system will ring at the same time. Pick up any monitor, the others will stop ringing immediately.

Door Bell Call Button:

Additional door bell call button can be connected to the phone, so that the visitors can ring the door bell again in front of the user's apartment. When the call button is pressed, the phone will output ring tones.

How to setup the inner call dial number on the monitor?

Keep pressing **UNLOCK** button until you hear a long beep. Start setting 2 digit dial number.

UNLOCK button refers to first digit 1~9

CALL button refers to 0 /confirm.

Eg. Set the dial number to 09.

press **UNLOCK** (Long beep) - press **UNLOCK** - press **CALL** 9 times
- press **UNLOCK**

Set the dial number to 10.

press **UNLOCK** (Long beep) - press **CALL** 1 time - press **UNLOCK**
- press **UNLOCK**

Set the dial number to 12

press **UNLOCK** (Long beep) - press **CALL** 1 times - press **UNLOCK**
- press **CALL** 2 times - press **UNLOCK**

How to change the ring tone?

Keep pressing **CALL** button until you hear a long beep, current ring tone will be displayed.

There are 9 ring tones to choose from, press **UNLOCK** button to choose the ring tone you want. Press **CALL** button again to save and exit.

Note:

When multi Monitors are installed in one apartment, these Monitors have to use the same User Code setting, and the Master/Slave mode should be set on the Monitor. The detailed operation is as follows:

Keep pressing **UNLOCK** and **CALL** button until you hear a long beep. Start setting master/slave address. (The default is the master address. The slave address must be arranged order 1, 2, 3, and 4) Set master address.

Keep press **UNLOCK** and **CALL** (Long beep) - press **CALL** 1 times

(2 Long beep)

Set slave address to 1.

Keep press **UNLOCK** and **CALL** (Long beep) - press **UNLOCK** 1 times - press **CALL** 1 times (2 Long beep)

Set slave address to 2.

Keep press **UNLOCK** and **CALL** (Long beep) - press **UNLOCK** 2 times - press **CALL** 1 times (2 Long beep)