

Instrukcja Montażu

Assembly Instruction

Lista części / Parts List:

ECO TOYS




 
A	B	C	
			
X2	X4	X4	X1

The following tool (not included) is required for assembly:


Wymagany śrubokręt (niezałączony do zestawu)




					
X1	X1	X1	X1	X1	X1

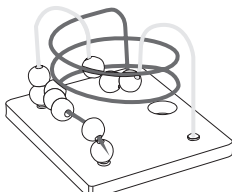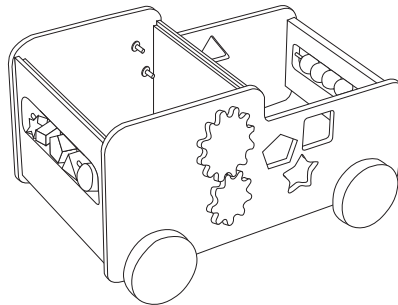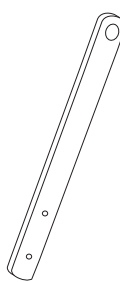1	2	3	4
			
X1	X1	X2	X1


KROK / STEP 1

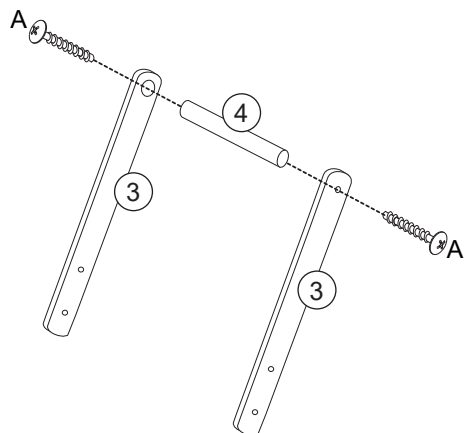


KROK / STEP 2

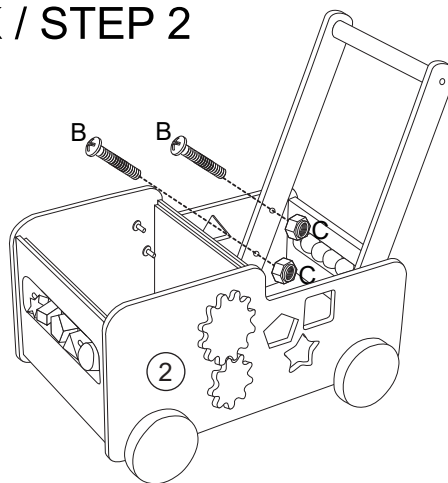

KROK / STEP 3

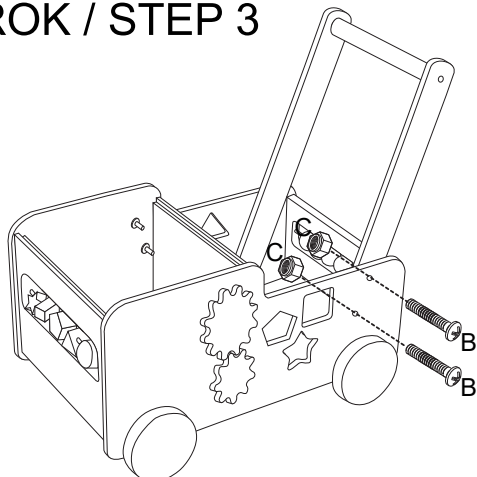

KROK / STEP 4

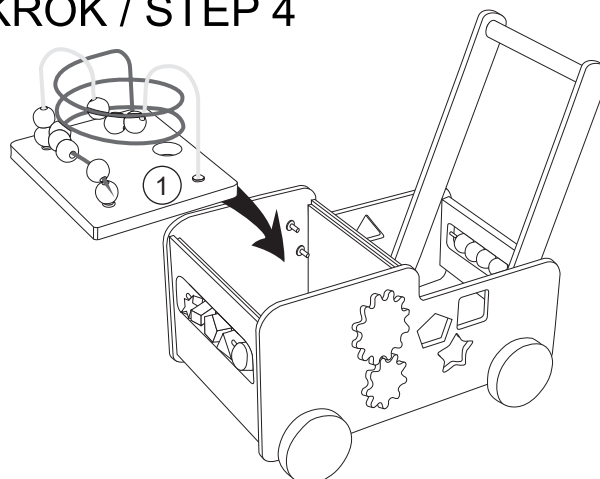

Caution: Adult assembly required. Hardware contains small screws with sharp points. Keep unassembled parts out of the reach of small children.

Warning: To avoid danger of suffocation, keep any bag or packaging away from babies and children. Any packaging or bag is not part of the toy and must be discarded immediately before assembly of the toy.

Montaż: Wymagany montaż przez osoby dorosłe. Zawiera małe śruby, które mogą stworzyć zagrożenie. Regularnie należy sprawdzać, czy śruby są dobrze dokręcone. Należy trzymać nie skrócone elementy z dala od dzieci.

Ostrzeżenie: Aby uniknąć niebezpieczeństwa uduszenia, należy trzymać worki i opakowania z dala od dzieci. Każde opakowanie nie jest częścią zabawki i musi być usunięte przed montażem zabawki.

Ostrzeżenie: Nieodpowiednie dla dzieci w wieku poniżej 36 miesięcy.