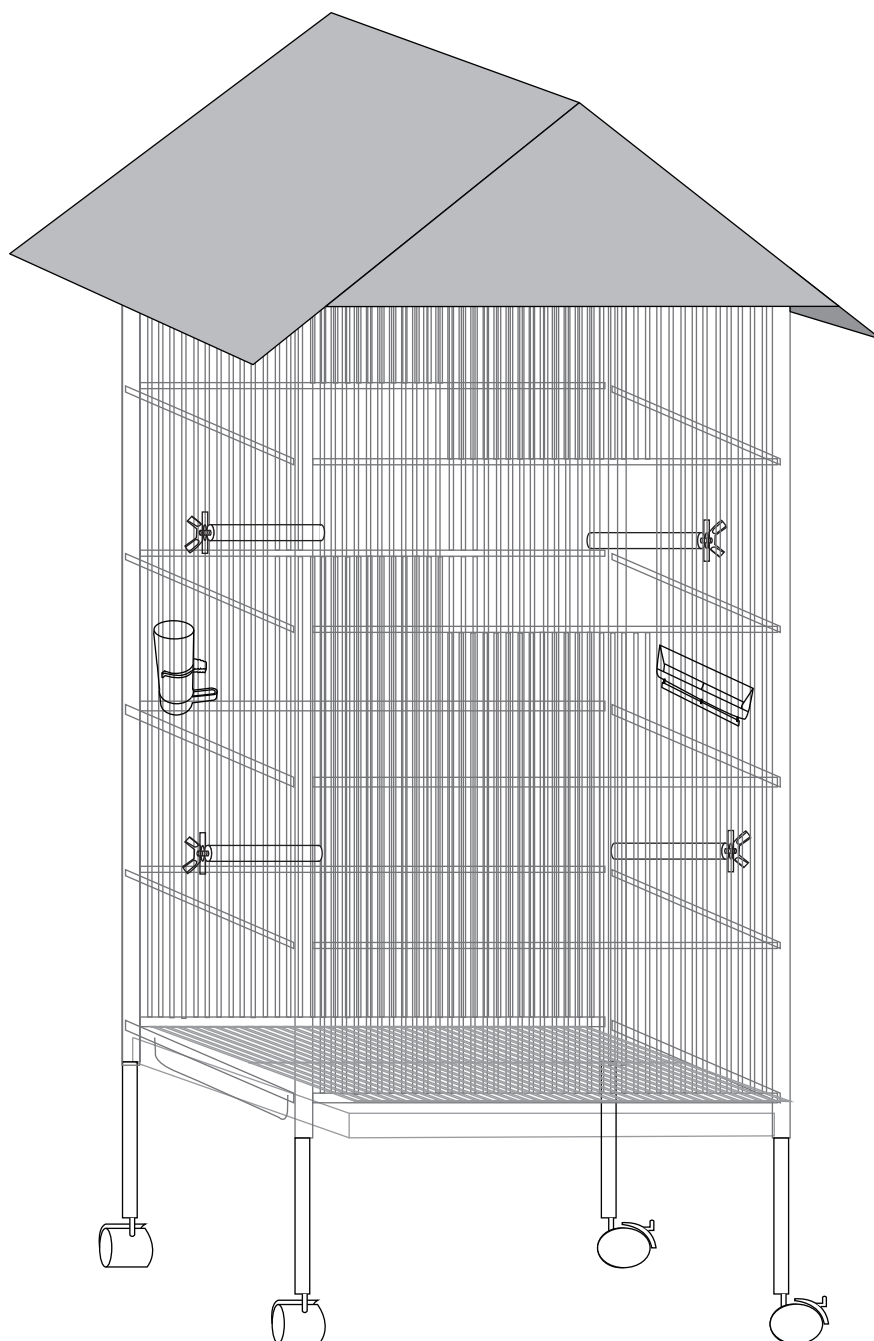


**INSTRUCTION MANUAL/BEDIENUNGSANLEITUNG/
NOTICE D'UTILISATION/MANUAL DE INSTRUCCIONES DE USO**

 
 
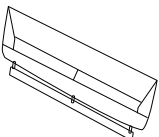
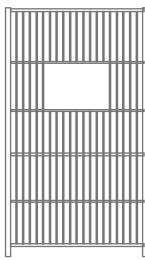
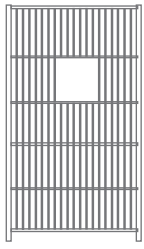
 
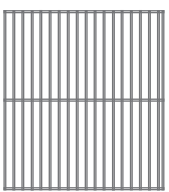
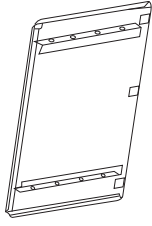
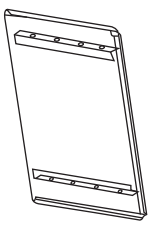
 
 
 
 
 
Návod k sestavení ptačí klece / voliéry GRL BC-01



Text


Dodržujte prosím jednotlivé kroky k sestavení ptačí klece / voliéry

PARTS LIST/STÜCKLISTE/PARTS LIST/LISTA DE PIEZAS


A  M6*30 12pcs	B  M5*10 16pcs	C  M5 16pcs	D  4pcs
E  8pcs	F  4pcs	G  4pcs	H  1pc
I  1pc	J  1pc	K  2pcs	L  1pc
M  1pc	N  1pc	O  1pc	P  2pcs
Q1  1pc	Q2  1pc	S  S3 1pc	U  8 1pc
Q3  1pc	R  4pcs	T  S4 1pc	V  12 1pc

ASSEMBLY/MONTAGE/ASSEMBLAGE/MONTAJE

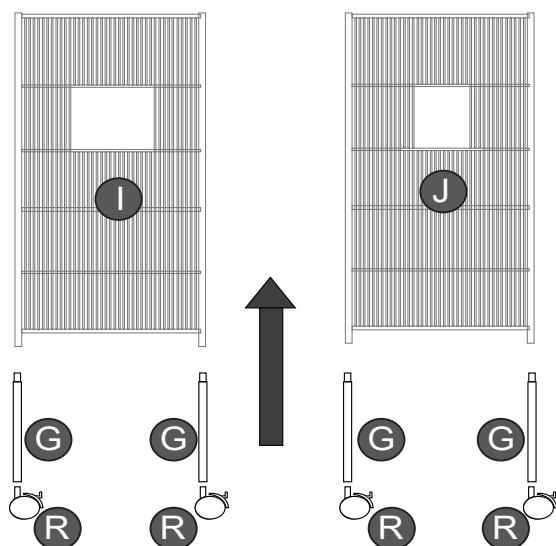1




2

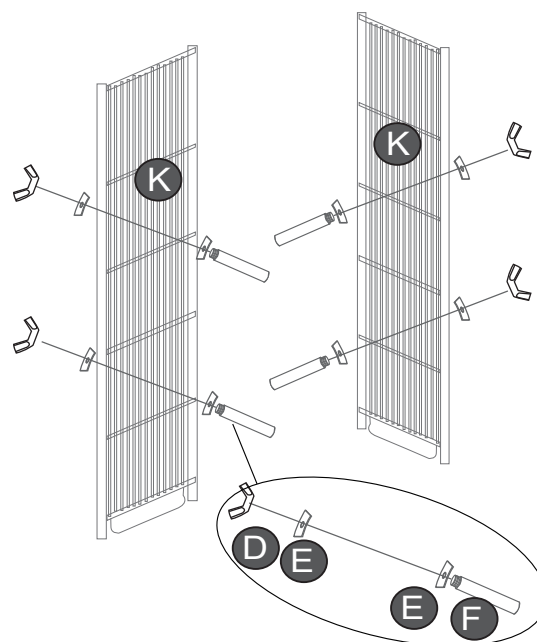


F: 4pcs
E: 8pcs
D: 4pcs

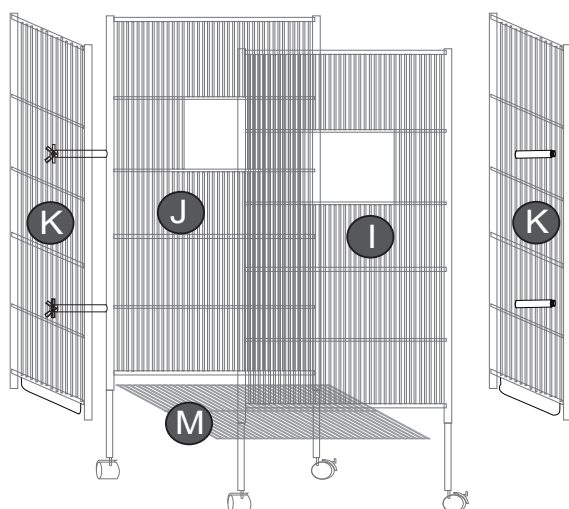3




4

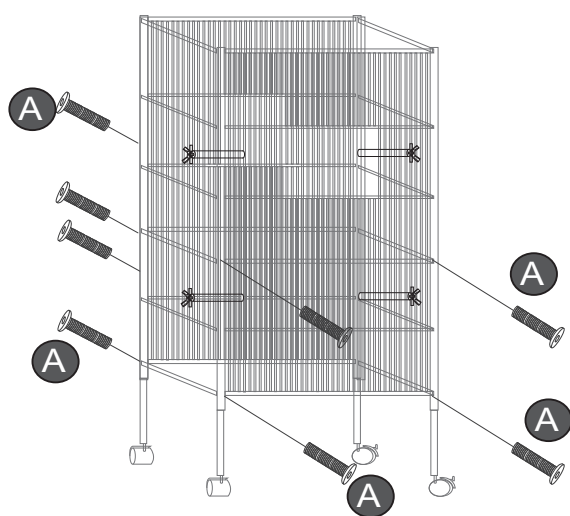


A: 8pcs

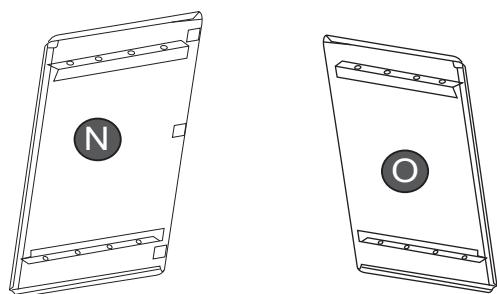5




6

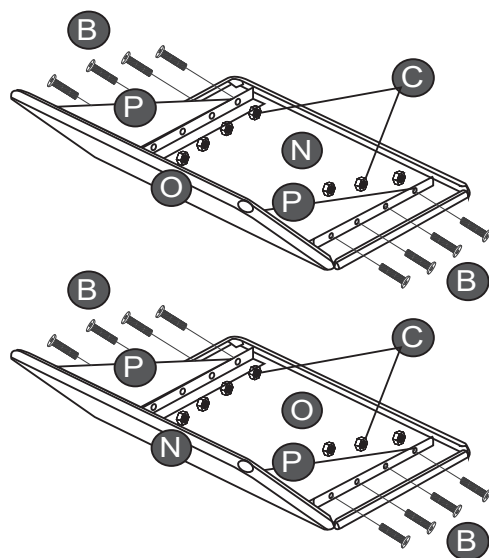

B: 16pcs
C: 16pcs

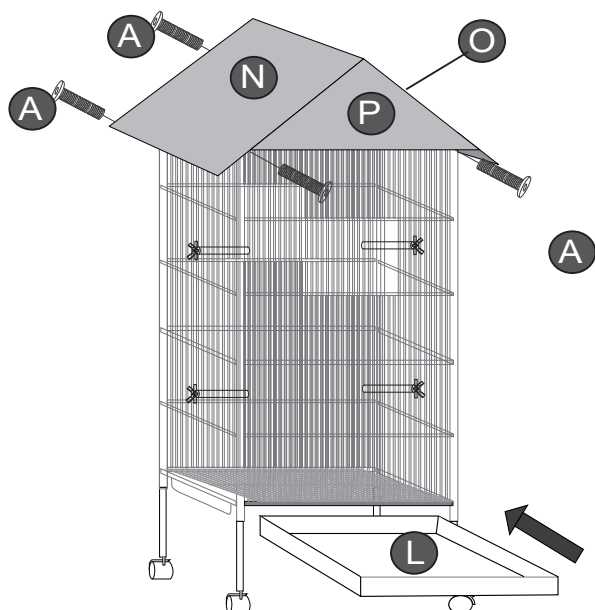7



A: 4pcs

8

