


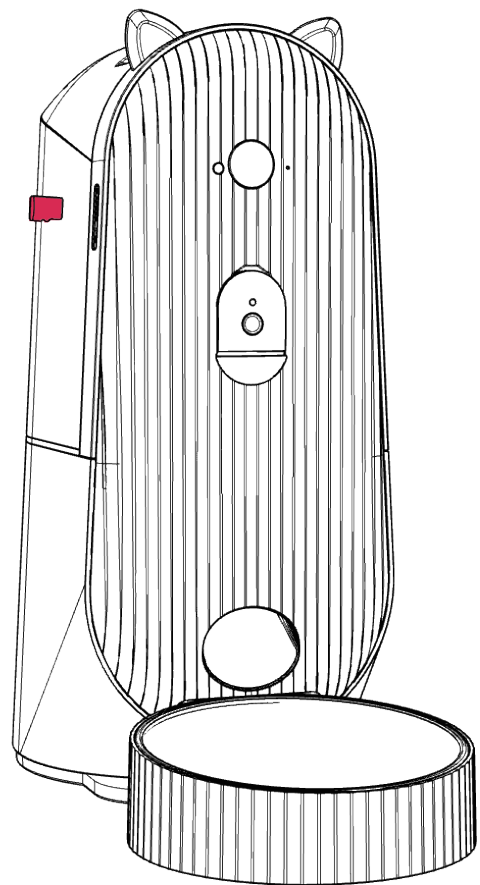

User Manual

Kathy Pro X Pet Feeder

Automatic Cat Feeder with Camera
FC-S02

Quick Guide Card

① Open the lid and insert the desiccant


1. Hold down the lid while lifting the top cover.
2. Open the desiccant box, place the desiccant in the groove, and close the lid.



*It is recommended to replace the desiccant every 1-2 months.

② Remove the food bowl.


1. Remove the grain container.
2. Take out the food bowl and the packaging paper inside.

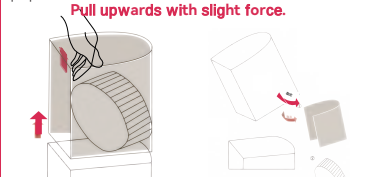

*The purpose of the packaging paper is to prevent the grain container from being scratched.


③ Install the food bowl and grain storage container.

1. Properly install the food bowl under the grain outlet.
2. Reinstall the grain storage container.

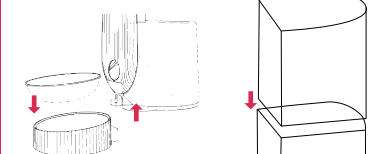

④ Insert the TF card


1. Insert the TF card into the feeder's card slot.
2. Press and hold the reset button below the card slot for 10 seconds. After hearing the network setup prompt sound, the feeder will be successfully activated.

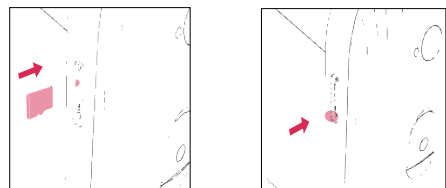

⑤ Dual Power Supply Mode


1. Plug-in Usage
Insert the Type-C power cable into the bottom of the main unit.
2. Backup Power
Open the battery cover on the bottom of the main unit and insert 4 AA batteries.

*The batteries should be used in conjunction with the power cable.
When the power is disconnected, the device will automatically switch to battery power mode and continue to execute the feeding schedule.
* When the device is running on battery power and the power cable is not plugged in, the machine will enter standby mode and sleep.
Only the feeding schedule will function normally, while other features will be unavailable.

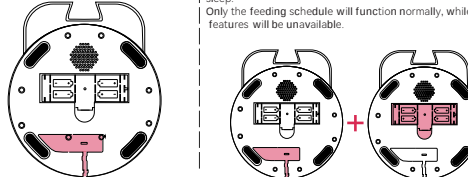


⑥ Add pet food

1. When adding pet food, do not exceed the MAX mark on the side of the grain container. Close the lid.
2. Pet Food Size Chart
It is recommended that the pet food and freeze-dried food particles be no larger than 15mm.

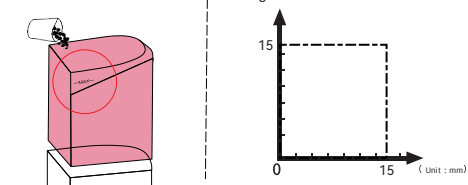

⑦ Adjust the camera angle


Pinch the groove above the camera with your fingertips and adjust the camera angle downward by 45° (as shown in the diagram).

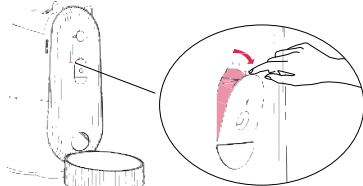

*This function can only be adjusted manually and cannot be set through the app.

⑧ Manual Feeding

Press the button twice in succession to dispense one portion of food. If more portions are needed, repeat the above steps.

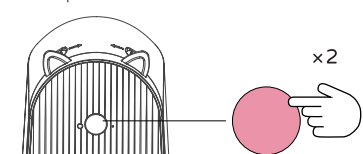

*During the first feeding, if the food has not yet entered the dispensing tray, there may be no food dispensed or only a small amount. Please repeat the process 2-3 times for normal operation.

⑨ Manual Feeding

1. Scan the QR code to download the app.
2. Go to the app "Home" page, click the "+" to add a device, and follow the instructions to bind the device.
3. Add a feeding schedule, and the feeder will execute the feeding plan on time. You can also check the feeding record on your phone.



Scan the QR code to download the app and instantly unlock the cloud feeding feature.

Three Connection Steps for the APP

- Ensure that the Kathy Pro X Pet Feeder is within 10 meters of the router, and that the Wi-Fi and Bluetooth functions on the smart device are enabled.
- Ensure that the power cable of the Kathy Pro X Pet Feeder is connected to a power source, and that 4 AA batteries are properly installed.
- Before setting up the network, press and hold the reset button on the side of the Kathy Pro X Pet Feeder for 10 seconds to reset the device. Once the indicator light flashes slowly in blue, the APP connection can be made. (If the connection fails, please repeat this step.)

1. Bluetooth Quick Connection




1. On the home page, click "Add Device" and the app will automatically search for nearby devices.



2. Select the device to add and click "Add".




3. Select the Wi-Fi network to connect to, enter the correct password, and click "Next".

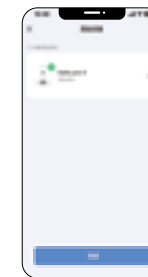

4. After clicking "Finish," the app will automatically return to the home page and enter the feeder's control panel.

2. AP Hotspot Connection

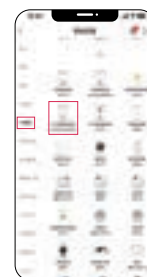


1. On the home page, click "Add Device", select "Small Appliances" on the left, and find "IPC Pet Feeder."



2. Select the network setup method as "Wi-Fi", and then follow the on-screen instructions.



3. Select the Wi-Fi network to connect to, enter the correct password, and wait for the device to connect.

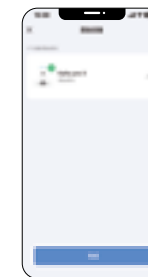

4. After clicking "Finish", the app will automatically return to the home page and enter the feeder's control panel.

3. QR Code Configuration




1. On the home page, click "Add Device," select "Small Appliances" on the left, and find "IPC Pet Feeder."



2. Confirm the network setup method as "Camera QR Code Setup," check the box after hearing the network setup prompt sound, and click "Next."



3. Select the Wi-Fi network to connect to, enter the correct password, and wait for the device to connect.

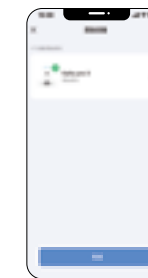


4. After clicking "Finish," the app will automatically return to the home page and enter the feeder's control panel.


APP User Guide

- To ensure full functionality of the app, please insert the TF card before powering on the device.


1. Feeding Function

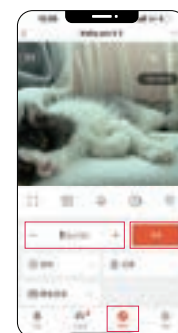

1. Go to the "Feeding" page, select the number of portions to feed, and click "Feed."

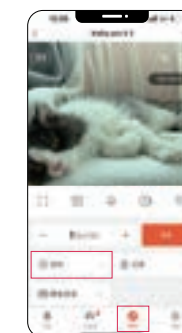


2. Go to the "Feeding" page, click "Schedule," and set the feeding plan.

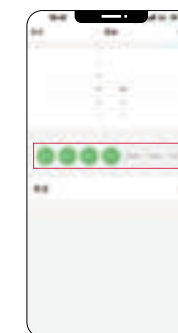

3. Click "Add," select the feeding time, and highlight the feeding date.



4. Click "Feed" below, and select the number of "portions" to be dispensed.

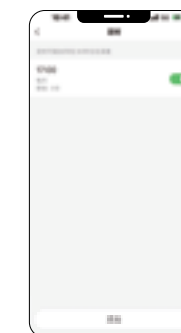

5. Click "Save" to successfully set up the feeding schedule.

2. Video Recording and Voice Function

1. Go to the "Feeding" page, click "Feeding Recording," and the icon will light up as it start recording.

2. Go to the "Feeding" page, click "Screenshot" to capture the current screen.

3. Click "Record" to start recording, then click "Record" again to stop the recording.

4. Go to the "Features" page, click "Gallery" to view photos and videos.

5. Press and hold the "Microphone" button, and the microphone icon will appear on the video to start two-way communication.

6. Click "Call" to start two-way intercom.

3. Motion Detection and Recording Settings

1. Select the alarm sensitivity.

2. Set the schedule.

3. Choose the time.

4. Choose the date.

5. Set the function to turn on/off at the specified time.

6. Return to the home page function interface.

7. The motion detection icon will light up, showing the feature is enabled.


8. When triggered, the feature will display on the messages page.

9. Click "All Messages".

10. Click "View".

Open the Detection Alarm Setting-Select the alarm sensitivity-Set the schedule-Choose the time-Choose the date-Set the function to turn on/off at the specified time-Return to the home page function interface-The motion detection icon will light up, showing the feature is enabled-When triggered, the feature will display on the messages page-Click "All Messages"-Click "View"-Automatically jump to the playback page/Click "Playback" in the function page, /Optionally choose to sync to cloud storage.

Explore Kathy Pro X

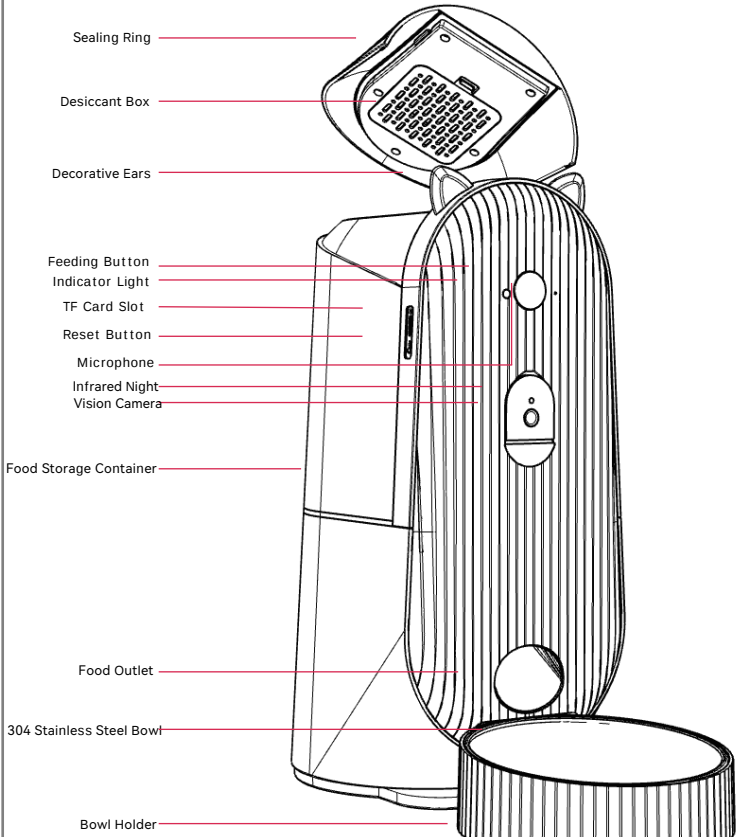

Product Name	Kathy Pro X Feeder
Overall Dimensions (mm)	170*344*370mm
Recommended Pet Type	Cats / Medium and Small Dogs
Power Supply	5V-2A
Wireless Connection	2.4G/5GWIFI
Pet Food	Supports pet food with a diameter smaller than 15mm.
Communication Range	No Distance Limit
Capacity	4L


Notes

- Please use the device in an indoor environment and avoid placing it in areas with direct sunlight, such as balconies.
- Do not drop anything except for dry pet food into the storage container, as this may cause device malfunction or pose a risk of accidental ingestion by pets.
- To prevent the feeder from being knocked over, it is recommended to place it in a corner or against a wall.
- Make sure the power cable is properly hidden or stored to prevent pets from chewing on it, which could lead to electric shock or other hazards.
- Do not disassemble or modify the device.
- This product does not support irregularly shaped pet food, food with holes, or food with a diameter larger than 15mm. It is only suitable for dry pet food, and should not be used for wet food.
- The shape and density of pet food particles may cause slight variations in the storage container's capacity.
- In battery-powered mode, the standby time can last up to 12 days. Please insert batteries before going on a business trip.
- The weight of each portion dispensed may vary depending on the density of the food.
- Do not forcefully insert the tray into the device, as it could damage the components. Please follow the video instructions for proper installation.
- To remove the tray, insert your hand into the hole, rotate it counterclockwise, and pull upwards. After removing the tray, you can wipe the inside with a wet wipe. Do not wash it with water.
- After power loss, the device's clock may become inaccurate, causing feeding schedules to fail. Please reconfigure the network and synchronize the device's time.


Feeder Disassembly and Cleaning

- Before cleaning, ensure that the pet feeder is unplugged. Thoroughly dry all parts and reassemble them for the next use.
- For the body parts, only use a soft, damp cloth for cleaning. Do not rinse or submerge them in water.
- For the health of your pet, it is recommended to regularly clean the feeder's grain storage container, stirring system, bowl, and bowl holder.


1. Unplug the power cable and remove the backup batteries.

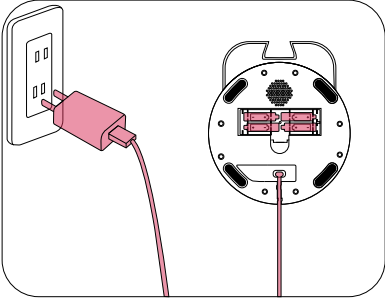


3. Remove the lid and replace the desiccant.

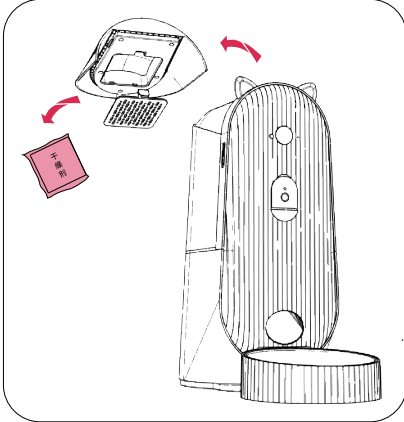


2. Remove the food bowl and bowl holder.

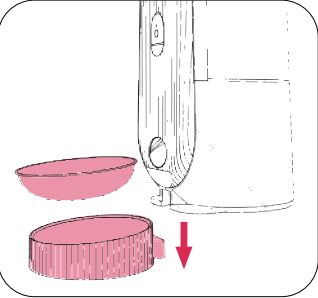


4. Pull the grain container upwards with force to remove it.

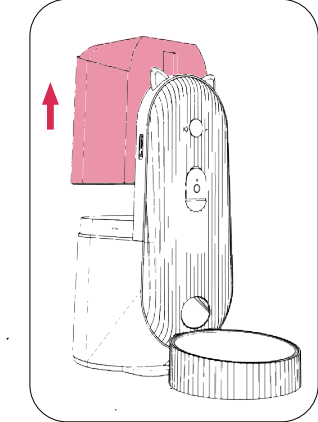

5. Rotate counterclockwise to remove the food dispensing tray.

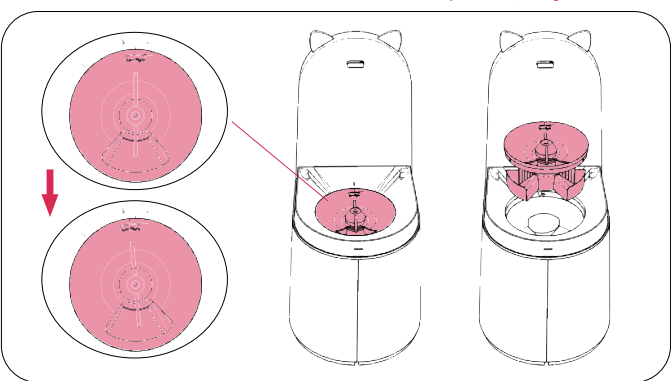

6. Clean all parts thoroughly. Ensure they are completely dry before reassembling them in place.

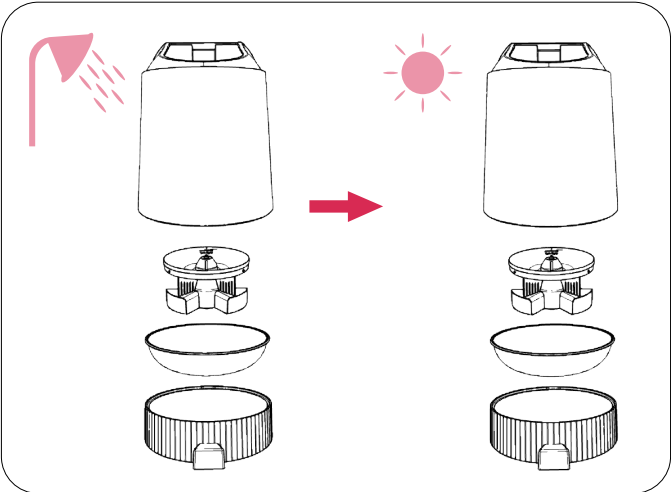

Thank you for choosing the Kathy Pro X Feeder.

Please read this user manual carefully before use and keep it in a safe place for future reference.

Notice to Users

Before use, please read this product manual carefully. By installing or using the product, you indicate that you have thoroughly read and accepted the following safety guidelines. The company is not responsible for any accidents or losses resulting from improper use and does not bear any legal liability. The company reserves the right to interpret and modify this statement.

Usage Instructions

- The company reserves the right to interpret and modify this statement.
- Basic safety precautions should always be followed when children are using the device or are near it. Children should be supervised to ensure they do not play inside or around the device.
- This product is suitable for medium to small dogs or cats. Do not use it for puppies or kittens that cannot reach the food tray, or for pets with physical disabilities.
- As stated in this user manual, this device is intended for the specified household purposes only.
- Do not operate the device if the power cord or plug is damaged, or if the device is malfunctioning or damaged in any way.
- Do not immerse the power cord, plug, or the device body in water or any other liquids, nor allow moisture to come into contact with these parts.
- To reduce the risk of electric shock, do not place the appliance in or near a location where it could fall into or be pulled into a bathtub or sink.
- Before assembling or removing parts or cleaning, please unplug the device. Do not pull the plug by the power cord.
- Do not try to disassemble, repair, modify, or replace any parts of the product. All repairs should be carried out by qualified personnel.
- Install 4 AA batteries as a backup power source in case of power failure.
- Do not allow pets to chew or swallow any parts of the device.
- Do not lift the pet feeder by the lid, food storage container, bowl, or bowl stand. Use both hands to hold the food storage container and the base to lift or carry the feeder, ensuring the device remains in an upright position.
- Install or store the pet feeder on a flat surface near a wall or in a corner to prevent tripping hazards.
- For dry food only. Do not use wet, canned, moist foods or pet food with shapes or diameters exceeding 15mm/0.6 inches.
- Before going out for an extended period, be sure to replace the batteries with new ones. Regularly check the operation to ensure that the pet feeder is dispensing food correctly.
- Properly dispose of all packaging materials. Keep them away from children and pets.

After-Sales Service Card

- During the warranty period, if the product experiences performance failure due to non-human damage, you are entitled to the following services:
- Within 7 days of purchase: If there is a quality issue with the product, the consumer may choose to either return the product for a full refund (based on the invoice price) or exchange it for the same model and specifications.
 - Within 15 days of purchase: If there is a quality issue with the product, the consumer may choose to exchange the product for the same model and specifications.
 - Warranty Period: This product is covered by a one-year warranty.
 - This certificate is invalid if it has been altered in any way.
 - This certificate becomes valid only when it is stamped by the sales unit.

Maintenance Record

Name of Service Center: _____

Date of Repair Submission: _____

Cause of Failure: _____

Condition of the Fault at the Time of Submission: _____

Refund Proof: _____

Service Technician's Certification: _____

Signature of Service Technician: _____

Service Center Stamp: _____

Product Name	Kathy Pro X Feeder	Certificate of Conformity
Model Number	FC-S02	
Product Number		
Standard of Implementation		