

NR	ADRESS	TYPE	R/W	MIN	MAX	EEPROM	NAME
1	10	FLOAT	YES	50	90	YES	KAT WSCHODU OSI X
2	12	FLOAT	YES	270	359	YES	KAT ZACHODU OSI X
3	14	FLOAT	YES	60	9999	YES	CZAS JAZDY OSI X
4	16	FLOAT	YES	0	50	YES	KAT PIONU OSI Y
5	18	FLOAT	YES	80	120	YES	KAT NA PLASKO Y
6	20	FLOAT	YES	1	50	YES	PROG WIATRU
7	22	FLOAT	YES	1	59	YES	CZAS PODTRZYMANIA WIATRU
8	24	FLOAT	YES	0	100	NO	WART WIATRU
9	26	FLOAT	YES	0	120	NO	GYRO OSI Y
10	28	FLOAT	YES	0	359	NO	POZYCJA OSI X
11	30	INTEGER 32	YES	0	23	NO	GODZINA
12	32	INTEGER 32	YES	0	59	NO	MINUTA
13	34	INTEGER 32	YES	0	59	NO	SEC
14	36	FLOAT	YES	0	259	NO	ZADANA X
15	38	FLOAT	YES	0	120	NO	ZADANA Y
16	40	INTEGER 32	YES	0	3	NO	STATUS
17	42	FLOAT	YES	1	5	YES	WLACZAJ CO ILE STOPNI
18	44	FLOAT	YES	0	359	NO	SLONCE AZI
19	46	FLOAT	YES	0	65,7	NO	SLONCE ELEW
20	48	FLOAT	YES	0	60	NO	CZESTOTLIWOSC SIECI
21	50	FLOAT	YES	0	100	NO	WIATR MAX DZIS
NR	ADRESS	TYPE	R/W	MIN	MAX	EEPROM	NAME
1	10	COIL	YES	0	1	NO	WSCH
2	11	COIL	YES	0	1	NO	ZACH
3	12	COIL	YES	0	1	NO	POLUDN
4	13	COIL	YES	0	1	NO	POLN
5	14	COIL	YES	0	1	NO	KR WSCH
6	15	COIL	YES	0	1	NO	KR ZACHOD
7	16	COIL	YES	0	1	NO	KR POLUDN
8	17	COIL	YES	0	1	NO	KR POLN
9	18	COIL	YES	0	1	NO	MAN AUTO
10	19	COIL	YES	0	1	NO	RESET WIATRU
11	20	COIL	YES	0	1	NO	BRAK PRADU
12	21	COIL	YES	0	1	YES	CZUJNIK X LUB KR
13	22	COIL	YES	0	1	NO	reset krancowek
14	23	COIL	YES	0	1	NO	ALARM WIATRU
15	24	COIL	YES	0	1	NO	POZYCJA SWITU
16	25	COIL	YES	0	1	NO	GO x
17	26	COIL	YES	0	1	NO	GO y
18	27	COIL	YES	0	1	NO	KR WSCHOD
19	28	COIL	YES	0	1	NO	KR POLUDNIE
20	29	COIL	YES	0	1	NO	auto manual reczne
21	30	COIL	YES	0	1	NO	reset uc
22	31	COIL	YES	0	1	NO	RESET WIATR MAX
ID	sterownika	slave	to	1	i jest	nie zmienne	UZYWA MODBUS RTU