



Układ otworów

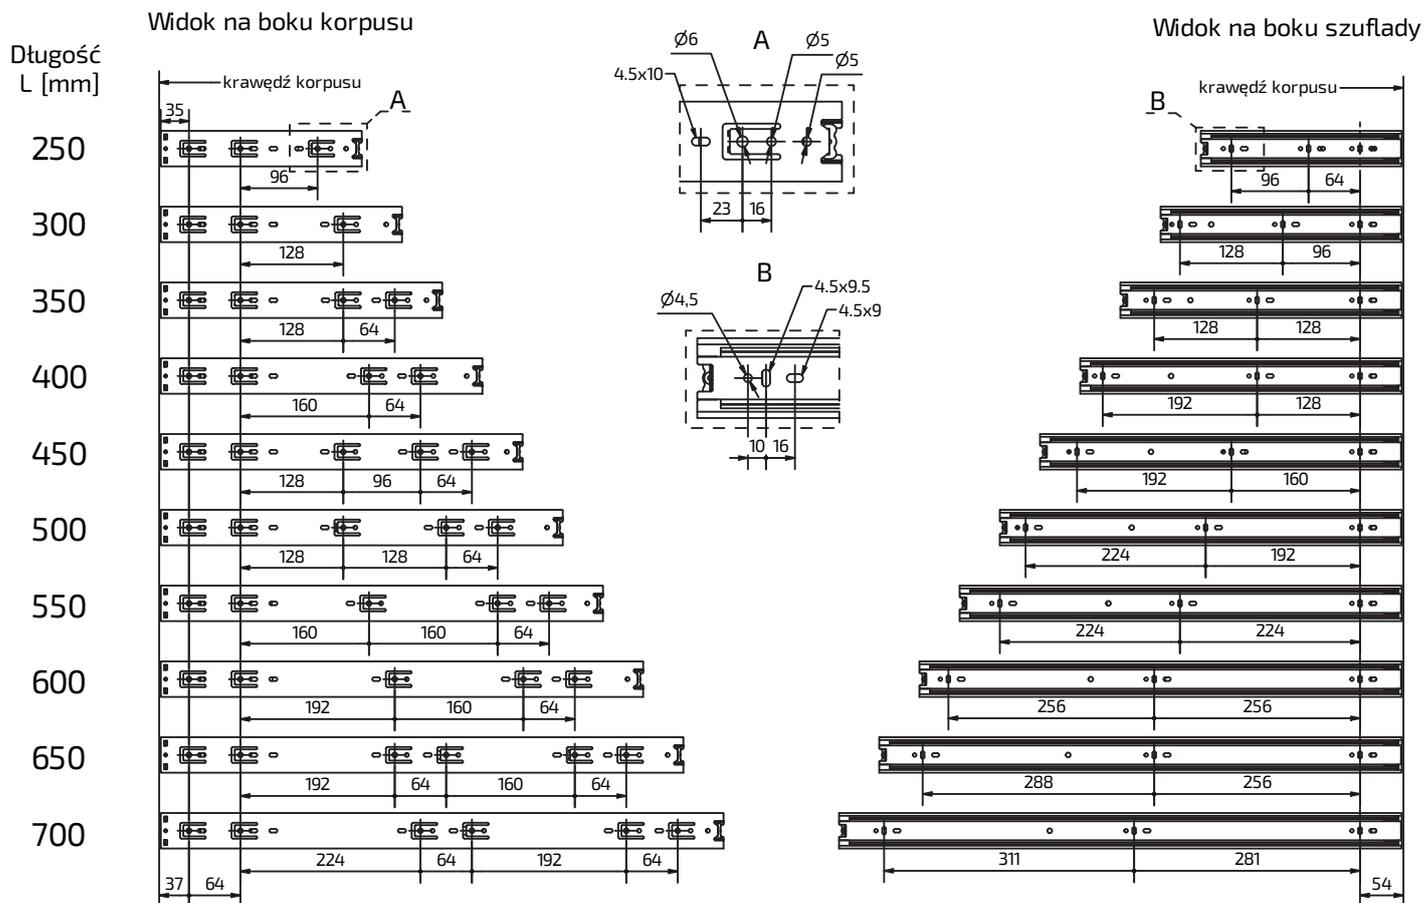

Wysuw

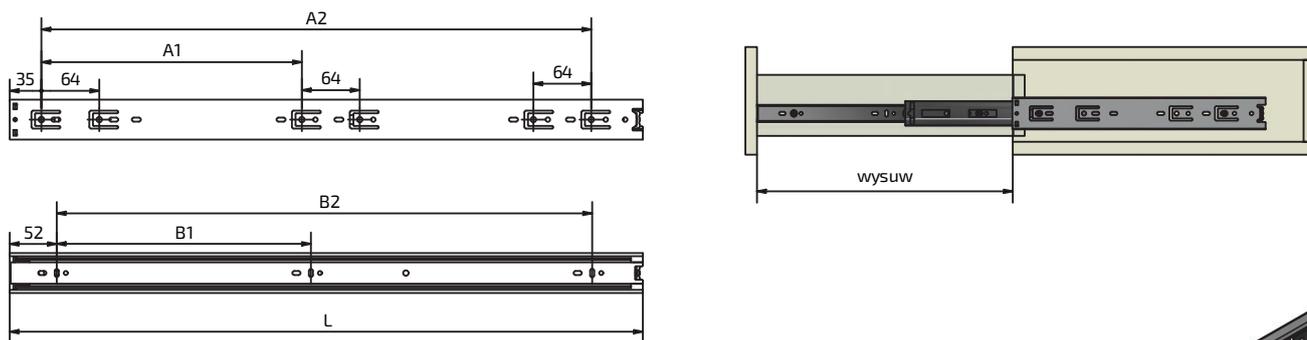


| model | L [mm] | wysuw [mm] | A1 | A2 | B1 | B2 |
|-----------|--------|------------|-----|-----|-----|-----|
| DB/45-250 | 250 | 250 | - | 160 | 64 | 160 |
| DB/45-300 | 300 | 302 | - | 192 | 96 | 224 |
| DB/45-350 | 350 | 353 | - | 256 | 128 | 256 |
| DB/45-400 | 400 | 402 | - | 288 | 128 | 320 |
| DB/45-450 | 450 | 452 | 192 | 352 | 160 | 352 |
| DB/45-500 | 500 | 503 | 192 | 384 | 192 | 416 |
| DB/45-550 | 550 | 552 | 224 | 448 | 224 | 448 |
| DB/45-600 | 600 | 603 | 256 | 480 | 256 | 512 |
| DB/45-650 | 650 | 663 | 256 | 544 | 256 | 544 |
| DB/45-700 | 700 | 702 | 288 | 608 | 281 | 592 |



Wymiary montażowe

Widok szuflady od frontu

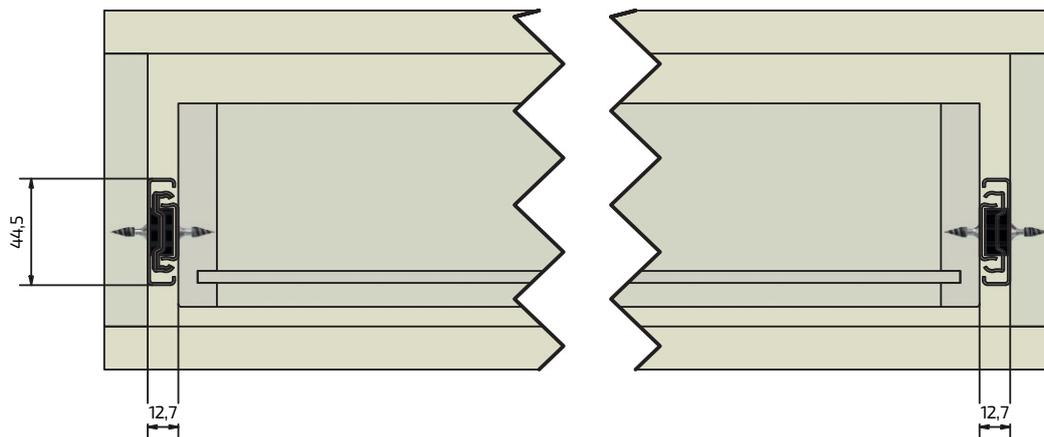

Montaż prowadnic do szuflady i korpusu

