

Instruction Christmas village/scene

Congratulations on the purchase of your product (Christmas village/scene). Depending on the model number, your product will work with: C 1, C 2, C 5, C 6 and C 8 - with enclosed power adapter.

C 3, C 7 and C 9 - with 3 pcs AA batteries, alkaline (not included)

C 4 - with 3 pcs AAA batteries, alkaline (not included)

C 10 - with 2 pcs CR2032 lithium batteries (not included)

Please note that this is not a toy and you must not leave children unsupervised or play with it. Do not place the Christmas village near a heat source (candle, radiator, fireplace...). If your product is battery powered, use only the type of battery indicated on the product's nameplate. Do not mix two types of batteries (rechargeable and non-rechargeable, alkaline and saline). The LED lamps in this device are not replaceable. Do not turn on the device in the package. This product is for indoor use only, do not get product and charger wet or immersed in water. Use only the included charger (if you do not have a battery-powered product). If the charger or charger cable is damaged, stop using the charger and contact your dealer. Make sure that the charger cable is not in the way and becomes a tripping hazard. Never leave this product in operation unattended.

Usage

Place the product on a stable surface. For a product with a charger: Plug the charger into a 220 volt outlet and use the switch on the product to turn the product on with or without music. For a battery-powered product: Insert the batteries into the battery compartment, making sure the polarity is correct.

Close the battery compartment and use the switch on the product to turn on the device with or without music.

Information on the safe removal of the batteries or accumulators

Warning: Make sure that the batteries are completely empty. Open the lid of the battery compartment and carefully remove the empty batteries. The battery or accumulator and the device can now be disposed of separately.

Information for private households

The Electrical and Electronic Equipment Act (ElektroG) contains a large number of requirements for the handling of electrical and electronic equipment. The most important ones are summarized here.

1. Separate collection of old equipment

Electrical and electronic equipment that has become waste is referred to as old equipment. Owners of old equipment must dispose of it separately from unsorted municipal waste. In particular, old appliances do not belong in household waste, but in special collection and return systems.

2. Batteries and accumulators and lamps

As a rule, owners of waste equipment must separate spent batteries and accumulators that are not enclosed in the waste equipment, as well as lamps that can be removed from the waste equipment without causing damage, from the waste equipment before handing it over to a collection point. This does not apply if WEEE is prepared for reuse with the participation of a public waste management authority.

3. Options for the return of old equipment

Owners of old appliances from private households can hand them in free of charge at the collection points of the public waste management authorities or at the take-back points set up by manufacturers or distributors as defined by the ElektroG.

Stores with a sales area of at least 400 m² for electrical and electronic equipment and those grocery stores with a total sales area of at least 800 m² that offer electrical and electronic equipment several times a year or on a permanent basis and make it available on the market are subject to the take-back obligation. This also applies in the case of distribution using means of distance communication, if the storage and shipping areas for electrical and electronic equipment are at least 400 m² or the total storage and shipping areas are at least 800 m². Distributors shall generally ensure take-back by providing suitable return facilities at a reasonable distance from the respective end user.

The possibility of returning an old appliance free of charge exists for distributors who are obliged to take it back, among other things, if a new appliance of the same type, which essentially fulfills the same functions, is supplied to an end user.

If a new appliance is delivered to a private household, the similar old appliance can also be handed over there for collection free of charge; this applies in the case of distribution using means of distance communication to appliances in categories 1, 2 or 4 pursuant to Section 2 (1) of the Electrical and Electronic Equipment Act, namely "heat transmitters", "display screen equipment" or "large appliances" (the latter with at least one external dimension exceeding 50 centimeters). End users are asked about their intention to return the equipment when they conclude a purchase contract. In addition, there is the possibility of free return at collection points of the distributors, independent of the purchase of a new device, for such old devices that are not larger than 25 centimeters in any external dimension, limited to three old devices per device type.

4. Data protection notice

Old devices often contain sensitive personal data. This applies in particular to information and telecommunications technology devices such as computers and smartphones. In your own interest, please note that each end user is responsible for deleting the data on the old devices to be disposed of.

5. Meaning of the "crossed-out trash can" symbol



The symbol of a crossed-out dustbin regularly displayed on electrical and electronic equipment indicates that the respective device must be collected separately from unsorted municipal waste at the end of its service life.