

Smart drawer invisible door lock

operating instruction

Description of use of stealth cabinet lock (4 No. 7 batteries)
Support NFC unlocking and use of IC cards

Technical parameters

| | |
|------------------------------------|--|
| Management card capacity | 2 sheets |
| Service card capacity | 3 sheets |
| Guest card capacity | 10 sheets |
| Working temperature | -25℃~+55℃ |
| Working humidity | ~5 RH 97 per cent |
| Storage temperature | -25℃~+55℃ |
| Battery model | 2 or 4 No. 7 alkaline dry cells |
| Battery life | 1 year |
| Battery low voltage alarm voltage | 2.4V (2 batteries) or 4.5V (4 batteries) |
| Ultra low voltage constant voltage | 2.2V (2 batteries) or 4.2V (4 batteries) |

1. Card Category:

- 1) cards are divided into three categories: management card (2 sheets), waiter card (3 sheets), guest card (up to 10).
- 2) management card is used to add waiter card and guest card, touch management card in any mode can unlock.
- 3) attendant card is used to unlock with guest card in dual card mode.

2. Setup function:

- 1) initialization: hold down the switch button on the PCB board for about 3 seconds, buzzer long sound, at this time all cards empty, default to single card mode, sound open state.The lock body is unlocked.
- 2) when the door lock is empty, you can set up a management card directly, up to 2.
- 3) After read the management card, the door lock is opened, the buzzer continues to sound short, during this period can add the waiter card and the guest card, the first, second, three cards added for the waiter card, the other for the guest card. If the addition is successful, ring once; if the added card already exists, ring twice, and the storage area full four times.

- 4) in the non-set period, touch any invalid card, short call three.

3. Unlock function:

- 1) single open mode: touch the set waiter card or guest card, door lock open ,5 seconds back door lock.
- 2) double open mode: touch waiter card (or guest card), buzzer continuously short ring, touch guest card (or waiter card) within 5 seconds, door lock open, door lock automatically closes after 5 seconds.

4. Management card function:

- 1) Read the management card once and enter the mode of adding service card and guest card
- 2) read the management card twice, read the service card again, wait for 5 seconds, can switch single and double open mode, one sound to switch to single open mode, two sound to switch to double open mode.
- 3) Wait for 5 seconds after reading the management card for three consecutive times to delete all waiter cards and guest cards.
- 4) read the management card four times and wait for 5 seconds. You can switch the sound switch . "Do-Ri-Mi-Do-Ri-Mi" means the sound is turned on, and the" drop-drop-drop-" means the sound is off. (Note: only

close the do RI Mi do RI Mi sound when the waiter card and guest card are unlocked and one sound when the lock is closed)

- 5) Reading the management card five times continuously can delete all management cards, waiter cards and guest cards and restore the factory setting state.

5. Low voltage indication:

After touching the card, if the lock is unlocked after a long sound once, it indicates that the battery voltage is insufficient.At this time, the door lock can be used for about 20 times (2 batteries) or 50 times (4 batteries). It is recommended that you replace the battery in time. If low voltage is detected when unlocking for 20 consecutive times (2 batteries) or 50 consecutive times (4 batteries), the door lock will automatically open and will not be closed. If the power in the lock is seriously insufficient, the unlocking action will be automatically performed in advance to prevent the lock from being unlocked when the power is empty.