

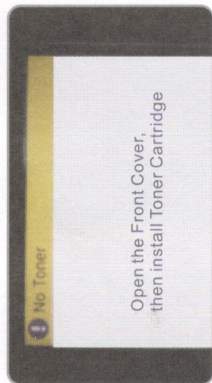


TN2410/2420/2411/2421 Series Instruction


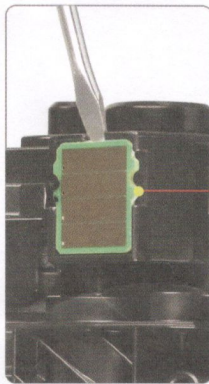


1、When the printer show "Open the Front Cover, then install Toner Cartridge" the toner is finished and need to be replaced with a new one.

2、Open the printer front cover to take out the finished toner cartridge.

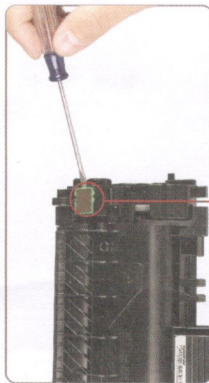

3、Pray up the chip with the screwdriver, and put the chip with rights side up carefully;
Attention: the removed chip should be free from any oxidation material such as grease dirt, water, sweat and chemicals.

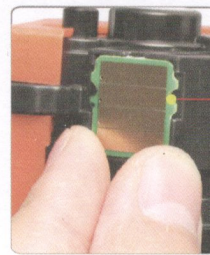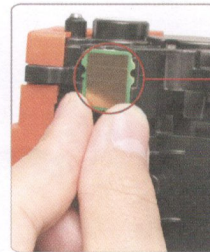

4、Peel off the tape cover and attach the chip to the tape correctly as shown below.
Attention: it is forbidden to touch the chip's metal surface to avoid any oxidation phenomenon.