

E. LU0

SU 8

Cordless vacuum cleaner

Catalogue

Safety precautions..... 1

Product Introduction 4

Introduction to Touch Screen.....5

Operation instructions 6

Cleaning and maintenance methods..... 10




Troubleshooting methods..... 12

Safety precautions

Before use, please carefully read the "Safety Instructions".






To prevent harm and loss to you or others, please use this product safely and correctly.

The following figure shows the danger and degree of damage caused by incorrect use.






 Danger	It means that the upcoming events will cause injuries to personnel.
 Warning	It means that the upcoming events may cause injury to personnel.
 Notice	It means that the upcoming events may result in injury and material loss.

Follow the symbol instructions below.

	Prohibit		Please make sure to "enforce" it
---	----------	---	----------------------------------

 Danger (battery)			
 Prohibit	Unauthorized disassembly or modification is prohibited	 Prohibit	Do not throw into fire or heat
 Prohibit	Prohibit strong tapping	 Notice	<p>The battery should be removed before scrapping electrical appliances</p> <p>Batteries should be safely discarded</p> <p>The electrical Appliance should be powered off before removing the battery</p>








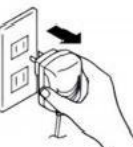










Warning

 Prohibit	Except for repair technicians, it is prohibited to disassemble or modify without authorization to avoid fire, electric shock, etc	 No wet hands	Do not plug or unplug the adapter when your hands are wet to avoid electric shock.	
Prohibit	Do not allow the charging socket to come into contact with conductive materials to prevent battery short circuits, which may cause liquid leakage, heating, rupture, or fire.	 Prohibition of use	Do not use when the adapter cable is broken	
Notice	Please use our company's original adapter to charge this product. Non original adapters may cause battery failure or extreme thermal effects.		Adapters other than this product are prohibited.	

Safety Precautions



Warning

 Unplug the adapter	In case of abnormal situations (such as broken or stopped operation), please immediately unplug the adapter and stop charging, otherwise it may cause fire and electric shock	
 Unplug the adapter	After fully charged, please unplug it immediately to avoid electric shock, leakage, and fire	
 Confirm full insertion	The adapter should be inserted to the bottom to avoid electric shock, leakage, and fire	
 Prohibition	Do not damage, damage, or modify the wires of the adapter, and do not bend, pull, or twist them. Damaged wires can cause electric shock and fire.	
 Take the adapter and unplug it	The power adapter must be unplugged from the socket. Damaged wires of the power adapter can cause electric shock, short circuit, and fire.	
 Prohibition	It is prohibited to block the suction port for a long time, as overheating can cause deformation, malfunction, and fire of the body.	
 Prohibition	Do not block the exhaust port overheating will cause the fuselage deformation, failure, fire.	
 Prohibition of use	Prohibit children and minors from using it alone	
 Prohibition of use	Prohibit use near easily toppled or damaged items	
 Prohibition	During operation, do not touch the inhalation port or extend your fingers into it. Do not aim the inhalation port at your eyes, ears, mouth, nose, fingers, or other body parts	
 No water washing	Do not put the host in water or absorb water	
 Prohibition of use	Do not inhale high-temperature substances (cigarette butts, matches, or hot ash), ultra-fine substances (such as lime, cement, sawdust, gypsum powder, ash, carbon powder, etc.), large sharp fragments (such as glass, nails, pins, etc.), hazardous materials (such as solvents, descaling agents, etc.), chemicals (such as acidic substances, cleaning agents, etc.), flammable and explosive liquids (gasoline, alcoholic products).	
 Prohibition of use	Prohibit putting towels, blankets, etc. on the exhaust port cover	
 Do not approach sources of fire	Not being close to the heat source can cause deformation of the body, causing a short circuit and leading to a fire.	
 Prohibition of use	Do not use wet filters and HEPA filters to avoid electric shock and failure.	




Safety Precautions




Warning

 Prohibition	Do not forcefully drop or strike, as it may cause product damage and malfunction.	 Plug check	<p>Always check the charging plug and adapter socket of the power adapter.</p> <p>If there is dust and moisture, it will increase the current flow and cause a fire.</p> <p>If the power adapter on the host is disconnected or damaged, stop using the adapter</p>
 Prohibition	Do not place in high temperature or damp places as it can cause malfunctions and fires.	 Power dump	When inserting and removing the power adapter, remove the main body of the power adapter first to avoid electric shock and failure
 Remove and install the filter	After removing the filter, be sure to install it, as the motor may malfunction or catch fire after entering the dust	 Filter remove and install	After the filter is removed, it must be installed, and the ash inside the motor may lead to failure and fire
 Prohibition of use	Can not be turned on when charging, will cause product damage and failure.	 Regular filter cleaning	Filter should be cleaned regularly, please do not use in the case of clogged filter, will cause motor failure.
 Prohibition	This appliance is not intended for use by users (including children) with insufficient physical, perceptual, mental ability, experience, or knowledge, unless it is used safely under the supervision or guidance of persons responsible for their safety.	 Notice	Children should be monitored to ensure that they do not play with electronic devices
 Notice	If the power cord is damaged, it must be replaced by the manufacturer's service office or a qualified person to avoid danger.	 Prohibition of use	Do not apply too much force to the root of the power adapter and the wire, otherwise it will cause the power adapter failure and damage.
 Notice	DC This symbol represents a separable power supply unit	 Notice	When used on waxed floors, the machine will cause scratches when rubbed against the floor surface.

Product Component Introduction

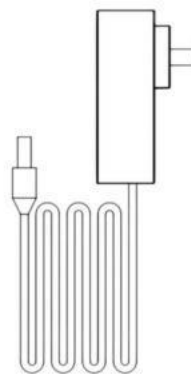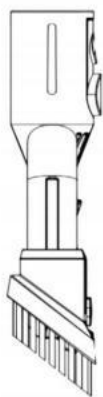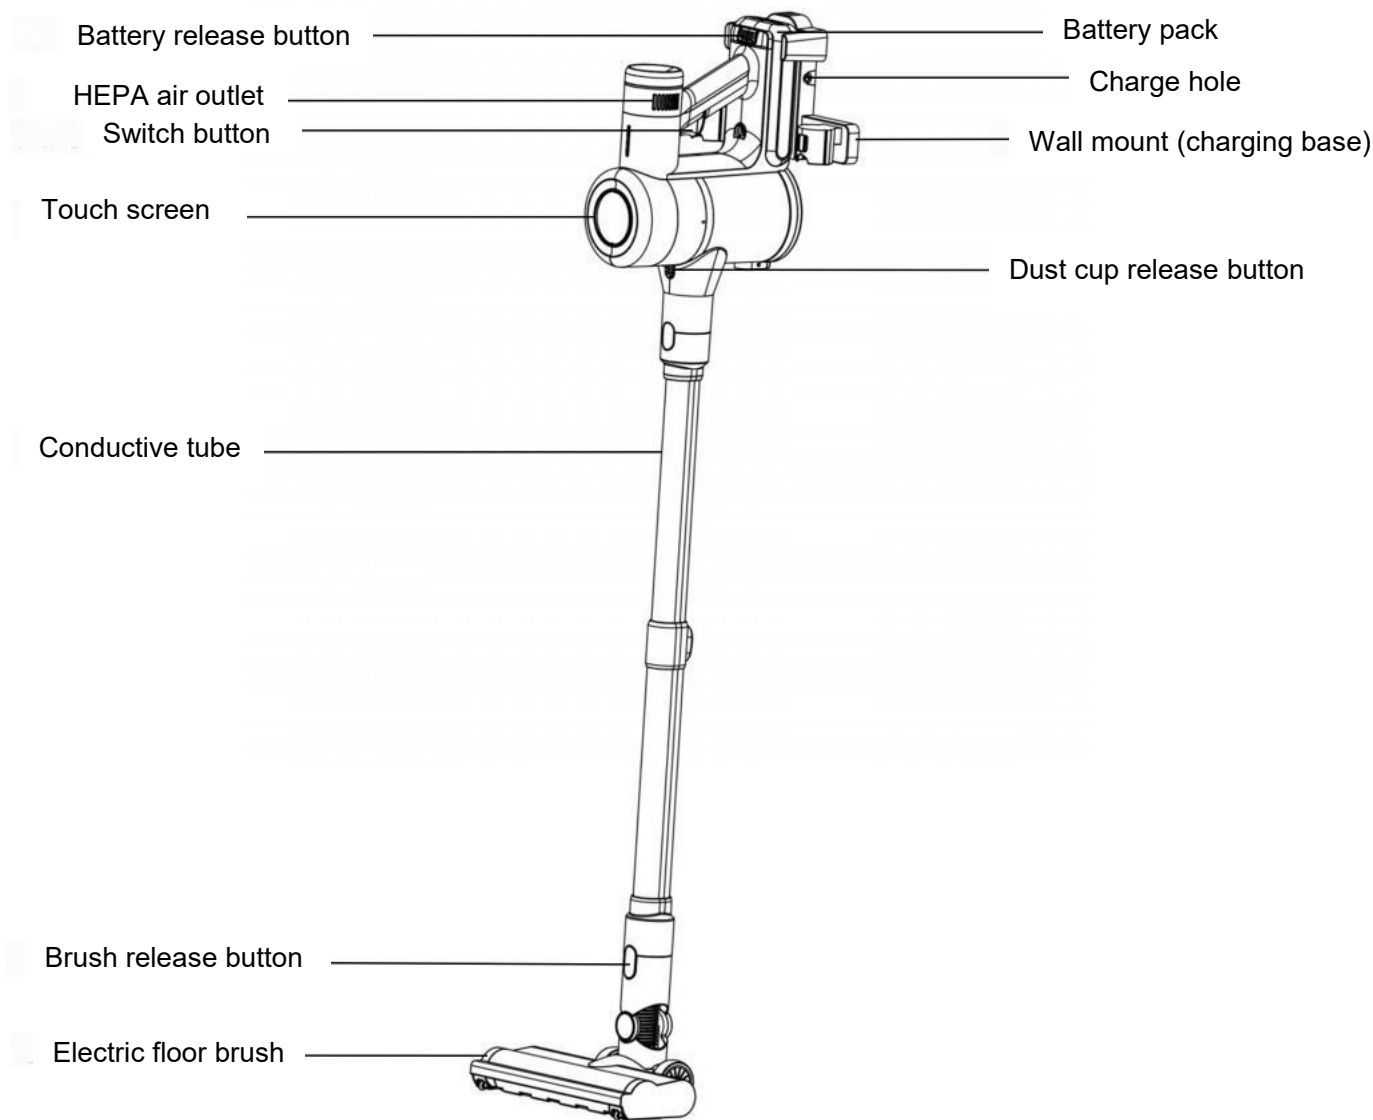

Touch Screen introduction

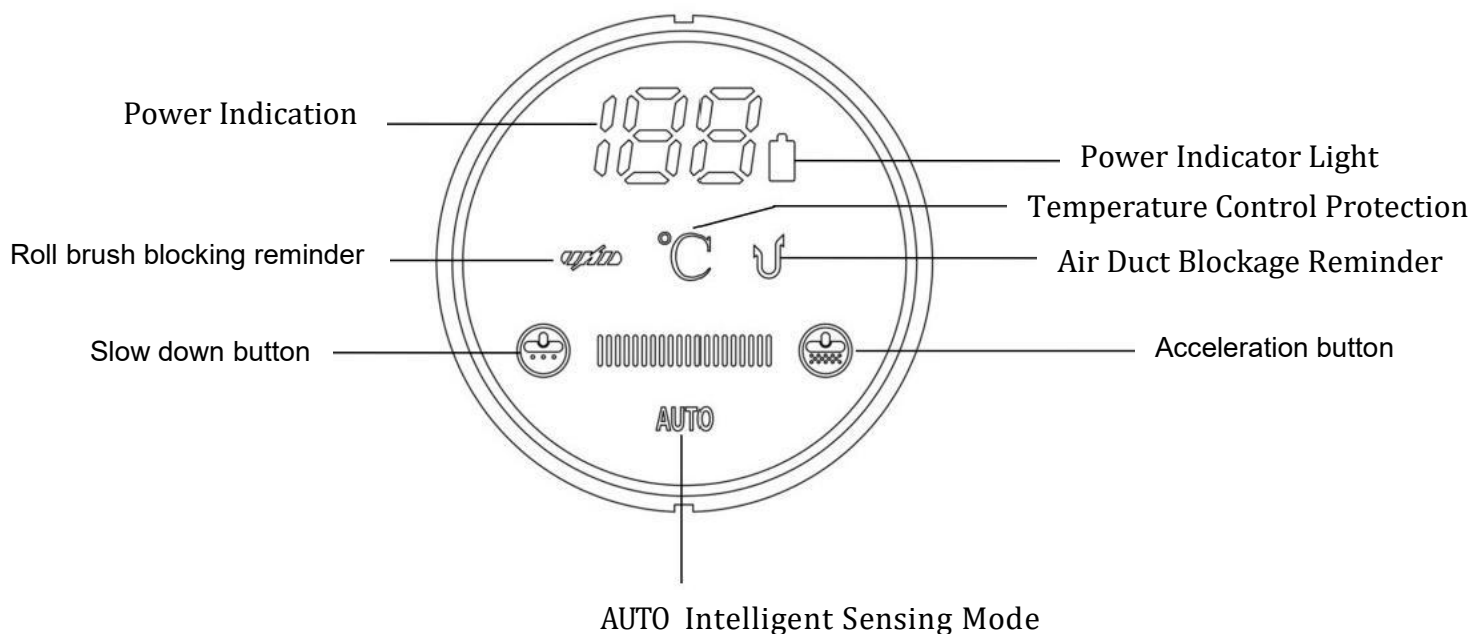

Mode Switching

AUTO Intelligent Sensing Mode

After Clicking The "Auto" Mode, The Suction Force Can Be Automatically Adjusted According To The Degree Of Floor Dirt (The Default Suction Mode Is Automatic Mode). Click Auto Again To Deactivate Automatic Mode

Deceleration Gear

The Floor Has A Low Degree Of Dirt, And Using Low Speed Can Reduce Noise And Extend The Battery Life

Acceleration Gear

The Floor Is Highly Dirty, And Using High Speed Can Enhance Suction And Improve Cleaning Efficiency

Mulfuction Instruction:

Rolling Brush Blockage Stop Indication:

When The Roller Brush Is Blocked, The Roller Brush Blockage Indicator Light Will Flash Red, And The Floor Brush Will Stop Running..After Removing Dust Or Dirt, Restart The Machine To Operate Normally

Air Duct Blockage Reminder


When The Host Is Blocked By Dirt And Cannot Operate Normally, The Air Duct Blockage Indicator Light Will Flash Red ,After Removing Dust Or Dirt, Restart The Machine To Operate Normally.

Temperature Control Protection:


When The Temperature Of The Battery Cell Is Too High, Temperature Protection Will Be Triggered, And The Machine Cannot Operate. After A Certain Period Of Cooling, It Will Automatically Return To Normal

Operation Indication

Connect Pipes for Assembly and Disassembly

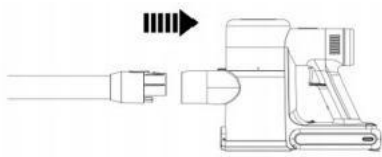


Insert the connecting tube into the host

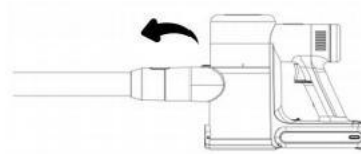


Press release button

and Remove the connection

Electric floor brush - installation/removal of connecting pipe

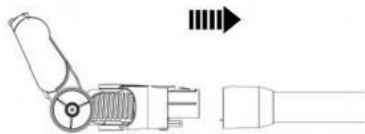


Insert the floor brush into the aluminum tube

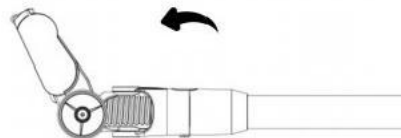


Press the release button and
remove the floor brush

Electric floor brush - Removing internal roller

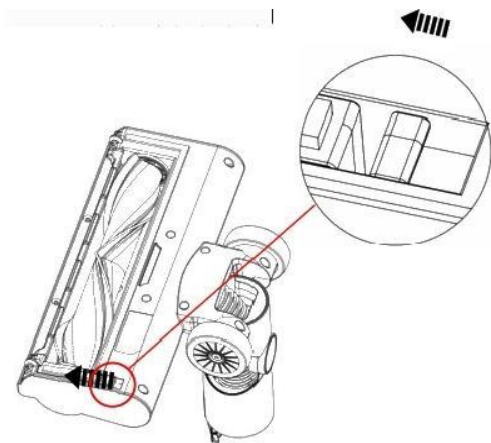


Push Side Button, auto Pop up Roller Plate

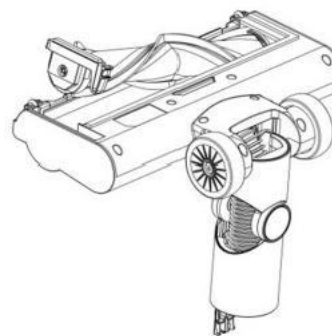

After Plate pops up, take
out the roller brush

Operation Indication:

Dismantle the dust collection cup and filter screen

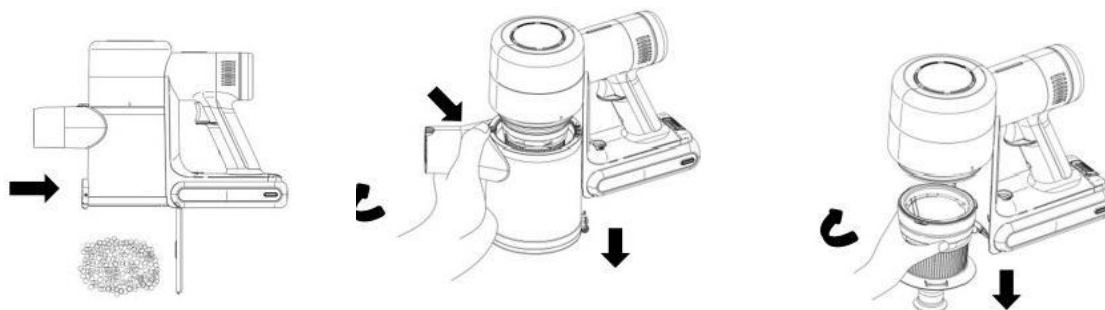


Turn off the host and press the release button to remove dirt.

Rotate the dust collection cup and separate it from the main engine.

Rotate clockwise to remove the filter assembly.


Install charging wall hanging

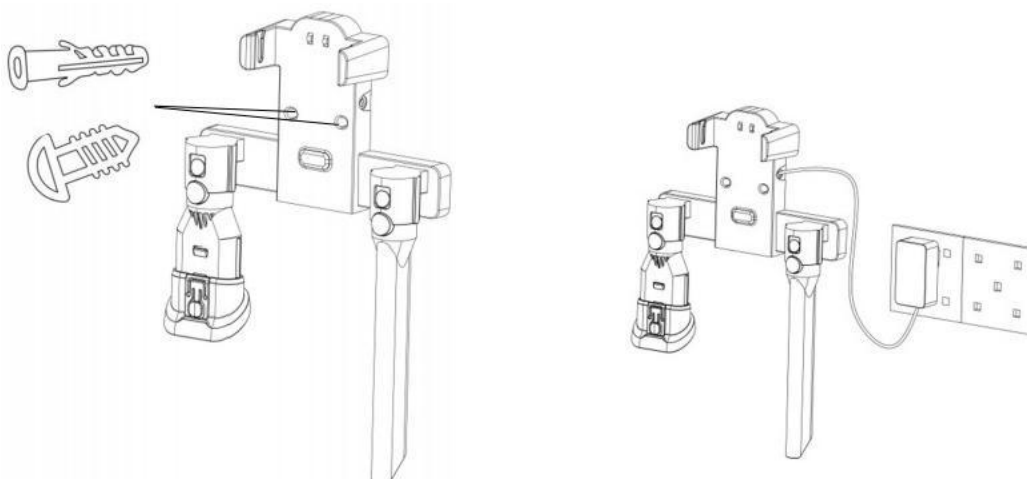


After fixing the wall hanging against the wall with screws, place the machine on the wall hanging and place the accessories in the left and right slots of the charging dock .

Operation Indication

Installing/disassembling batteries

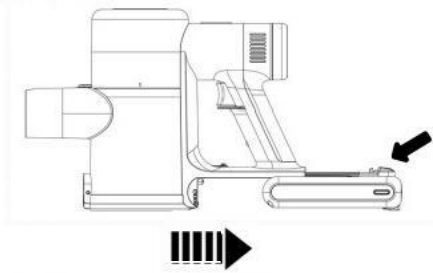


Press the battery release button and remove the battery pack

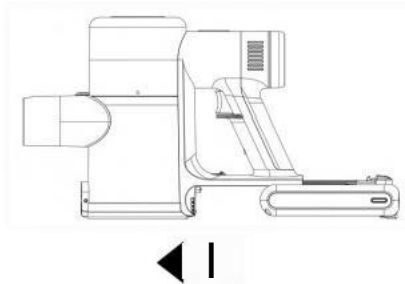


Slide the battery pack into the slot

Operating a vacuum cleaner

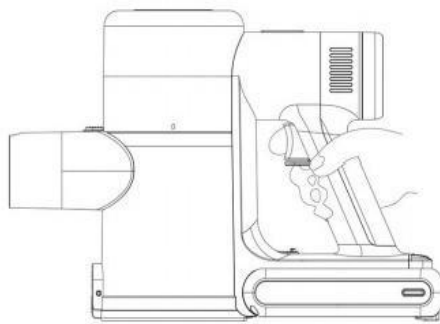


Press the switch button, the vacuum cleaner will immediately run

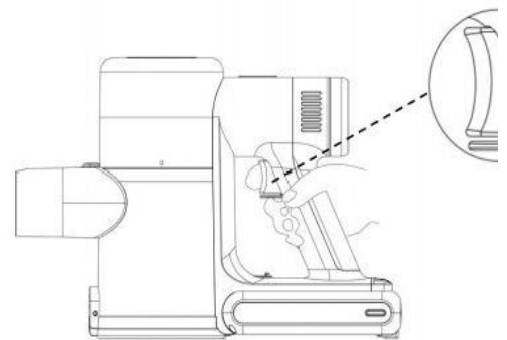

Press the switch button again, and the vacuum cleaner will stop Running

Operation Instructions

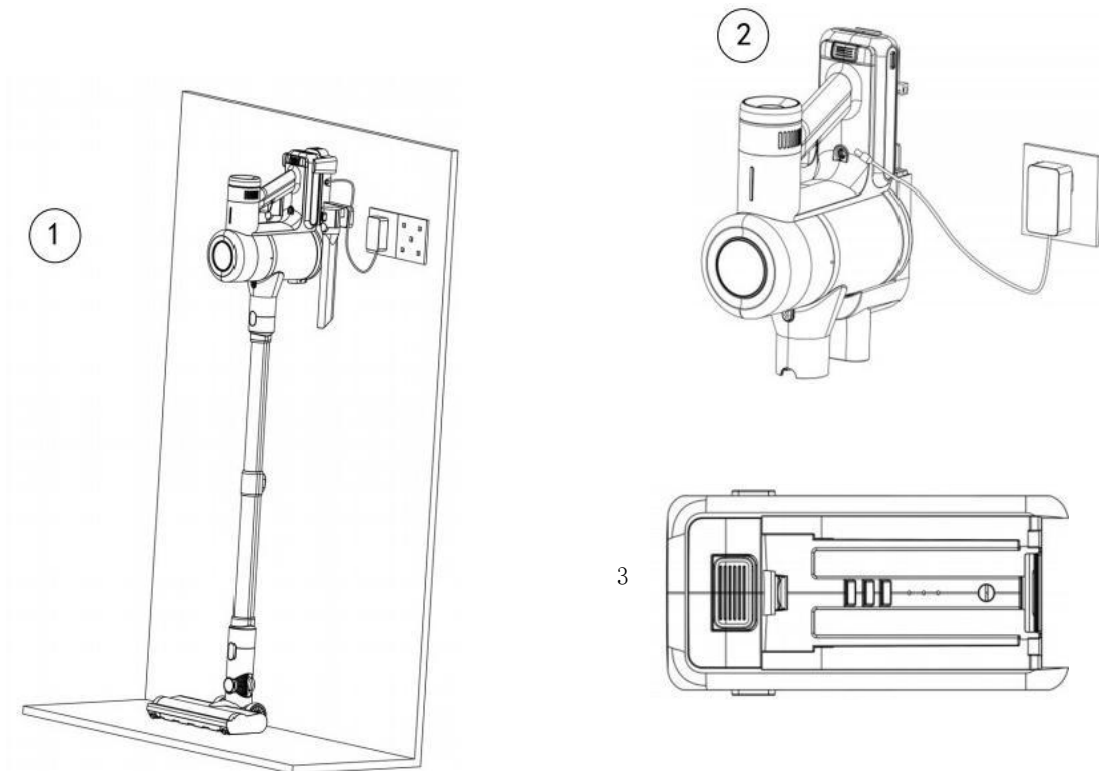

How to charge?

There are three ways to charge a vacuum cleaner:

1. Place the machine on the base and start charging
2. Charge the vacuum cleaner host through a power charger
3. Remove the battery from the vacuum cleaner and charge it separately through a power charger

Charging method: Insert directly into the battery charging port to charge.


Battery Indicator Light

1. When the battery level is below 10%, the battery indicator light will flash, indicating that the machine's battery level is low.
2. When the battery level reaches 100%, it indicates the machine is fully charged.

How to clear the dust cup

Press the dust cup release button

1. Please clean the dust cup when the dirt reaches the MAX line.
2. Even if the dirt does not reach the MAX line, please clean the dust cup every 3-5 days.

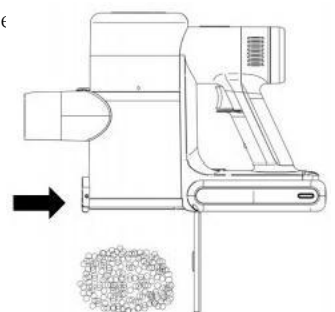



Cleaning and maintenance methods

Clean the filter assembly

- 1.Cleaning the dust cup: Use a brush to remove dust or wipe with a dry cloth.
- 2.Cleaning the steel filter: Use a brush to remove dust or wipe with a dry cloth. If it is too dirty, please clean and dry in the sun.
- 3.HEPA filter cleaning: Clean HEPA once a week. If it is too dirty, please replace it in a timely manner.

It is recommended to clean the HEPA filter screen once a week to achieve better cleaning efficiency


Please ensure that the filter is completely dry before use, otherwise it will affect the service life of the machine.

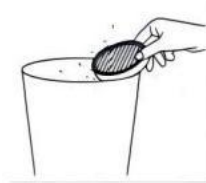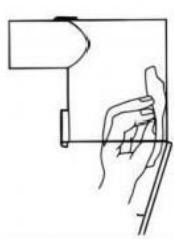

24hrs



Clean the roller brush, remove the roller brush, and use cleaning tools to remove hair and other dirt tangled around the roller brush.

If the roller brush is too dirty, please clean it and dry it completely in a well ventilated area under sunlight.

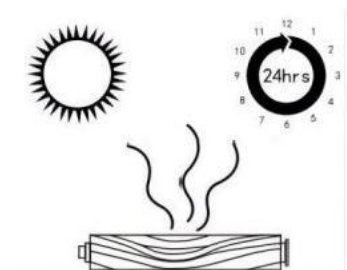

Storage method

After fixing the wall with screws, place the machine on the wall and place the accessories in the left and right slots of the charging dock.

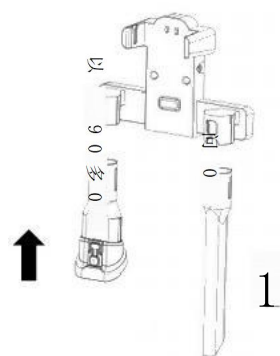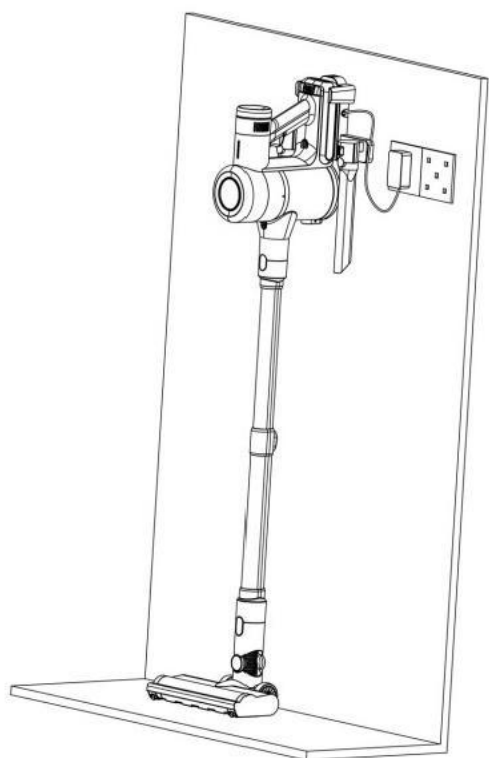

Troubleshooting methods

Problem	Possible reasons	Solution
Product stopped running	<ol style="list-style-type: none"> 1.Low battery 2.Pipeline blockage 	<ol style="list-style-type: none"> 1.Fully charge before using the vacuum cleaner 2.Clean the pipeline and restart the vacuum cleaner
Short battery life	<ol style="list-style-type: none"> 1.Low battery 2.Always run in MAX mode 	<ol style="list-style-type: none"> 1.Fully charge before using the vacuum cleaner 2.Choose the appropriate suction mode based on the cleaning scene
Reduced suction	<ol style="list-style-type: none"> 1.Fill the dust cup with dust to the MAX line 2.The rolling brush is entangled with hair, etc 3.HEPA filter screen is too dirty or Incorrect installation 	<ol style="list-style-type: none"> 1.Clean the trash can on time 2.Clean the roller brush on time 3.Clean the HEPA filter screen in a timely manner or use it after installing the HEPA filter screen
The battery cannot be charged	<ol style="list-style-type: none"> 1.Damaged power socket 2.The power transformer is not properly inserted into the socket or the host charging port 3.Not using the original power charger 4.Host overheating 	<ol style="list-style-type: none"> 1.Replacing power sockets 2.Insert the power charger correctly into the socket and the host charging port 3.Use the original power charger to charge the host 4.Wait for a few minutes until the product cools down before charging.
Abnormal host noise	Pipeline blockage	Timely cleaning of pipelines
Roller brush not running/Floor brush light not on/Roller brush blockage light on	The rolling brush is entangled with dirt such as hair	Timely clean the roller brush and restart the machine
Battery indicator light flashing	Low battery level	Timely charging of electrical appliances
Automatic mode cannot run	The dust detection sensor is blocked or too dirty	Timely clean up the garbage and dirt in the dust cup

