




# USER MANUAL

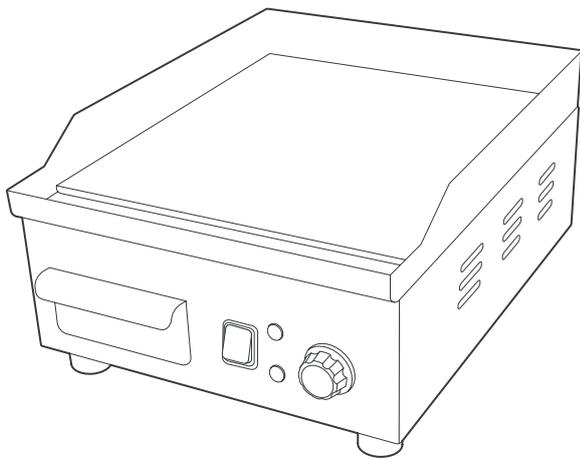

## ELECTRIC GRIDDLE

Model: 09300065  
09300070  
09300072  
09300075  
09300080  
09365159  
09365160  
09365161  
09365162  
09365163  
09365164

READ THIS USER MANUAL CAREFULLY BEFORE USING



## TABLE OF CONTENTS

Introduction .....	3
Specifications .....	3
Features .....	4
General Safety Guidelines.....	5
Product Specific Safety Guidelines.....	5
First Time Use .....	6
Installation.....	6
Operation.....	7
Troubleshooting.....	7
Cleaning and Maintenance.....	8
Storage .....	8
Discarding .....	8
Guarantee.....	9



## INTRODUCTION

Thank you for purchasing this Maxima product. To ensure optimal and safe use, please read these instructions completely before attempting to install or use this product

All Maxima products are manufactured with great care and are CE certified. As a result, our products meet the legal requirements within the European Union with regard to safety, health and the environment. In addition, our products are tested and inspected prior to shipment to ensure product quality and safety.


At Maxima we are very proud of our products and are completely committed to providing you with the best products and service possible. Your satisfaction is our number one priority.

We trust you will enjoy using this product and Thank You for choosing Maxima Kitchen Equipment as your supplier. We hope you will consider Maxima for your future purchases.

## SPECIFICATIONS

### Product: MAXIMA ELECTRIC GRIDDLE

Model	Electrical Input	Power (kW)	Dimensions (mm)	Weight (kg)	Surface Type	Temperature Range (°C)
09300065	230V / 50Hz 1Phase	3.0	H220 x W550 x D470	22.5	Smooth	50–300
09300070					Grooved	
09300072					Smooth & Grooved	
09300075	400V / 50Hz 3Phase	4.4	H220 x W740 x D540	34.5	Smooth	
09300080					Smooth & Grooved	
09365159	230V / 50Hz 1Phase	2.0	H225 x W365 x D480	15.2	Smooth	
09365160				15.0	Smooth & Grooved	
09365161				14.8	Grooved	
09365162				17.0	Smooth (chrome coated)	
09365163		3.0	H220 x W550 x D470	22.5	Smooth (chrome coated)	
09365164	400V / 50Hz 3Phase	4.4	H240 x W732 x D540	34.5	Smooth (chrome coated)	

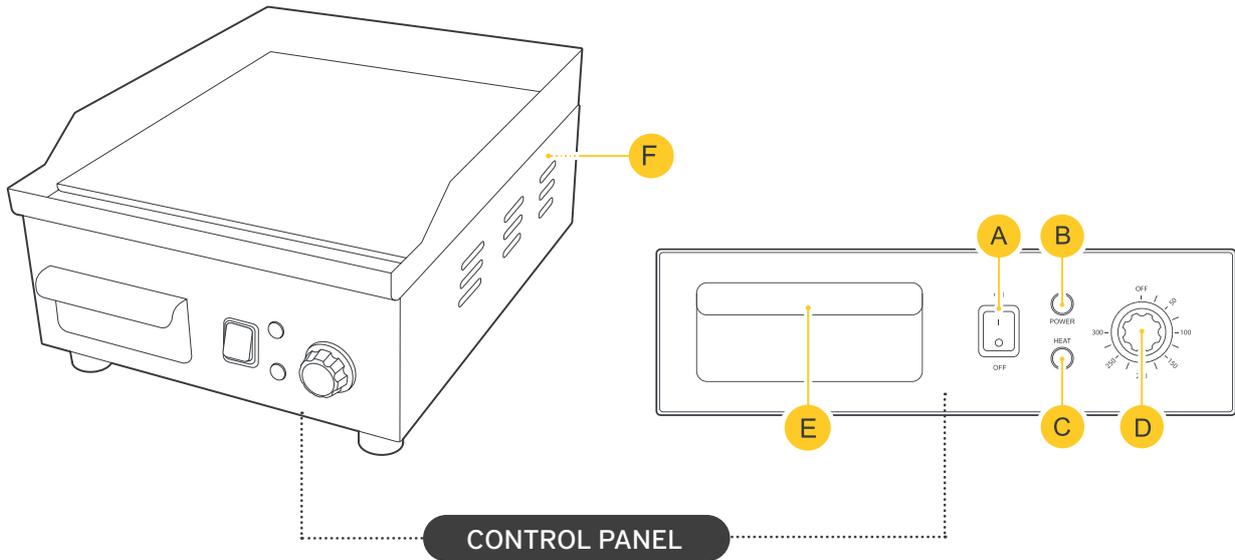

## FEATURES

- A ON/OFF Button**  
Press the ON/OFF button to turn machine ON/OFF.
- B Power Light**  
Power indicator light.
- C Heating Light**  
Heating indicator light.
- D Temperature Control Dial**  
To adjust cooking temperature.
- E Drip Tray**  
Removable container that collects grease, oil and liquid from the grill plate.
- F Reset Button**  
Use to reset appliance after safety temperature limiter has been activated (350°C).

## GENERAL SAFETY GUIDELINES

This machine may only be used for the purpose for which it was designed and intended. The manufacturer and supplier are not liable for any damage caused by incorrect operation and improper use.

- This is a commercial product and must only be used by a trained professional who has read and fully understands this manual. It must not be used (without supervision) by children or persons with reduced physical, sensory or mental capabilities.
- This device is intended for indoor use only.

 Keep the machine and electrical plug away from water and other liquids. If either is exposed to a liquid, immediately disconnect the power supply and have the machine checked by a certified technician. Not following these instructions may cause electric shock, or even death.

- Do not use the machine after it has fallen or is damaged in any other way. Have it checked and repaired by a certified technician.
- Do not move the appliance while operational and never try to move or carry the machine by the power cord.
- Do not place or move the machine on its side, upside-down or tilted.

 Do not open the casing or try to repair the appliance yourself (unless instructed). This may void warranty or cause damage and hazardous situations.

- Do not insert any objects in the casing or openings of the machine.
- Do not use any extra devices or accessories that are not supplied along with the machine.
- Never put your hands or other body parts near the moving parts of the machine while operational.
- Always keep an eye on the machine when in use.
- Keep all packaging away from children and dispose of packaging in accordance with local, state and national regulations.
- Avoid overloading the machine.
- The electrical installation must satisfy the applicable local, state and national regulations.
- Switch off the machine before pulling the power plug out of the socket.
- Always disconnect the power supply when the machine is not in use. To pull the plug out of the socket, always pull on the plug and not on the cable.
- Do not touch the power plug with wet or damp hands.
- Keep the power cable away from operating range and do not cover the cable. Also make sure the power cable does not come in contact with sharp or hot objects and keep away from open fire.

 As long as the power plug is in the electrical socket the machine is connected to the electric grid.

## PRODUCT SPECIFIC SAFETY GUIDELINES

- This machine may only be used for its intended purpose: **cooking food products.**

 This appliance will become hot when operational. Keep away from flammable materials, liquids and gasses.



## FIRST TIME USE

- Unpack and inspect your machine immediately after receipt. If there are any latent defects or damage to the machine then immediately contact your supplier. Save all packaging materials in case the machine needs to be returned or inspected by the freight carrier.
- Remove any protective film from all surfaces (if applicable).
- Read this instruction manual completely before attempting to install and operate this product. When in doubt, contact your supplier.
- If your machine is supplied with a factory fitted molded plug then you may plug the unit into a standard electrical outlet. Make sure that the voltage of the machine and the wall outlet are compatible. If your machine is not supplied with a factory fitted molded plug then a qualified electrical engineer must be contracted to wire the unit to the power supply.
- Maxima Electric Griddles/Grills are shipped pre-oiled (not cooking oil) to help protect the appliance. It is normal to encounter some oil while unboxing the appliance. Clean the appliance before first use (see chapter: Cleaning and Maintenance).
- When heating the appliance for the very first time, do not set to maximum temperature immediately. This may cause discoloration of the grill surface. Instead, operate the appliance at 100°C for a while or until all oil residues are evaporated. During this process there may be some smoke development, this is normal.

## INSTALLATION

- 1 The machine must be positioned on a flat and stable surface.
- 2 Choose a surface where the machine is not exposed to direct sunlight, or close to a direct source of heat such as a cooker, oven or radiator.
- 3 When positioning the appliance, maintain a distance of 10cm (4 inches) between the appliance and walls or other objects for ventilation and ease of use.
- 4 Position the machine in such a way that the plug is accessible at all times.
- 5 Install the required parts & accessories (if applicable).
- 6 Plug the power plug into a grounded and compatible socket.

## OPERATION

- 1 Switch on the appliance using the "ON/OFF" switch.
- 2 Lubricate the cooking surface using cooking oil. Do not use the appliance without cooking oil!
  - i** The first time you use the appliance, there may be some smoke development and a slight odor noticeable. This is normal and should disappear after a few times use.
- 3 Select the desired temperature using the thermostat dial located at the front. During the heating process the heating indicator will be on. When the set temperature has been reached the indicator will deactivate.
- 4 Place your product on the cooking surface and cook as desired.
- 5 When not in use, set temperature to minimum and switch off the the appliance.
- 6 It is recommended to clean the appliance on a daily basis (see chapter: Cleaning and Maintenance).
- 7 If the appliance will not be used for a longer period, please also remove the power plug from the main socket.

## TROUBLESHOOTING

The following overview will help you understand possible problems. However, only qualified technicians should attempt to open or repair the machine. Contact your supplier when in doubt.

Problem	Possible Cause	Possible Solution
The appliance does not work. (POWER indicator off)	<ul style="list-style-type: none"> <li>■ The appliance is switched off.</li> <li>■ The power supply is interrupted.</li> <li>■ The voltage is not correct.</li> </ul>	<ul style="list-style-type: none"> <li>▶ Activate the appliance.</li> <li>▶ Check / connect the power supply.</li> <li>▶ Use a compatible power source.</li> </ul>
The appliance does not get warm (HEATING indicator on)	<ul style="list-style-type: none"> <li>■ Low temperature settings.</li> <li>■ Thermostat defective.</li> <li>■ Heating element defective.</li> <li>■ Overheat protection is activated.</li> </ul>	<ul style="list-style-type: none"> <li>▶ Adjust temperature setting.</li> <li>▶ Replace part / contact supplier.</li> <li>▶ Replace part / contact supplier.</li> <li>▶ Reset temperature limiter.</li> </ul>
Temperature cannot be adjusted.	<ul style="list-style-type: none"> <li>■ Thermostat defective.</li> </ul>	<ul style="list-style-type: none"> <li>▶ Replace part / contact supplier.</li> </ul>
Indicator light does not work but appliance works normally.	<ul style="list-style-type: none"> <li>■ Indicator light defective.</li> </ul>	<ul style="list-style-type: none"> <li>▶ Replace part / contact supplier.</li> </ul>

## CLEANING AND MAINTENANCE

- Maintenance and repairs should only be done by a certified technician.
  - Regularly check and clean the appliance, its parts and accessories.
  - Regularly check the power plug and power cable for damage. If either is damaged do not use the appliance. Instead, have it repaired by a certified electrical engineer.
  - Always switch off and disconnect the power supply before cleaning or maintenance.
  - Let the appliance cool down before cleaning or maintenance.
- ⚠ Never use aggressive cleaning agents or abrasives. Do not use solvents or petrol based cleaning agents. Some cleaning agents may leave harmful residues or cause damage to the machine. Use a mild and food-safe cleaning product instead.
- ⚠ Do not use any scourer and sharp or pointed objects during cleaning, this may cause damage to the machine.
- ⚠ Never hose down the machine or immerse it in water or any other liquid, instead wipe the exterior with a damp cloth. Do not use a steamer to clean the appliance.
- ⚠ Never let the power cable or power plug get wet or damp.
- Remove major cooking residues using a griddle scraper, brush or putty knife.
  - Reactivate the appliance and set temperature to 75 °C. Pour a small amount of water on the grill surface. Continue scraping/brushing the surface to remove more tenacious dirt. A mild food safe detergent may also be used during this process. Whipe the dirt into the drip tray and empty/clean it when full.
  - Finally, whipe down the surface and exterior with a damp cloth. Always dry the appliance and accessories after cleaning using a soft cloth.
  - Clean parts and accessories using a soft brush or cloth and warm water with a mild (food-safe) detergent. Do not clean the parts or accessories in a dishwasher unless this is specifically mentioned to be possible. Rinse under tap to remove soap residue. Wipe down the exterior with a damp cloth. Always dry the appliance, parts and accessories after cleaning using a soft cloth.

## STORAGE

- Make sure the appliance is cleaned properly before storage.
- Coil up the power cable and put it away.
- Store in a cool and dry place.

## DISCARDING

- When discarding the appliance, do so in compliance with local, state and national regulations.

## GUARANTEE

Thank you for using our products. Our company applies the terms as set out in our "Algemene Voorwaarden" and will provide service when you can provide a valid purchase invoice.

We provide a 12-month warranty from the date of purchase. During the warranty period, our company is responsible to deliver spare parts in case of; material defects, manufacturing defects or quality issues. However, only with correct use and use of original parts.

The following is not covered by warranty:

- 1 Damage due to transportation or incorrect installation and connection.
- 2 Component damage caused by incorrect electrical or water connection.
- 3 Damage as a result of disassembly and/or modifications to the original machine without prior permission.
- 4 Damage as a result of misuse, poor cleaning or improper maintenance.
- 5 Damage as a result of fire, collapse, lightning strikes, flooding, power surges, vermin and other similar events.
- 6 Failure to read or follow the user manual.
- 7 Consumables and wearing parts.
- 8 An altered invoice or no invoice.



WWW.MAXIMA.COM  
INFO@MAXIMA.COM  
+31 (0) 297 253 969

**OFFICE:**

NIJVERHEIDSWEG 23A  
3641 RP MIJDRECHT  
THE NETHERLANDS

**SPAREPART WAREHOUSE &  
TECHNICAL SERVICE DEPARTMENT:**

NIJVERHEIDSWEG 23C  
3641 RP MIJDRECHT  
THE NETHERLANDS