

Poweart



Please do not hesitate to contact us whenever you want,
we are always more than happy to help you!



www.poweart.com



support@poweart.com



Online help, FAQ, etc.
<https://poweart.com>



Poweart

INSTRUCTION MANUAL **N7P**

Foldable Cordless
Vacuum Cleaner

N71/N72/N75/N76/N77/N78/N79/N700
N7S/N7P/N7 Pro/N770/N780/N790



CONTENTS

Important Safety Instruction	01
Personal Safety	01
Electrical Safety	01-02
Battery Safety	02
Service	03
Intended Use	03
Warning	03
Introduction of Componets	04
Product Installment	05-06
Product Operation	07-08
Troubleshooting	09
Warranty	09

Important Safety Instructions

WARNING: Basic safety precautions should always be observed when using an electrical appliance, including the following to reduce the risk of fire, electrical shock, or injury.

Personal Safety

1. Store it indoors in a dry place out of the reach of children;
2. Always use responsibly. This appliance can be used by children aged from 10 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved;
3. Don't let children play with the appliance; supervise children using or maintaining the appliance;
4. Use only manufacturer's recommended attachments as described in this manual; misuse or use of any accessory or attachment other than those recommended, may present a risk of personal injury;
5. Take extra care when cleaning stairs;
6. Keep the appliance and accessories away from hot surface;
7. Do not block the appliances openings or hinder air flow, keep openings free of any objects including dust, lint, clothing, fingers (and all parts of the body);
8. Particularly keep hair away from openings and moving parts;

Electrical Safety

1. Only use batteries and charger supplied by the manufacturer;
2. Never modify the charger in any way;
3. The charger has been designed for a specific voltage. Always check the voltage is the same as that stated on the rating plate;
4. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack;
5. Before using, check the charger cord for signs of damage or ageing. A damaged or entangled charger cord increases the risk of fire and electric shock;
6. Do not abuse the charger cord;
7. Never carry the charger by the cord;
8. Do not pull the cord to disconnect it from a socket, grasp the plug and pull to disconnect it;
9. Don't wrap the cord around the charger when storing;
10. Keep the charger cord away from hot surfaces and sharp edges;

Electrical Safety

11. The supply cord cannot be replaced. If the cord is damaged the charger should be discarded and replaced;
12. Do not handle the charger or the appliance with wet hand;
13. Do not store or charge the appliance at outdoor;
14. The charger must be removed from the socket before removing the battery, cleaning or maintaining the appliance.

Battery Safety

1. This appliance includes Li-ion batteries, do not incinerate batteries or expose to high temperatures, as they may explode;
2. Liquid ejected from the battery may cause Irritation or burns;
3. In an emergency situation contact professional help immediately;
4. Leaks from the battery cells can occur under extreme conditions. Do not touch any liquid that leaks from the battery. If the liquid that gets on skin, wash immediately with soap and water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention. Wear gloves to handle the battery and dispose of immediately in accordance with local regulations;
5. Shorting the battery terminals may cause burns or fire;
6. When the battery pack is not in use, keep it away from paper clips, coins, keys, nails, screws or other small metal objects that could make a connection from one terminal to another;
7. When you dispose of the appliance remove the battery and dispose of the battery safely in accordance with local regulations.

Service

1. Before using the appliance and after any impact, check for signs of wear of damage and repair as necessary;
2. Do not use the appliance if any part is damaged or defective;
3. Repairs should be carried out by service center. Repairs by unqualified persons could be dangerous;
4. Never modify the appliance in any way as this may increase the risk of personal injury;
5. Only use replacement parts or accessories provided by manufacturer.

 
Intended Use

1. This appliance has been designed for domestic dry vacuum cleaning only;
2. Do not pick up liquids or use on wet surfaces;
3. Do not pick up anything that is flammable, burning or smoking;
4. Use only as described in this manual;
5. Don't use on concrete, tarmacadam or other rough surfaces.

Warning

1. Do not use water, solvents, or polishes to clean the outside of the appliance; wipe clean with a dry cloth;
2. Never immerse the unit in water and do not clean in a dishwasher.


Product Overview

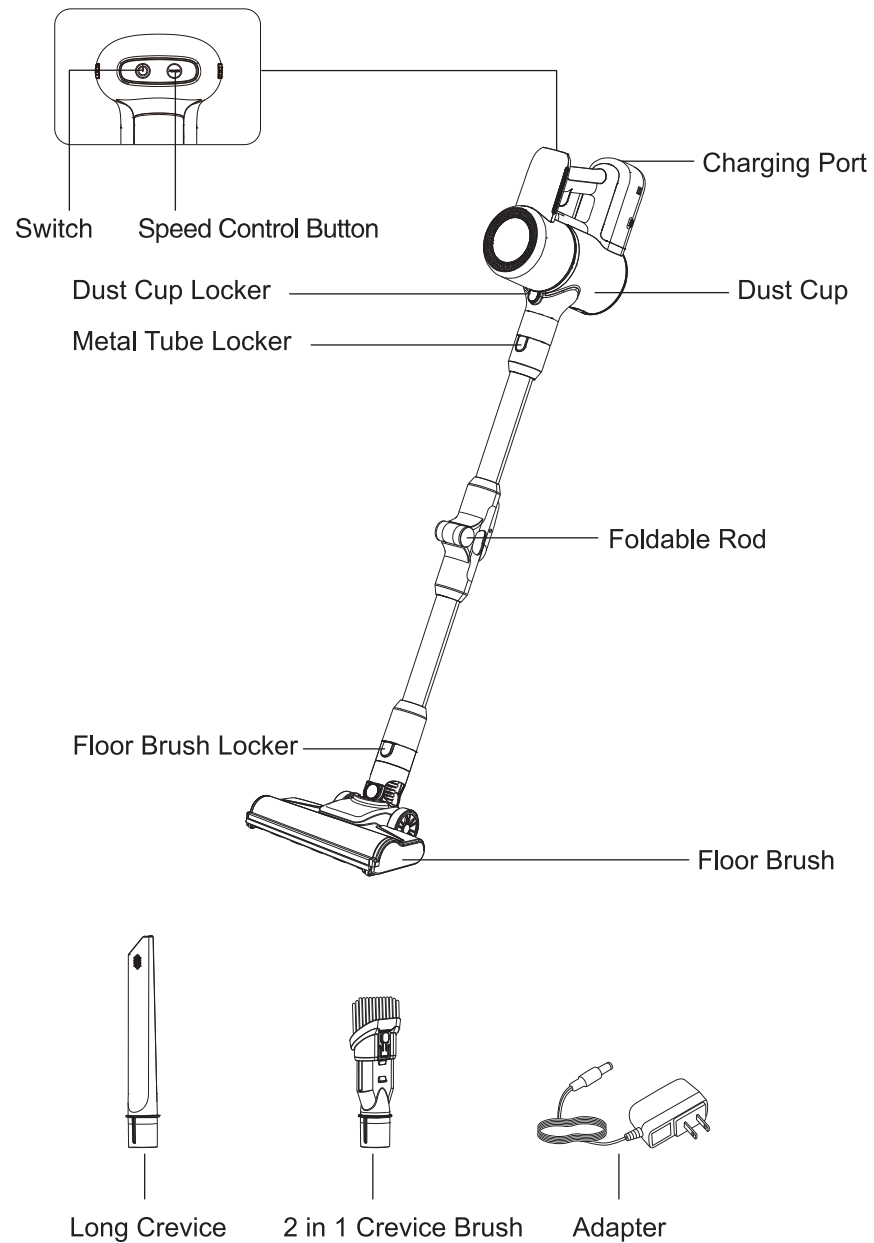


Assembly

I. Use as the stick vacuum cleaner

 
a) Assemble the handle into the dust cup, make sure the battery bolt head is inserted into the dust cup slot rightly as below.

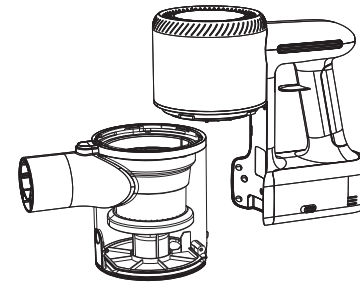

 b) Attach the metal tube to the body as below until hear click sound.

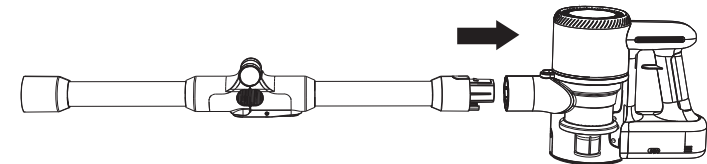

 
c) Connect the attachment head with the tube.

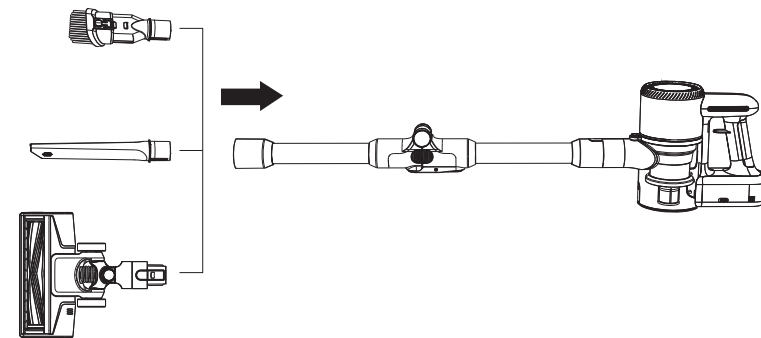

Assembly

II. Use as a Handheld Vacuum

 a) Attach the brush to the body as below until hear click sound.

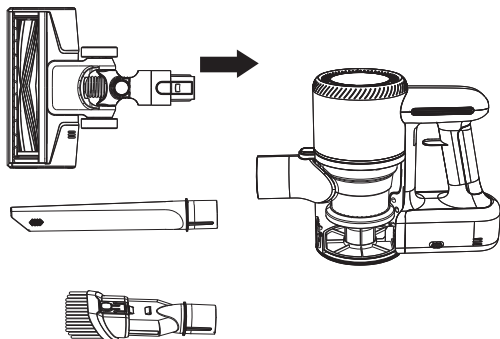

III. Press the switch to work

Two level speed control

 
 
a) Low Power

It's low power when you press the switch button first time.

b) High Power

It's high power when you press the speed control button, press again, it will back to low power.


c) It will be power off when press the switch button second time, it's kind of circle as below shown.

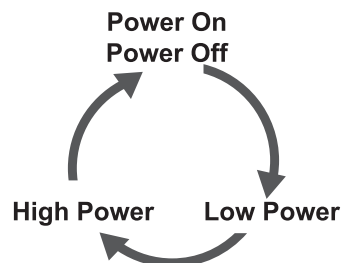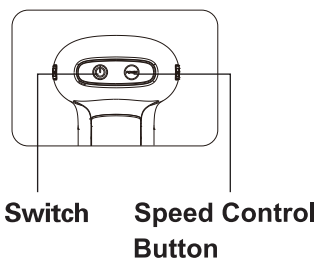

Product Operation

V. Battery charging

 
1. When there is only 1 indicator light left and keeping flashing, it means that the vacuum is running out of battery and needs a recharge.
2. The indicator lights will be solid on when the battery is fully-charged.

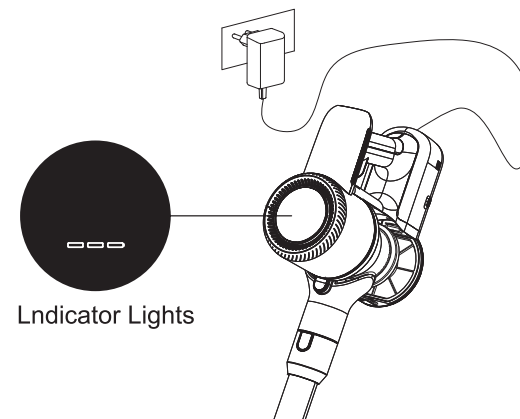


3. Please ensure using matched adapter - 26.5V/500mAh output, or it might cause not charging. If you won't use the vacuum for a long period, please allow a full charge and unplug it, this is good for product health.

VI. How to empty the dust cup

 - (1) Press the metal tube locker then take out the metal tube

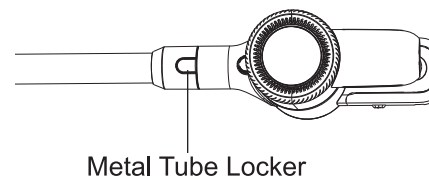

 - (2) Unlock the dust cup locker

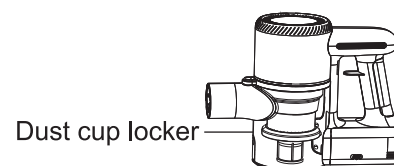


- (3) Empty the dust cup




Product Operation

VII. How to maintain the filter

 
1. Press the release button to remove the handle part from dust cup

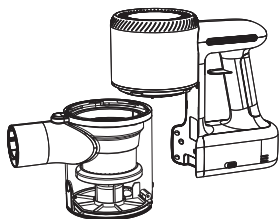

 
2. Take out the strainer, then take out the filter

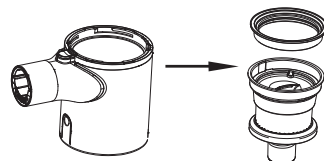

 
3. Wash the strainer and Filter Cotton

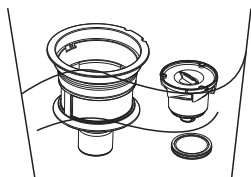

 
4. Leave them dry thoroughly

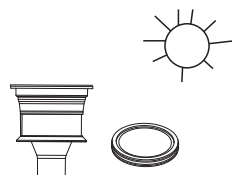

 
5. Assemble the filter to the strainer

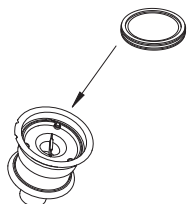

 6. Put the filter case back to the dust cup

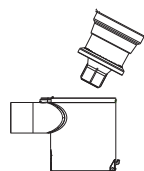

 7. Assemble the dust cover into the dust cup

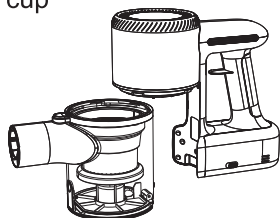

- * Kindly recommend cleaning the filter regularly and replacing it every 3-6 months or if it's worn out.

Troubleshooting

Suction gets weak	<ol style="list-style-type: none"> 1. Empty the dust cup 2. Clean the Filter Cotton 3. Check and clean if there is any blockage in the rod.
Stop Working	<ol style="list-style-type: none"> 1. Charge the battery 2. Clean the Floor brush
Roller brush stops spinning & has strange noise	<ol style="list-style-type: none"> 1. Check if the brush (especially the bearing part) is stuck by hair 2. Check if the filter cup is installed correctly in the right place 3. Detach the rod, test if the brush can work by connecting it directly to the vacuum motor.
Battery doesn't hold a charge	<ol style="list-style-type: none"> 1. Check if the charger & charging base is connected correctly 2. Check if the indicator lights are on when connected to the charging base.



If you need more support, please don't hesitate to contact us via support@poweart.com to get help.

Warranty

NOTE: THIS WARRANTY TERM GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

12-month Warranty & Lifetime Customer Support

Only apply to eligible purchases made directly from the Poweart authorized distributors. Warranty coverage applies to the original owner and to the original product only and is not transferable.

How to initiate a warranty claim

If your appliance operates improperly while in use under normal household conditions within the warranty period, please contact our customer support [support@poweart.com] to initiate a warranty claim.