 


E CRAVE 2

ELECTRIC GRILL

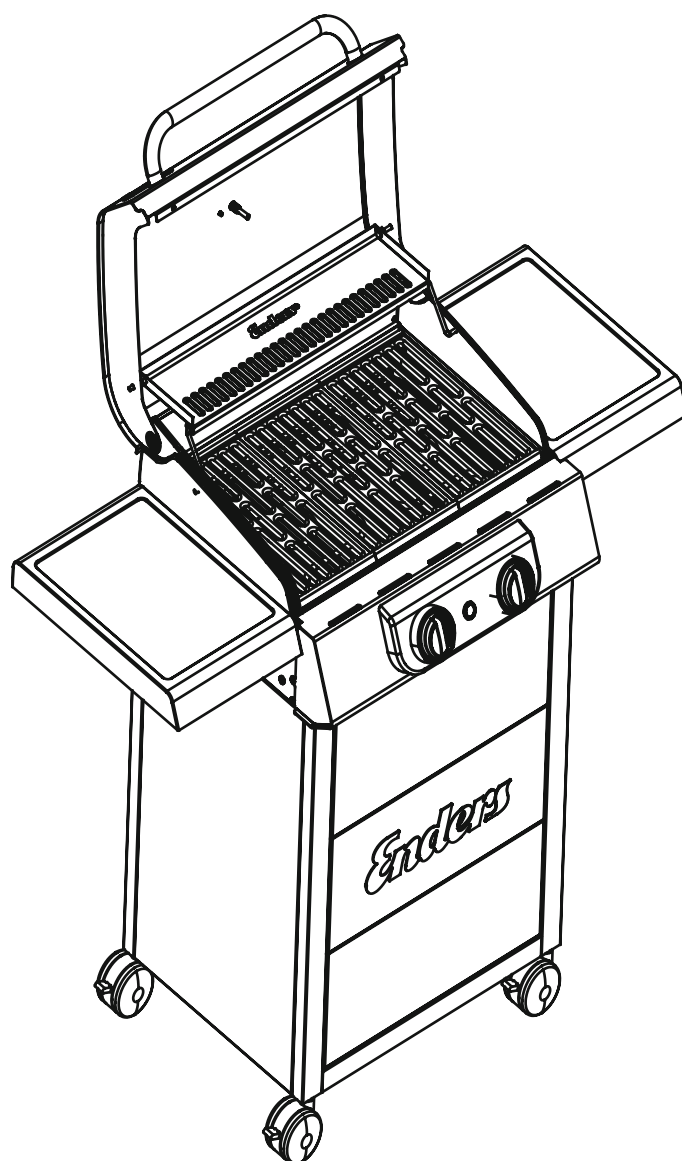

Item no.: 9711

EN

INSTRUCTIONS FOR USE

CONTENTS

ABOUT THIS ELECTRIC GRILL 3

SYMBOLS IN THIS MANUAL 3

UNPACKING THE ELECTRIC GRILL 4

SAFETY INSTRUCTIONS	4
REQUIRED TOOLS	4
PARTS DESCRIPTION	4
SCOPE OF DELIVERY	5

ASSEMBLING THE ELECTRIC GRILL 6

SAFETY INSTRUCTIONS	6
REQUIRED TOOLS	6
ASSEMBLY STEPS	6

OPERATING THE ELECTRIC GRILL 12

SAFETY INSTRUCTIONS	12
EXPLANATION OF SYMBOLS ON THE CONTROL PANEL	14
GENERAL GRILLING TIPS	14
BEFORE GRILLING FOR THE FIRST TIME	15
TURNING ON THE ELECTRIC GRILL	15
TURNING OFF THE ELECTRIC GRILL	15
FIRST AID MEASURES	16

CLEANING/MAINTAINING THE ELECTRIC GRILL 17

SAFETY INSTRUCTIONS	17
---------------------	----

STORAGE/TRANSPORT 18

SAFETY INSTRUCTIONS	18
---------------------	----

DISPOSAL 18

TECHNICAL SPECIFICATIONS 19

WARRANTY 20

MANUFACTURER 20

ABOUT THIS ELECTRIC GRILL

Congratulations on your purchase of an ENDERS product!

You can rest assured that you have purchased a product from one of Europe's leading manufacturers!

All devices are manufactured to the highest performance and safety standards. As part of our customer service and assurance of customer satisfaction, we provide a 2-year warranty.

Keep these instructions for future reference. If the product is given to someone else, please include these instructions.


Please read the operating instructions and especially the safety instructions carefully before using the device and be sure to follow them.

Have fun with your ENDERS product!


SYMBOLS IN THIS MANUAL




This symbol stands for the signal word **CAUTION** and warns of possible injuries or property damage and damage to the device.

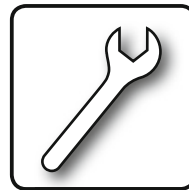

Tools are required.
Cross-head screwdriver and open-end spanner SW 17.

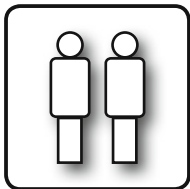


Have a **second person** help you at this point.

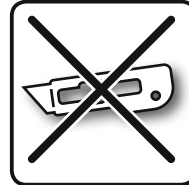

To avoid scratching the device, **do not use a blade** or similar sharp objects to open the packaging.



Useful **tips** and **information**.

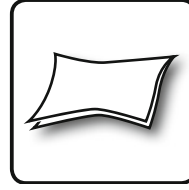

Place **soft padding** under the parts during assembly to avoid scratches and damages.



Wear safety gloves during assembly to prevent cuts.



Follow the **instructions for use**

UNPACKING THE ELECTRIC GRILL

SAFETY INSTRUCTIONS



- Despite careful processing of all individual parts, individual components may have sharp edges. Therefore, please wear safety gloves to prevent cuts.
- Risk of death by suffocation/swallowing. Keep the packaging material out of reach of children and dispose of it immediately. Also keep small parts out of their reach.
- Refer to the detailed drawings when assembling your electric grill.

REQUIRED TOOLS



PARTS DESCRIPTION


No.	Description	Quantity
1	Grill top	1
2	Grill grate	2
3	Side shelf right	1
4	Side shelf left	1
5	Side wall	2
6	Brace front left (FL)	1
7	Brace rear left (RL)	1
8	Brace front right (FR)	1
9	Brace rear right (RR)	1
10	Base plate	1
11	Grease drawer	1
12	Front panel	2
13	Wheel with brake	4
14	Front panel centre	1
15	Thermometer	1
16	SIMPLE CLEAN rear	1
17	Hot grid	1
18	SIMPLE CLEAN side	2
19	SIMPLE CLEAN front	1
20	Hood handle	1

No.	Description	Quantity
A	Axle screw	8
B	Screw	36
C	Nut	1



The "right" and "left" indicators refer to the directions as seen by the user.

SCOPE OF DELIVERY

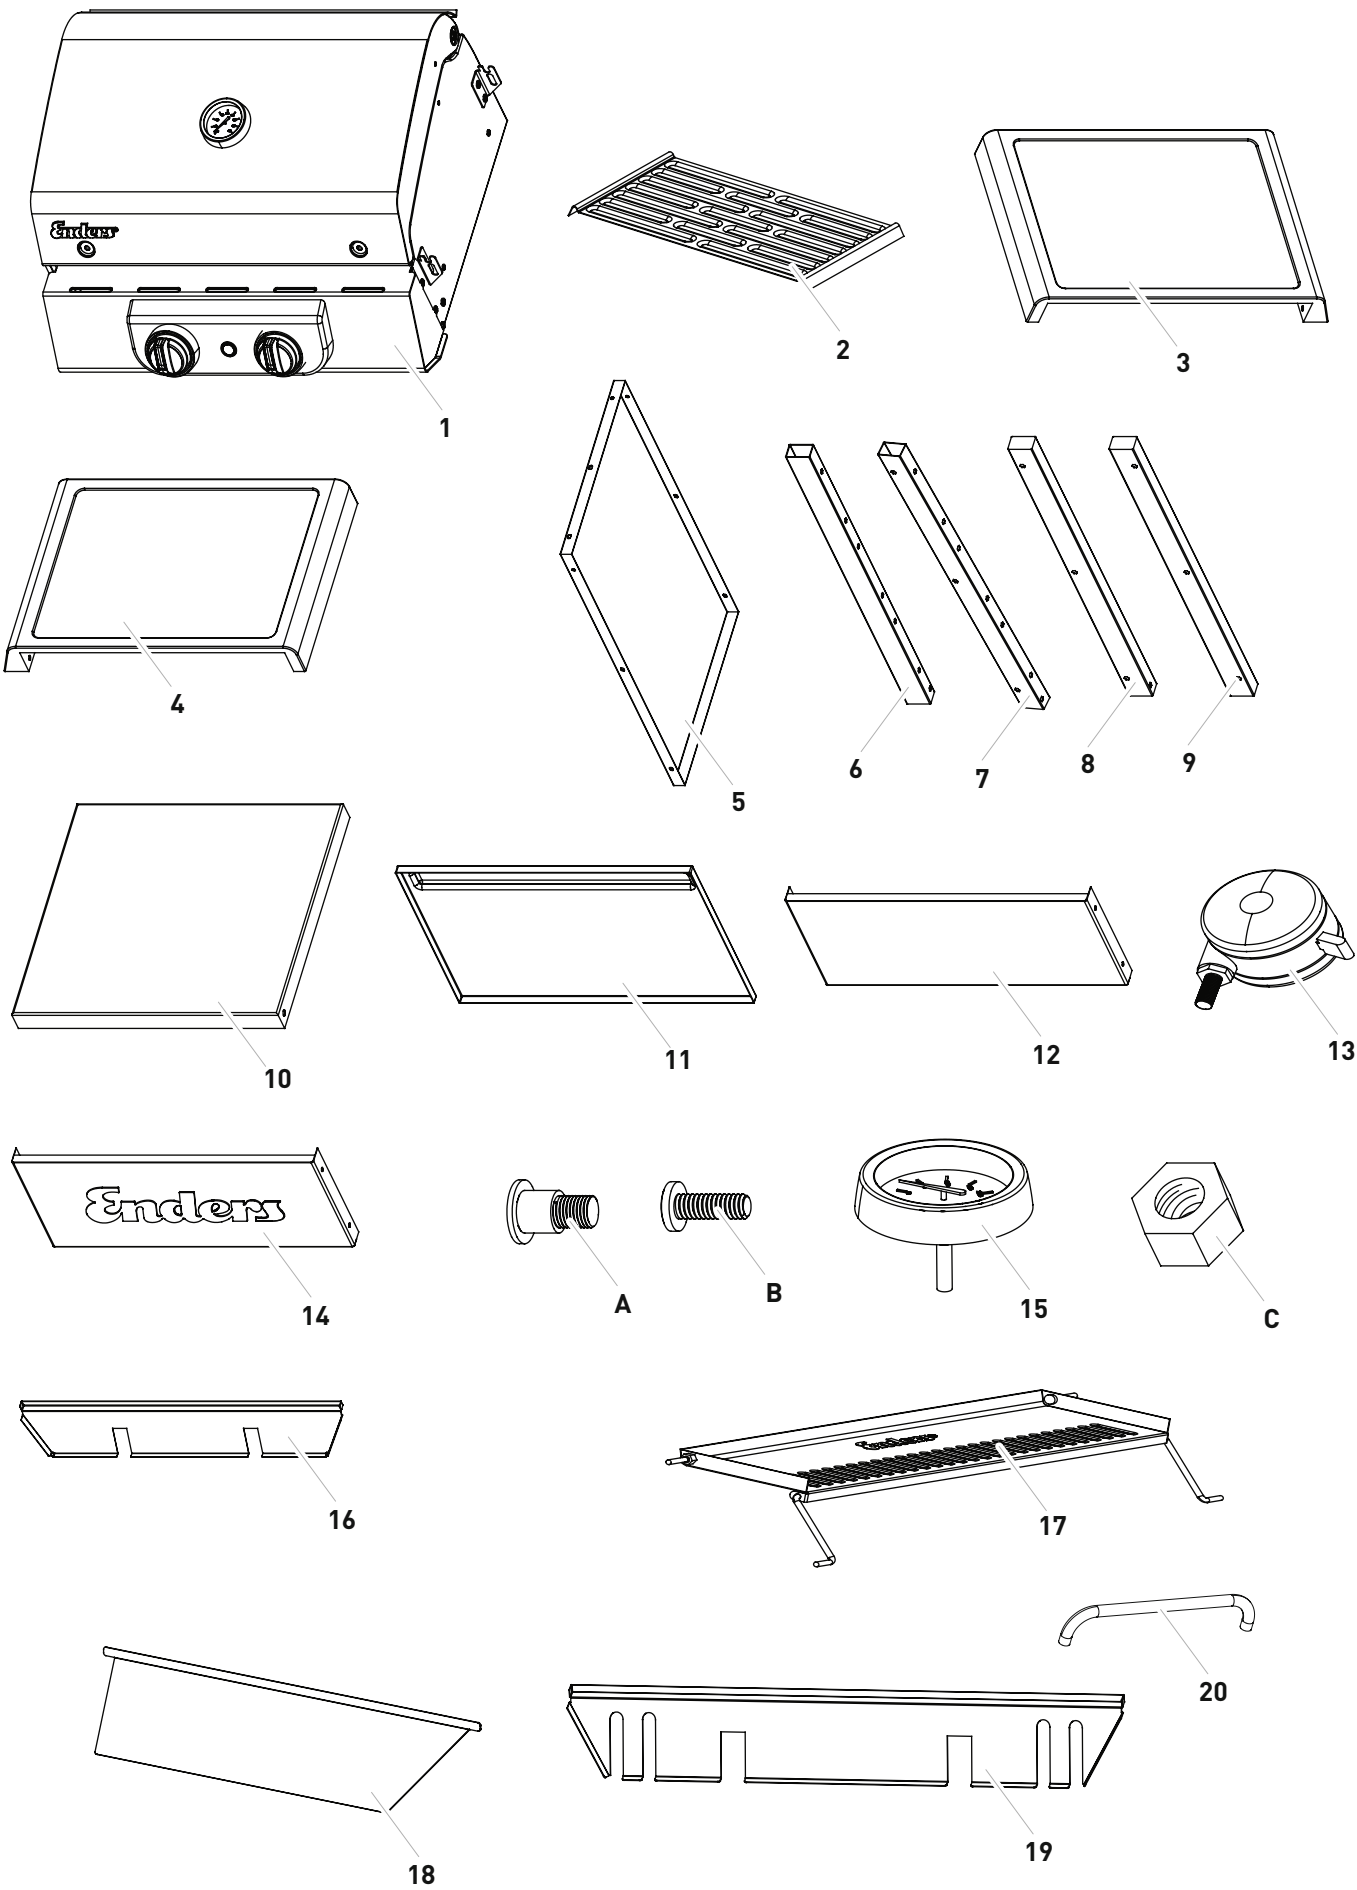

ASSEMBLING THE ELECTRIC GRILL

SAFETY INSTRUCTIONS



- Despite careful processing of all individual parts, individual components may have sharp edges. Therefore, please wear safety gloves to prevent cuts.
- Remove all packaging and protective film from the individual parts prior to assembly.
- Risk of death by suffocation/swallowing. Keep the packaging material out of reach of children and dispose of it immediately. Also keep small parts out of their reach.


REQUIRED TOOLS





ASSEMBLY STEPS


01


No.	Drawing	Quantity
5		2
6		1
7		1
8		1
9		1
B		12

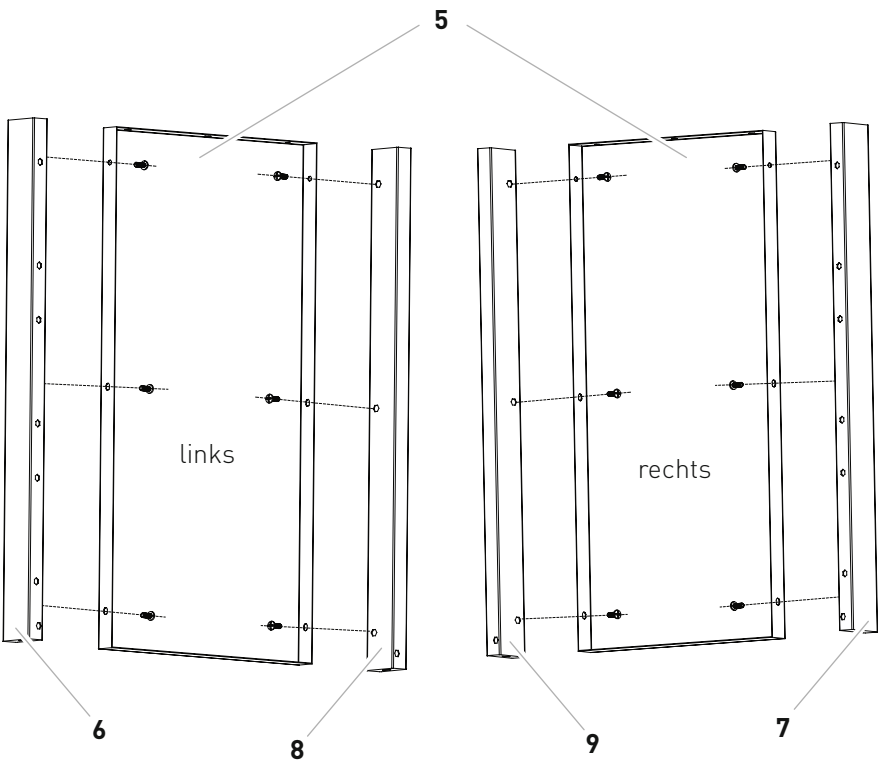 


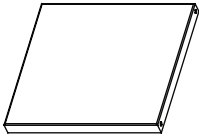 

No.	Drawing	Quantity
10		1

 
B		4
---	-----------------------------------------------------------------------------------	---

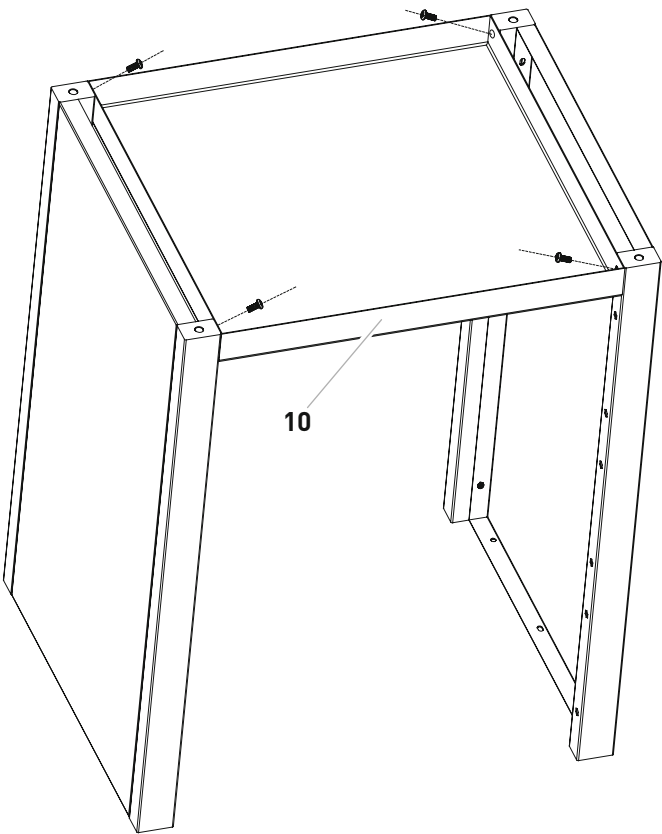 


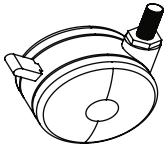 

No.	Drawing	Quantity
13		4

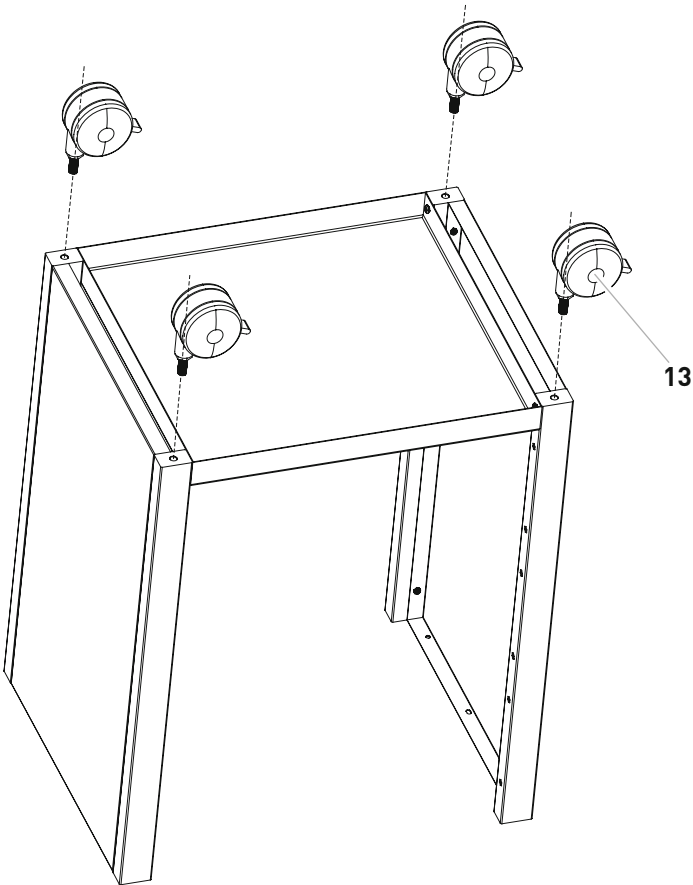 

    
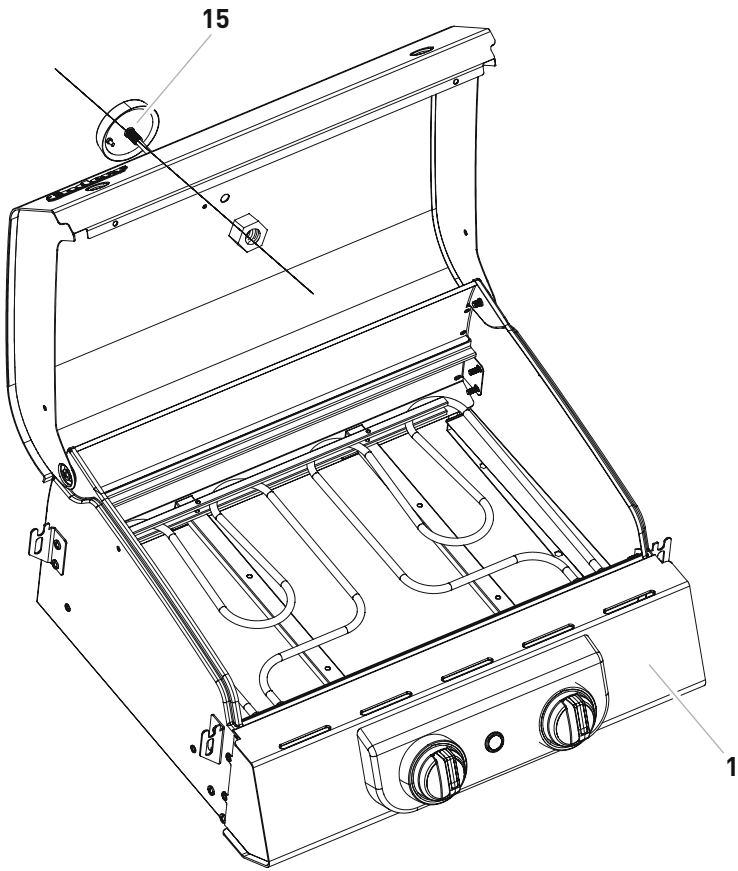 
No.	Drawing	Quantity
12		2
14		1

B		12
---	-----------------------------------------------------------------------------------	----

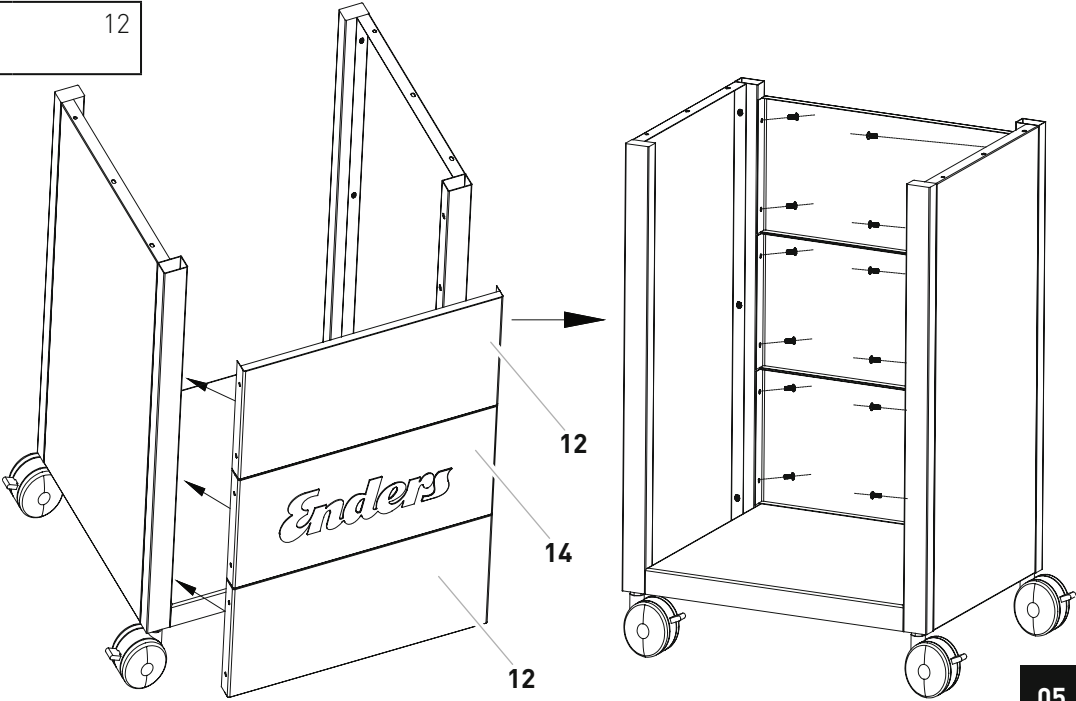
 


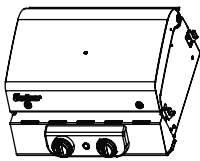
 
No.	Drawing	Quantity
1		1
15		1


C		4
---	-------------------------------------------------------------------------------------	---




06


No.	Drawing	Quantity
16		1
18		2
19		1


B		6
---	-----------------------------------------------------------------------------------	---

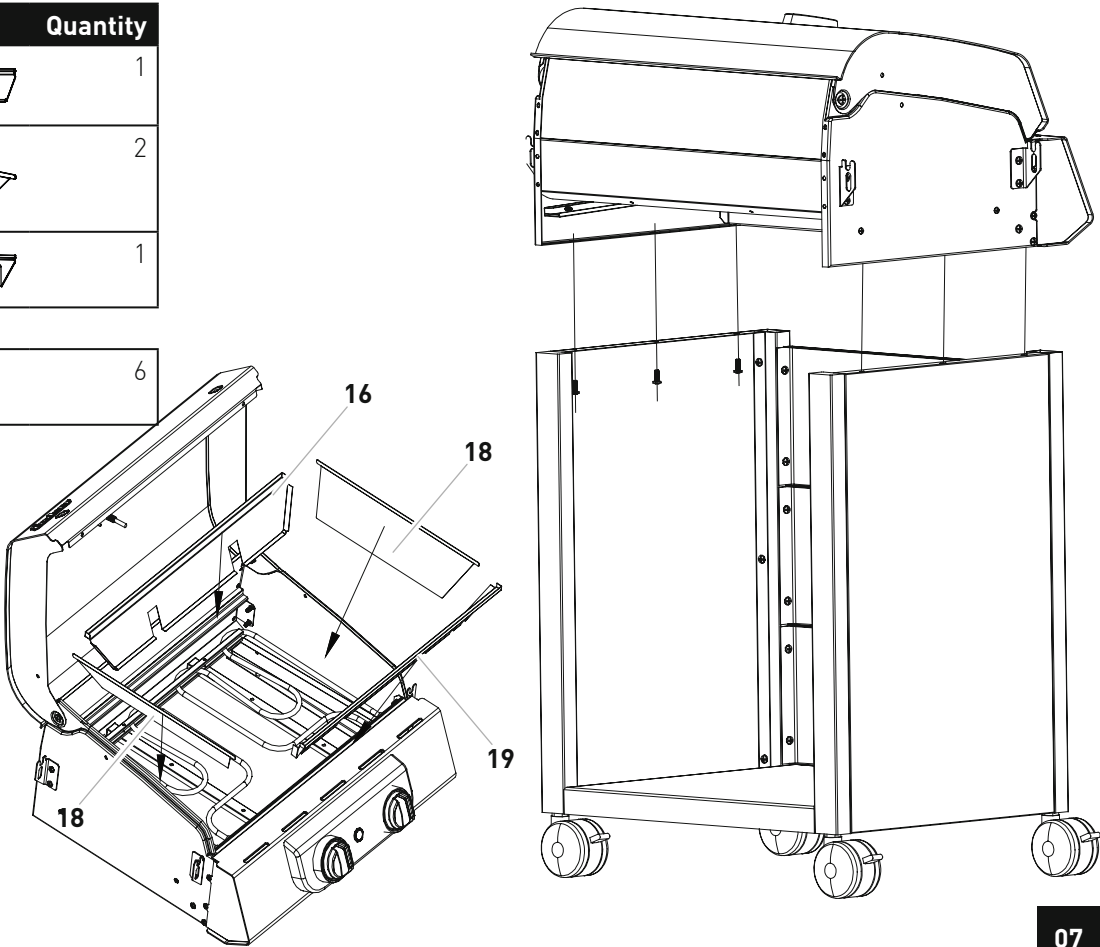 



07


No.	Drawing	Quantity
20		1

 
B		2
---	-------------------------------------------------------------------------------------	---



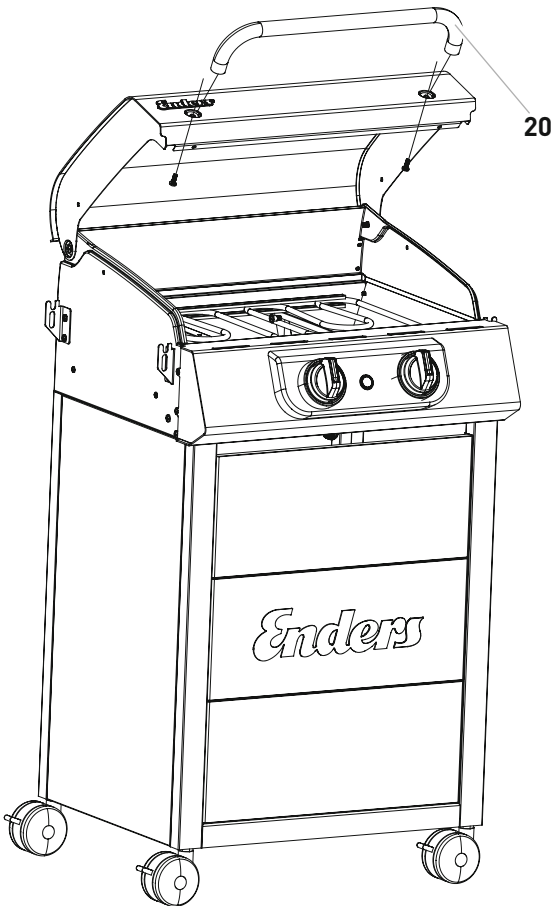 


 No.	Drawing	Quantity
2		2

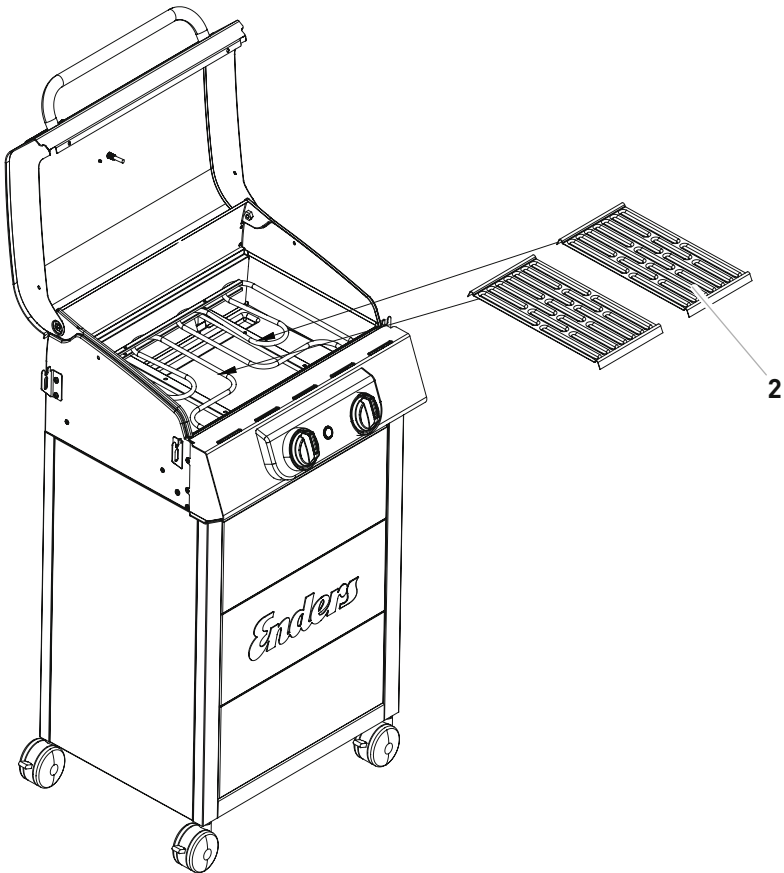 



No.	Drawing	Quantity
17		1

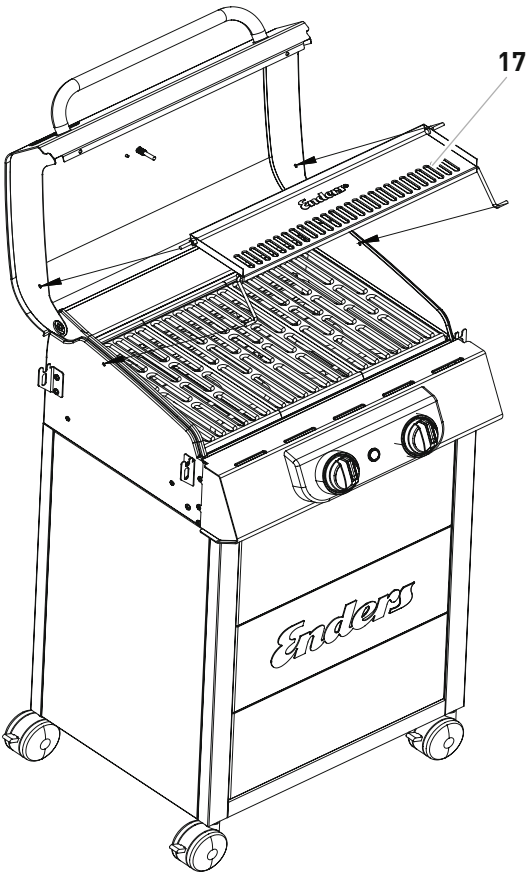 

   No.	Drawing	Quantity
3		1
4		1
A		8

 CAUTION: Please ensure that the side shelf is mounted correctly, otherwise it may fall unexpectedly and cause injury.

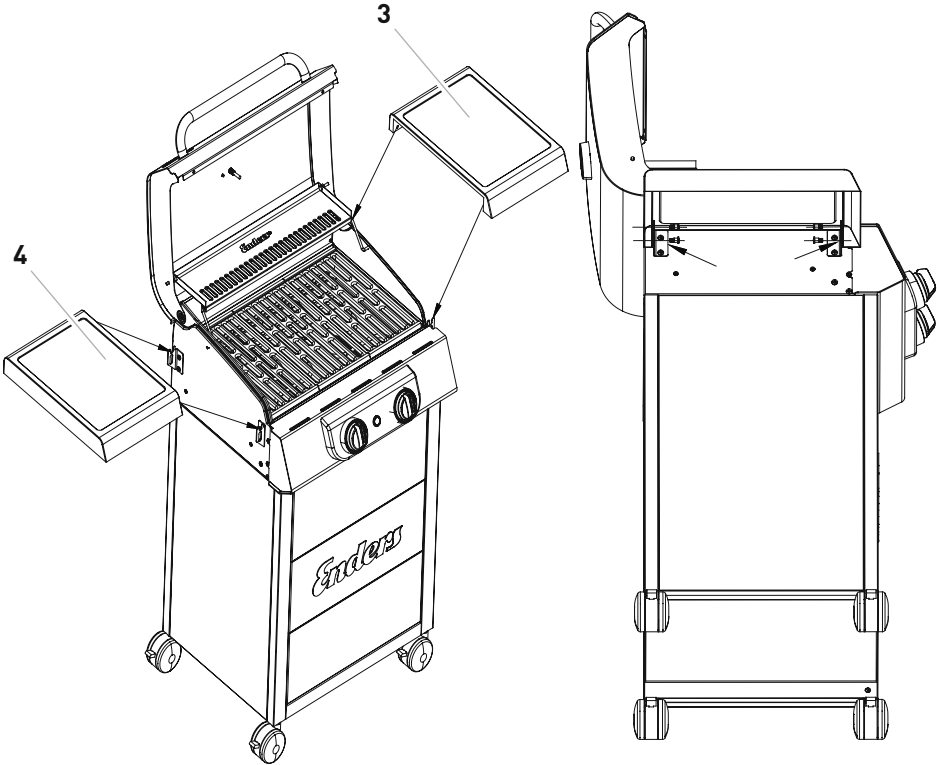

No.	Drawing	Quantity
11		1



OPERATING THE ELECTRIC GRILL



SAFETY INSTRUCTIONS

Please read these instructions carefully before using your new electric grill.




Always think about safety before you start grilling. A few safety checks always should therefore be carried out prior to grilling.

- Only use outdoors.
- The device may only be connected to a properly installed earthed power socket.
- The device is designed for outdoor use, and therefore must be operated using a residual current device (RCD) that has a tripping current of no more than 30 mA.
- This device is not intended to be used by children or persons with reduced ability to operate equipment. Only persons capable of operating the device safely are permitted to use it.
- Do not leave the device on or unattended when children or animals are around.
- Ensure that your supply voltage corresponds to the voltage indicated on the type plate of the device.
- The connecting cable must be checked for damage regularly. Do not use the device if there is any damage.
- Do not use the device if the power socket is damaged.
- If the plug or the cable is damaged, it is only to be replaced by qualified personnel in order to eliminate hazards.
- In case of doubt, contact your seller.
- **CAUTION:** Accessible parts can be extremely hot. Keep away from children and persons requiring care.
- Wear protective gloves when handling hot components.
- **CAUTION!** The grill may not be operated with coal or similar combustibles.
- Do not modify this product or use it in any way other than for its intended purpose.
- Only use the grill as described in these instructions. Using the device in any other way not described in this manual may cause fire, electric shock or personal injury.
- Do not use the grill as a heating device.
- This device complies with the technical standards as well as the safety regulations for electrical devices.
- Always make sure that the power socket you are using has the correct voltage. The power socket must also be suitable for a device with a power consumption of 2,600 watts.
- Ensure that no other devices with high power consumption are connected in the same circuit when operating the grill.
- Unplug the grill when not in use.
- Do not lay the mains cable across areas where people are walking.
- Make sure that the cable cannot come into contact with the grill when it is hot.
- Do not use the grill indoors or for commercial use.
- Do not operate the grill near flammable substances.
- Prevent contact with flammable materials such as paper, partitions, curtains, cloths, chemicals, etc.
- Do not use the grill in busy areas.
- Make sure that the grill is protected from the wind.
- Keep the grill away from moisture, splashing water, etc.
- Place the electric grill on a flat, stable surface.
- Do not move the device while in use. Lock the wheels by pushing down the lock.
- Fold down the side tables before moving the grill.
- Do not leave the electric grill unattended during operation.
- Wait until the device has cooled down before transporting or storing it.
- To prevent the grill from getting splashed or falling into water, keep it at least 3 m away from bodies of water such as pools or ponds.
- Do not slot or install this model of grill into a structure.

- Ignoring this warning could result in a fire or explosion, causing serious injury, fatal accidents and damage to property.
- If a flash fire occurs, do not use water to extinguish the fire. Switch the grill OFF. Unplug the mains cable and wait until the grill has cooled down.
- Avoid damage caused by improper use such as immersion in water or other liquids, dropping, knocking or stepping on any parts.
- Keep a safe distance from flammable and heat-sensitive materials during operation. Keep a distance of no less than 0.5 m.
- Make sure that the grill is not located beneath any objects or parts of buildings that are less than 2 m above the grill.
- Do not allow the grill surface to come into contact with flammable gases and liquids such as petrol, alcohol, etc. and other flammable materials.
- Extension cords or plug adapters are not suitable for this device. The use of such products will seriously impair the effectiveness of your barbecue's protective residual current device (PRCD). It can also lead to a loss of performance.
- Hot air may escape when the hood is opened. When opening the hood, please ensure that children and people in need of care are away from the device.
- Keep electric cables away from all hot surfaces.
- Do not look directly at the glowing heating elements for extended periods of time.
- The side shelves are not intended to come into direct contact with food.
- Only operate the device with the control knob mounted.
- Make sure that all screws are tightened. Check that all screws are tight at regular intervals.
- Do not remove the grease tray while grilling.
- When you are finished using the device, please first switch off the main switch on the front and only then pull out the mains plug in order to avoid accidentally switching on the device at a later point.
- Preventing grease fires:
 - Fats and oils can spontaneously ignite when heated to high temperatures. If not cleaned properly, the accumulated fat can catch fire, which can lead to what is known as a grease fire on the grill.
 - Dab excess fat/marinade off the food before grilling. This does not diminish the taste of the grilled food; it is purely to prevent a grease fire.
 - Clean the device regularly to remove grease deposits! Pay special attention to grease deposits inside the firebox, on the brackets of the heating elements and in the grease tray.
 - Never use water to extinguish burning, hot or smoking fat/oil.
 - Make sure you have a firm hold when opening and closing the hood to avoid it falling and trapping your limbs.

EXPLANATION OF SYMBOLS ON THE CONTROL PANEL



<p>Use the power button to switch the unit on or off.</p>  <p>Power ON/OFF</p>	<p>This knob starts and regulates the left heating element.</p>  <p>Grill zone</p>	<p>This knob starts and regulates the right heating element.</p>  <p>Grill zone</p>
<p>These symbols indicate the different grilling zones which can be regulated individually on the device.</p>		

GENERAL GRILLING TIPS




- The electric grill is a multifunctional device. You can not only grill, but also cook meat, fish, vegetables and fruit. The temperature can be adjusted as needed at any time with the buttons and monitored with the thermometer.
- **TIP:** We recommend that you close the hood when grilling. This will cook your food faster and more evenly.

BEFORE GRILLING FOR THE FIRST TIME SWITCHING OFF THE ELECTRIC GRILL




Before grilling on the electric grill for the first time, let the heating elements run on the highest setting for at least 20 minutes with no food on the grill in order to remove any production residues. There may be a slight odour. Ensure that there is sufficient ventilation. The colour of the SIMPLE CLEAN trays may change slightly. This is a natural process and does not give cause for complaint. Continue the process until no more smoke is produced.



1. Turn both knobs counterclockwise to the off position.
2. Press the power button  to switch off the power supply and the operating mode to the grill. After pressing the button, the white LED light will switch off.
3. Unplug the grill's power cable from the socket.

SWITCHING ON THE ELECTRIC GRILL



1. Check that the knobs for both heating elements are in the off position.
2. Plug the grill's power cable into a suitable socket.
3. Press the power button  to supply power to the grill. After pressing the button, the white LED light will switch on and the grill is in operating mode.
4. Switch on the heating elements by turning the knobs clockwise (to the right).
5. Regulate the heat by turning the knobs to any setting between the highest and lowest setting.

PREHEATING THE ELECTRIC GRILL



We recommend that you preheat the electric grill for 15-20 minutes. The heating time will vary depending on outdoor conditions such as air temperature and wind. To preheat the grill, set both knobs to the highest setting with the hood closed. After preheating, the food can be placed on the hot grill rack.

FIRST AID MEASURES



FIRE FIGHTING MEASURES

- Take nearby persons to safety! If possible, disconnect the mains plug. Wait until the device has cooled down. Pay attention to your own safety! Spontaneous explosive reignition may occur.

MEASURES FOR MAJOR BURNS OR SCALDING

- There is an acute risk of hypothermia and shock. Call emergency medical services immediately!
- Extinguish any burning garments with water immediately or smother the flames with a thick blanket.
- Scalding: Remove clothing immediately.
- Burns: Do not remove clothing.
- Cool with cold water for at least 15 minutes until pain subsides.
- Cover the affected area with a sterile Metalline burn sheet. Apply the Metalline coated side to the injured skin and loosely secure with a gauze bandage or Esmarch bandage.
- Do not use "aides" such as ointments, powder, oils, disinfectants, etc.!

MEASURES AFTER MINOR BURNS OR SCALDING

- Scalding: Remove clothing immediately.
- Burns: Only remove clothing if it is not stuck.
- Cool with cold water for at least 15 minutes until pain subsides.
- Allow minor burns or scalding without blisters to heal open, do not cover with a bandage or dressing.

CLEANING/MAINTAINING THE ELECTRIC GRILL



SAFETY INSTRUCTIONS

- Despite careful processing of all individual parts, individual components may have sharp edges. Therefore, please wear safety gloves to prevent cuts.
- Hot surface: Allow the electric grill to cool down completely and unplug the mains cable before cleaning.

RISK OF FIRE AND EXPLOSION

Preventing grease fires:

- Clean the device before each use to avoid grease deposits. Pay special attention to grease deposits inside the firebox, on the brackets of the heating elements and in the grease tray.
- Do not use flammable cleaning agents.

Handling the electric grill:

- Repairs and maintenance of electronic parts must be carried out by authorised specialists.
- Do not make any modifications to the electric grill or any other parts.
- Parts sealed by the manufacturer must not be manipulated or modified.



- Dab excess fat/marinade off the food before grilling. This does not diminish the taste of the grilled food; it is purely to prevent a grease fire.
- Clean the grill after each use. Pay special attention to grease deposits inside the firebox, on the brackets of the heating elements and in the grease tray.
- Do not use abrasive or chlorinated cleaning agents.
- Pull out the grease tray and dispose of the grease in an environmentally friendly manner.
- The heating elements are more or less self-cleaning for light soiling. Coarser dirt can be removed carefully using a soft brush. To do this, switch off the device and wait until it has cooled down completely.
- We recommend Enders BBQ Cleaner (Item No. 4975) for cleaning surfaces. Alternatively, you can use a mild detergent. Wipe down with a damp cloth and dry all surfaces with a microfibre cloth.
- When using a mild cleaning agents, also observe the notices/product information of the product manufacturer to prevent damaging the surface.
- Allow the device to dry completely before using it again.

Grill rack:

- The easiest way to remove coarse dirt from the grill grate is to brush it with a stainless steel brush while it is hot, directly on the grill. Once the grill has cooled down, you can simply remove the grate for thorough cleaning. We recommend using the Enders Grill Grate Cleaner (Item. No. 4974) for this purpose. The cooking grate can be cleaned with warm soapy water. We recommend first soaking it to clean baked on particles. Then rinse the grate with clean water.

SIMPLE CLEAN:

- The electric grill is equipped with the innovative, patent-pending SIMPLE CLEAN from Enders as a solution for quick and easy cleaning. The entire firebox and the grease tray have smooth surfaces – without corners and edges – and can be removed without tools. The individual removable parts are all made of stainless steel and are dishwasher-safe and can also be easily cleaned by hand.

STORAGE/TRANSPORT



- Keep the device in a frost-free, dry location.
- Close the grill hood and cover the device with the weather protection cover supplied to prevent dirt build-up and damage.

DISPOSAL



The product packaging is made of recyclable materials. Please dispose of packaging according to material type in the designated collection containers.

If you no longer wish to keep the article, do not throw it in the household waste. Please contact your local disposal company or your municipality about eco-friendly, resource-conserving disposal.

TECHNICAL SPECIFICATIONS

Model:	eCRAVE 2
Item no.:	9711
Mains connection:	230 V / 50 Hz
Max. wattage:	2.600 W
Protection type:	IP X4



WARRANTY/WARRANTY CERTIFICATE



We grant a **2-year warranty** on the functioning of the device. The proper handling of the device and official proof of the date of purchase are required for the warranty to be applicable.

The warranty expires at the end of the warranty period or immediately if you make any modifications to the device yourself. No modifications may be carried out on components that have been sealed by the manufacturer or their representative!

If, despite our quality checks, your product should be defective, please do not bring it back to the retailer but contact Enders directly. By doing so, we can ensure a quick processing of your complaint.

Service: **www.enders-germany.com**

Please fill in the form and keep the warranty card and proof of purchase for further questions!

Model name

Manufacturer item number

Serial number (see back of device)

Date of purchase

Place of purchase

Attach proof of purchase

Subject to colour variations and technical modifications for the purpose of product improvement.

MANUFACTURER

Enders Colsman AG

Brauck 1

D-58791 Werdohl, Germany

Phone +49 (0) 2392 - 9782 30