
Lenovo

Lenovo SO2 wireless Bluetooth controller


(PC/Switch/iOS/Android)


instruction manual

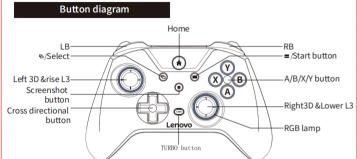



Product features


- 1. The controller supports wired connection mode, Bluetooth connection mode, and 2.4G connection mode according to different platforms
- 2. The Bluetooth controller supports Android, Windows, IOS, and Switch hosts 3. The 2.4G controller supports Switch Windows systems and Android systems
- 4. The controller supports SWITCH, Android, Windows (XINPUT (PC360), DINPUT functions with wired support, and automatic recognition of wired connections on various platforms

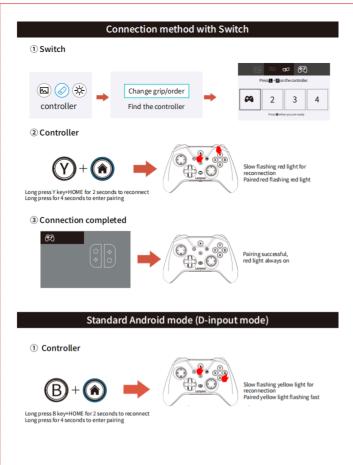

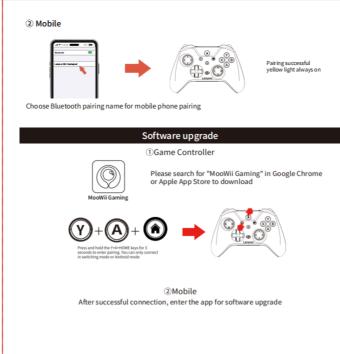

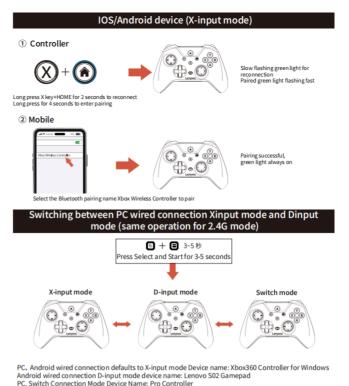

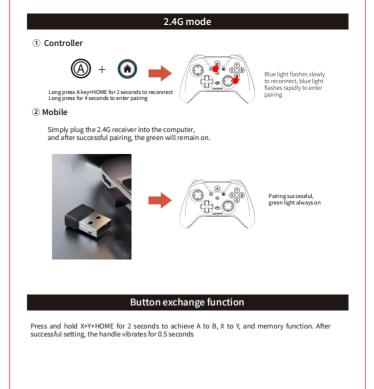

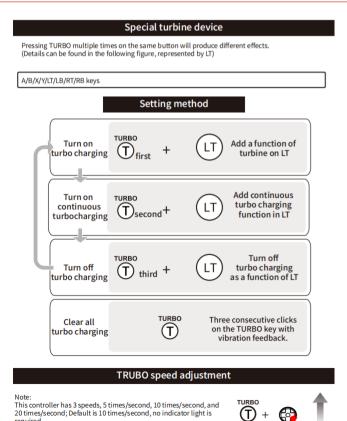

required
1. Press the T+cross key to increase the transmission frequency from

5 times/second/10 times/second to 20 times/second
2. Press the T+cross key to lower the transmission frequency from 20 times/second/10 times/second to 5 times/second

