



PL | INSTRUKCJA OBSŁUGI
EN | OPERATIONAL MANUAL
DE | GEBRAUCHSANLEITUNG
FR | MODE D'EMPLOI
RU | ИНСТРУКЦИЯ ПО ОБСЛУЖИВАНИЮ
CZ | NÁVOD K OBSLUZE
SK | NÁVOD K OBSLUZE
RO | INSTRUȚIUNI DE FOLOSIRE
HU | HASZNÁLATI UTASÍTÁS



UK
CA



JEŹDZIK • RIDE ON • VOITURETTE • RUTSCHER • МАШИНА КАТАЛКА
ODRAŽEDLO • JÁTEKAUTÓ • MASINUTA COPII

MERCEDES-BENZ C-CLASS S

„Mercedes-Benz” and  are the intellectual property of Mercedes-Benz Group AG. They are used by Ningbo Prince Toys Co., Ltd under license.

Nazwa „Mercedes-Benz” i logo  są własnością intelektualną firmy Mercedes-Benz Group AG. Wykorzystywane są przez firmę „Ningbo Prince Toys Co., Ltd” w ramach licencji.

EN

IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE!

ASSEMBLY INSTRUCTION (FIG. 1-4)

The pictures are only for reference. The product may differ from the pictures.

WARNING! The product should be assembled by adults only. All small parts needed to assemble the toys keep out of reach of the child.

Bolts, nuts and washers not marked in parts list or in the parts pictures are already installed on designated parts. In order to use them firstly unscrew and take them out. Then mount the part on the shaft/rod (e.g. wheel, steering wheel) and tighten the screw/nut again (following proper figures and installation order).

Please follow the drawings (1-4).

This product is intended for children aged from 12 to 36 months.

WARNING! Not to be used in traffic.

WARNINGS!

- 1) Max load of toy 25 kg
- 2) The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- 3) Before every use, make sure that the toy is properly assembled. Always keep all parts out of reach of children.
- 4) Do not use the toy when any part is damaged or are missing any parts.
- 5) Use only spare parts approved by the manufacturer.
- 6) Baby should wear shoes when using the toy.
- 7) Do not use the toy on rough, bumpy, steep roads and near water.
- 8) Do not let the child stand on the toy.
- 9) Never leave your child unattended.
- 10) Children should always keep both hands on the steering wheel.
- 11) Teach your child how to use the ride on, how to ride, steer, and brake.
- 12) In one time the toy can use only one child.
- 13) This toy never be towed by another vehicle or bicycle.
- 14) This toy cannot be used to tow other vehicles.
- 15) Do not use the toy after dark or when visibility is limited.
- 16) This toy has no brakes.

CLEANING AND MAINTENANCE

Keep your ride on clean. Dirt should be removed with a soft sponge, often flushed with water and detergent, wipe dry. Check the status of all the fixing screw connections with different mechanisms of the toy frame and in particular wheels. Store the toy in dry place. Do not immerse in water! Toy will get damaged. Using alcohol or ammonia-based cleaners may also damage plastic components. Do not immerse in water! Toy will get damaged.

SAFE BATTERY USE

Batteries should be replaced by adults, keep the batteries out of children's reach. Changing the batteries in the toy (fig. 4). Remove the battery compartment cover. Insert 2 pcs. Batteries „AAA“ to the battery compartment. Pay attention to the correct battery polarity (+/-). Replace and tighten the cover. NOTE: BATTERIES ARE NOT INCLUDED TO THE TOY. Only the recommended batteries or equivalent are to be used, volts and size. Batteries are inserted with the correct polarity. Do not short-circuit supply terminals. Rechargeable batteries are to be removed before being charged. Rechargeable batteries are only to be charged under adult supervision. Any battery may leak battery acid if mixed with a different battery type, if inserted incorrectly (put in back-wards) or if all batteries are not replaced or recharged at the same time. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Any battery may leak battery acid or explode if disposed of in fire or an attempt is made to charge a battery not intended to be recharged. Never recharge a cell of one type in a recharger made for a cell of another type. Discard leaky batteries immediately. Leaky batteries can cause skin burns or other personal injury. When discarding batteries, be sure to dispose them in the proper manner, according to your state and local regulations. Always remove batteries if the product is not going to be used for a month or more. Batteries left in the unit may leak and cause damage. Recommended type batteries – alkaline disposables, size AA (LR06-1.5V). Never mix battery types. Change batteries when product ceases to operate satisfactorily. Batteries should not be disposed with household waste, should be disposed in battery collection points.



The symbol of the crossed out bin means that the toys and batteries must not be disposed with household waste. To prevent potential harm to the environment or human health, hand over used batteries and used toys to a designated collection point for the recycling of electrical and electronic equipment waste. You can help protect the environment by contributing to the reuse and recovery, including recycling of used electronic equipment. To receive detailed information regarding recycling of this product and batteries, please contact your local government representative, supplier disposal service provider or the shop where you purchased the product.

MANUFACTURED FOR / WYPRODUKOWANO DLA:



**PM INVESTMENT
GROUP NAPERT, SOSZYŃSKI SP. K.**

Podkowy 18
04-937 Warszawa, Poland

**WAREHOUSE & CONTACT ADDRESS /
ADRES KONTAKTOWY I MAGAZYNU:**

Łukówiec 98, 05-480 Karczew, Poland
phone: 00 48 22 394 09 94
e-mail: info@pminvestment.pl
www.pminvestment.pl



www.millymally.pl