

# HOW TO SET THE NEW CODES?

**NOTE:** You can set no-repeat 4-12 digit passwords.



1. Rotate the switch to open the key box.




2. Rotate the switch again to set the codes



3. Use the screwdriver to rotate the code 180°



4. Write the passwords down or take a photo for it

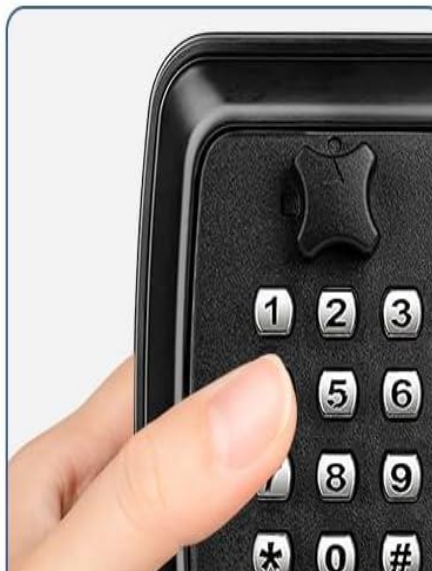

5. Enter the new passwords after the passwords were set



6. If you can open it with the new password, that means password is set successfully.