Assembly Instructions

A		1	Н	M8x25	3	Р	Tr Tr	1	①	2	
В		1	J		3				—Ex1 —Fx5		
С		1	K		3				3	Lx2,Mx1	
D		1	L	M8x50	4				Hx3,Jx3,Kx3		
E		1	М	0 0	2				Ax1	Nx2 Nx2 6	
F		5	N	M6x15	2				5		
G	M6	1	0		1				•		