

PLEASE READ THROUGH THIS INSTRUCTION MANUAL COMPLETELY BEFORE USE.

AND KEEP IT WELL FOR FUTURE ASSISTANCE WHENEVER REQUIRED.

PACKAGE CONTENT



1 X MINI HDMI CONSOLE

2 X WIRELESS CONTROLLERS

1 X 512M MICRO-SD CARD

1 X USB CABLE

1 X MANUAL

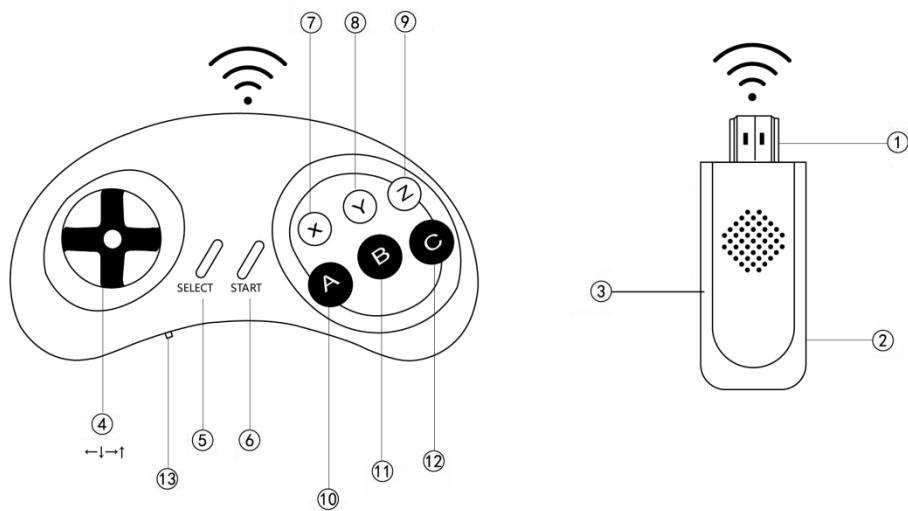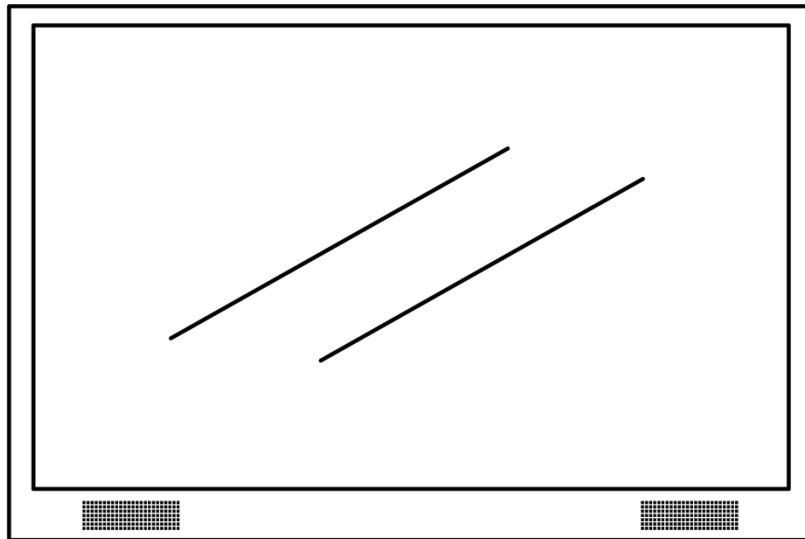

NAME AND FUNCTIONS OF EACH PART AND INSTALLATION

① HDMI PLUG

Insert to HDMI INPUT of TV set directly.

② DC-IN (Micro-USB)

Connect to power supply

③ MicroSD SLOT

To insert a MicroSD memory card with games.

④ DIRECTIONAL JOYSTICK

Move to steer 8 directions as follows:

←、↖、↑、↗、→、↘、↓、↙

⑤ SELECT(ADD COINS)

Press to select playing mode or to add coins under arcade games.

⑥ START

Press to start game play.

NOTE: Press “SELECT + START” buttons on the controller simultaneously to call out a pop-up menu asking for options such as “SAVE,SETTINGS,EXIT or CONTINUE” .

⑦ X BUTTON: function may vary under different game.

⑧ Y BUTTON: function may vary under different game.

⑨ Z BUTTON: function may vary under different game.

⑩ A BUTTON: function may vary under different game.

⑪ B BUTTON: function may vary under different game.

⑫ C BUTTON: function may vary under different game.

⑬ P1 / P2 SWITCH: Toggle to define the controller as P1 or as P2

(NOTE: it' s NOT a ON/OFF power switch)

BATTERY INSTALLATION

- Use a screwdriver to open the battery covers of two wireless controllers.
- Insert AAA batteries for each controller correctly by following the polarity indicated inside the battery compartment.
- Close and screw up the battery cover firmly.

WARNINGS! Please remove the AAA batteries out of the controller if they will not be used for a long period and store them in a cool dry place.

START TO USE

Please follow below steps to start game play.

- 1) Insert the mini HDMI console directly to HDMI input of TV set. Or connect it to TV via a HDMI extension cable.
- 2) Connect one end(Micro-USB plug) of USB cable to the mini HDMI console and the other end of USB cable to any 5V electric power source such as USB port on TV set, mobile phone charger, power bank or electrical outlet with USB.....etc.
- 3) Turn on TV set and switch the TV source to be HDMI input. (If the TV has more than one HDMI input,please remember to switch the source corresponding to the HDMI input with mini console connected.)
- 4) Install batteries of each controller following the BATTERY INSTALLATION guide above.
- 5) Press any key on the controller to activate as it has auto power sleep function.

- 6) Scroll the directional joystick on controller P1 to select the desired game and press "START" or "A" sometimes to enter the game and enjoy your playing.
- 7) Press "SELECT + START" buttons on the controller simultaneously to call out a pop-up menu asking for options such as "SAVE,SETTINGS,EXIT or CONTINUE" .

WARNINGS & PRECAUTIONS

1. Please do NOT disassemble or try to fix the product and its related parts & components at your own discretion.
2. Avoid liquid splash over the product and its related parts & components.
3. Avoid hitting roughly or dropping the product and its accessories.
4. Please do NOT store the product in an area of wetness,dust and dirt.
5. Please remove the AAA batteries out of the controller if they will not be used for a long period and store them in a cool dry place.
6. Always use the product in a well-ventilated and well-lit area ONLY.
7. Use the product in a less signal interference area as the product adopts 2.4G wireless technology and the best distance is below 5 meters recommended.
8. Make sure that the controllers have enough battery capacity. Insufficient energy could lead to mal-function or poor connection.
9. Please do NOT use the product for a long period continuously. It' s recommended to take a 10-15-minute rest every hour of playing.
10. Please keep an appropriate distance from the TV while playing games.

11. When feeling drowsy, weak, weary or tired, please IMMEDIATELY stop using the product and take a rest. Or please consult the doctor when your eyes are uncomfortable.
12. Keep the product and all other accessories out of reach of children under 6 years to avoid any accident.
13. It's recommended to use the product under supervision or watch of adults.
14. Recommended age of use: 6 years up.

ELECTRICAL SPECIFICATIONS:

POWER SUPPLY OF MINI HDMI CONSOLE: 5V, 500 Ma

POWER SUPPLY OF EACH CONTROLLER: 1.5V (AAA BATTERIES OF 1.5V)