



FN+F1	My Computer	FN+F5	Stop	FN+F9	Backlight Switch
FN+F2	Web Page	FN+F6	Previous Song	FN+F10	Volume-
FN+F3	Email	FN+F7	Play / Pause	FN+F11	Volume+
FN+F4	Calculator	FN+F8	Next Song	FN+F12	Mute