



Instrukcja Obsługi	PL	Instrukcja Obsługi	PL	User's Manual	EN	User's Manual	EN
4. Podłączenie elektryczności – Sprawdzić, czy napięcie elektryczne, które będzie używane, odpowiada deklaracji urządzenia. Skontrolować sposób podłączenia do sieci elektrycznej. – Ubezpieczyć miejsce podłączenia w razie zapotrzebowania i dysponować nadzorem podczas montażu. 5. Przechowywanie do użycia „1”. 6. Po zagotowaniu wody elektryczność wyłączyć do automatycznej, czyszczenia i dezynfekcji naczyń. 7. Po zakończeniu użycia wyłączyć do automatycznej, czyszczenia i dezynfekcji naczyń. 8. Nie podnosić poziomu napełnienia.		• Ubezpieczyć nie tylko przełączanie do użycia przez otwór (Inwerter) działy z automatami (przewodów), czyszczenie i dezynfekcję, ale i automatyczne podłączenie do sieci elektrycznej, jeśli nie jest to automatycznie odpowiadające naciśnięciu przycisku. • Główny poziom napełnienia jest pod nadzorem, aby nie było zbyt wysokie.		General safety instructions • Before connecting this device please read the instruction manual carefully. • Please keep this instruction, the warranty certificate, if the sale is needed and if possible, the next time the heater package. • The device is intended exclusively for private and not for commercial use. • Always remove the plug from the socket whenever the device is not in use, when attaching accessories, cleaning the device or when the appliance is broken. Switch off the device beforehand. Pull the plug out on the cable. • Do not try to protect children from the danger of electrical appliances, never leave them unattended with the device. Consequently, when using the heater for your device, do so in a safe way. Children should not touch the device. Take care to ensure that the cable does not hang down. • Use the device and cable regularly for damages. If there is a damage of any kind, the device should be not used. • If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. • Keep the device away from the fire, rather consult an authorized repair. • Keep the device and the cable away from heat, direct sunlight, moisture, sharp edges and cables. • Never use the device unpowered! Switch off the device whenever you are not using it, even if this is only for a minute. • Use only original accessories. • If the kettle is overfilled, boiling water may be ejected. • Do not use the device as a stool.		• Under no circumstances must the device be placed in water or other liquid or come in contact with such. Do not use the device with the kettle full of water. • Should the device become moist or wet, remove the mains plug from the power immediately. Do not reach into the device. • Use the device only for its intended purpose. • The kettle is only to be used with the stand provided. Special safety instructions for this Machine • Always use the device with the stand provided. The device is not to be used without the stand. The water level must not exceed the MAX mark. • Always ensure that the device is not left unattended with the stand. • Always ensure that the lid is fully latched. • The base and exterior that the lid is fully latched. • Do not touch the exterior of the device when the water becomes wet. • When the kettle is separated at the load condition from the stand, the thermal cut-off cannot be reset. First use of the Machine • Before the first use for the first time, water should be boiled twice without any additives. • Unscrew the lid from the base. Place the machine on a flat surface. • Fill the kettle water. Do not overfill. • Place the kettle fully on the base. • Electrical connection: • Check whether the electrical outlet that you intend to use is the same as that of the machine. Details are to be ascertained on the label on the base. • Only connect the machine to a properly grounded socket. The requirements of the actual plug.	

[illegible][illegible][illegible][illegible][illegible]